

Web-based HMI for REXYGEN

User guide

REX Controls s.r.o.

Version 2.50.7

2018-05-22

Plzeň (Pilsen), Czech Republic

Contents

1	Introduction	2
2	WebWatch	5
2.1	Automatic Generation of HMI from REXYGEN Studio	5
2.2	Advanced Usage	5
3	HMI Designer	8
3.1	A Graphical Designer of Web HMI	8
3.2	List of available components	9
3.2.1	HMIConfig	11
3.2.2	GENERAL	11
3.2.3	HOME	32
3.2.4	HVAC	41
3.2.5	PROC	46
4	WebBuDi	50
4.1	Simple Buttons and Displays on the Web	50
4.2	Available Rows and Components	53
5	REX.HMI library	60
5.1	How to Use the Library	60
5.2	Reference Guide for REX.HMI	61
5.3	Reference Guide for REX.HMI.Graph	67
	Bibliography	70

Chapter 1

Introduction

RexHMI covers all tools and libraries necessary for creating human-machine interfaces (visualizations) for the REXYGEN system. There are three different types of visualization the WebWatch, the WebBuDi and the one created by HMI Designer.

- WebWatch(Chapter 2) is an auto-generated HMI from the REXYGEN Studio development tool during project compilation. It has similar look, attributes and functions as the Watch mode of the REXYGEN Studio development tool. The WebWatch is a perfect tool for instant creation of HMI that is suitable for system developers or integrators. It provides a graphical interaction with almost all signals in the control algorithm.
- HMI Designer(Chapter 3) creates a standard SVG file with the *RexHMI* extensions. The HMI Designer is a great tool for creating graphical HMI that is suitable for operators and other end users.
- WebBuDi(Chapter 4), which is an acronym for Web Buttons and Displays, is a simple JavaScript file with several declarative blocks that describe data points which the HMI is connected to and assemble a table in which all the data is presented. It provides a textual interaction with selected signals and is suitable for system developers and integrators or may serve as a fall-back mode HMI for non-standard situations.

All the tools result to the HTML5 web page served from the internal REXYGEN web server. The HMI can be accessed using desktop, tablets and also mobile devices. Recommended web browsers are **Google Chrome** and **Mozilla Firefox**.

Usually the HMI is downloaded to the target device using *HMI* block in the *exec.mdl* file. In the project directory create *exec.mdl* file (or use predefined templates from the Start-up wizard). Add the *HMI* block to the executive, set the *IncludeHMI* parameter and then enable *Web Watch* visualization (*Generate Web Watch* parameter) or create your custom one. Once configured the visualization is downloaded using *Compile and Download* function in the REXYGEN Studio design tool to the target device.

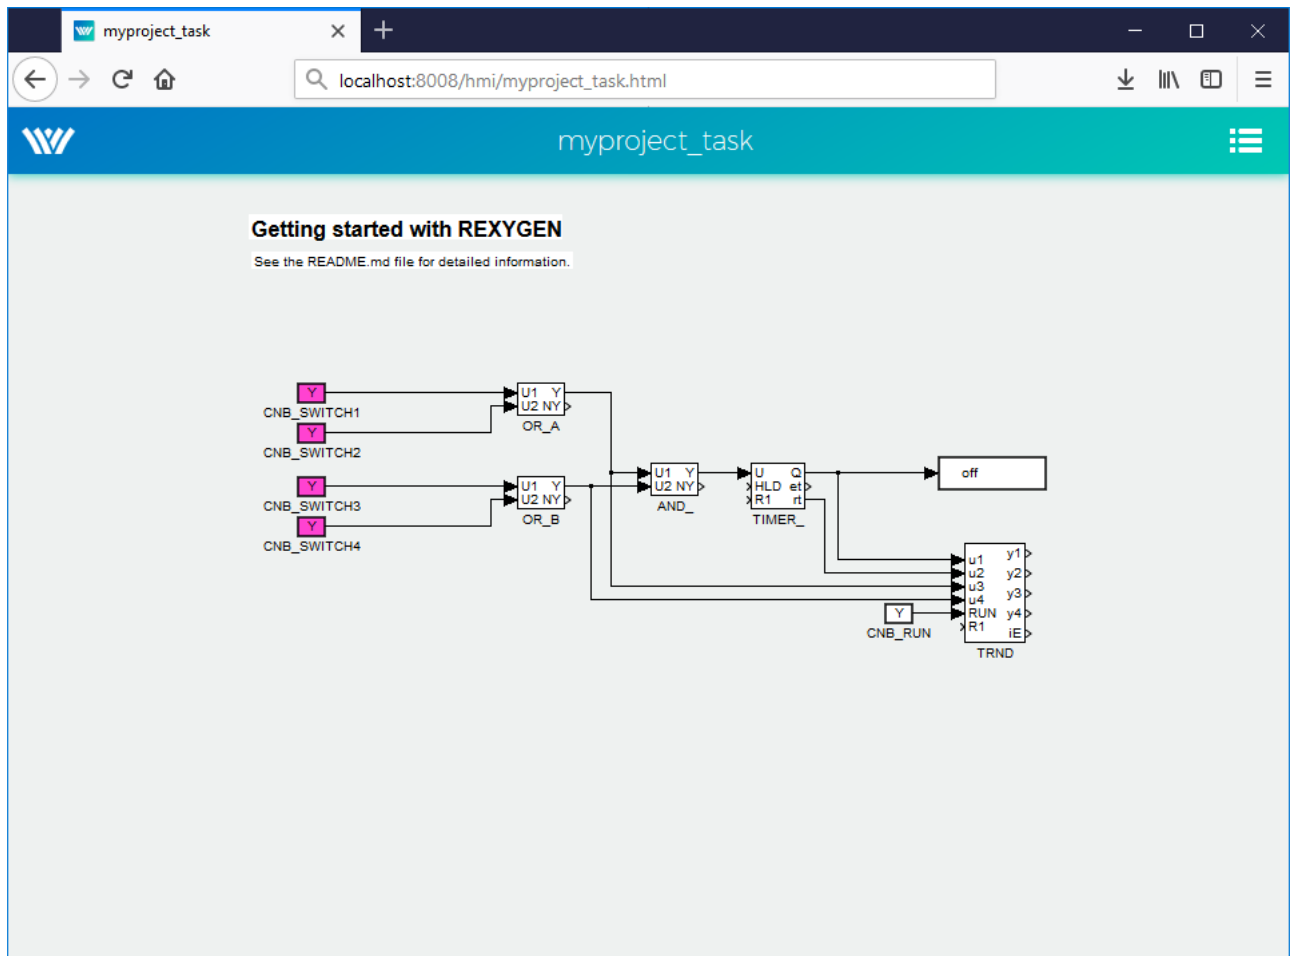


Figure 1.1: The example of *Web Watch* visualization

The HMI is accessible from the internal server of the target device for example at <http://127.0.0.1:8008/hmi>.

The HMI uses HTML, CSS3, JavaScript and WebSockets.

For the special cases user can create its own HMI based on the JavaScript and custom HTML or SVG components. For that purpose the *REX.HMI* function library is available. Chapter 5 describes all functions with parameters.

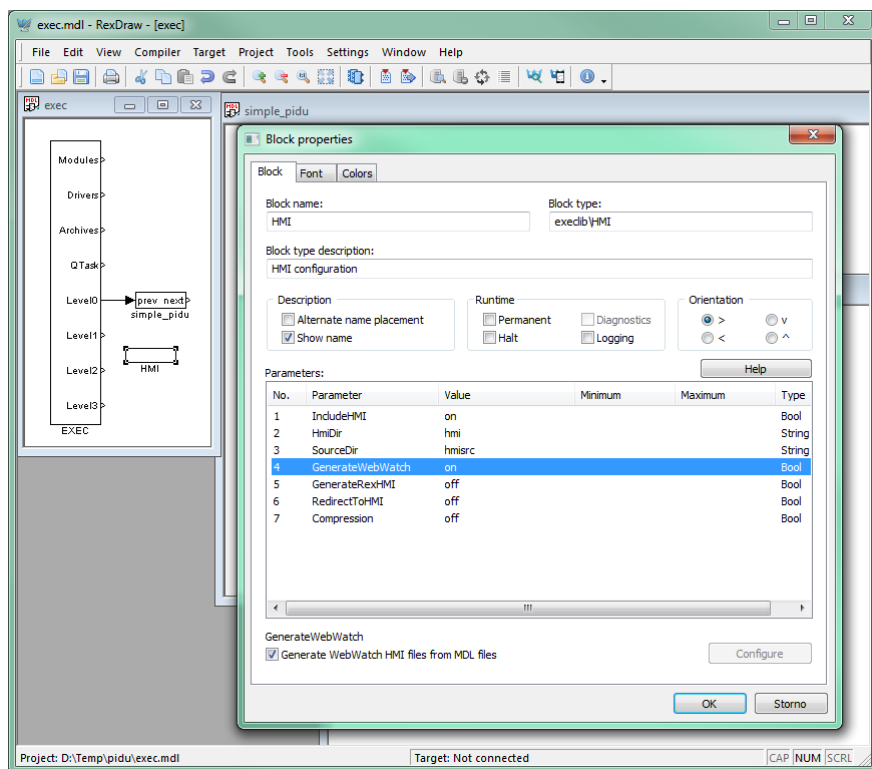


Figure 1.2: Configuration of the *HMI* block in REXYGEN Studio

Chapter 2

WebWatch

2.1 Automatic Generation of HMI from REXYGEN Studio

WebWatch is automatically generated HMI based on the project structure. It is similar to the *Watch mode* in REXYGEN Studio. The whole scheme is generated to web page. User can monitor all signals from selected blocks, change block parameters and read the data from TRND blocks. The WebWatch is generated automatically using *HMI* block in project main file.

1. Insert HMI block to the *exec.mdl* file of your project
2. Check `GenerateWebWatch` and `IncludeHMI` to enable WebWatch generation
3. Run *Compile and Download*
4. Open the web browser on your target device eg. <http://127.0.0.1:8008/hmi>.
5. Use *left mouse click (touch)* for changing the block parameters and *right mouse click (long touch)* for enabling the block monitoring.

2.2 Advanced Usage

The auto-generated scheme can be adjusted manually. ¹

Edit the `REX.HMI.init = function(){} function` in the selected `*.html` file. There are only few functions for the WebWatch HMI, but you can use all the functions described in chapter 5.

REX.WebWatch.enableMonitoring(blockIDs) – Enable monitoring of the selected blocks from the beginning (after web page is loaded).

¹Note: If the *GenerateWebWatch* in HMI block is enabled the HMI is generate whenever the scheme is compiled. So for manual adjustment disable the *GenerateWebWatch* option in *HMI* block.

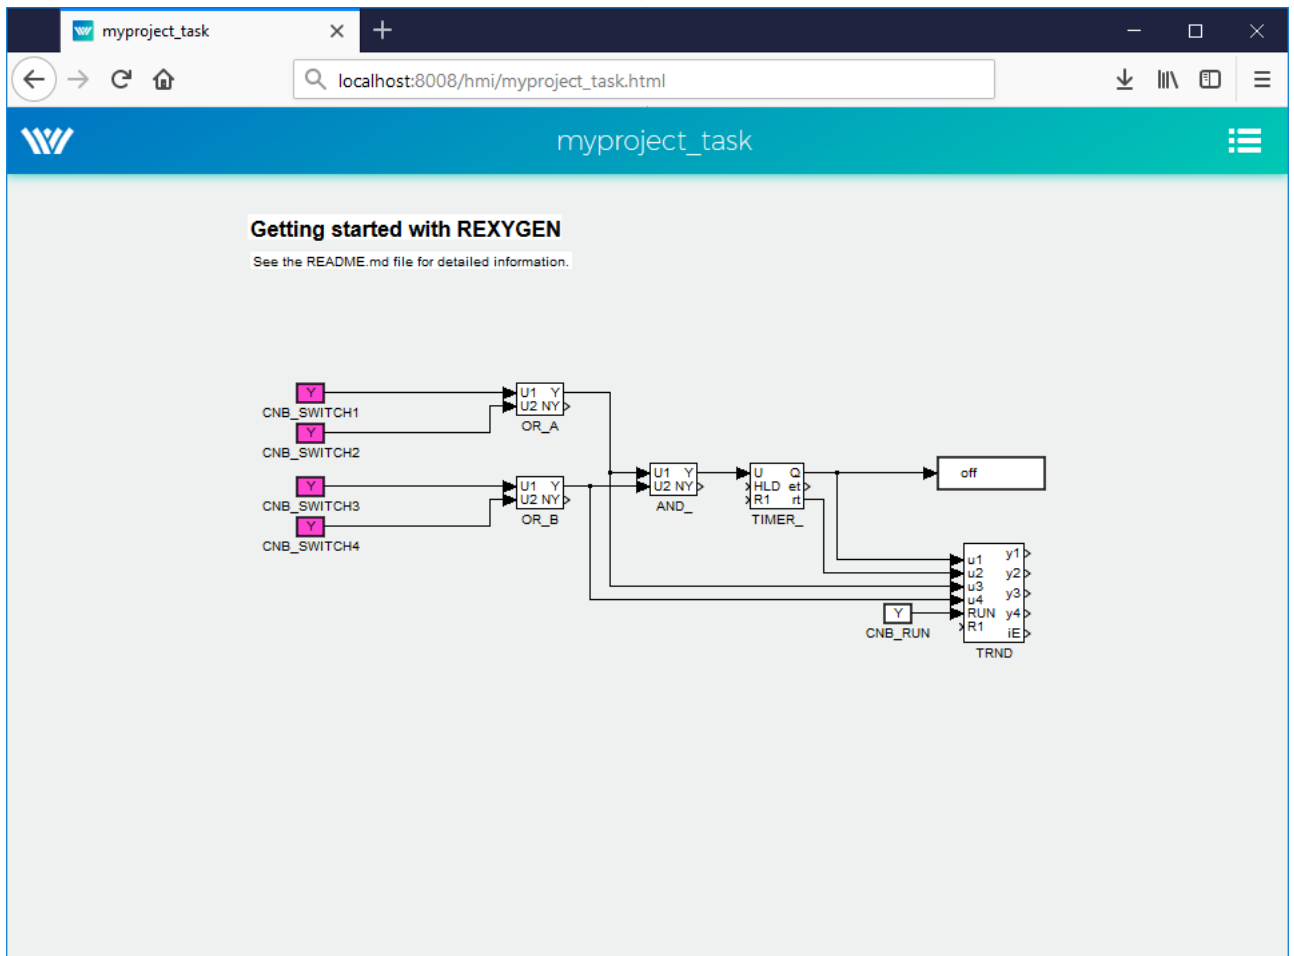


Figure 2.1: The example of WebWatch visualization

Param	Type	Description
blockIDs	Array	List of all blocks, described by connection string .<String> (eg.["task.block1","task.block2"])

Example

```

1 // Enable monitoring of selected blocks
2 REX.HMI.init = function(){
3   REX.WebWatch.enableMonitoring(["pidcontrol_control.CNR_sp",
4     pidcontrol_control.PIDU"]);
5 }

```

REX.WebWatch.disableHint() – Disable hint after page is loaded

REX.WebWatch.showHint() – Show hint

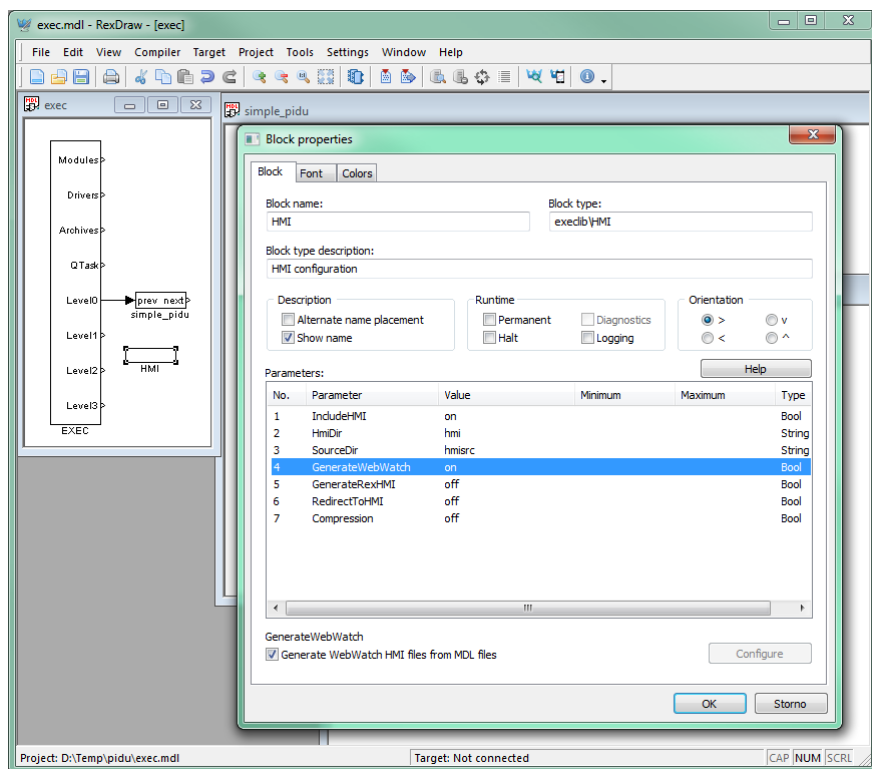


Figure 2.2: Check GenerateWebWatch to create WebWatchHMI.

Chapter 3

HMI Designer

3.1 A Graphical Designer of Web HMI

HMI Designer¹ is tool for designing the custom visualizations using predefined components. The whole HMI is stored in the SVG (Scalable Vector Graphics) file with REXYGEN specific extensions.

When the visualization is ready the HTML page with all necessary libraries is generated. Such a webpage can be easily generated and downloaded to the target device from `./hmi` directory using *Compile and Download* function of the REXYGEN Studio development tool.

Each HMI scheme composes from several components which are connected to the signals from the control system. These components are organized in libraries. The example HMI on fig. 3.1 contain one *Button*, two *LEDs* and several *GeneralComponents* for pool and flower animations.

The HMI components are controlled via extensions (on fig. 3.2) which edit the RexHMI specific parameters and allow the export of the final HMI.

- **Browse Components Library** (Ctrl + L) – Open the folder with all available components. Each component is stored as a SVG file which can be drag&dropped to the current HMI
- **Edit Component** (Ctrl + E) – Open edit window for the selected component or for the whole project if nothing is selected.
- **Export HMI** (Ctrl + H) – Exports the content of the SVG file to the HTML5 webpage with all necessary libraries. This extension is configured via parameters of the whole project.
- **Group Animation** (Ctrl + J) – Enable animation of the transformations (translation, rotation, scale), opacity or color of the selected object (SVG group) based on the values from the control system.

¹The HMI Designer is build on the well-known SVG editor InkscapeTM <https://inkscape.org/en/>.

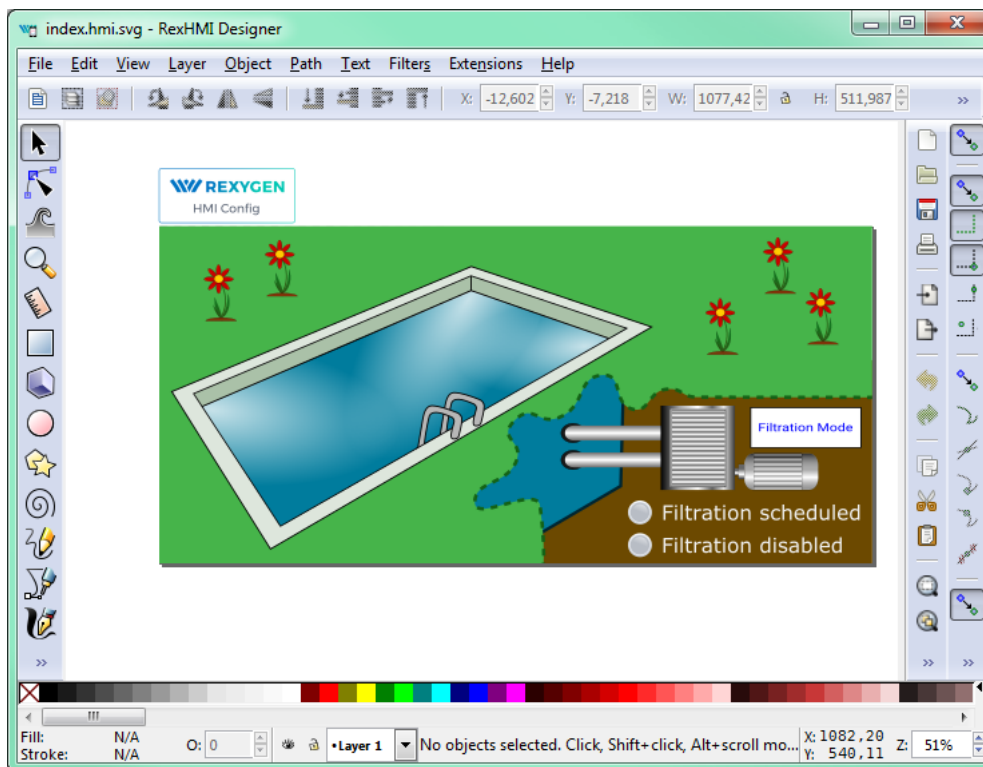


Figure 3.1: The example of HMI Designer visualization

- **Update Components** – Extension for updating the schema to new version
- **Version Info** – Show current version of the HMI Designer and RexHMI tools.

Follow the tutorials on www.rexcontrols.com to know how to use the extensions for creating your custom HMIs.

3.2 List of available components

There are several predefined HMI components in the component library. Every component is represented as one SVG file which can be drag&drop to the current visualization scheme. The library is divide to three main groups:

- **GENERAL** - Set of common components like buttons, inputs, sliders, gauges for visualization of basic variables.
- **HOME** - Set of components for home automation, like various pipes, valves, radiators, boilers and more.

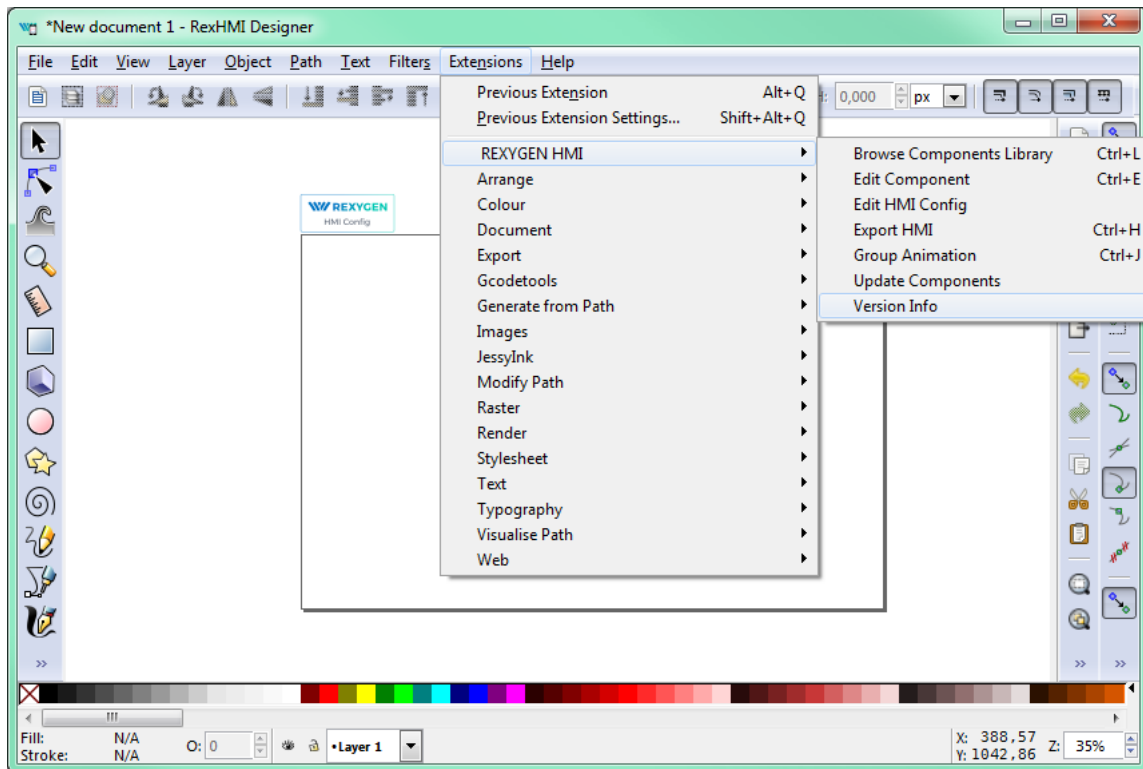


Figure 3.2: The list of RexHMI extensions

- HVAC - Specialized library for heating, ventilation and air conditioning visualizations.
- PROC - Specialized library for process control visualizations.

Every component has some data points which provide the interaction between live data and state of the HMI. Mostly you can find:

- **value** - the main data point where value is read or written,
- **disable_by** - the component is disabled when connected to non-zero value,
- **hide_by** - the component is hidden when connected to non-zero value.

and various options which are described in the following text. The components are sort alphabetically.

3.2.1 HMIconfig



Global RexHMI configuration component. User can change project options, configure the HTML export and define list of connections between REX target and HMI.

Options	Type	Description
<code>target_url</code>	str	The URL of the target device. So far only the WebSocket protocol is supported. The URL must also contain the PORT, but the protocol can be omitted. Default is empty string which means <code>ws://127.0.0.1:8008</code> Examples: <code>192.168.1.100:8008</code> or <code>wss://192.168.1.100:8009</code> <i>Note: If the HMI is hosted on the internal web server this option is ignored and HMI connects to the hostname / IP you use in the webbrowser URL.</i>
<code>refresh_rate</code>	int	Changes the default read refresh rate of the whole HMI. Default 500ms
<code>log_level</code>	enum	Set the global log level for whole RexHMI. The log messages are written both to the right upper corner menu and to the web browser console. Default level is INFO.
<code>show_clock</code>	bool	If True the clock are shown in the right upper corner of the template instead of blinking square. If the target is connected the clock are updated if connection get error o lost the time stops.
<code>use_client_time</code>	bool	If True the <code>show_clock</code> display the time from client computer rather than target. This can be use when target device does not have NTP synchronization or RTC chip.
<code>header_mode</code>	enum	Change the default size of the header (thin, packed). If packed click on the logo to show the header.
<code>kiosk_mode</code>	bool	If True the links from header (from logo and header) are removed and user can not change the refresh rate and target.

3.2.2 GENERAL

BarGraph



Bargraph component which draw scale on the left side and contain color zones and current value display

Data points	Optional	Description
value		Displayed value
disable_by	True	If non-zero the component is disabled.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
rangeMin	float	Lower limit for the bargraph value
rangeMax	float	Upper limit for the bargraph value
tickStep	float	Value for small tick step between main tick steps.
mainTickStep	float	Value for main axis tick steps
decimals	float	How many decimal figures are displayed
units	str	Text which is displayed on the bottom of the bargraph. Usually the name of units.
colorZones	table	User can define several color zones which can represent some level of warning. The zones are displayed on the right side of the bargraph. Each has a custom color and range defined by startValue and endValue . Just double click the colorZones and change them in table.
colorOffLimits	color	The border color of the bargraph when the value is of rangeMin and rangeMax limits.
levelColor1	color	Change the main bargraph gradient color
levelColor2	color	Change the supplementary bargraph gradient color

Battery



Show battery level from 0 to 100

Data points	Optional	Description
value		Battery level from 0 to 100
Options	Type	Description

Button



The Button component changes the boolean value. Normally the ON state means TRUE value and OFF mean FALSE value. If needed the parameter **reverseMeaning** switches the written values.

There are three different modes of operation:

PushButton when press or touched the ON state is written to the target **value** datapoint. When released the OFF state is written.

ManualPulse always write TRUE value after button is pressed, release is ignored.(Suitable for MP block control)

ToggleButton when button is pressed the value is toggled (ON -> OFF -> ON).

Data points	Optional	Description
value		The main datapoint where boolean value is written.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description

type	enum	<p>Changes the type of the Button.</p> <p>PushButton when press or touched the ON state is written to the target value datapoint. When released the OFF state is written.</p> <p>ManualPulse writes TRUE value once after button is pressed, release is ignored.</p> <p>ManualPulseRpt writes TRUE value periodically (20ms period) after button is pressed, release stops writing.(Suitable for MP block control)</p> <p>ToggleButton when button is pressed the value is toggled (ON -> OFF -> ON).</p>
reverseMeaning	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.
fontScale	float	Use this parameter to scale font because the button is using HTML button component which is not binded with SVG.
labelFalse	str	Button label when the state is OFF
labelTrue	str	Button label when the state is ON. If not defined the labelFalse is used.
colorFalse	color	Button background color when the state is OFF
colorTrue	color	Button background color when the state is ON
labelColorFalse	color	Label (text) color when the state is OFF.
labelColorTrue	color	Label (text) color when the state is ON
writePerm	table	List of logins who are allowed to write to the data point. If not in list the Button will be disabled.

Checkbox



Data points	Optional	Description
value		Datapoint where boolean value is written.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
reverse_meaning	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.

show_cross	bool	If True the cross is shown in case of OFF value.
-------------------	------	--

ComboBox



Combobox allow to choose item (value) from predefine list. If the value in the control system is not in the list it is automatically added.

Data points	Optional	Description
value		Datapoint where values are written after select.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
values	table	Define value:desc pairs for the combobox list. Value is number or string and desc is it's string description.
showValue	bool	If True the values are shown in the list eg. 0:OK
valueType	enum	Choose if the value is read as a number or string.
fontScale	float	Use this parameter to scale the font because the Combobox is using HTML select component which is not binded with SVG.

ControlLed



Simple boolean state indicator. Empty or Zero mean OFF, otherwise ON.

Data points	Optional	Description
value		Datapoint from which the LED state is read.
disable_by	True	If non-zero the component is disabled.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
reverseMeaning	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.
color_true	color	The ON state color.
color_false	color	The OFF state color.

CustomHTML



CustomHTML component allows inserting custom HTML to the HMI. It creates empty DIV element which is filled with content from the `html` parameter. It can be used for example for including the live camera feed.

Options	Type	Description
html	str	Custom HTML content which is insert directly to the HMI.

Display

X.XX

Display component shows value from the target system as a string. It can be either **number**, **date**, **datetime** or simple value as a **text** string depending on the **format** property. Each display can have **units** which are shown at the end of the displayed string.

Data points	Optional	Description
value		Datapoint from which the value is read.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
format	enum	<p>number - If selected the read value is converted to the number either integer or float. Also the parameters scale, offset and decimals are applied during conversion. The color of the text depends on the color property if the value is higher than rangeMax the colorAbove is used likewise if the value is lower than rangeMin the colorBelow is applied.</p> <p>time and datetime - The display will convert read value in milliseconds from REX Epoch to the current time or datetime. The property text_format is applied in this context where the format of the displayed time can be selected.</p> <p>text - Simple show the value in the format as was received. Suitable for short strings.</p>
text_format	enum	Select the format of the time string for time and datetime .
scale	float	Scale the read value. Applicable for number format only.
offset	float	Add some offset to the read value. Applicable for number format only.
decimals	int	Round the read value to defined number of decimals. Applicable for number format only.
color	color	Normal font color of the display. Applicable for number format only.
colorAbove	color	Font color of the display when the read value is above rangeMax . Applicable for number format only.
colorBelow	color	Font color of the display when the read value is below rangeMin . Applicable for number format only.
rangeMax	float	When the read value is above rangeMax the colorAbove color is applied to the font. Applicable for number format only.
rangeMin	float	When the read value is below rangeMin the colorBelow color is applied to the font. Applicable for number format only.
units	str	Append some string to the end of the displayed value. Usually the name of the units.

DisplayString

XXX DISPLAY STRING XXX

The Display string component reads the value from the target and display it as a text. It can simply display the read value **format: text** or lookup the value in the table **alt** (alternative lookup table) of descriptions.

Note: If the value contains newline sign the text is wrapped.

Data points	Optional	Description
value		Datapoint from which the value is read.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
format	enum	text - show the read value as is. alt - Lookup the description for the read value in the values list. If not found display the value as is.
values	table	List of value:desc pairs where the description is looked up when the value is read.
showValue	bool	If True prepend the value in front of the description separated by colon. Example: 0: Status OK

DisplayWithBox



Display component shows value from the target system as a string. It can be either **number**, **date** or **datetime** string depending on the **format** property. Each display can have **units** which are shown at the bottom of the box.

Data points	Optional	Description
value		Datapoint from which the value is read.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description

format	enum	number - If selected the read value is converted to the number either integer or float. Also the parameters scale , offset and decimals are applied during conversion. The color of the text depends on the color property if the value is higher than rangeMax the colorAbove is used likewise if the value is lower than rangeMin the colorBelow is applied. time and datetime - The display will convert read value in milliseconds from REX Epoch to the current time or datetime.
scale	float	Scale the read value. Applicable for number format only.
offset	float	Add some offset to the read value. Applicable for number format only.
decimals	int	Round the read value to defined number of decimals. Applicable for number format only.
color	color	Normal font color of the display. Applicable for number format only.
colorAbove	color	Font color of the display when the read value is above rangeMax . Applicable for number format only.
colorBelow	color	Font color of the display when the read value is below rangeMin . Applicable for number format only.
rangeMax	float	When the read value is above rangeMax the colorAbove color is applied to the font. Applicable for number format only.
rangeMin	float	When the read value is below rangeMin the colorBelow color is applied to the font. Applicable for number format only.
units	str	Append some string to the end of the displayed value. Usually the name of the units.

Gauge180



A Gauge displays the read value on the scale using the arm. The range of the scale is limited by **rangeMin** and **rangeMax** parameters. The scale is divided to some main steps using **mainTickStep** parameter and more using **tickStep**. Also the read value is displayed as a number rounded to **decimals**. If the read value is beyond the limits the Gauge's border changes to **colorOffLimits** color. The Gauge also contain special kind of color

scale which is defined by **colorZones** table. For example it can be use for defining the normal, warning and error levels.

Data points	Optional	Description
value		Datapoint from which the value is read.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
rangeMin	float	The minimum value for the Gauge scale.
rangeMax	float	The maximum value for the Gauge scale.
tickStep	float	Draw tick every tickStep value to the scale.
mainTickStep	float	Draw main tick every mainTickStep value to the scale with text description.
decimals	float	Round the read value to defined number of decimals.
units	str	Name of the units or just text description.
colorZones	table	Defines the special scale with color segments starting from startValue and ending at endValue colored by color .
colorOffLimits	color	Border color when read value is of the range.

Gauge270




A Gauge displays the read value on the scale using the arm. The range of the scale is limited by **rangeMin** and **rangeMax** parameters. The scale is divided to some main steps using **mainTickStep** parameter and more using **tickStep**. Also the read value is displayed as a number rounded to **decimals**. If the read value is beyond the limits the Gauge's border changes to **colorOffLimits** color. The Gauge also contain special kind of color scale which is defined by **colorZones** table. For example it can be use for defining the normal, warning and error levels.

Data points	Optional	Description
-------------	----------	-------------

value		Datapoint from which the value is read.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
rangeMin	float	The minimum value for the Gauge scale.
rangeMax	float	The maximum value for the Gauge scale.
tickStep	float	Draw tick every tickStep value to the scale.
mainTickStep	float	Draw main tick every mainTickStep value to the scale with text description.
decimals	float	Round the read value to defined number of decimals.
units	str	Name of the units or just text description.
colorZones	table	Defines the special scale with color segments starting from startValue and ending at endValue colored by color .
colorOffLimits	color	Border color when read value is of the range.

GaugeBars

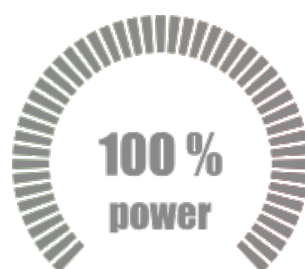

The GaugeBars component show the current value as a number of highlighted ticks. The value should be between **rangeMin** and **rangeMax**. Also the read value is displayed as a number rounded to **decimals** with possible **units** string.

Data points	Optional	Description
value		Datapoint from which the value is read.
Options	Type	Description
rangeMin	float	The minimum value for the Gauge.
rangeMax	float	The maximum value for the Gauge.
decimals	int	Round the read value to defined number of decimals.
units	str	Name of the units or just text description.


GaugeGradient



The GaugeGradient component show the current value as a fill of the arc. The value should be between **rangeMin** and **rangeMax**. The min value means whole arc is red the max value is whole arc is green.

Data points	Optional	Description
value		Datapoint from which the value is read.
Options	Type	Description
rangeMin	float	The minimum value for the Gauge.
rangeMax	float	The maximum value for the Gauge.

ImageChanger

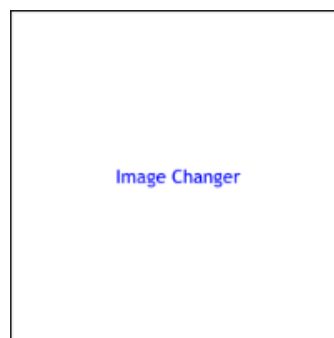


ImageChange component load image (*.png,*.jpg,*.bmp,*.svg etc.) and display it inside its boundaries. The image is refreshed when the **refresh_from** datapoint changes. The **imagePath** should be relative to the root of the webserver. If the **appendKey** property is True the an **imagePath** contain 0 sign which is replaced using the read value. Example of the **imagePath** '/hmi/images/img-0.png' and value can change from 0 to 10, etc.

Data points	Optional	Description
refresh_from		When the value is changed the image is updated.
Options	Type	Description

imagePath	str	Relative path from the webserver root where the image is located.
appendKey	bool	If True the 0 is replaces with current read value in the imagePath property.

Input




Input component allow to write numbers, texts, dates or times to the target. If the **number** format is selected the value can be converted using **scale** and **offset** adn rounded to number of **decimals**. The Input allows to limit user input to the range defined by **min** and **max** parameters. There is **virtualKeyboard** available for kiosk mode devices. The **date**, **time** and **datetime** format has a special widget to enter the dates. The value from this format is converted to the number of milliseconds from REX epoch.

*Note: The value is written to the **value** datapoint, if necessary it can be refresh from different location defined in the **refresh_from** datapoint. It can be used if the value is limited by saturation.*

Data points	Optional	Description
value		Datapoint where the value is written.
refresh_from	True	Optional datapoint where the value is updated.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
format	enum	number - If selected the value is converted to the number either integer or float. Also the parameters scale , offset and decimals are applied during conversion. time and datetime - The input will convert time or datetime to the number of milliseconds from REX Epoch. text - Simple enter the value in the format as is. Suitable for short strings.
fontScale	float	The Input is using HTML input component which is not binded with SVG. Use this parameter to scale font.

textAlign	enum	The Input is using HTML input component which is not binded with SVG. Use this parameter to scale font.
scale	float	Scale the value. Applicable for number format only.
offset	float	Add some offset to the value. Applicable for number format only.
decimals	int	Round the value to defined number of decimals. Applicable for number format only.
min	float	The minimum value user can enter. Applicable for number format only.
max	float	The maximum value user can enter. Applicable for number format only.
setOnBlur	bool	If True the data input value is set on blur event (Press ESC to cancel write).
virtualKeyboard	bool	If True the virtual keyboard is show for data input.
css	object	Custom CSS style for the HTML input object. For example {'background-color':'#00ffff'}
writePerm	table	List of logins who are allowed to write to the data point. If not in list the Input will be disabled.

Led

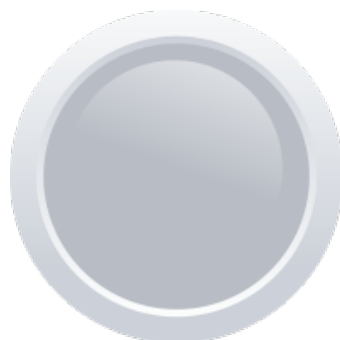

Boolean state indicator. Empty or Zero mean OFF,FALSE, otherwise ON, TRUE. This can be switched using **reverseMeaning** parameter.

Data points	Optional	Description
value		Datapoint from which the value is read.
error_by	True	If set and TRUE the led will show colorError
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description

<code>reverseMeaning</code>	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.
<code>colorTrue</code>	color	LED background color when the signal is ON, ENABLED, ...
<code>colorFalse</code>	color	LED background color when the signal is OFF, DISABLED, ...
<code>colorError</code>	color	LED background color when the signal error is TRUE.

LedLabel



Boolean state indicator with text label. Empty or Zero mean OFF,FALSE (**OK** text) otherwise ON, TRUE (**NG** text). This can be switched using `reverseMeaning` parameter.

Data points	Optional	Description
<code>value</code>		Datapoint from which the LED state is read.
<code>disable_by</code>	True	If non-zero the component is disabled and data are no longer updated.
<code>hide_by</code>	True	If non-zero the component is hidden.
Options	Type	Description
<code>reverseMeaning</code>	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.
<code>label_false</code>	string	The label for OFF, FALSE state.
<code>color_false</code>	color	The color of OFF, FALSE state.
<code>color_true</code>	color	The color of ON, TRUE state.
<code>label_true</code>	string	The label for ON, TRUE state.

PushOnOff



The PushOnOff button component changes the boolean value. Normally the ON state means TRUE value and OFF mean FALSE value. If needed the parameter **reverseMeaning** switches the written values.

There are three different modes of operation:

PushButton when press or touched the ON state is written to the target **value** datapoint. When released the OFF state is written.


ManualPulse always write TRUE value after button is pressed, release is ignored.(Suitable for MP block control)

ToggleButton when button is pressed the value is toggled (ON -> OFF -> ON).

Data points	Optional	Description
value		Datapoint where boolean value is written.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
type	enum	Changes the type of the Button. PushButton when press or touched the ON state is written to the target value datapoint. When released the OFF state is written. ManualPulse writes TRUE value once after button is pressed, release is ignored. ManualPulseRpt writes TRUE value periodically (20ms period) after button is pressed, release stops writing.(Suitable for MP block control) ToggleButton when button is pressed the value is toggled (ON -> OFF -> ON).
reverseMeaning	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.
colorFalse	color	Button background color when the state is OFF

<code>colorTrue</code>	color	Button background color when the state is ON
<code>writePerm</code>	table	List of logins who are allowed to write to the data point. If not in list the Button will be disabled.

SimpleLogger

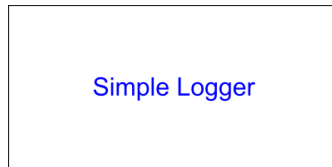

Simple logger component write list of separated lines / logs. It can be used in two modes based on the **format** parameter. Each line can be prepend with **timestamp** using local (client) time. Whole log is limited to the max number of **lines**. Parameter **format** have to options:

text - Simply log when the datapoint **value** changes.

alt - When datapoint **value** changes the description for the value is look up in **texts** table. If not found the value is logged. The value is prepend to description if **showValue** is enabled.

Data points	Optional	Description
value		The value from the datapoint will be logged in the logger.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
format	enum	The format of the logged message. Either pure text or alt analog value lookup table.
texts	table	The lookup table with value and description (desc) pairs. Available for alt format .
lines	number	Maximum number of row / lines in the logger.
timestamp	bool	If True the local client time timestamp will be shown.
showValue	bool	If True the value is prepend before description from texts table.
css	object	Custom CSS style for the HTML logger as a JSON object. For example <code>{'background-color':'#00ffff'}</code>

SliderHorizontal



Slider sets integer or floating value to the target. The range of the slider is limited

between the `min` and `max` value. Slider move is split to several `steps`. The `value` can be converted using `scale` and `offset` and rounded to chosen number of `decimals`. The `fontScale` applies to the displayed value. Each slider has a `label`.

Data points	Optional	Description
<code>value</code>		The main datapoint where numeric value is written.
<code>active</code>	True	If set the slider periodically write boolean TRUE value to the datapoint when the slider is pressed or moving.
<code>refresh_from</code>	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
<code>disable_by</code>	True	If non-zero the component is disabled and data are no longer updated.
<code>hide_by</code>	True	If non-zero the component is hidden.
Options	Type	Description
<code>min</code>	float	The minimum slider value.
<code>max</code>	float	The maximum slider value.
<code>step</code>	float	The size of step (increment) when slider moves.
<code>label</code>	str	The text description.
<code>fontScale</code>	float	The fontScale of the displayed value. If set to 1 the font size is default. The floating number above 1 increase the font size.
<code>scale</code>	float	Scale the number when read. The equation is $scale \cdot val + offset$. The number is converted back when written.
<code>offset</code>	float	Offset the number when read. The equation is $scale \cdot val + offset$. The number is converted back when written.
<code>decimals</code>	int	Round the number when read.
<code>writeOnChange</code>	bool	If true the value is written to the target when the slider is moving.

SliderVertical




Slider sets integer or floating value to the target. The range of the slider is limited between the **min** and **max** value. Slider move is split to several **steps**. The **value** can be converted using **scale** and **offset** and rounded to chosen number of **decimals**. The **fontScale** applies to the displayed value. Each slider has a **label**.

Data points	Optional	Description
value		The main datapoint where numeric value is written.
active	True	If set the slider periodically write boolean TRUE value to the datapoint when the slider is pressed or moving.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
min	float	The minimum slider value.
max	float	The maximum slider value.
step	float	The size of step (increment) when slider moves.
label	str	The text description.
fontScale	float	The fontScale of the displayed value. If set to 1 the font size is default. The floating number above 1 increase the font size.
scale	float	Scale the number when read. The equation is $scale * val + offset$. The number is converted back when written.
offset	float	Offset the number when read. The equation is $scale * val + offset$. The number is converted back when written.
decimals	int	Round the number when read.

<code>writeOnChange</code>	bool	If true the value is written to the target when the slider is moving.
----------------------------	------	---


Switch

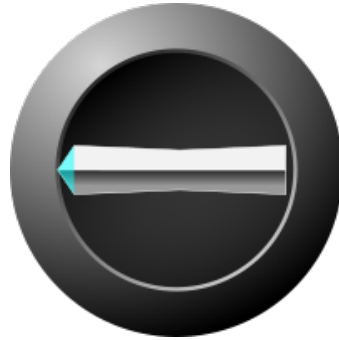

Switch changes the values from the predefined list. Each position writes the defined value to the target device. Click left or right mouse button to change position clockwise / counter-clockwise.


Data points	Optional	Description
<code>value</code>		Datapoint where value is written.
<code>refresh_from</code>	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
<code>disable_by</code>	True	If non-zero the component is disabled and data are no longer updated.
<code>hide_by</code>	True	If non-zero the component is hidden.
Options	Type	Description
<code>positions</code>	table	List of switch positions with values.

SwitchOnOff

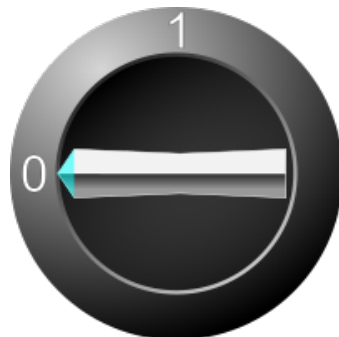

Data points	Optional	Description
value		Datapoint where boolean value is written.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
reverse_meaning	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.

SwitchOnOff2

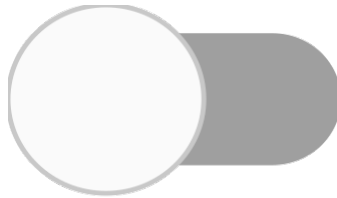

The SwitchOnOff component changes the boolean value. Normally the ON state means TRUE value and OFF mean FALSE value. If needed the parameter **reverseMeaning** reverse the written values.

Data points	Optional	Description
value		The main datapoint where boolean value is written.
refresh_from	True	If set the state of the component is updated based on the value read from this datapoint. Otherwise the value from main datapoint is used.
disable_by	True	If non-zero the component is disabled.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
reverseMeaning	bool	If True the meaning of the value is switched. So the ON state is False and OFF state is True.
label	str	Text written next to the switch
writePerm	table	List of logins who are allowed to write to the data point. If not in list the Button will be disabled.

TRND




Real time trend
from TRND block

The TRND component is used for displaying the signals from the TRND blocks. Simply just set **TRND** datapoint to any parameter of the TRND block eg. **taskname.TRND:u1**. All signals will be displayed in the trend. Each signal can be labeled using **signals** table.

Data points	Optional	Description
TRND		Set the datapoint to any parameter of the TRND block eg. taskname.TRND:u1 to enable reading of all signals.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
title	str	Trend title
signals	table	Table of signal labels. Write labels in the same order as you connect the signals to the TRND block.
bufferSize	number	The size of the buffer in the client webbrowser. <i>Note: if the buffer is larger than the buffer on the device the history is lost when the page is refreshed.</i> <i>Note: Large buffer can slow your device especially on slower CPUs like RaspberryPi</i>
refreshRate	number	Custom refresh rate of the trend. Normally the trend is refreshed with the HMI main refresh rate period. If needed each trend can have custom one.
hideLegend	bool	Hide the legend of the graph.
dygraphOptions	object	Custom options for Dygraph library. See http://dygraphs.com/options.html for more info.

3.2.3 HOME

AirCirculator

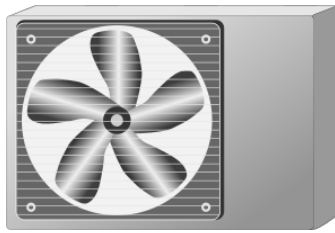

Data points	Optional	Description
POWER		If non-zero the component is enabled.
Options	Type	Description
colorRun	color	Component color when enabled / running.
colorStop	color	Component color when disabled / stopped.

Boiler



The boiler show progress of heating. If the **currentTemp** is less than **setTemp** the flames are visible.

Data points	Optional	Description
POWER		If non-zero the component is enabled.
setTemp		Boiler temperature set-point.
currentTemp		Current temperature.
Options	Type	Description


Filter



The filter show if filtration is in progress.

Data points	Optional	Description
POWER		If non-zero the component is enabled.
Options	Type	Description
colorOn	color	Component color when enabled / running.
colorOff	color	Component color when disabled / stopped.


HandleValve

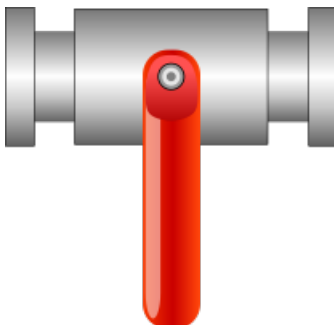

The valve controller. It switch the value when clicked.

Data points	Optional	Description
FLOW		State of the valve.
refresh_from	True	If set the state is read from this datapoint.
Options	Type	Description

HandleValveT

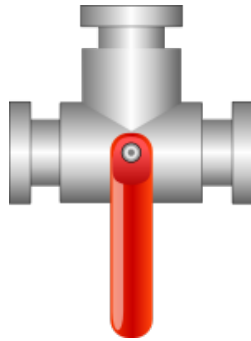

The three state valve controller. When clicked it toggle two boolean values.

Data points	Optional	Description
FLOW1		State of the valve.
FLOW2		State of the valve.
refresh_from	True	If set the state is read from this datapoint. It expect integer number <i>0 - unknown, 1 - True-False state, 2 - False-True state.</i>
Options	Type	Description

Heater




The heater show when the heating is active and what is the current temperature. The color changes from `colorMin` when the value is less than `colorSignalMin` and `colorMax` when the value is greater than `colorSignalMax`.

Data points	Optional	Description
POWER		If non-zero the heater is active.
currentTemp		Current temperature.
Options	Type	Description
heatingColor	color	The color of the heating spiral when active.
colorMin	color	The color of the medium when the current temperature is low.

<code>colorMax</code>	color	The color of the medium when the current temperature is high.
<code>colorSignalMin</code>	float	The minimum level of the value.
<code>colorSignalMax</code>	float	The maximum level of the value.

Motor

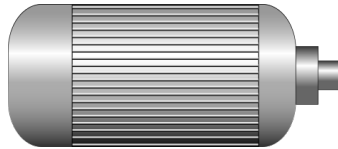

The motor status indicator.

Data points	Optional	Description
POWER		If non-zero the motor is active.
Options	Type	Description
<code>colorRun</code>	color	The color when motor is enabled / running.
<code>colorStop</code>	color	The color when motor is disabled / stopped.

Pipe




The pipe changes the color based on the **COLOR** signal.

Data points	Optional	Description
COLOR		The value for color change (e.g. temperature of the pipe)
Options	Type	Description
<code>colorMin</code>	color	The color when the current temperature is below min.
<code>colorMax</code>	color	The color when the current temperature is above max.

<code>colorSignalMin</code>	float	The minimum temperature.
<code>colorSignalMax</code>	float	The maximum temperature.

Pipe

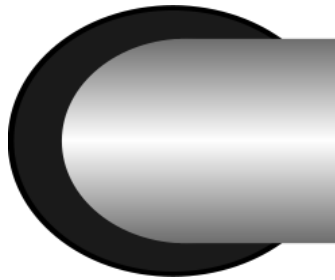

The pipe changes the color based on the `COLOR` signal.

Data points	Optional	Description
<code>COLOR</code>		The value for color change (e.g. temperature of the pipe)
Options	Type	Description
<code>colorMin</code>	color	The color when the current temperature is bellow min.
<code>colorMax</code>	color	The color when the current temperature is above max.
<code>colorSignalMin</code>	float	The minimum temperature.
<code>colorSignalMax</code>	float	The maximum temperature.

Pipe




The pipe changes the color based on the `COLOR` signal.

Data points	Optional	Description
<code>COLOR</code>		The value for color change (e.g. temperature of the pipe)
Options	Type	Description
<code>colorMin</code>	color	The color when the current temperature is bellow min.
<code>colorMax</code>	color	The color when the current temperature is above max.

<code>colorSignalMin</code>	float	The minimum temperature.
<code>colorSignalMax</code>	float	The maximum temperature.


Pipe

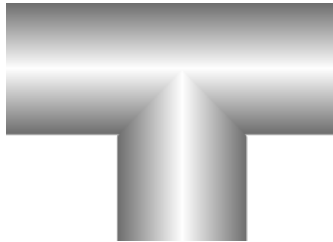

The pipe changes the color based on the `COLOR` signal.

Data points	Optional	Description
<code>COLOR</code>		The value for color change (e.g. temperature of the pipe)
Options	Type	Description
<code>colorMin</code>	color	The color when the current temperature is bellow min.
<code>colorMax</code>	color	The color when the current temperature is above max.
<code>colorSignalMin</code>	float	The minimum temperature.
<code>colorSignalMax</code>	float	The maximum temperature.


PumpRotation

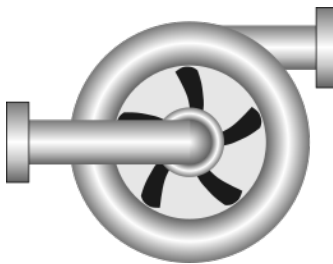

The pump status indicator.

Data points	Optional	Description
<code>POWER</code>		If non-zero the pump is active.
Options	Type	Description
<code>colorRun</code>	color	The color when pump is enabled / running.
<code>colorStop</code>	color	The color when pump is disabled / stopped.

Radiator

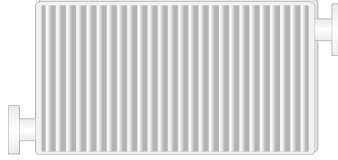

The radiator status indicator.

Data points	Optional	Description
POWER		If non-zero the heating is active.
currentTemp		Current temperature.
Options	Type	Description
inOutColor	color	The color of input and output when heating is active.
colorMin	color	The color of the radiator when currentTemp is less than colorSignalMin .
colorMax	color	The color of the radiator when currentTemp is more than colorSignalMax .
colorSignalMin	float	Minimum value of the temperature.
colorSignalMax	float	Maximum value of the temperature.

Shower



Options	Type	Description
---------	------	-------------

Tank



Show the fill of the tank.

Data points	Optional	Description
level		The level of the liquid in the tank.
Options	Type	Description
capacity	float	The maximum capacity.
colorOfLevel	color	The color of the content.

WaterBoiler



The water boiler component show progress of both heating and cooling. The state depend on **power** value:
 1 - heating

0 - none


-1 - cooling

Data points	Optional	Description
power		The state of the water boiler: 1 - heating 0 - none -1 - cooling

Options	Type	Description
heatingColor	color	The color of the spiral when boiler is heating.
coolingColor	color	The color of the spiral when boiler is cooling.
colorMax	color	The color when the current temperature is above max.
colorMin	color	The color when the current temperature is bellow min.
colorSignalMax	float	The maximum temperature.
colorSignalMin	float	The minimum temperature.


3.2.4 HVAC

AirFilter

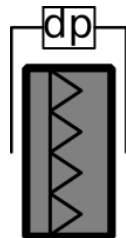


Data points	Optional	Description
DIRTY		If non-zero the Air filter is dirty.
Options	Type	Description


Circulator

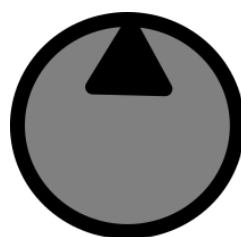

ClosingDamper



ClosingDamper



ClosingDamper



ClosingDamper



Damper



Damper




Damper




Damper




ElAirHeater




Exchanger



ExternalThermometer

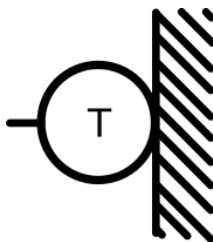


Fan

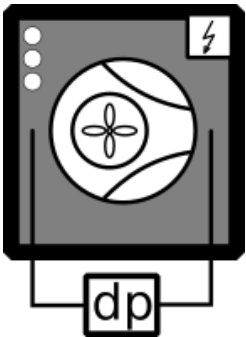


Options	Type	Description
---------	------	-------------

Fan

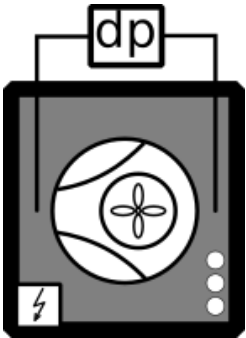


Options	Type	Description
---------	------	-------------

GasBoiler



Pump

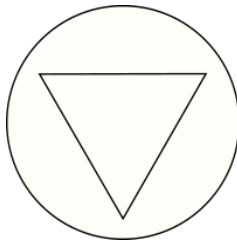


RotaryExchanger




Thermometer




Thermostat




ThermostatThree



ThermostatTwo




TValve

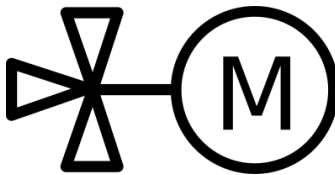

3.2.5 PROC

PC_Cyclons



Data points	Optional	Description
value	True	Number of active cyclons
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description

PC_Pump



Data points	Optional	Description
active_by	True	If non-zero the pump is ON
error_by	True	If non-zero the pump is in error.
hide_by	True	If non-zero the component is hidden.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
Options	Type	Description

PC_Reactor



Data points	Optional	Description
value	True	The height of the level in the tank.
active_by	True	If non-zero the reactor is ON
error_by	True	If non-zero the reactor is in error.
hide_by	True	If non-zero the component is hidden.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
Options	Type	Description
valueMin	float	
valueMax	float	

PC_Reactor




Data points	Optional	Description
value	True	The height of the reactor in the tank.
active_by	True	If non-zero the reactor is ON
error_by	True	If non-zero the valve is in error.
hide_by	True	If non-zero the component is hidden.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
Options	Type	Description
valueMin	float	
valueMax	float	

PC _ Tank



Data points	Optional	Description
value	True	The height of the level in the tank.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
hide_by	True	If non-zero the component is hidden.
Options	Type	Description
valueMin	float	
valueMax	float	

PC _ Valve

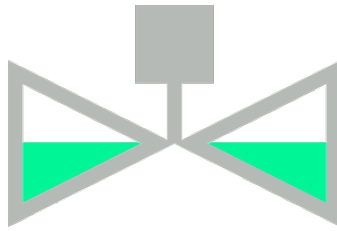

Data points	Optional	Description
value	True	The height of the level in the tank.
active_by	True	If non-zero the valve is ON
error_by	True	If non-zero the valve is in error.
hide_by	True	If non-zero the component is hidden.
disable_by	True	If non-zero the component is disabled and data are no longer updated.
Options	Type	Description
valueMin	float	
valueMax	float	

Chapter 4

WebBuDi

4.1 Simple Buttons and Displays on the Web

WebBuDi is an acronym for Web Buttons and Displays, is a simple JavaScript file with several declarative blocks that describe data points which the HMI is connected to and assemble a table in which all the data is presented. It provides a textual interaction with selected signals and is suitable for system developers and integrators or may serve as a fall-back mode HMI for non-standard situations.

WebBuDi is composed from several **rows** (a graphical components with pre-defined function and look) connected to a single item in the control system (specified by an **alias** or a **cstring** property). There are different rows according to the type they are changing (for boolean, numbers, dates, etc.). All **rows** are organized in *sections* (colored blocks which can have a heading). The sections are then organized in several columns.

The configuration is done using JavaScript objects. See [4.1](#) for more details.

Example

```
1  REX.HMI.init = function(){
2  // Simple PID controller example
3
4  // Optional - Add items first
5  REX.WebBuDi.addItem([
6  {alias: 'PID_MAN', cstring: 'pidcontrol_control.CNB_MAN:YCN', write: true
7  }
8  ]);
9
10 // Add WebBuDi section
11 REX.WebBuDi.addSection({
12   column: 1,
13   title: 'User controls',
14   rows: [
15     {alias: 'PID_MAN', desc: 'Controller mode', type: 'DW', label_false: 'AUT',
16       label_true: 'MAN'},
17     {type: 'ES'},
18     {alias: 'SP_AW', cstring: 'pidcontrol_control.CNR_sp:ycn', desc: 'Setpoint',
19       type: 'AW'}
20   ]
21 }
```

```

18 });
19
20 // Show graph from TRND block
21 REX.HMI.Graph.addSignal({cstring: 'pidcontrol_control.TRND_PIDU', labels:
    ['Process value','Manipulated variable','Setpoint']}));
22
23 // Set different target address
24 // REX.HMI.setTargetUrl('ws://127.0.0.1:8008/rex');
25
26 // Set refresh rate (Default: 500 ms)
27 REX.HMI.setRefreshRate(100);
28
29 // Change title of the page
30 REX.HMI.setTitle('Simple PID controller');
31 }

```

.WebBuDi : object

- **.addSection(opt)** => REX.HMI.WebBuDi
- **.add()** => REX.HMI.WebBuDi
- **.addItems(items)** => Array.<REX.WS.Item>

REX.WebBuDi.addSection(opt) => **REX.HMI.WebBuDi** The **addSection** adds new rows / HMI components to the web page.

The section contains all components defined in **rows** array. It can have **title** shown in header. The whole section can be controlled via **disable_by** and **hide_by** item. Finally the section is placed to the **column** (index based).

The function calls can be chained or called via alias **REX.WebBuDi.add()**.

Kind: static method of **WebBuDi**

Param	Type	Default	Description
opt			The main configuration object
opt.rows	Array.<RowOption>		Definition of all HMI components / rows. See the list for more details
[opt.title]	String		Title of the section shown in the header.
[opt.column]	number	1	Index of the column (starts from 1).
[opt.background_color]	String		Custom background color of the section.
[opt.text_color]	String		Custom text color of the section header
[opt.disable_by]	String Object		If defined by 'alias' or object {alias:" XXX ", cstring:" XXX ", reverse_meaning: false } the state of the component changes (enabled / disabled).
[opt.hide_by]	String Object		If defined by 'alias' or object {alias:" XXX ", cstring:" XXX ", reverse_meaning: false } the visibility of the row changes.

Param	Type	Default	Description
[opt.customDivID]	String	"content"	The ID of the element where all the columns / sections will be appended.

Example

```

1 // Simple HMI for PIDU_Simple_PID_Controller
2
3 REX.WebBuDi.addSection({
4   column: 1,
5   title: 'Controls',
6   rows: [
7     // Digital write
8     {alias: 'PID_MAN', desc: 'Controller mode', type: 'DW', label_false: 'AUT',
9       label_true: 'MAN'},
9     // Analog write
10    {alias: 'SP', desc: 'Setpoint', cstring: 'pidcontrol_control.CNR_sp:ycn',
11      type: 'AW'},
12    {type: 'ES'}, // Empty space
13  ],
14  hide_by: "",
15  disable_by: ""
16 });

```

REX.WebBuDi.add() => **REX.HMI.WebBuDi** Shortcut for [REX.WebBudi.addSection](#) function.

Kind: static method of [WebBuDi](#)

REX.WebBuDi.addItems(items) => **Array.<REX.WS.Item>** Add several items at once. This is useful way how to define aliases and use them in various rows

Kind: static method of [WebBuDi](#)

Param	Type	Description
items	Array. <Object>	Array of items to register. Shortcut for REX.HMI.addItems() .
items.alias	String	
items.cstring	String	
items.write	boolean	Set true if item is writable

Example

```

1 REX.WebBuDi.addItems([
2   {alias: 'PID_MAN', cstring: 'pidcontrol_control.CNB_MAN:YCN', write: true},
3   {alias: 'SP_AW', cstring: 'pidcontrol_control.CNR_sp:ycn', write: true},

```

```

4 {alias: 'HV', cstring: 'pidcontrol_control.PIDU:hv'}
5 });

```

4.2 Available Rows and Components

- AnalogLookupTable ('ALT')
- Analog Write ('AW')
- Analog Read ('AR')
- Digital Read ('DR')
- Digital Write ('DW')
- Empty Space ('ES')
- Link Button ('LINK')
- Manual Pulse ('MP')
- Push Button ('PB')

General row options - Every row is configured with common and row-specific properties. The following object represents the common part.

Properties

Name	Type	Description
type	String	The type of the component / row (eg. "AR")
alias	alias	UNIQUE identification of the item from control system (eg. 'SP'). Must NOT contain spaces or diacritics
desc	String	Name of the component shown in the description (eg. "Set point"). If the <code>alias</code> is not defined the <code>desc</code> is used instead. The <code>desc</code> is converted to lowercase, spaces are substitute with underscore and all non-ascii letters omitted or replaced with ascii equivalent.
cstring	String	Connection string which contain whole path to the target device (eg. "task.CNR:ycn")
disable_by	String Object	If defined by 'alias' or object {alias:"XXX", cstring:"XXX", reverse_meaning:false} the state of the component changes (enabled / disabled).
hide_by	String Object	If defined by 'alias' or object {alias:"XXX", cstring:"XXX", reverse_meaning:false} the visibility of the row changes.
refresh_from	String	If defined by 'alias' or object {alias:"XXX", cstring:"XXX"} the value for the item is read from different location than written. It is aplicable on for WRITE components

```

1 // All properties
2 {alias:"SP", desc:"Set point", cstring:"task.CNR:ycn", disable_by:null,
  hide_by:null refresh_from:null}

```

AnalogLookupTable ('ALT') - Select with list of options. Used for user define enums.

Param	Type	Default	Description
opt	RowOption		General configuration for row extended with following properties
[opt.show_key]	boolean	false	Append keys to the list of options
opt.values	Object	{}	List of all values which can be selected. It is a Object with key-value pairs (e.g. {"1":"Options 1", "2":"Options 2"}) *

Example

```
1 {type: 'ALT', values:{"1":"Options 1", "2":"Options 2"}, show_key: false}
```

Analog Read ('AR') - Periodical reading of selected value (date,time,datetime,text,number).

date, time, datetime - Show date calculated from seconds from REX Epoch timestamp.

text - Show the value without any transformation (suitable for string values).

number - Show number transformed by scale, offset and round to number of decimals.

Param	Type	Default	Description
opt	RowOption		General configuration for row extended with following properties
[opt.format]	boolean	number	One of the following date,time,datetime,text,number
[opt.scale]	number	1	Scale factor
[opt.offset]	number	0	Offset for the displayed value
[opt.decimals]	number	4	Number of decimals
[opt.convert]	function		If defined, the format='number' value is transformed using convert function eg. convert=function(val){return val+1;}

Example

```
1 // Show number rounded to 4 decimal places
2 {type: 'AR'}
3
4 // Show date
5 {type: 'AR', format: 'date'}
6
7 // Show string values
8 {type: 'AR', format: 'text'}
9
10 // Convert radians to degrees
11 {type: 'AR', format: 'number', scale:(Math.PI/180), offset=0, decimals=0}
```

Analog Write ('AW') - Set `date,time,datetime,text` or `number` to the control system.
`date, time, datetime` - R/W date calculated from seconds from REX Epoch timestamp
`text` - Write value without any transformation (suitable for string values)
`number` - R/W number transformed by `scale, offset` and rounded to number of `decimals`.

Param	Type	Default	Description
<code>opt</code>	RowOption		General configuration for row extended with following properties
<code>[opt.format]</code>	boolean	number	One of the following <code>date,time,datetime,text,number</code>
<code>[opt.scale]</code>	number	1	Scale factor
<code>[opt.offset]</code>	number	0	Offset for the displayed value
<code>[opt.min]</code>	number		Limit the minimum value
<code>[opt.max]</code>	number		Limit the maximum value
<code>[opt.decimals]</code>	number	4	Number of decimals
<code>[opt.set_on_blur]</code>	boolean	false	If set the value is written when the input is blurred. Use <i>ESC</i> to cancel changes
<code>[opt.convert]</code>	function		If defined, the <code>format='number'</code> value is transformed using convert function eg. <code>convert=function(val){return val+1;}</code>
<code>[opt.convertW]</code>	function		If defined, the <code>format='number'</code> value is transformed before write by convert function eg. <code>convertW=function(val){return val+1;}</code>

Example

```

1 // Change number rounded to 4 decimal places
2 {type: 'AW'}
3
4 // Set date
5 {type: 'AW', format: 'date'}
6
7 // Set string values
8 {type: 'AW', format: 'text'}
9
10 // Display degrees, read and write as radians
11 {type: 'AW', format: 'number', scale:(Math.PI/180), offset=0, decimals=0}
12
13 // Default options
14 {type: 'AW', format: 'number',
15 scale:1, offset:0, min: -Number.MAX_VALUE, max: Number.MAX_VALUE,
16 set_on_blur:false, convert:null, convertW:null}
```

Digital Read ('DR') - Periodical reading of boolean value.

Param	Type	Default	Description
opt	RowOption		General configuration for row extended with following properties
[opt.label_false]	String	"OFF"	Label for the false / off / disable value.
[opt.label_true]	String	"ON"	Label for the true / on / enable value.
[opt.reverse_meaning]	boolean	false	If set the '0' (zero) means enables / ON and '1' disabled / OFF
[opt.color_false]	String	""	Change color of FALSE button when active
[opt.color_true]	String	""	Change color of TRUE button when active

Example

```

1 {alias: 'DR', desc: 'Controller mode', type: 'DR', label_false: 'AUT',
  label_true: 'MAN'}
2
3 // All options
4 {type: 'DR', label_false: 'OFF(0)', label_true: 'ON(1)', reverse_meaning:
  false, color_false: '', color_true: ''}
```

Digital Write ('DW') - Set boolean value

Param	Type	Default	Description
opt	RowOption		General configuration for row extended with following properties
[opt.label_false]	String	"OFF"	Label for the false / off / disable value.
[opt.label_true]	String	"ON"	Label for the true / on / enable value.
[opt.reverse_meaning]	boolean	false	If set the '0' (zero) means enables / ON and '1' disabled / OFF
[opt.color_false]	String	""	Change color of FALSE button when active
[opt.color_true]	String	""	Change color of TRUE button when active
[opt.flip]	boolean	false	If set the position of the TRUE/FALSE buttons is flipped.

Example

```

1 {alias: 'DW', desc: 'Controller mode', type: 'DW', label_false: 'AUT',
  label_true: 'MAN'}
2
3 // All options
4 {type: 'DW', label_false: 'OFF(0)', label_true: 'ON(1)', reverse_meaning:
  false, color_false: '', color_true: '', flip: false}
```

Empty Space ('ES') - Creates empty row to fill gaps

Link Button ('LINK') - Create link to different page

Param	Type	Default	Description
opt	Object		LINK configuration object
[opt.target_url]	String	""	URL to which the link leads to.
[opt.desc]	String	""	Description of the link
[opt.label]	String	""	Button label

Example

```
1 {type: 'LINK', target_url: '/hmi/index.html', desc: 'Go to index page ...',
  , label: 'To index'}
```

Manual Pulse ('MP') - Manual Pulse controller (for MP block)

Param	Type	Description
opt	RowOption	General configuration for row apply

Example

```
1 {alias: 'MP_RUN', cstring: "task.MP_RUN:BSTATE", type: 'MP'}
```

Push Button ('PB') - One button for setting different values on press and release.

Param	Type	Default	Description
opt	RowOption		General configuration for row extended with following properties
[opt.label_false]	String	"OFF"	Label for the false / off / disable value.
[opt.label_true]	String	"ON"	Label for the true / on / enable value.
[opt.reverse_meaning]	boolean	false	If set the '0' (zero) means enables / ON and '1' disabled / OFF
[opt.color_false]	String	""	Change color of FALSE button when active
[opt.color_true]	String	""	Change color of TRUE button when active
[opt.value_release]	number String	0	Set the value which should be set on release (<code>reverse_meaning</code> do not apply).
[opt.value_press]	number String	1	Set the value which should be set on press (<code>reverse_meaning</code> do not apply).

Example

```
1 // Write 'true' on press and 'false' on release
2 {type: 'PB'}
3
4 // Write float value
5 {type: 'PB', value_release: 0, value_press: 0.1}
```

```
6
7 // All options
8 {type: 'PB', label_false: 'OFF(0)', label_true: 'ON(1)', reverse_meaning:
  false,
9 color_false:'', color_true:'', value_release: 0, value_press: 1}
```

Chapter 5

REX.HMI library

5.1 How to Use the Library

The user can program the HMI over REX.HMI interface. It contain several public methods for reading and writing items from REX targets. To create and build your custom HMI based on the RexHMI library follow these steps:

1. Create project directory with *exec.mdl*. Add the *HMI* block to the executive (see the [1] for more details)
2. Create **.hmi.js* file in *./hmisrc* directory with `REX.HMI.init = function(){} function` inside.
3. Start writing your script

When the script is ready, enable generation of RexHMI using *GenerateRexHMI* parameter in the *HMI* block of the executive. Then run *Compile and Download* function in the REXYGEN Studio. The content of the **.hmi.js* file is inserted to the RexHMI template with all the necessary scripts and libraries, also all other content of the *hmisrc* directory is copied to the target *./hmi* folder. The HMI is then downloaded to the target and available from the internal webserver.

The `REX.HMI` interface is described in following sections. Each function contain short example with common parameters.

```
1 // Common usage
2 // Append this function to the HTML document or use predefined
  placeholder in the template
3 REX.HMI.init = function(){
4 // Change some basic settings
5
6 }
```

5.2 Reference Guide for REX.HMI

The main entry-point for all RexHMI visualization. This class exposes all methods necessary for reading and writing variables in control scheme over WebSockets.

Emits: event:time, event:online, event:offline

Properties

Name	Type	Description
REX.HMI.kioskMode	boolean	Set true to enable kioskMode of the HMI
REX.HMI.disableAutoReload	boolean	Set to true if autoreload of the web page should be disabled Autoreload is call when the REXY-GEN executive or HMI changes. This can be useful if general signals are read to Graph and one do not want to loose history

List of all available functions

- `.init()`
- `.connect() =>Promise`
- `.disconnect()`
- `.getTarget(url) =>WSTarget`
- `.setTargetUrl(url, force) =>Promise`
- `.setRefreshRate(period)`
- `.addItem(opt) =>Item`
- `.addItems(items) =>Array.<Item>`
- `.removeItem(alias) =>Promise`
- `.get(alias) =>Item`
- `.$i(alias) =>Item`
- `.addGroup(g)`
- `.removeGroup(g)`
- `.addTrend(t)`
- `.removeTrend(t)`
- `.writeValues(aliases, values) =>Promise`

- `.setTitle(title)`
- `.setHeaderTitle(title)`
- `.showHeartBeatClock(show)`
- `.useClientTime(use)`
- `.getItemsEventSynchronizer(aliases, events) =>EventSync`
- `.commit() =>Promise`

REX.HMI.init() This method can be override by the user. The *init* is called when the websocket connection is opened and one can add own items for RW operations. The method can be called either synchronously or asynchronously with callback. Example of the *REX.HMI.init* function is part of the HTML template

Example

```
1 // Synchronous version
2 REX.HMI.init = function(){
3 REX.HMI.addItem({alias:"SP", cstring:"task.block:param"});
4 }
5
6 // Init with callback
7 REX.HMI.init = function(done){
8 done();
9 }
```

REX.HMI.connect() =>Promise Connect the RexHMI to the target. This function is called automatically

REX.HMI.disconnect() Disconnect all items from the target. Stop reading and dispose connections to all targets.

REX.HMI.getTarget(url) =>WSTarget Return REX target base on the given URL. If URL is null (the most common case) then it returns the default target.

Param	Type	Description
url	String	URL of the requested target

Example

```
1 // Retrieve version of the default target
2 REX.HMI.getTarget().getVersion().then((data)=>{console.log(data)})
```

REX.HMI.setTargetUrl(url, force) =>Promise Sets the new default target URL. When the page is served from server (not localhost) and the `location.hostname` is set the

setTargetURL function sets NULL to use default targetURL. So the target connects to the location which the page is served from.

This behaviour can be changed by setting the **force** parameter to true. Then the 'url' will be used on any occasion.

Param	Description
url	URL of the target
force	set true if the URL should be set even run from server with hostname

Example

```

1 // The most common usage
2 // If run locally from file:// connect to IP, when uploaded to server (
  RexCore)
3 // then connect to location.hostname
4 REX.HMI.setTargetUrl("ws://192.168.0.100:8008");
5
6 // Always connect to the localhost
7 REX.HMI.setTargetUrl("ws://127.0.0.1:8008", true);
8
9 // Always use secure WebSocket
10 REX.HMI.setTargetUrl("wss://192.168.0.100:8008", true);

```

REX.HMI.setRefreshRate(period) Change the default refresh rate (how fast the data from RexCore will be read)

Param	Type	Default	Description
period	number	500	New refresh period [ms]

Example

```

1 // Change default refresh period to 1000 ms (1s)
2 REX.HMI.setRefreshRate(1000);

```

REX.HMI.addItem(opt) => Item Register new *Item* defined by **alias** and **cstring** for periodical reading and asynchronous writing.

Returns: Item - - Registered item

Param	Type	Description
opt	Object	Main configuration object
opt.alias	string	Alias for the connection string
opt.cstring	string	Connection string of the signal from REX
[opt.url]	string	URL of the target, if NULL the default is used

Param	Type	Description
[opt.period]	number	Item refresh period [ms]
[opt.writeCString]	string	If defined the value of the item will be written to this <i>cstring</i>

Example

```

1 // The most common usage
2 var sp = REX.HMI.addItem({alias:"SP", cstring:"task.block:param"});
3 sp.on('change',(data)=>{console.log(data)});
4
5 // Different location of reading and writing (eg. Write before saturation
   and read after)
6 REX.HMI.addItem({alias:"SP", cstring:"task.SAT:y", writeCString:"task.CNR
   :ycn"});

```

REX.HMI.addItem(items) => Array.<Item> Add several Items at once. See [HMI#addItem](#) for more details

Returns: Array.<Item> - - Return array of added items

Param	Type	Description
items	Array. <Object>	An array of items

REX.HMI.removeItem(alias) => Promise Remove an Item based on its **alias**

Param	Description
alias	Items alias used during registration

REX.HMI.get(alias) => Item Find Item using its **alias**

Param	Description
alias	Items alias used during registration

REX.HMI.\$i(alias) => Item Find Item using its **alias**

Param	Description
alias	Items alias used during registration

REX.HMI.addGroup(g) Register custom group of items for R/W operations

Param	Type	Description
g	REX.WS.Group	Group for registering

Example

```

1 // Create group see REX.WS.Group
2 var g = new REX.WS.Group({id:"group1", period:100, url:""});
3
4 // Add some items
5 g.addItem(new REX.WS.Item({id:"ITEM-1", cstring:"task.block:param", url:"
   "}));
6
7 // Register events
8 g.on('read',(data)=>{console.log(data)});
9
10 // Register group
11 REX.HMI.addGroup(g);

```

REX.HMI.removeGroup(g) Unregister custom group

Param	Type	Description
g	REX.WS.Group	Instance of group which will be unregistered

REX.HMI.addTrend(t) Unlike REX.WS.Group the Trend reads data from TRND* blocks. These blocks store several signal with buffered data. Once registered the user can process the data from TRND* blocks.

Param	Type	Description
t	REX.WS.Trend	Trend which will be registered

Example

```

1 // Create new trend
2 var trend = REX.WS.Trend({cstring:"task.TRND", id:"TRND-1", period:500,
   readWholeBuffer:true});
3
4 // Register
5 REX.HMI.addTrend(trend);
6 // Add event handlers
7 trend.on('read',(data)=>{console.log(data)});

```

REX.HMI.removeTrend(t) Unregister trend

Param	Type
t	REX.WS.Trend

REX.HMI.writeValues(aliases, values) =>Promise Write one or several values to the control system. Using already registered items (aliases).

Param	Type	Description
aliases	Array. <String>	An array of already registered aliases
values	Array	An array of values to be written

Example

```
1 // Register some items
2 REX.HMI.addItems([{"alias": "A1", cstring: "task.A1:ycn"}, {"alias": "A2", cstring:
   "task.A2:ycn"}]);
3
4 // Write values
5 REX.HMI.writeValues(["A1", "A2"], [0.5, 0.7]);
```

REX.HMI.setTitle(title) Change bot title in header and title of the webpage

Param	Type	Description
title	String	New title for header and webpage

Example

```
1 REX.HMI.setTitle("My HMI");
```

REX.HMI.setHeaderTitle(title) Change the header title only

Param	Type	Description
title	String	New title for the header

REX.HMI.showHeartBeatClock(show) If true, the template will display CLOCK in upper right corner of the main screen. When the update of the time stops, the default target is disconnected and the HMI is not updated

Param	Type	Description
show	Boolean	True to show the clock

REX.HMI.useClientTime(use) Set to True if the time should be displayed in client time not target time. When the target is not able to synchronize with some time server is it possible to use and display times in a client time

Param	Type	Description
use	Boolean	True to use client time instead of target one

REX.HMI.commit() => **Promise** REX.HMI.commit

When called all the items added after the HMI is connected to the target are initialized at once.

Kind: instance method of [HMI](#)

Returns: Promise - - Promise all items are initialized.

REX.HMI.getItemsEventSynchronizer(aliases, events) => **EventSync** Return an EventSync object which emits events when all registered items have emitted the same event.

Param	Type	Description
aliases	Array String	Array of item aliases or one alias as a string
events	Array String	Array of events which will be monitored

Example

```

1 / Register some items
2 REX.HMI.addItems([{"alias": "A1", cstring: "task.A1:ycn"}, {"alias": "A2", cstring:
   "task.A2:ycn"}]);
3
4 var sync = REX.HMI.getItemsEventSynchronizer(["A1", "A2"], ["read"]);
5
6 sync.on("read", () => {console.log("All read events emitted")});

```

5.3 Reference Guide for REX.HMI.Graph

Time-based graph component which is shown on the bottom of the web page. Graph can read arbitrary signal connected via **alias** and **cstring** or all signals from TRND* blocks. The Graph is shown when first signal is added over **addSignal** or **addTrend** function.

The REX.HMI.Graph has following functions:

- [.resume\(\)](#)
- [.pause\(\)](#)

- `.show()`
- `.hide()`
- `.addSignal(opt)`
- `.addTrend(opt)`
- `.setSize(size)`
- `.setRefreshRate(period)`
- `.hideLegend()`

REX.HMI.Graph.resume() Resume redrawing the graph
Example

```
1 REX.HMI.Graph.resume()
```

REX.HMI.Graph.pause() Pause redrawing the graph
Example

```
1 REX.HMI.Graph.pause()
```

REX.HMI.Graph.show() Show graph
Example

```
1 REX.HMI.Graph.show()
```

REX.HMI.Graph.hide() Hide graph
Example

```
1 REX.HMI.Graph.hide()
```

REX.HMI.Graph.addSignal(opt) Add arbitrary signal from the REXYGEN executive to the trend. Warning! The data are stored inside the web page once refreshed all the data will be lost.

Param	Type	Description
opt	Object	Main configuration object
opt.alias	string	Alias for the connection
[opt.cstring]	string	Connection string of the signal from REX
[opt.desc]	Array. <string>	Signal's description
[opt.period]	number	Signal refresh period [ms]

Example

```
1 REX.HMI.Graph.addSignal({alias:"Signal-1", cstring:"task.CNR:ycn", desc:"
  Set point", period:500});
```

REX.HMI.Graph.addTrend(opt) Add signals from TRND* blocks to the common graph in HMI

Param	Type	Description
opt	Object	Main configuration object
opt.cstring	string	Connection string for TRND* block
[opt.labels]	Array. <string>	Array of signal labels
[opt.period]	number	Graph redraw period

Example

```
1 REX.HMI.Graph.addTrend({ cstring: "task.TRND", labels: ["signal-1", "signal-2"], period: 500 });
```

REX.HMI.Graph.setSize(size) Change size of the graph. The size is in percent of the page.

Param	Type	Default	Description
size	number	0.39	Size of the graph in percents <0;1>

Example

```
1 REX.HMI.Graph.setSize(0.39); // Default
```

REX.HMI.Graph.setRefreshRate(period) Change refresh rate of all signals and trends.

Param	Description
period	Refresh period [ms]

Example

```
1 REX.HMI.Graph.setRefreshRate(250);
```

REX.HMI.Graph.hideLegend() Hide legend of the graph

Example

```
1 REX.HMI.Graph.hideLegend();
```

Bibliography

- [1] REX Controls s.r.o.. *Function blocks of REXYGEN – reference manual*, 2018.