

Getting started with REXYGEN and Pigeon PLC

User guide

REX Controls s.r.o.

Version 2.50.9

2019-05-04

Plzeň (Pilsen), Czech Republic

Document revision 2

Contents

| | | |
|----------|---|-----------|
| 1 | Introduction | 3 |
| 1.1 | Features of the REXYGEN system | 3 |
| 1.2 | Structure of the REXYGEN system | 4 |
| 1.3 | Programming in the REXYGEN system | 4 |
| 1.4 | Main components of the REXYGEN system | 5 |
| 1.4.1 | REXYGEN Studio – the development environment | 5 |
| 1.4.2 | REXYGEN HMI Designer | 5 |
| 1.4.3 | REXYGEN Compiler | 5 |
| 1.4.4 | RexCore | 6 |
| 1.4.5 | REXYGEN Diagnostics | 6 |
| 2 | Installation of the development tools | 7 |
| 2.1 | Windows 7/8/10 | 7 |
| 2.1.1 | Installation procedure | 7 |
| 2.1.2 | Uninstall procedure | 8 |
| 3 | Installing the runtime modules of the REXYGEN system on Pigeon PLC | 9 |
| 3.1 | Install using operating system image | 9 |
| 3.2 | Installed files and folders | 9 |
| 4 | Configuration, compilation and execution | 10 |
| 4.1 | Creating a new project | 10 |
| 4.2 | Compiling and running a project | 15 |
| 4.3 | Adding a user interface (HMI) | 21 |
| 4.4 | Ready for interaction with the outer world | 27 |
| 5 | I/O configuration for the Pigeon PLC | 28 |
| 5.1 | Physical connections | 28 |
| 5.2 | Adding inputs and outputs to the project | 29 |
| 5.3 | Working with I/O signals | 29 |
| 5.3.1 | Modifications in the project main file | 29 |
| 5.3.2 | Modifications in the task | 31 |
| 5.4 | Updating the HMI | 33 |
| 5.5 | Additional information | 35 |

| | | |
|----------|---|-----------|
| 5.5.1 | Detailed description of the driver | 35 |
| 5.5.2 | Examples | 35 |
| 6 | Summary | 36 |
| A | Graphical HMI with REXYGEN HMI Designer | 37 |
| A.1 | Initializing the HMI design | 37 |
| A.2 | Adding the first HMI components | 39 |
| A.3 | Linking HMI components with the running algorithm | 41 |
| A.4 | Adding more HMI components | 46 |
| A.5 | Additional links to the running algorithm | 47 |
| A.6 | The final steps | 48 |
| B | Licensing of the REXYGEN system | 51 |
| B.1 | Obtaining a DEMO licence | 51 |
| B.2 | Obtaining a permanent licence | 54 |
| B.2.1 | Activation of the permanent licence | 55 |
| | Bibliography | 57 |

Chapter 1

Introduction


The REXYGEN system is a family of software products for automation projects. You can use it in all fields of automation, robotics, measurements and feedback control.

The runtime core of the REXYGEN system turns your Pigeon PLC into a programmable device which will run your algorithms.

1.1 Features of the REXYGEN system


- Graphical programming without hand-coding
- Programming control units on a standard PC or laptop
- User interface for desktop, tablet and smartphone (HMI)
- Wide family of supported devices and input-output units (including Pigeon PLC)
- Industry-proven control algorithms
- Easy integration into business IT infrastructure (ERP/BMS)
- REST API for seamless integration into Industry 4.0 and (I)IoT solutions

1.2 Structure of the REXYGEN system

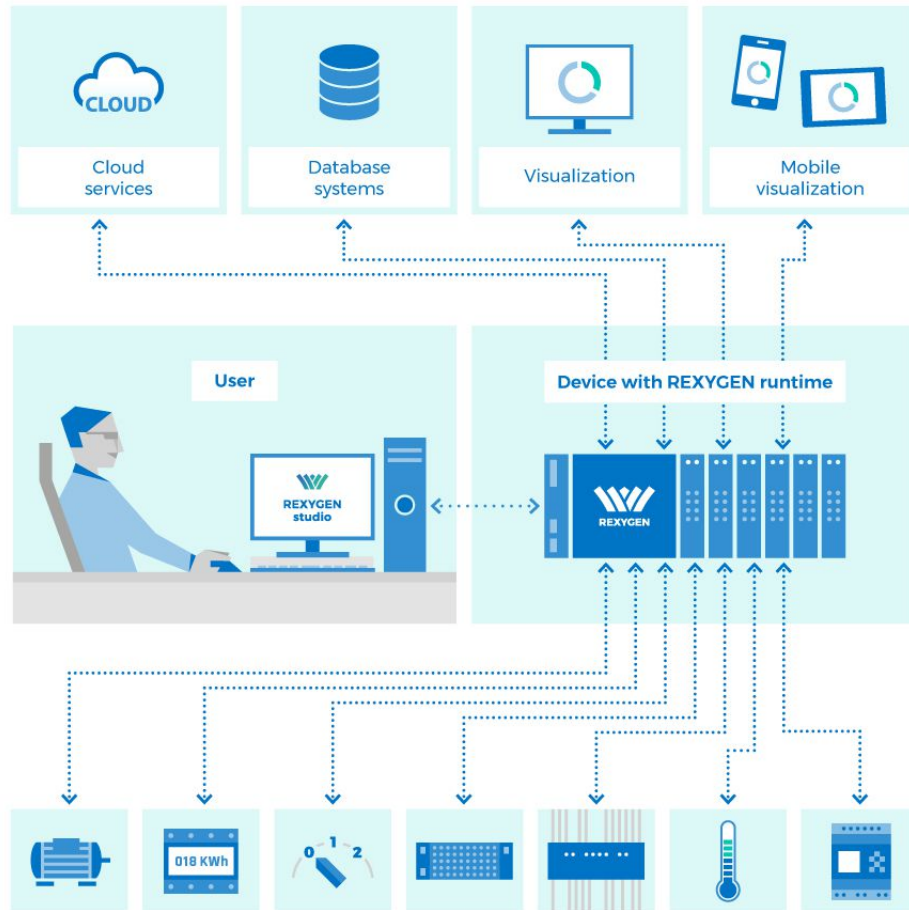

1.3 Programming in the REXYGEN system

The REXYGEN system offers a graphical development environment for programming the algorithms. You can use standard desktop or laptop PC. You create the algorithms from the so-called function blocks. The library includes countless items (timers, comparators, filters, PID controllers and many more).

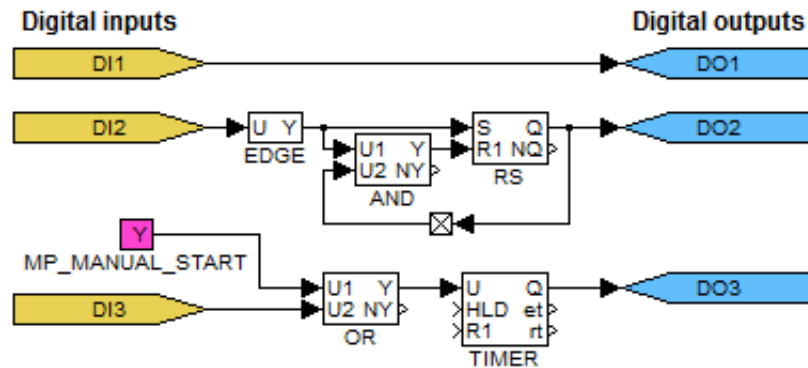

1.4 Main components of the REXYGEN system

1.4.1 REXYGEN Studio – the development environment

REXYGEN Studio is a developer's tool which runs on a standard PC with Windows. You create the algorithms using the function block library¹ of the REXYGEN system [1]. The library contains simple comparators and timers as well as advanced blocks for signal processing and feedback control (PID controllers etc.). You compile your project on your PC and run it on your Pigeon PLC.

Once running, you can watch your algorithm in real-time. Just select the signals and function blocks of your interest. You can also obtain detailed hierarchical information about the running algorithm and diagnose the runtime core and execution of your algorithm. You can connect via local network or over the Internet.

1.4.2 REXYGEN HMI Designer

The REXYGEN HMI Designer is another developer's tool intended for designing graphical user interface (or HMI, Human Machine Interface, if you prefer) for your algorithms. The user interface is included in the project and it is copied to your Pigeon PLC along with the algorithm.

1.4.3 REXYGEN Compiler

The REXYGEN Compiler converts your algorithms into binary code of the REXYGEN system. The compiler is almost invisible for the user, it is invoked from the REXYGEN Studio development environment. The compiler detects and reports possible errors in your algorithms.

¹The IEC 61131-3 standard defines Function Block Diagram (FBD) as one of the PLC programming techniques.

1.4.4 RexCore

The RexCore (REXYGEN runtime core) service runs on the target device (Pigeon PLC). Once installed, it runs in the background and therefore it is almost invisible for the user. It handles timing and execution of your algorithms and provides various services. The individual tasks are prioritized and executed using preemptive multitasking. The RexCore service is automatically started at system startup.

RexCore further contains an integrated webserver providing user interface (HMI) and REST API. Chapter ?? deals with installing all the necessary modules on Pigeon PLC.

1.4.5 REXYGEN Diagnostics

With REXYGEN Diagnostics you can diagnose the runtime core and execution of your algorithm. It is an alternative standalone tool for commissioning and diagnostics of control algorithms. All the diagnostic functions are included in REXYGEN Studio, therefore REXYGEN Diagnostics can be considered obsolete. You can connect via local network or over the Internet.

Chapter 2

Installation of the development tools

This chapter describes the steps to install and uninstall the development tools of the REXYGEN system on Windows 7/8/10 operating systems.

2.1 Windows 7/8/10

The installation package of REXYGEN development tools contains the REXYGEN Studio and REXYGEN HMI Designer development environments, the REXYGEN Compiler compiler and the REXYGEN Diagnostics tool. It also includes the RexCore (REXYGEN runtime core) module for developing and testing purposes.

The installation package can be downloaded from
<https://www.rexygen.com/software-download>.

The installation process requires the administrator rights on your PC.

2.1.1 Installation procedure

1. Run the REXYGEN-X.XX.XX.XXXX-PPP.exe downloaded from
<https://www.rexygen.com/software-download>.
2. Select the language and follow the installation wizard.
3. Select the target installation folder, the default is
C:\Program Files (x86)\REX Controls\REXYGEN X.XX.XX.XXXX.
4. Afterwards you can select the components to install. The requirements are quite low (approx 400 MB disk space) therefore the **Full install** option is recommended.
5. The following steps are standard and do not require further explanation.

There is no need to restart the system after installation.

2.1.2 Uninstall procedure

The common procedure can be used to uninstall REXYGEN development tools – go to *Control panel* and choose *Install/Uninstall programs*.

Chapter 3

Installing the runtime modules of the REXYGEN system on Pigeon PLC

3.1 Install using operating system image

1. It is highly recommended to use the official Pigeon PLC OS image with REXYGEN which you can download from <http://pigeoncomputers.com/documentation/installation/>.
2. After you download the file, write it to the internal eMMC storage of Pigeon PLC. Instructions for this procedure are available at the same page <http://pigeoncomputers.com/documentation/installation/>.
3. Power up your Pigeon PLC.

Now the **RexCore** runtime module will be started automatically in the background as a daemon whenever you power up your Pigeon PLC. This allows you to establish connection between the host PC and the Pigeon PLC using the **REXYGEN Studio** program and develop your automation solutions.

3.2 Installed files and folders

Please refer to the **RexCore** user guide [2] for detailed information about the files and folders of the **REXYGEN** system runtime modules.

Chapter 4

Configuration, compilation and execution

The process of creating a control algorithm will be demonstrated on a very simple example with four Boolean variables representing manual switches. In Chapter 5.3, two of them will be replaced by physical inputs of the Pigeon PLC. A software timer will be used for measuring the time when the variables are true (i.e. the switches are in the ON position). A Boolean signal will indicate that the interval of predefined length has elapsed.

4.1 Creating a new project

The project configuration is created using the REXYGEN Studio program. Each project consists of at least two `.mdl` files. The first file is the main file of the project, which is used for configuration of tasks, drivers, priorities and timing. The other file(s) contain the individual control algorithms (tasks).


First we'll create the example 0101-01 from scratch¹.

Standard approach:


1. Run the REXYGEN Studio program. Start with a plain project and select a folder to save the project files in (e.g. `D:\GettingStarted`).
2. The folder will contain two important files:
 - `myproject_exec.mdl`
 - `myproject_task.mdl`
3. The `myproject_exec.mdl` is the project main file. It contains one EXEC block from the EXEC library. The other block is the TASK block from the same library

¹All examples which are part of the installation are marked by an ExampleID. The most up-to-date examples are available at <https://github.com/rexcontrols/REXexamples/archive/v2.50.zip>


and it is renamed to `myproject_task` to reference the second file of the project (`myproject_task.mdl`), which will contain the algorithm (the so-called task).

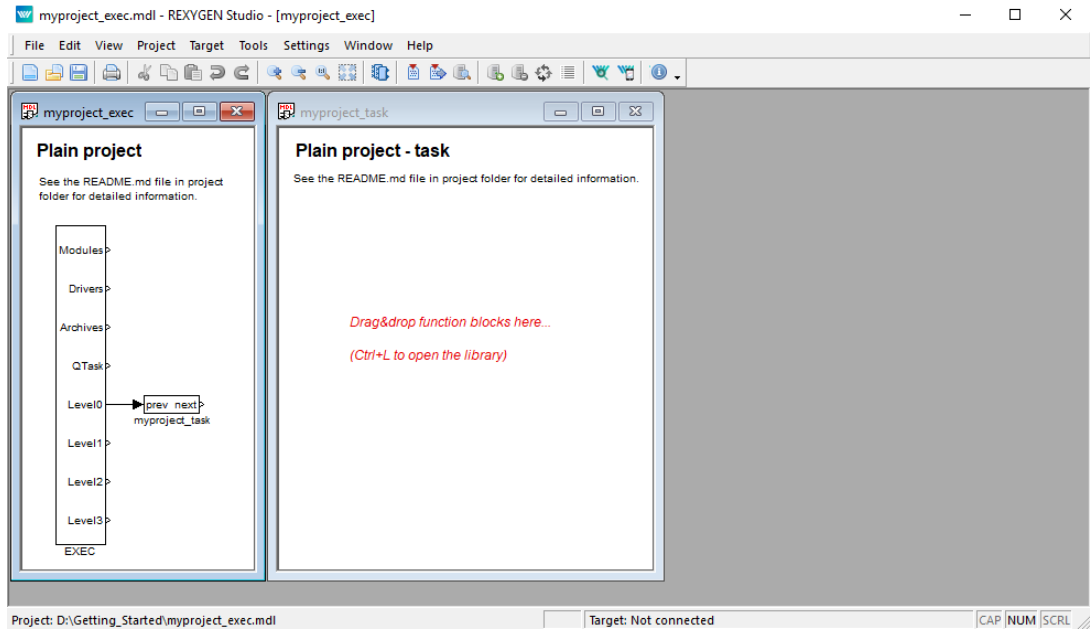


4. The task is connected to the `Level0` output of the `EXEC` block and therefore its timing is defined by `tick` and `ntick0` parameters of the `EXEC` block.
5. The `EXEC` block (and any other block) can be configured by double-clicking on it. A block parameters and properties dialog appears. The parameters of all blocks of the REXYGEN system are described in the Help (press the F1 key) and in the Block reference manual [1].

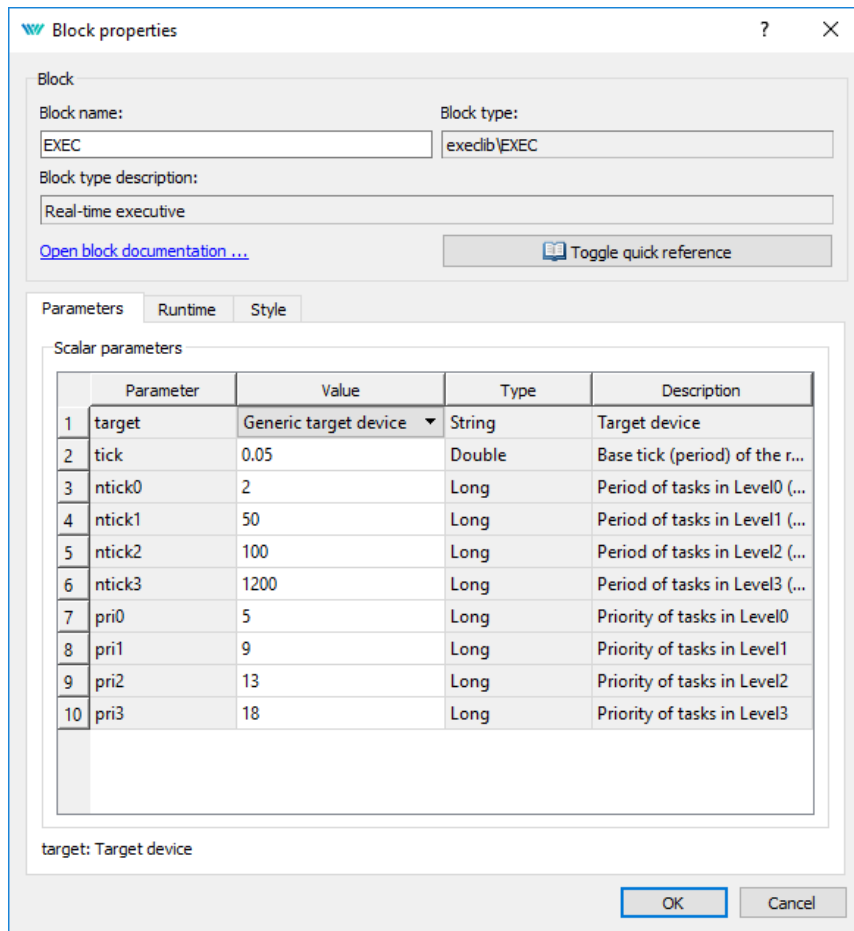


6. Note that `tick=0.05` and `ntick0=2`, therefore the task will run each 100 milliseconds ($0.05 \cdot 2 = 0.1s$). There is no need to change any parameter at the moment. Close the dialog.
7. You can delete all the descriptive texts in project files. These have no effect on the functionality and can be considered programmer's comments.
8. Open **Block Library**, choose *View/Block Library* in the menu or use the icon from the toolbar.
9. By default, the library is in *Tree view* mode where the blocks are organized in sub-libraries. Their location is always denoted as **sublibrary/block**, e.g. **LOGIC/AND** for the logical **AND** block in the **LOGIC** sublibrary. Inside a sublibrary, the blocks are ordered in alphabetical order.

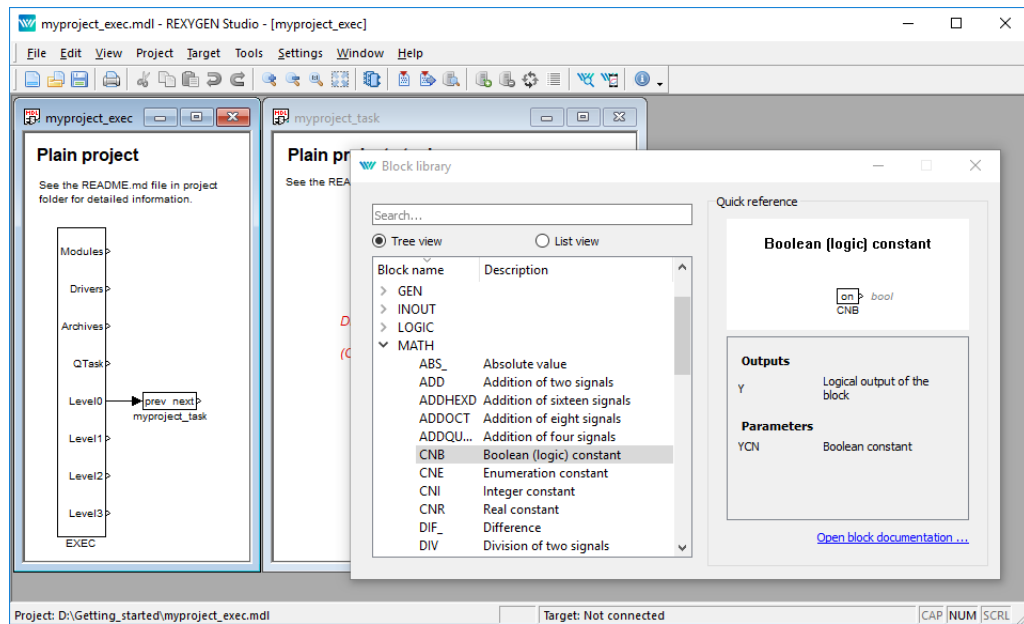


10. You can also switch the library to *List view* mode, where all the blocks are sorted alphabetically, regardless of the sublibrary they belong to.
11. Locate the following function blocks in the **Block Library** and drag them to the task file:
 - **MATH/CNB** – constant of type **Boolean**. Once dropped, double-click its name and change it to **CNB_SWITCH1**. Double-click the block and set parameter **YCN** = **off**.
 - **LOGIC/OR_** – logical OR. Rename it to **OR_A**.
 - **LOGIC/AND_** – logical AND.
 - **LOGIC/TIMER_** – a timer block. Set parameter **mode** = 2: **Delayed ON**, **pt** = 5.0.
 - **INOUT/Display** – a display to show values in real-time.
 - **ARC/TRND** – real-time recording. Set parameters **l** = 2000, **Title** = **My timer**, leave the default values otherwise.
 - **MATH/CNB** – constant of type **Boolean**, change name to **CNB_RUN**, set parameter **YCN** = **on**.

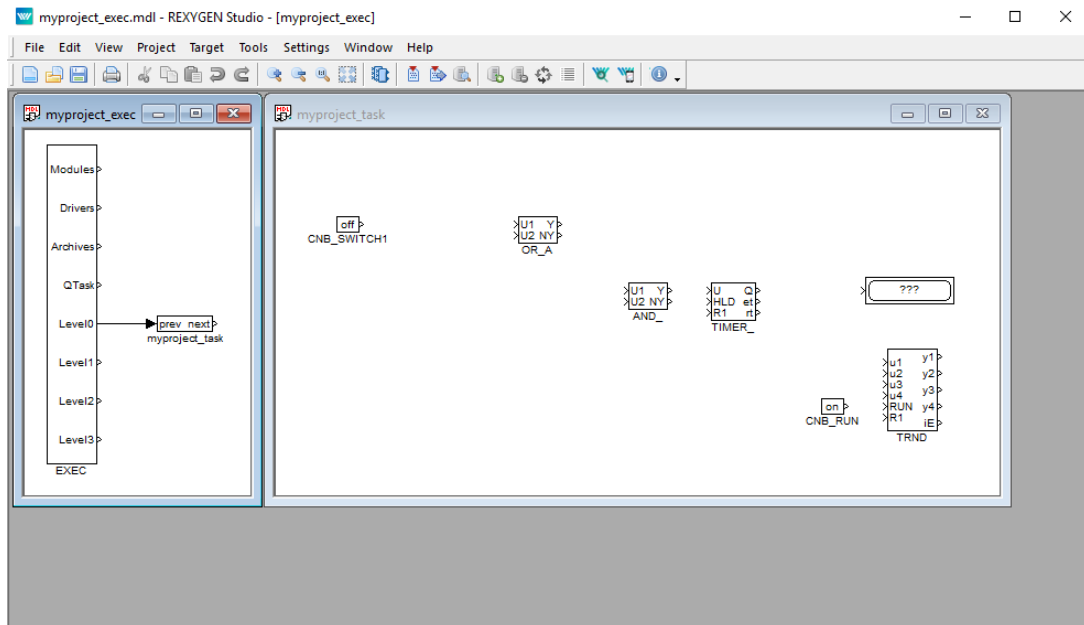

12. Duplicate the CNB_SWITCH1 block with right mouse button dragging. Or simply Copy&Paste the block.
13. Duplicate the block 2 more times.
14. Duplicate also the OR_A block. Rename the duplicate to OR_B.

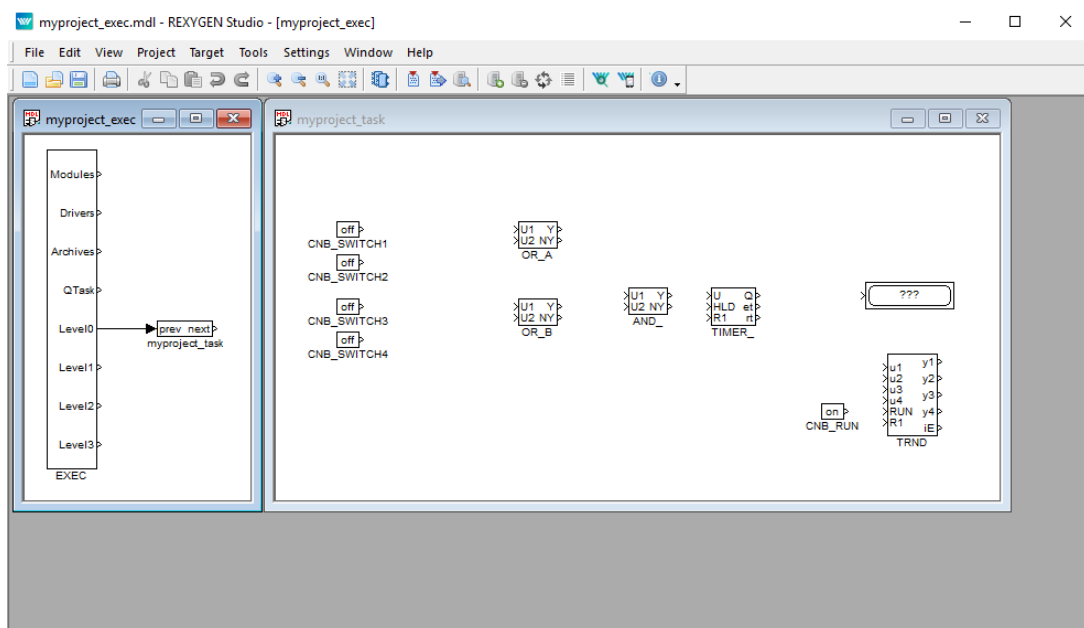


15. Connect the blocks as shown below. To connect the blocks, drag the output arrow of one block to the input arrow of the other block using the left mouse button. The connection will be established when the line goes bold and green. After releasing the mouse button you can recognize a successfully connected line by its style. A full line terminated by a full arrow at the input of the connected block indicates a valid connection. A dashed red line ending with a thin arrow indicates an unconnected line. New branch of an existing line can be created by dragging an existing line with the right mouse button.

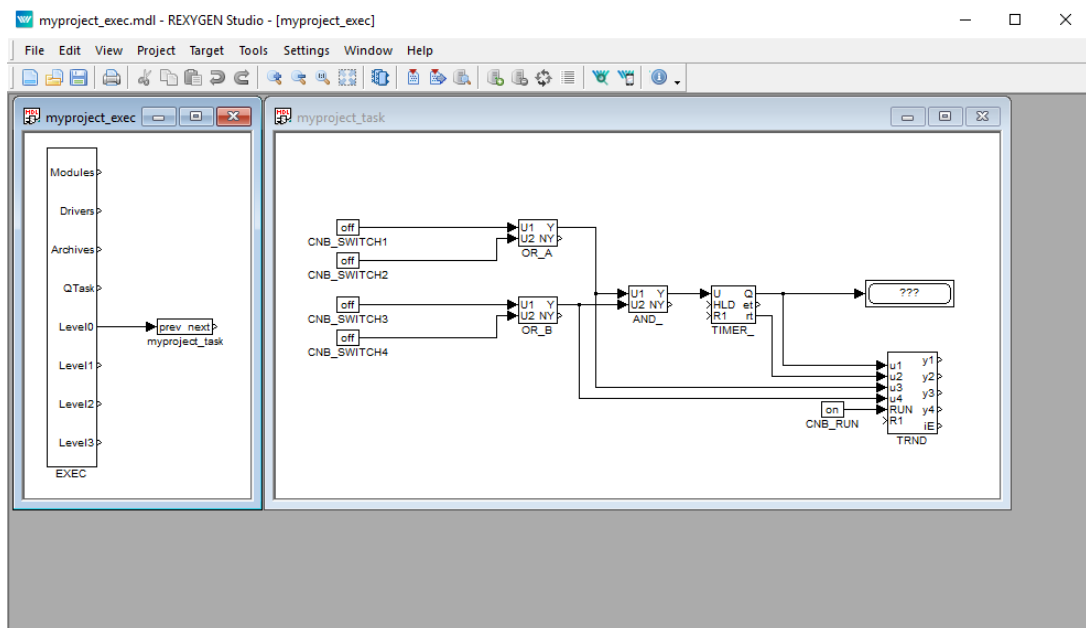



At this moment the executive configuration `myproject_exec.mdl` and the corresponding `myproject_task.mdl` file with the algorithm are ready. The algorithm will be evaluated in the direction of the arrows, starting from the source CNB blocks, passing through the OR_, AND_ and TIMER_ blocks and finishing at the Display and TRND blocks.


Congratulations, your first project is ready for compilation!

4.2 Compiling and running a project

The developed algorithm must be compiled to binary form prior to deploying. Pick *Project/Compile* from the menu or use the  icon from the toolbar. The compiler output is displayed in the **Compiler** window. If no error is found, the `myproject_exec.rex` file is created.

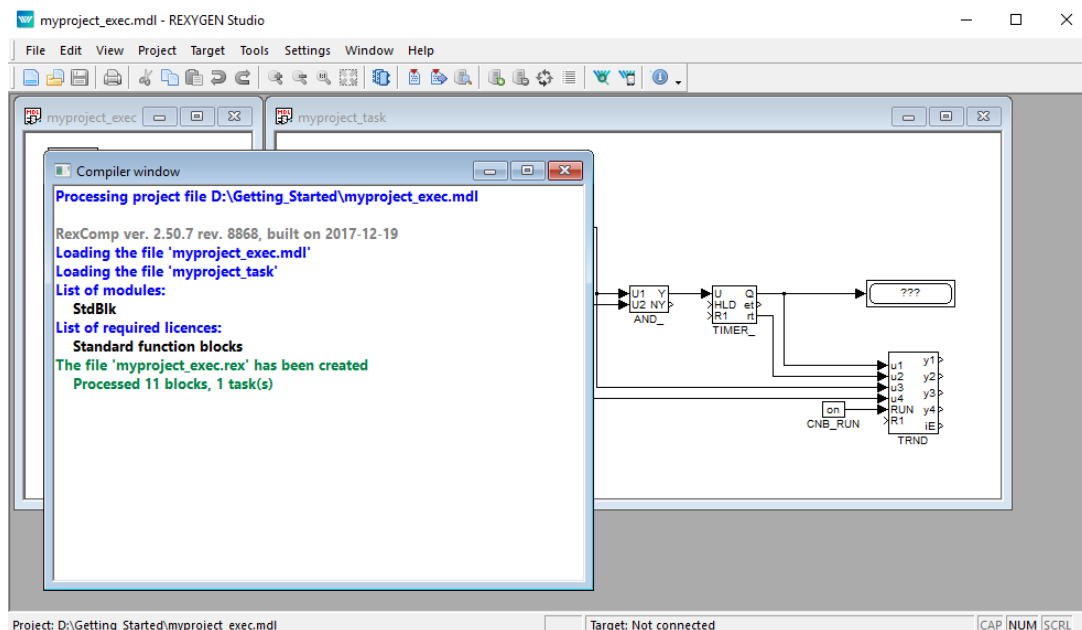

At this moment it is possible to deploy the control algorithm to the target platform. Use *Project/Compile and Download* in the menu or click the **Compile and Download** icon  for this purpose. A dialog for defining the target device appears upon successful compilation.

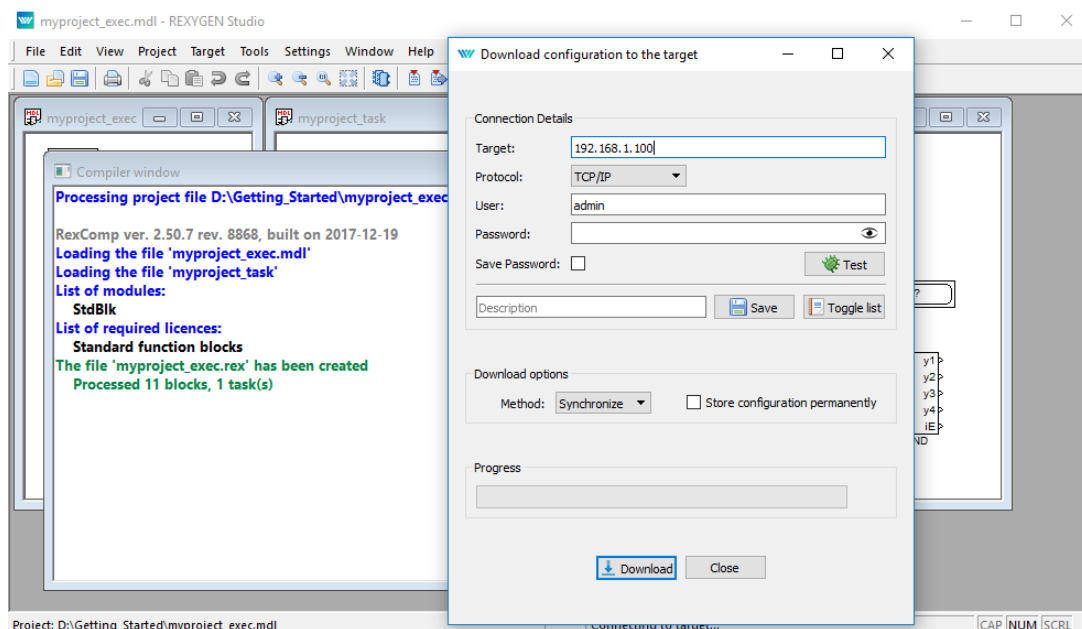


Enter the IP address of your Pigeon PLC in the **Target** field.


Enter REXYGEN login and password. The default user is **admin** and there is **no password** by default. Leave the other elements intact and click **Download**.

If there is no licence on your Pigeon PLC, you need to get one first. You can get a **DEMO** licence for free. See [Appendix B](#) for details and come back afterwards.


As soon as the download is complete it is possible to switch the REXYGEN Studio application to the so-called *Watch mode* and watch the control algorithm in real-time – click **Watch**.

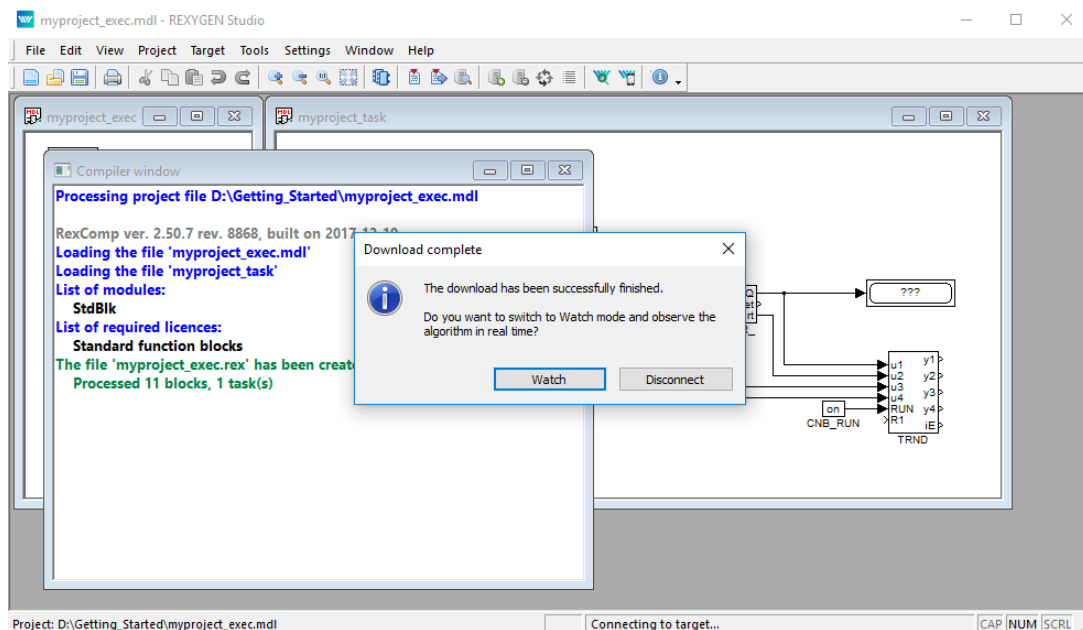

In the *Watch mode*, the background of all files goes gray and you cannot move or delete any blocks or connections. Right-click the **TIMER_** block and select *Watch selection* in the menu to watch the inputs and outputs of the timer.

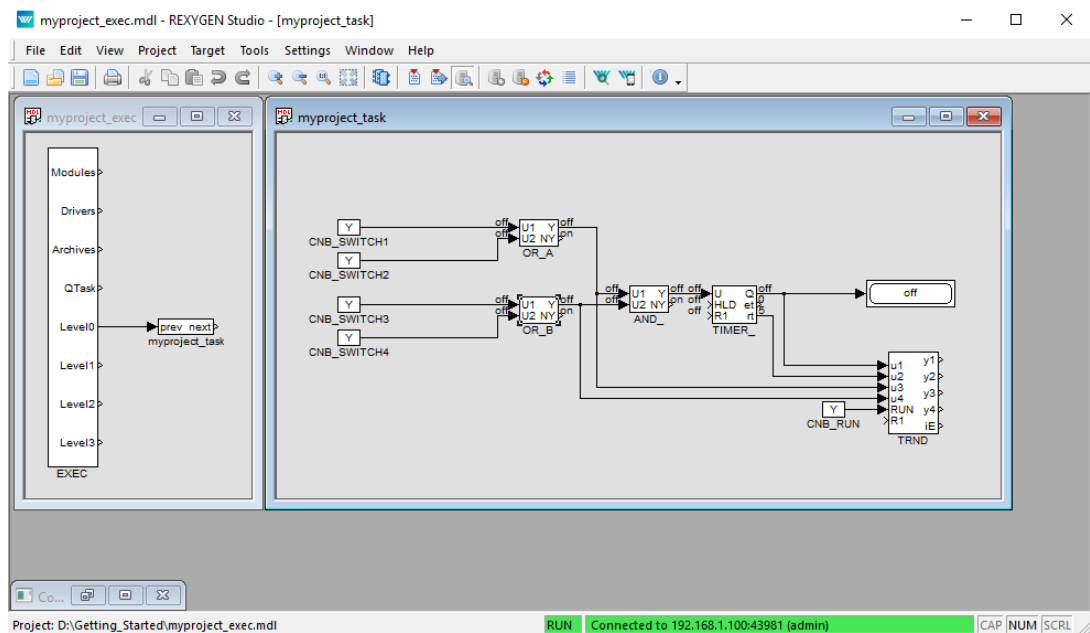

You can do the same with the `OR_` and `AND_` blocks (or any other selection).

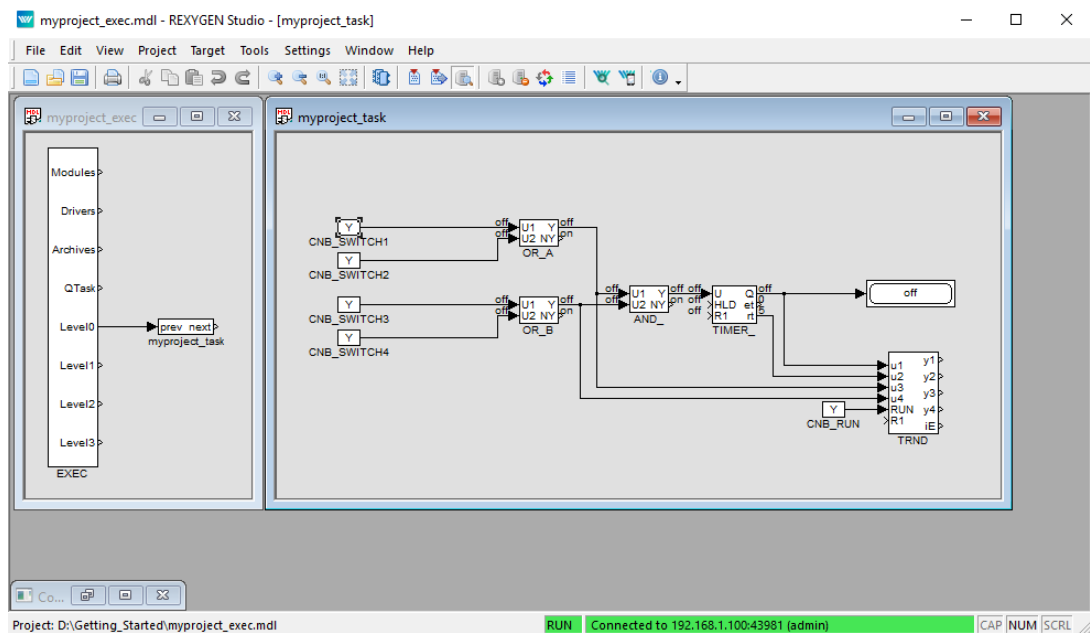


Now it is possible to double-click the `CNB_SWITCH1` block and change the Boolean variable to `YCN = on` (tick the checkbox and click OK). Once you do the same with the `CNB_SWITCH3` block, the outputs of both `OR` blocks are on and the `Y` output of the `AND_` block goes on and the `TIMER_` starts to count down. Observe the `rt` output.² Once the


²Do not get confused by the default 1 second refresh rate of the *Watch mode*. The algorithm on the target device runs each 100 milliseconds as mentioned earlier.



timer reaches zero, its output Q is set to on and it remains on as long as the U input is on.


You can double-click the TRND block to see the signals in a real-time graph. The red line is the output of the OR_A block, the magenta line is the output of the OR_B block, the green line is the remaining time of the timer and the blue line is the Boolean output of the timer.

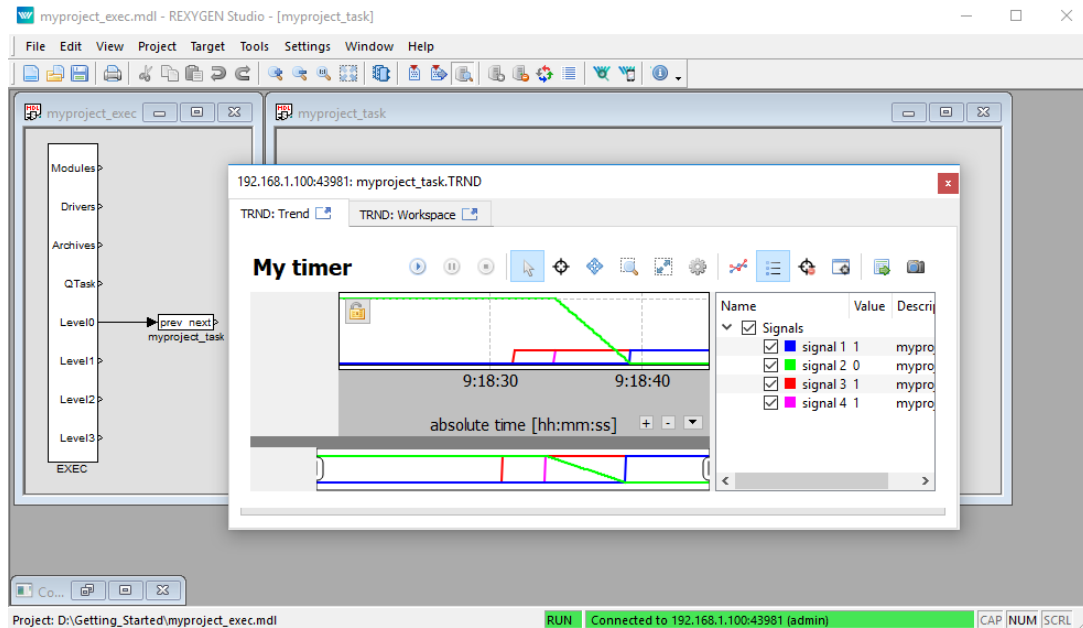


Try turning the CNB blocks off and change the pt parameter of the $TIMER_$ block. Afterwards turn the CNB blocks on again and observe the signals in the TRND block again. As you can see, you can modify any parameter in real-time, which allows you to fine tune your algorithm.

It is also possible to open a **Diagnostics** view of the algorithm. Pick *Target/Diagnostics* from the menu or click the  icon and you will see the algorithm in a tree view which allows you to monitor the control algorithm in full detail. You can verify that the sampling rate of your algorithm is indeed 100 milliseconds. You can also adjust parameters of individual function blocks, which has the same effect as modifying them directly in the *Block properties* dialog.

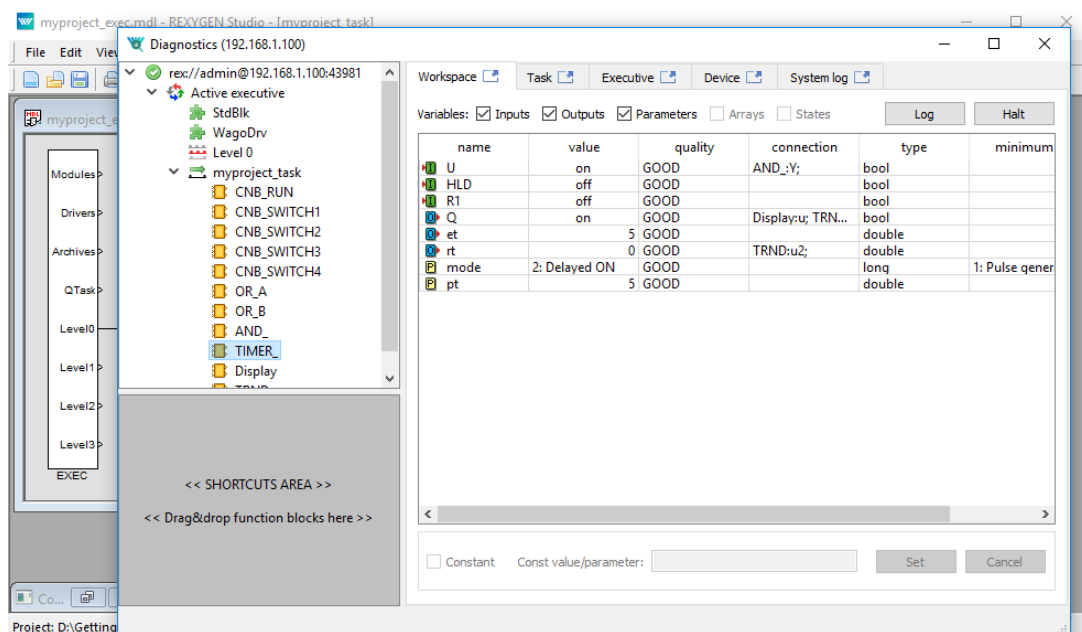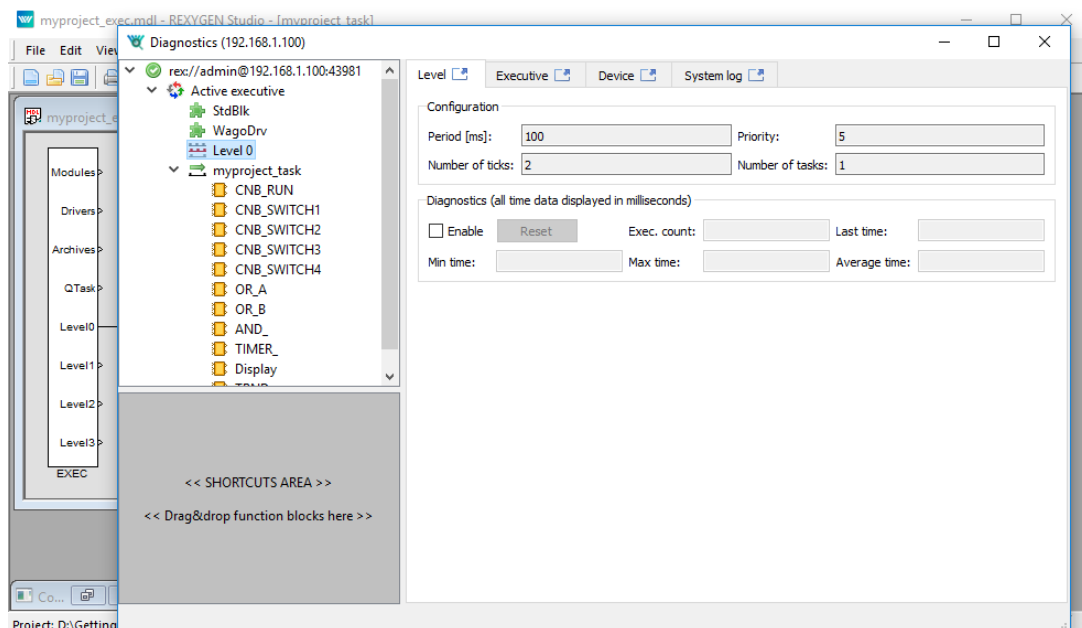

Note: There is also a standalone diagnostics program called REXYGEN Diagnostics. Click the REXYGEN Diagnostics icon  and confirm the IP address of the target platform.

Now you can switch REXYGEN Studio back to the *Development mode*. You can do so by deactivating the *Watch mode* (use the  icon). You are offered synchronization of the changed parameters with the source files of the project, choose *No* at this moment.


All changes made while in the *Watch mode* are not permanently stored in the target device (unless you decide so, see [3]). Upon restarting the **RexCore** runtime module the algorithm will start with the parameters defined in the project source files, which were valid when compiling and downloading the algorithm to the target device. To apply the changes permanently, you have to transfer the changes to the source files and *Compile and download* the project one more time which defines new startup values.

4.3 Adding a user interface (HMI)

The next step in developing a control algorithm is its user interface, or HMI, Human-Machine-Interface. It allows anyone (even those who are not familiar with the REXYGEN system) to interact with the algorithm. The HMI of the REXYGEN system relies on modern web-based technology and the HMI is therefore accessible via web browser on desktop PC, tablet or smartphone.

In this tutorial, a simple HMI will be created using the so-called WebBuDi technology. It provides very simple indicators and input elements to interact with the control algorithm via a web page (Web Buttons and Displays).

The steps to create the HMI are described below. This is how the HMI will look like in the end:

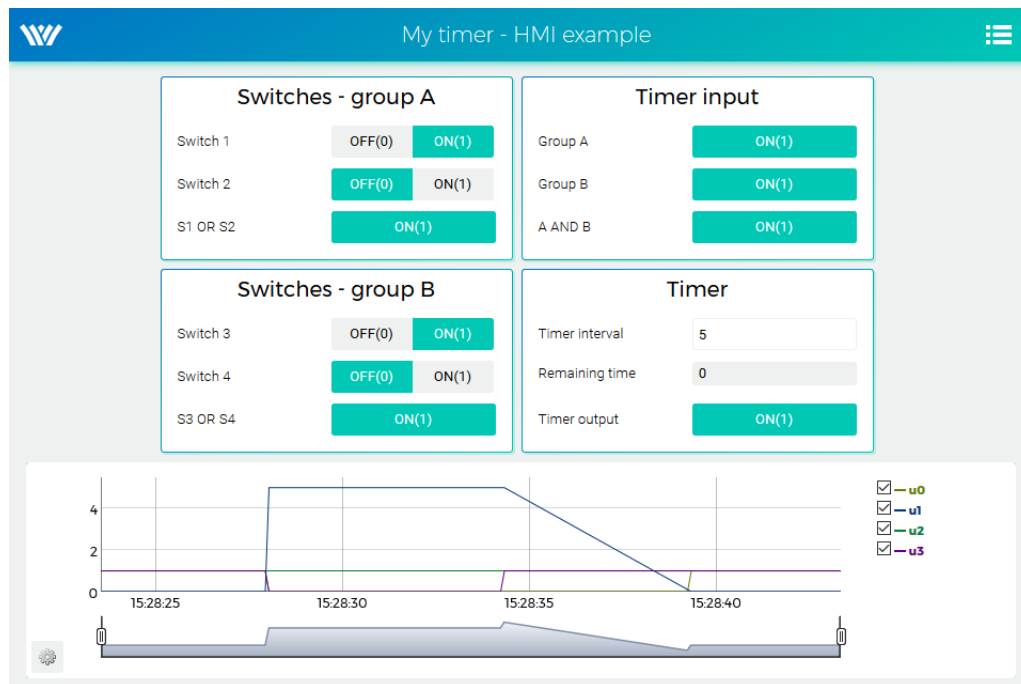

1. In the folder with the project files, create a `hmisrc` subfolder. Inside this folder, create a file named `index.hmi.js` and edit it with your favorite text editor. The content should be the following:

```

REX.HMI.init = function(){

//Indicators and virtual switches - group A
var switchesA = {
    column: 1,
    title: 'Switches - group A',
    rows: [
        {type: 'DW', alias: 'switch1', desc: 'Switch 1',
         cstring: 'myproject_task.CNB_SWITCH1:YCN'},
        {type: 'DW', alias: 'switch2', desc: 'Switch 2',
         cstring: 'myproject_task.CNB_SWITCH2:YCN'},
        {type: 'DR', alias: 'S1orS2', desc: 'S1 OR S2',
         cstring: 'myproject_task.OR_A:Y'},
    ]
};
REX.WebBuDi.addSection(switchesA);

//Indicators and virtual switches - group A
var switchesB = {
    column: 1,
    title: 'Switches - group B',
    rows: [
        {type: 'DW', alias: 'switch3', desc: 'Switch 3',
         cstring: 'myproject_task.CNB_SWITCH3:YCN'},
        {type: 'DW', alias: 'switch4', desc: 'Switch 4',
         cstring: 'myproject_task.CNB_SWITCH4:YCN'},
        {type: 'DR', alias: 'S3orS4', desc: 'S3 OR S4',
         cstring: 'myproject_task.OR_B:Y'},
    ]
};
REX.WebBuDi.addSection(switchesB);

//Timer input
var timerInput = {
    column: 2,
    title: 'Timer input',
    rows: [
        {type: 'DR', alias: 'inputA', desc: 'Group A',
         cstring: 'myproject_task.AND_:U1'},
        {type: 'DR', alias: 'inputB', desc: 'Group B',
         cstring: 'myproject_task.AND_:U2'},
        {type: 'DR', alias: 'AandB', desc: 'A AND B',
         cstring: 'myproject_task.AND_:Y'},
    ]
}

```

```

};
REX.WebBuDi.addSection(timerInput);


//Timer settings and status
var timer = {
  column: 2,
  title: 'Timer',
  rows: [
    {type: 'AW', alias: 'interval', desc: 'Timer interval',
      cstring: 'myproject_task.TIMER_pt'},
    {type: 'AR', alias: 'rt', desc: 'Remaining time',
      cstring: 'myproject_task.TIMER_rt'},
    {type: 'DR', alias: 'timerQ', desc: 'Timer output',
      cstring: 'myproject_task.TIMER_Q'},
  ]
};
REX.WebBuDi.addSection(timer);

//Add real-time trend
REX.HMI.Graph.addTrend({cstring: 'myproject_task.TRND'});
REX.HMI.Graph.setMaxBufferSize(200);

// Change title of the page
REX.HMI.setTitle('My timer - HMI example');
}

```

2. This file will be processed when compiling the project. However, it is necessary to add the EXEC/HMI block into the project main file first.

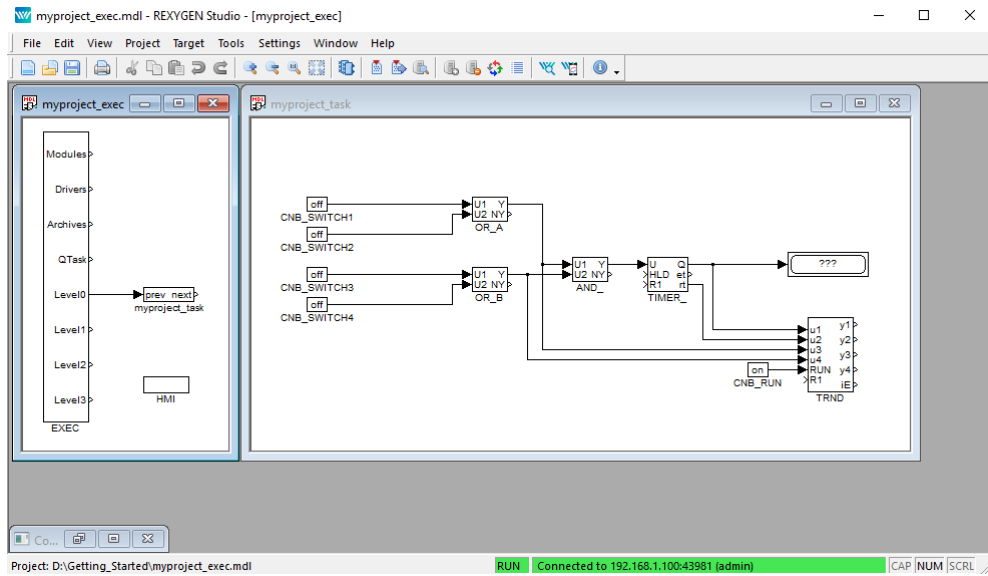

3. Double-click the HMI block to edit its parameters. Set **GenerateWebWatch** = off and confirm. WebWatch is another type of HMI, which you do not need at the moment. See [4] for details, it is a very interesting tool for developers and technicians.

Block properties

Block

Block name:

HMI

Block type:

execlibHMI

Block type description:

HMI configuration

[Open block documentation ...](#)

Toggle quick reference

Parameters

Runtime

Style

Scalar parameters


| | Parameter | Value | Type | Description |
|---|-----------------|--|--------|--------------------------------|
| 1 | IncludeHMI | <input checked="" type="checkbox"/> on | Bool | Include HMI files in the pr... |
| 2 | HmiDir | hmi | String | Output folder for HMI files |
| 3 | SourceDir | hmisrc | String | Source directory |
| 4 | GenerateWebW... | <input type="checkbox"/> off | Bool | Generate WebWatch HMI ... |
| 5 | GenerateRexHMI | <input checked="" type="checkbox"/> on | Bool | Build HMI from SVG and J... |
| 6 | RedirectToHMI | <input checked="" type="checkbox"/> on | Bool | Webserver will automatica... |
| 7 | Compression | <input type="checkbox"/> off | Bool | Enable data compression |

GenerateWebWatch: Generate WebWatch HMI files from MDL files


OK

Cancel

- The HMI is now an integral part of your project. Compile the project again and you will see that the compile log contains more information. The `index.html` file is generated from the source `index.hmi.js` file. All the HMI files are generated into the `hmi` subfolder (HTML, JS and CSS files) and included in the resulting binary `myproject_exec.rex` file.

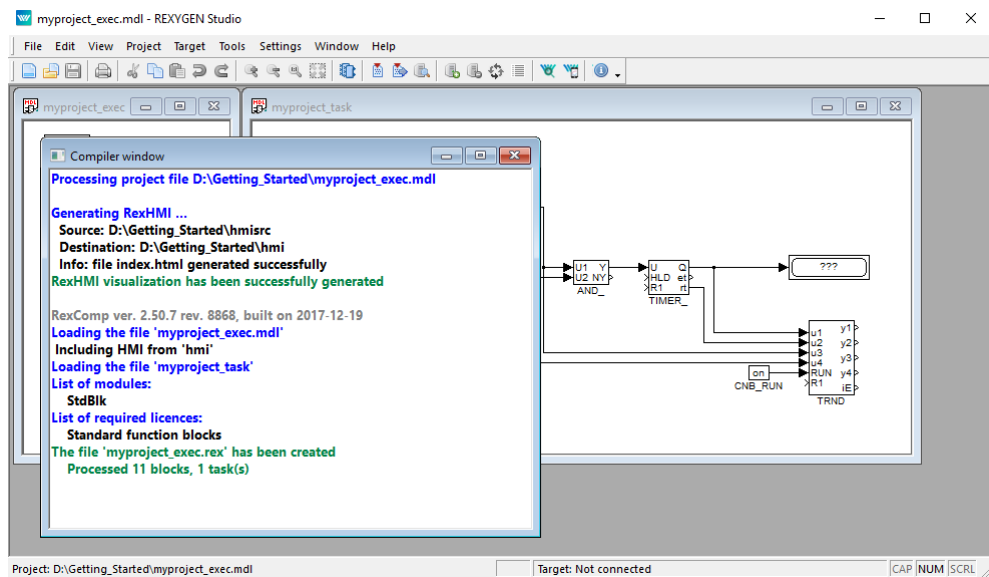

5. After you download the project to the target device, you can access the HMI via web browser. Go to menu *Target/Web Interface* which will open the webpage. Remember the default login credentials: admin with no password.

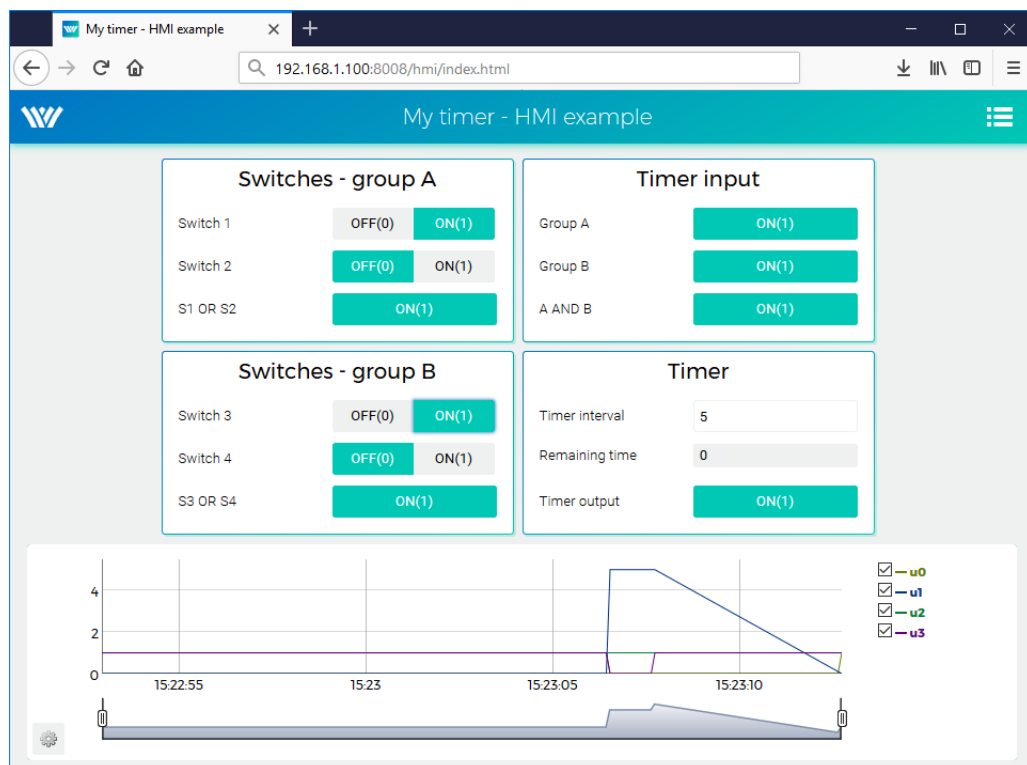


6. You can toggle the switches and observe the results. The virtual switches are linked

to the individual CNB function blocks therefore the effect is the same as toggling the values directly in REXYGEN Studio.

7. You can also change the timer setting and shorten or lengthen the interval.
8. See [4] for detailed information about WebBuDi elements and possible customization (colors, backgrounds etc.).
9. The default URL address is <http://192.168.1.100:8008/hmi/index.html> (replace 192.168.1.100 with the IP address of your Pigeon PLC).
10. The default port of the webserver (8008) can be changed in RexCore settings. See [2] for details.

Please note that there is also a program called REXYGEN HMI Designer, which allows you to create graphical user interfaces. Appendix A of this guide shows the steps to create a basic graphical interface. A more complex HMI is shown below solely for inspiration purposes.

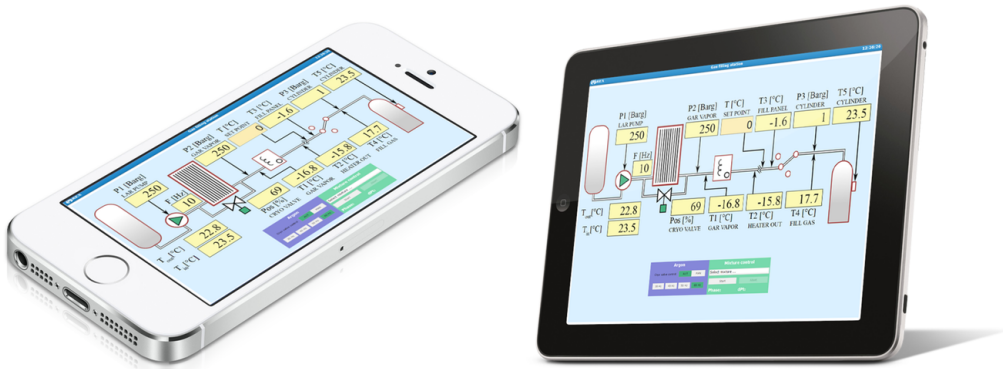

4.4 Ready for interaction with the outer world

Well done! You have created the example 0101-01 from scratch³. You have learned the basic workflow for developing and running your algorithms using the REXYGEN system, which is the same for all platforms. Now it's time to add the so-called *input-output drivers* so that the algorithm can interact with sensors, actuators and external data.

³All examples which are part of the installation are marked by an ExampleID. The most up-to-date examples are available at <https://github.com/rexcontrols/REXexamples/archive/v2.50.zip>

Chapter 5

I/O configuration for the Pigeon PLC


The previous chapter illustrated the process of creating a control algorithm in the REXY-GEN system and deploying it to the target device. But so far, the algorithm does not interact with the outer world, it is not connected to any physical signal (or external data).

We will use the input and output signals of the Pigeon PLC for interaction with the real world.

As mentioned in Chapter 4, two physical switches will be connected as inputs and a software timer will control one output signal. In other words, this chapter is devoted to advancing from the generic example 0101-01 to example 0123-01 for the Pigeon PLC.

5.1 Physical connections


Connect the switches and an external relay as shown below. For details and wiring examples for Pigeon PLC visit <http://pigeoncomputers.com/documentation/hardware/>.

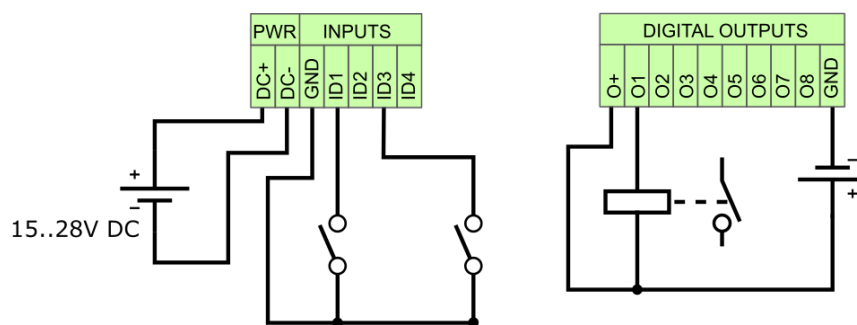

5.2 Adding inputs and outputs to the project

Now when we have everything wired up, it's time to include the physical signals into the algorithm. You need to expand your project main file with 2 additional function blocks to access the inputs and outputs from the control algorithm in your project. Insert the **EXEC/MODULE** and **EXEC/IODRV** blocks from the *Block library* and attach them to the **EXEC** block as shown below.

In the task file, delete the **CNB_SWITCH1** and **CNB_SWITCH3** blocks and replace them with **INOUT/From** blocks. These will be the input signals. Also add one **INOUT/Goto** block, which will serve as an output and which will be controlled by the timer. You already know that a new branch of a line is created by right-button dragging, don't you?

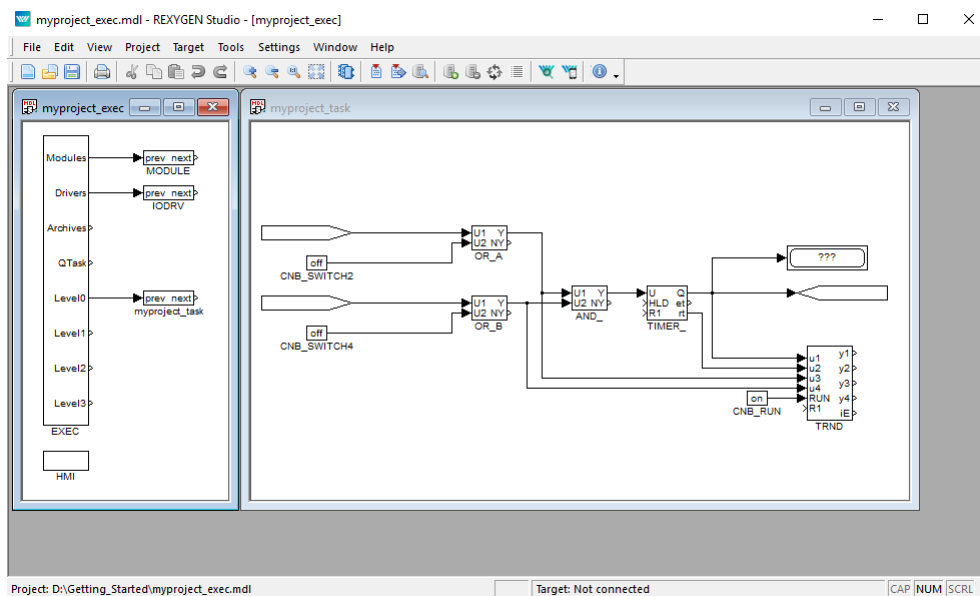

5.3 Working with I/O signals

5.3.1 Modifications in the project main file

Now we tell the compiler to use the Pigeon PLC I/O driver. This is what needs to be done:

- Rename the **MODULE** block to **RPiDrv** – CASE SENSITIVE!

Next edit the **IODRV** block parameters. Link the **IODRV** block with the **RPiDrv** module by setting

- `module = RPiDrv` – CASE SENSITIVE!

Continue editing the **IODRV** block parameters. For Pigeon PLC set the following:

- `classname` = `PgnDrv` – CASE SENSITIVE!
- Leave the `cfgname` parameter blank.
- `factor` = 1
- Leave the other parameters intact.

Block properties

Block

Block name: PGN Block type: execlib\IODRV

Block type description: REXYGEN input/output driver

[Open block documentation ...](#) [Toggle quick reference](#)

Parameters Runtime Style

Scalar parameters


| | Parameter | Value | Type | Description |
|---|-----------|------------------------------|--------|--------------------------------|
| 1 | module | RPIDrv | String | Module name |
| 2 | classname | PgnDrv | String | I/O driver class name |
| 3 | cfgname | | String | Configuration file name |
| 4 | factor | 1 | Long | Execution factor |
| 5 | stack | 10240 | Long | Stack size [bytes] |
| 6 | pri | 3 | Long | Driver thread logical priority |
| 7 | timer | <input type="checkbox"/> off | Bool | Driver is a source of time |

module: Module name

[Configure](#) [OK](#) [Cancel](#)

As the final step, rename the `IODRV` block to `PGN`, which will serve as a prefix for all I/O signals of this driver.

The executive of the `REXYGEN` system is configured, your project should look like this:

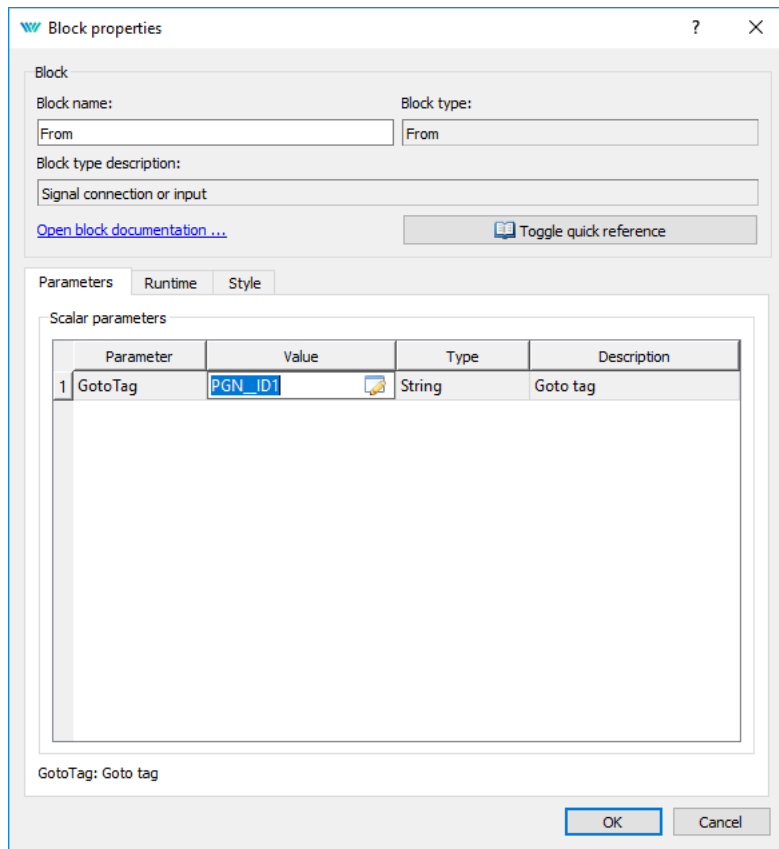


The second physical switch will be connected to ID3 (PGN_ID3) and the output signal O1 (PGN_O1) will serve as control signal for the external relay.

Similarly for other I/Os we could use the following flags:


- Goto, PGN_O8 – output 8
- From, PGN_I6 – optoisolated digital input 6
- From, PGN_AI2 – analog input 2 (only RB300)

A detailed description of the I/O driver for Pigeon PLC is available in a separate manual [5].

Your project should now look like this:

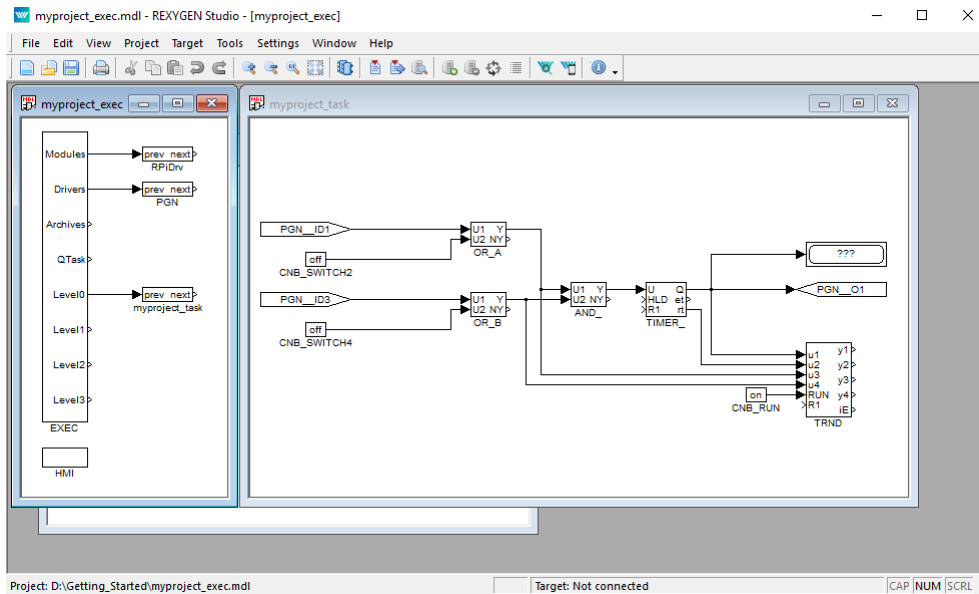

After compiling the project and downloading it to the Pigeon PLC the control algorithm interacts with the physical world. Again it is possible to switch to Watch mode and observe the signals in real-time or analyze the trends of signals. Flip the physical switches and watch the signals.

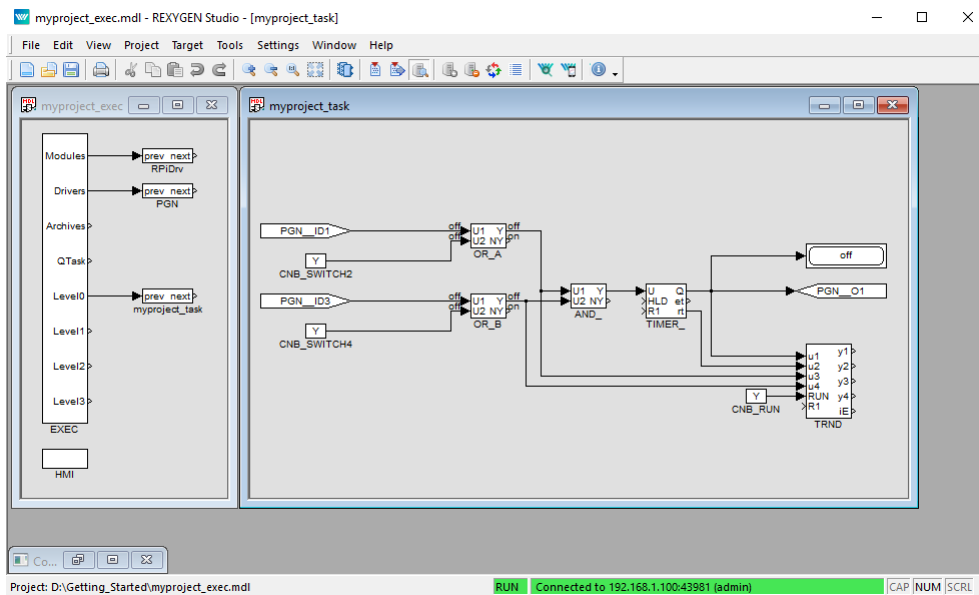

5.4 Updating the HMI

It is also necessary to update the HMI. The CNB_SWITCH1 and CNB_SWITCH3 blocks are no longer present in the algorithm. Moreover, we need to replace virtual input elements (DW) with indicators (DR). Therefore open the `index.hmi.js` file and replace

```
{type: 'DW', alias: 'switch1', desc: 'Switch 1',
  cstring: 'myproject_task.CNB_SWITCH1:YCN'},
```

with

```
{type: 'DR', alias: 'switch1', desc: 'Switch 1',
  cstring: 'myproject_task.OR_A:U1'},
```


Similarly for switch no. 3, replace

```
{type: 'DW', alias: 'switch3', desc: 'Switch 3',
  cstring: 'myproject_task.CNB_SWITCH3:YCN'},
```

with

```
{type: 'DR', alias: 'switch3', desc: 'Switch 3',
  cstring: 'myproject_task.OR_B:U1'},
```

Save the file, compile and download the project again and open the web interface. Push the two physical switches and wait until the timer triggers the output. Alternatively, you can still use the virtual switches. This demonstrates that you can combine physical and virtual input elements.

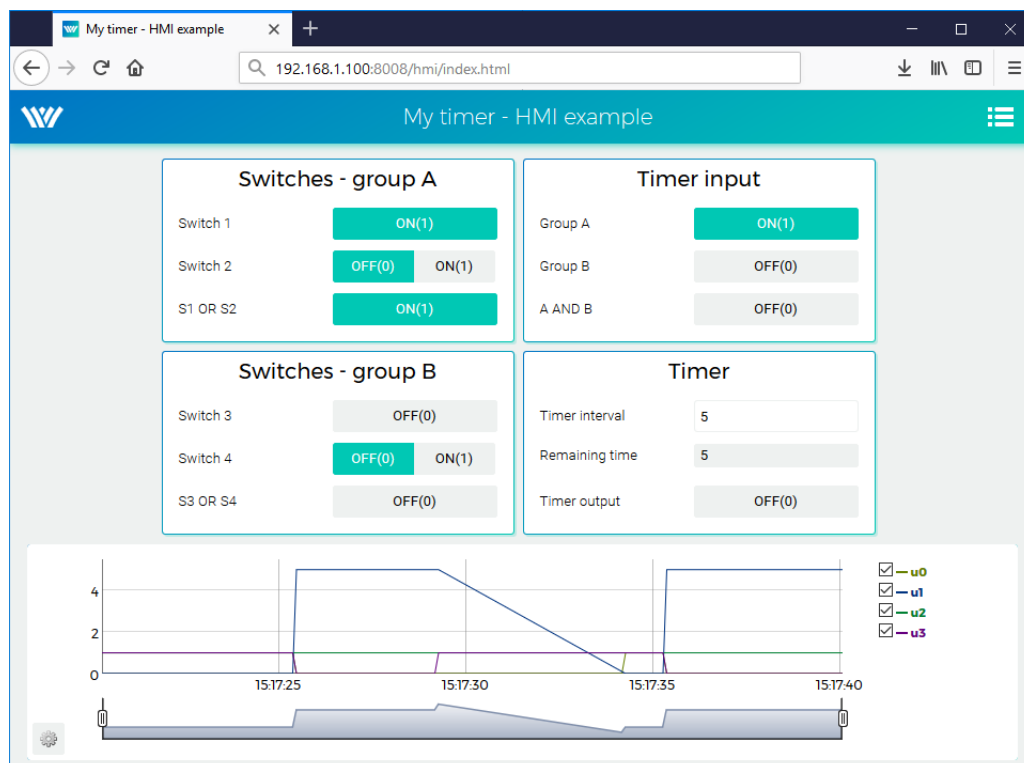

5.5 Additional information

5.5.1 Detailed description of the driver

A detailed description of the IO driver for Pigeon PLC is available in a separate manual [5].

5.5.2 Examples

Example projects and a set of all supported I/O flags are included in the installation package of the REXYGEN system development tools. In REXYGEN Studio, go to menu **File** → **Start from an Example Project** and select one of the Pigeon PLC examples. As mentioned earlier, the most up-to-date examples are available at <https://github.com/rexcontrols/REXexamples/archive/v2.50.zip>

Chapter 6

Summary

Congratulations, you have created the example 0123-01 from scratch! You have learned how to develop, compile and run your algorithms on the Pigeon PLC. The interaction with sensors and actuators is provided via input-output driver of the REXYGEN system, which you have learned to configure and use.

You have achieved quite a lot in a relatively short time, haven't you? The purpose of this guide was to quickly show you the basic steps and tools for developing a project.

Now it's time to focus on your own project and keep learning on the go. There are function blocks which are much more powerful than the ones mentioned in this guide, there are many inspiring example projects, there are additional I/O drivers which you can use to expand the scope of your project, there are many ways to exchange data with external systems and devices, etc.

Remember that whenever you have some achievement to share, we will be happy to hear from you. And whenever you encounter any difficulties, we will be happy to help. You can reach us at support@rexygen.com.

Appendix A

Graphical HMI with REXYGEN HMI Designer


Chapter 4 describes the creation of a simple WebBuDi user interface. The REXYGEN development tools also contain the REXYGEN HMI Designer program which is a tool for designing custom graphical visualizations from predefined components¹. The REXYGEN HMI Designer is based on the well-known open-source vector editor InkscapeTM <https://inkscape.org/en/>.

In this chapter we'll develop an alternative HMI for the example 0101-01. Just like in the case of the WebBuDi user interface, the SVG file created with REXYGEN HMI Designer will serve as a source file which will become a part of your REXYGEN project. During compilation of the project the SVG file will be processed and converted to HTML, JS and CSS files.


A.1 Initializing the HMI design

After launching the REXYGEN HMI Designer from *Start Menu* you will find a clean page. The first thing to do is to initialize the new visualization. The HMI is configured via the *REXYGEN HMI* extensions. Navigate to *Extensions* → *REXYGEN HMI* → *Edit HMI Config* in the menu.

¹Definition of custom components is also possible but it requires a bit of Javascript coding.

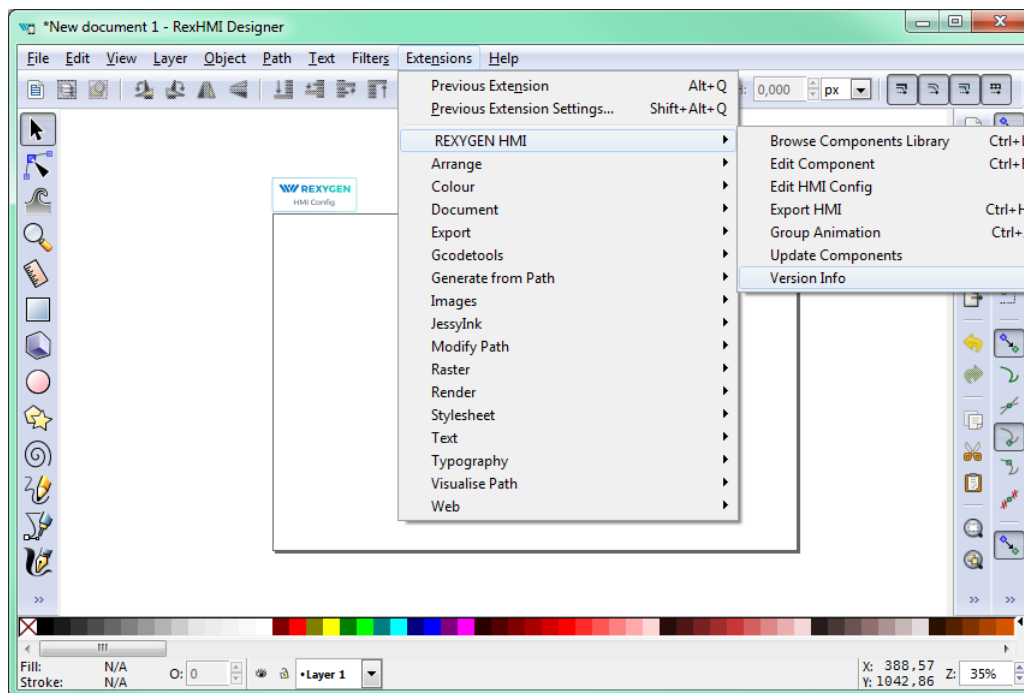

This extension adds a special component which contains general settings of the HMI. Close it with the OK button for now.

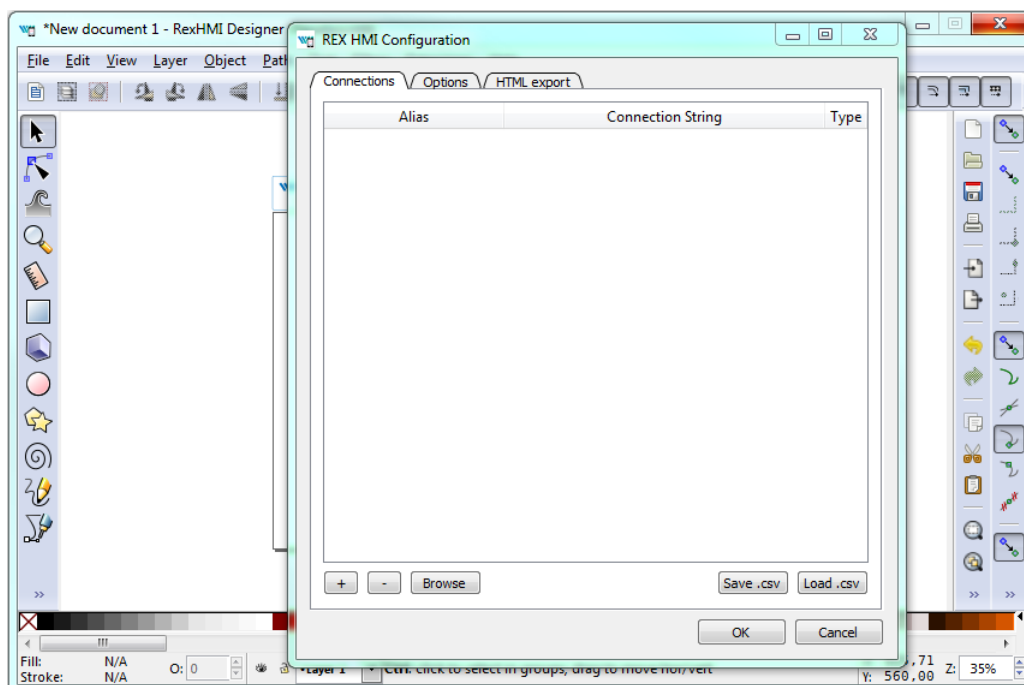


In order to include the HMI during the REXYGEN project compilation, the file name

has to end with `.hmi.svg`. Save the file as e.g. `designer.hmi.svg` to the `hmisrc` subfolder of your project. Use the standard *File* → *Save as* menu.

Note: If you want to replace the WebBuDi interface with the REXYGEN HMI Designer interface just delete the `index.hmi.js` and save the HMI as `index.hmi.svg`.

A.2 Adding the first HMI components

Now we will add some displays and inputs. The REXYGEN HMI Designer contains a library of components which you can use to build your HMI. The library is available through *Browse Components Library* extensions. Navigate to *Extensions* → *REXYGEN HMI* → *Browse Components Library* (Ctrl+L). It will open the explorer window with several folders. Open the **GENERAL** folder and drag&drop the **Display** to the drawing. The display will be used as an indicator of the remaining time in the **TIMER** function block.

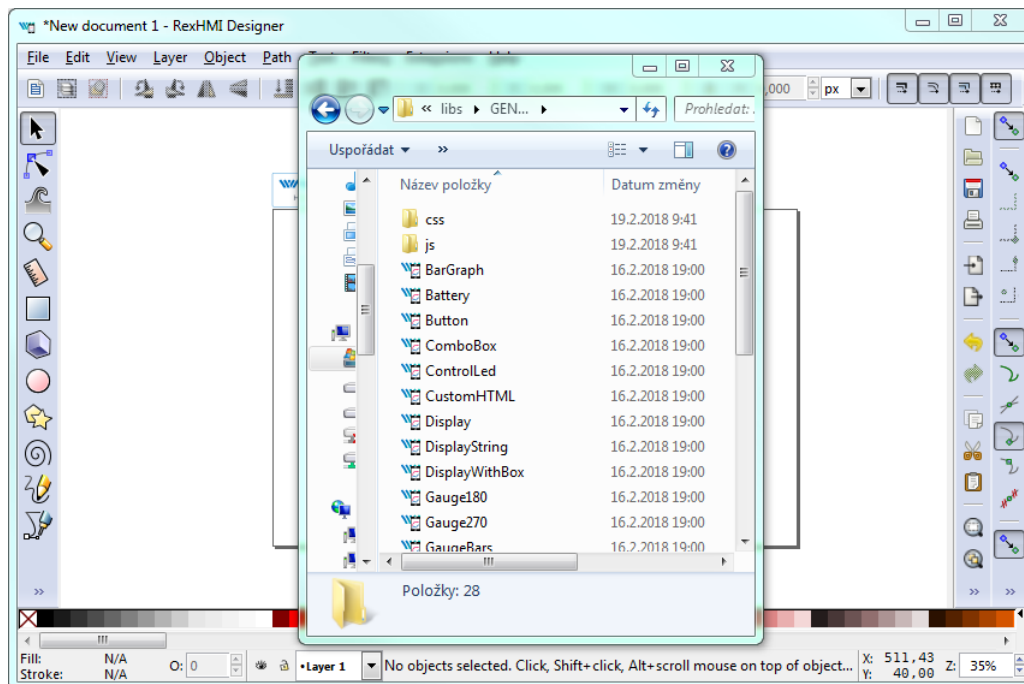

For configuration of the display settings select the display by mouse click on top of it and use the *Edit Component* extension from *Extensions* → *REXYGEN HMI* → *Edit Component* (Ctrl+E). When the configuration dialog is opened you can change the *Title* to *Display_remaining*. The Edit Component dialog has two tabs: *Data points* and *Options*.

The *Data points* tab contains three items defining the behavior and animations of the component. Each data point contains an alias, which is in fact a connection to live data from the REXYGEN algorithm.


- **value** – The value to display.

- **disable_by** – If true the display is disabled and data are no longer updated.
- **hide_by** – If true the display is hidden.

The **value** property contains **\$T_value**. The **\$T** will be later automatically substituted by the *Title* of the component, resulting in the **Display_remaining_value** alias. The **disable_by** and **hide_by** data points are optional. Leave them blank at the moment.


The *Options* tab contains several properties which are specific for the Display component. You can find the description of each component and property in [4]. Leave the default values for now and press OK.

Note: Each component is in fact one SVG group with unique content. You can copy the components all over the screen using copy (Ctrl+C) and paste (Ctrl+V) approach.

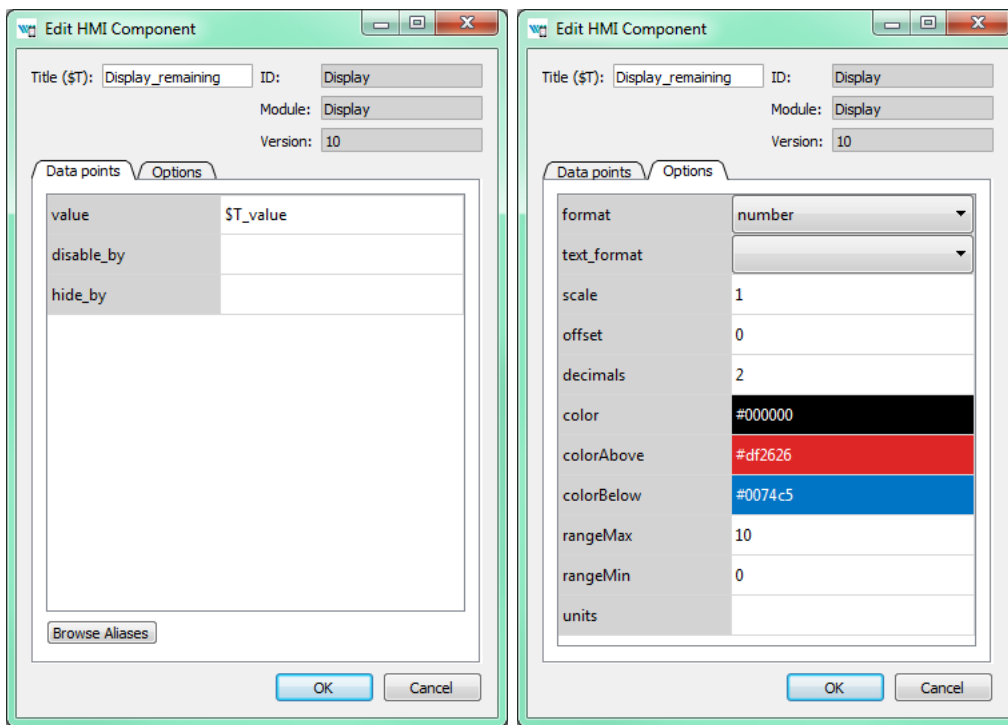

Now we will add controls for all the switches (CNB blocks). All of them will be controlled using the *PushOnOff* components. Add them from the library. Select the first *PushOnOff* and open the editor dialog *Extensions* → *REXYGEN HMI* → *Edit Component* (Ctrl+E). Change the title to *PushOnOff_SW_1* and select the *Options* tab. Select the **ToggleButton** item in the **type** property list. Close the *Edit Component* dialog using OK button. Copy-paste the button three times and remember to change the titles to *PushOnOff_SW_2*, *PushOnOff_SW_3*, *PushOnOff_SW_4*).


*Note: Throughout the REXYGEN HMI Designer you can use **double click** in Options tab to open the corresponding configuration dialog (color picker, number input, etc.).*

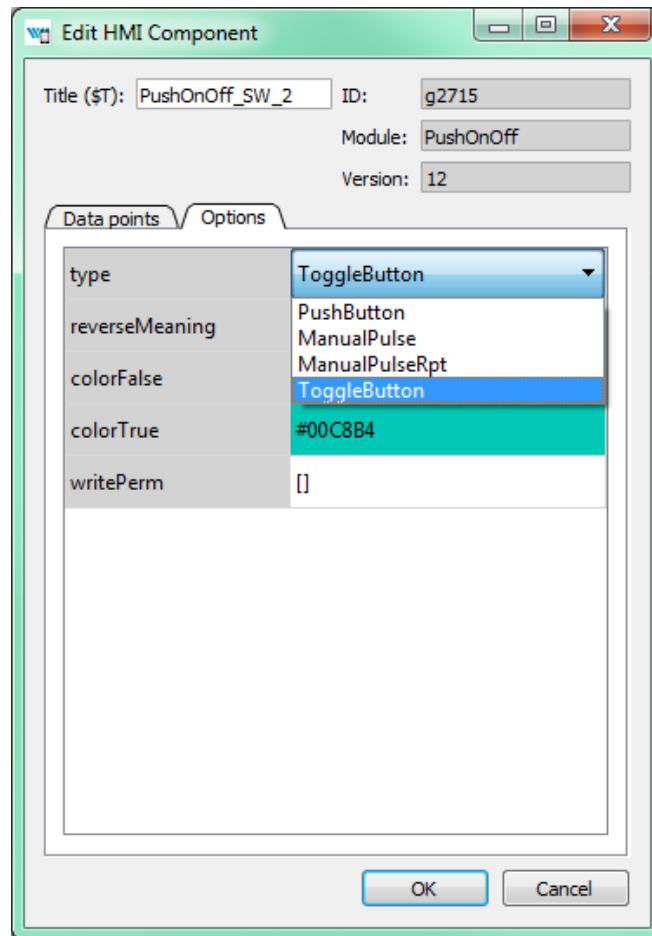


Now we have four *PushOnOff* buttons and one *Display* and we want to link all components with live data from the target device.

A.3 Linking HMI components with the running algorithm


Open the *HMI Configuration* dialog either using *Extensions* → *REXYGEN HMI* → *Edit HMI Config* or just unselect all components in the drawing (click outside any component) and press *Ctrl+E*. The configurator parses all components and creates a list of used *Aliases*. Each of them should be linked with one signal in the running algorithm. You can either fill in each connection string manually or you can use the *Browse* function.

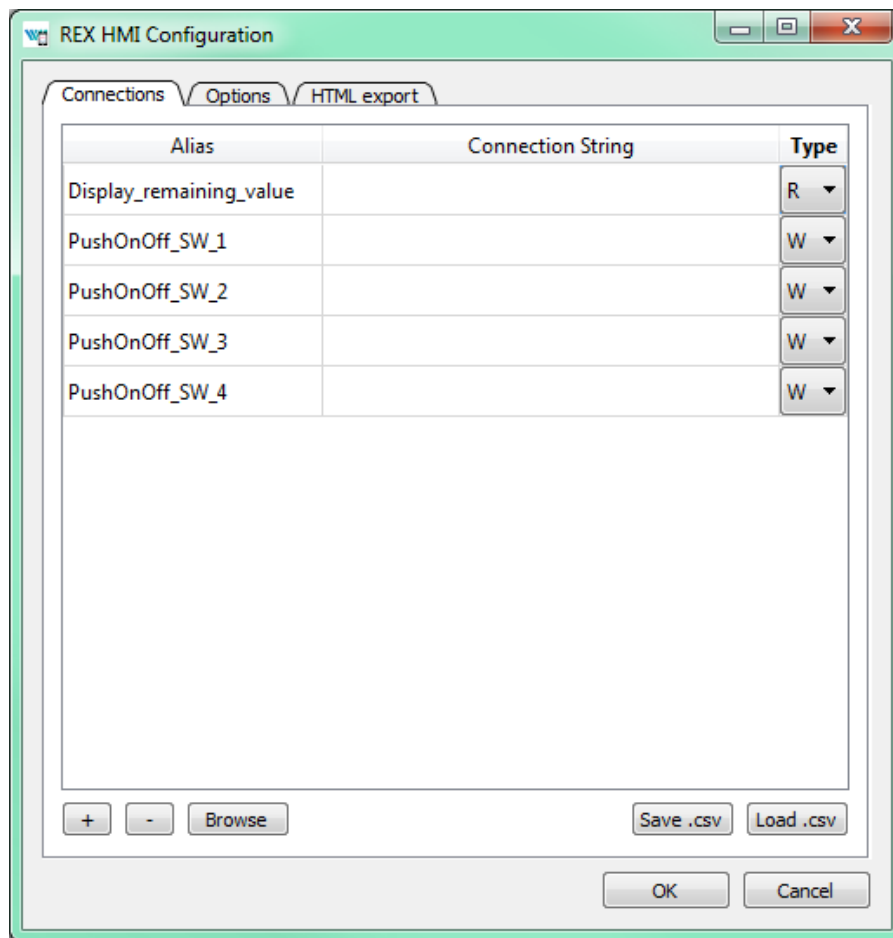


The *Browser* requires a target device with running algorithm. Make sure the algorithm is running, see Section 4.2. Also the target URL must be set. Press *Browse* button. The login dialog will be opened. Change **Target** to 192.168.1.100:8008 (replace 192.168.1.100 with the IP address of your Pigeon PLC). Unless you changed the login credentials, use the default username **admin** with an empty password. After a successful login the connection tab is expanded with a tree-view of the running algorithm (you have already seen this tree-view in algorithm diagnostics).

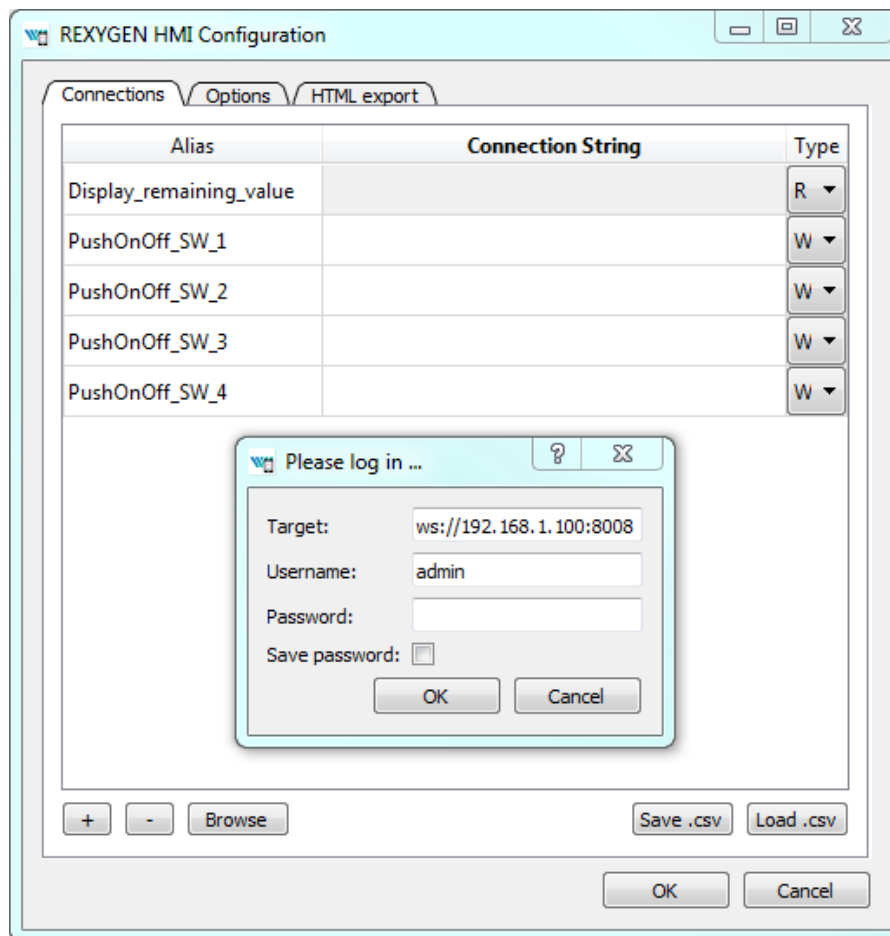

Select *Connection String* field of the `Display_remaining_value` item and afterwards browse the tree to the `TIMER_` block and **double-click** the `rt` parameter. The connection string of the parameter is copied to the `Display_remaining_value` alias, which is shown in the next figure.

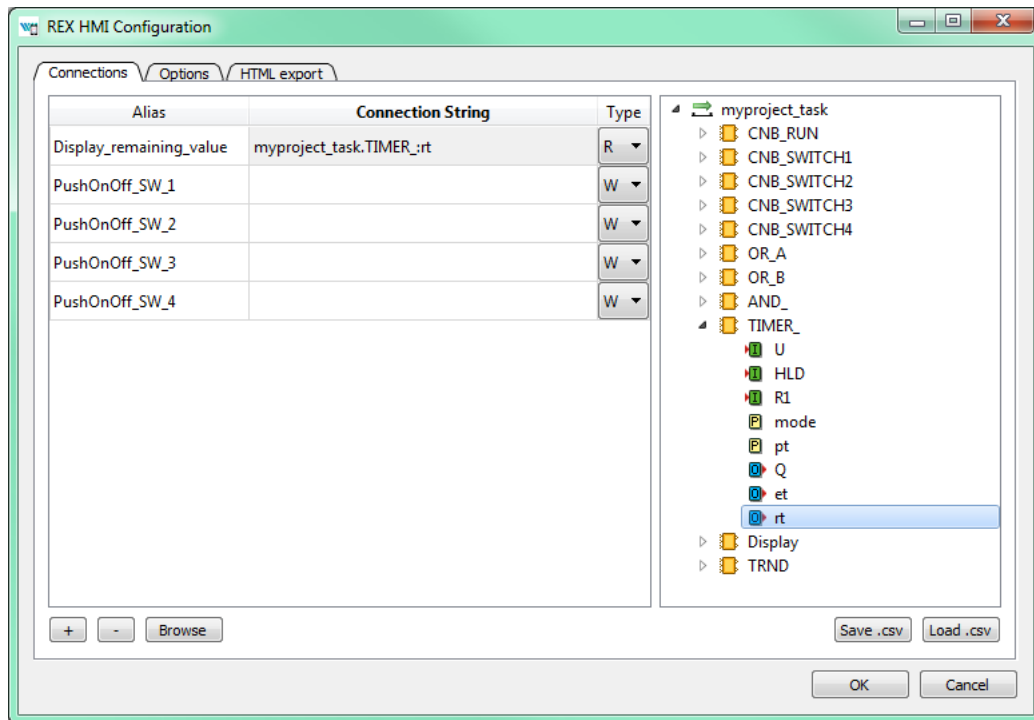


Once the display is linked we will also link the switches. Just browse the tree to CNB_SWITCH1, select the *Connection String* field of the *PushOnOff_SW_1* alias and double-click the YCN parameter. Repeat this for the remaining connection strings. Afterwards press OK to save the settings and close the dialog.

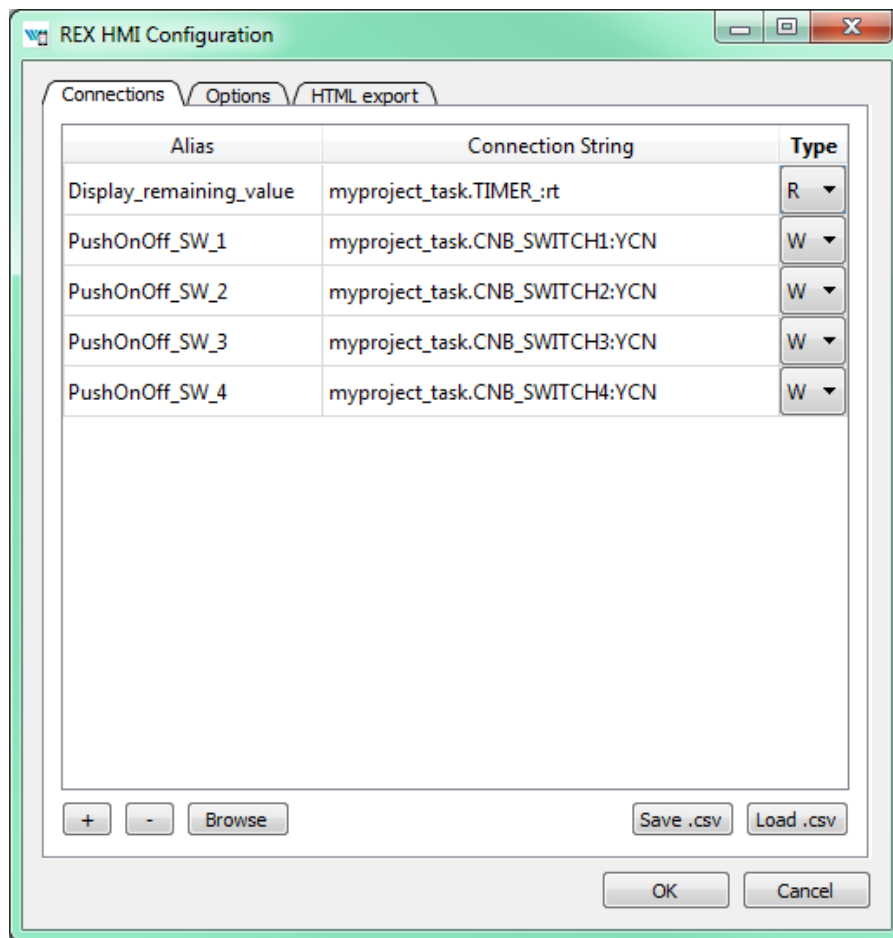

The interactive components in REXYGEN HMI Designer are just parts of the drawing. The user can position the components arbitrarily and add as many decorative static components to as needed. We will add some text descriptions to distinguish individual buttons. Use the *Text tool* (F8), click anywhere in an empty space and start typing. Pick the *Select and Transform tool* (F1) afterwards and move the texts and buttons.

Note: More information about custom drawing can be found in Inkscape tutorials (See the Help → Tutorials → Inkscape: Basic)

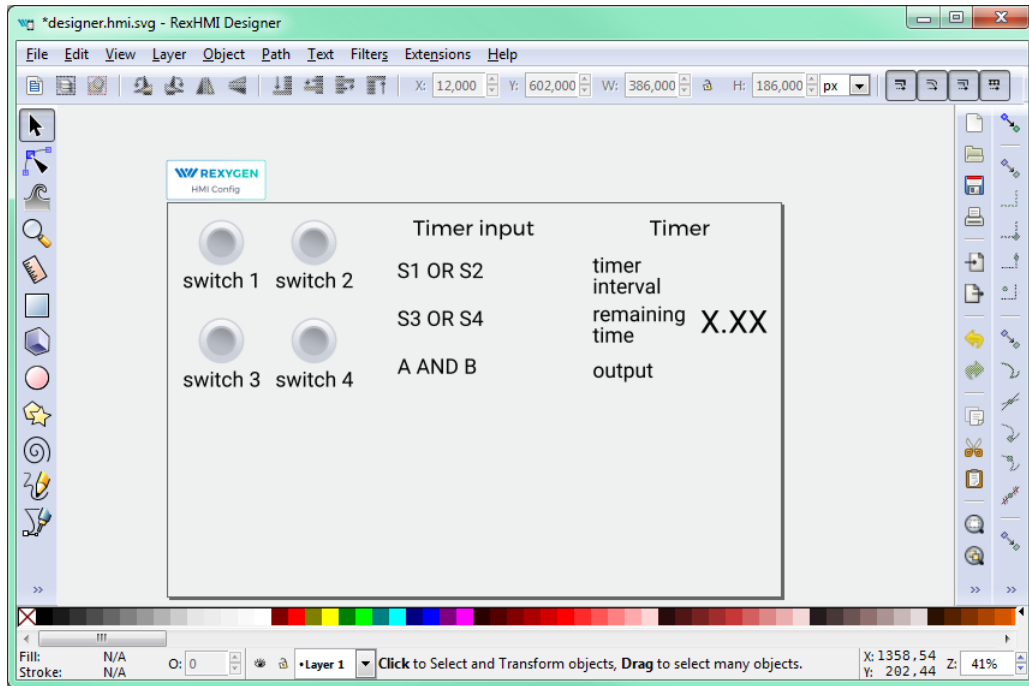


A.4 Adding more HMI components

Next we will add more components to control the timer and show the status of the OR and AND blocks. Open the Elements library (Ctrl+L) and add one *Input* and four *Led* components. The LEDs will show the status of Boolean values and the *Input* will be used for changing the default timer interval value.


In the *Led* components just edit the **Title** via the *Edit Component* extension (select the component by single click and press Ctrl+E). The titles should be **Led_OR_A**, **Led_OR_B**, **Led_AND**, and **Led_TIMER_OUT** respectively. Finally edit the *Input* component by changing the **Title** to **Input_interval**.

The last component we need is a graph showing the time-plot of data from the TRND block. Use the components library (Ctrl+L) and add a *TRND* component. You can adjust its size to fit the desired position. Edit the component (Ctrl+E) and change the **Title** to **TRND** and switch to the *Options* tab. Double-click the **signals** property. Add the following labels using the plus (+) button: **timer out**, **rem. time**, **OR A**, **OR B**. These labels will be shown in the legend of the graph.

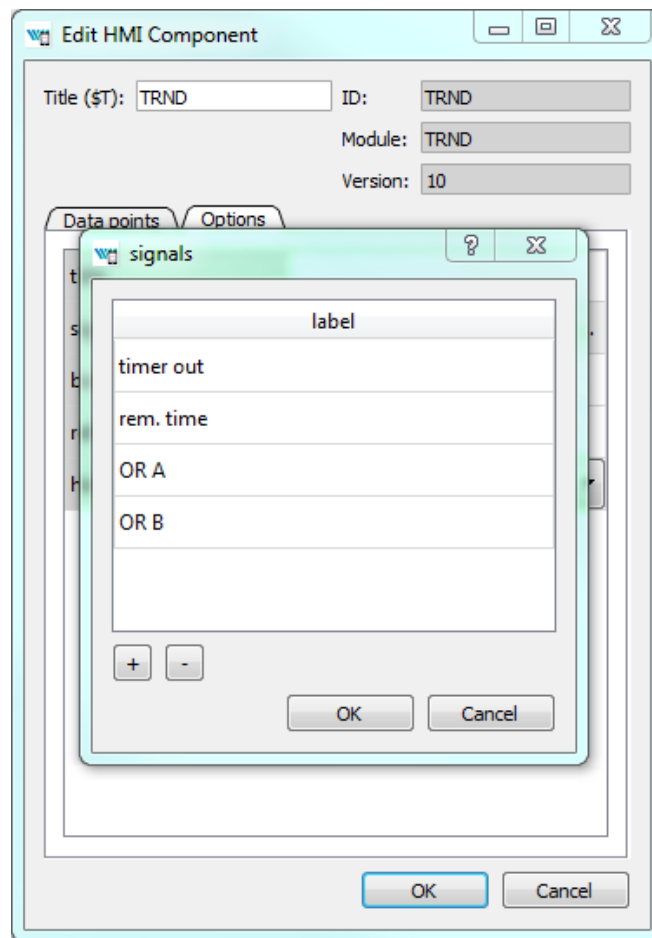


A.5 Additional links to the running algorithm

When all the components are in place we link them to the running algorithm again. Just repeat the procedure described in Section A.3, open the HMI Configuration dialog (*Extensions* → *REXYGEN HMI* → *Edit HMI Config*) and browse the running algorithm to pair the remaining aliases with corresponding connection strings. The list is shown in the following image.

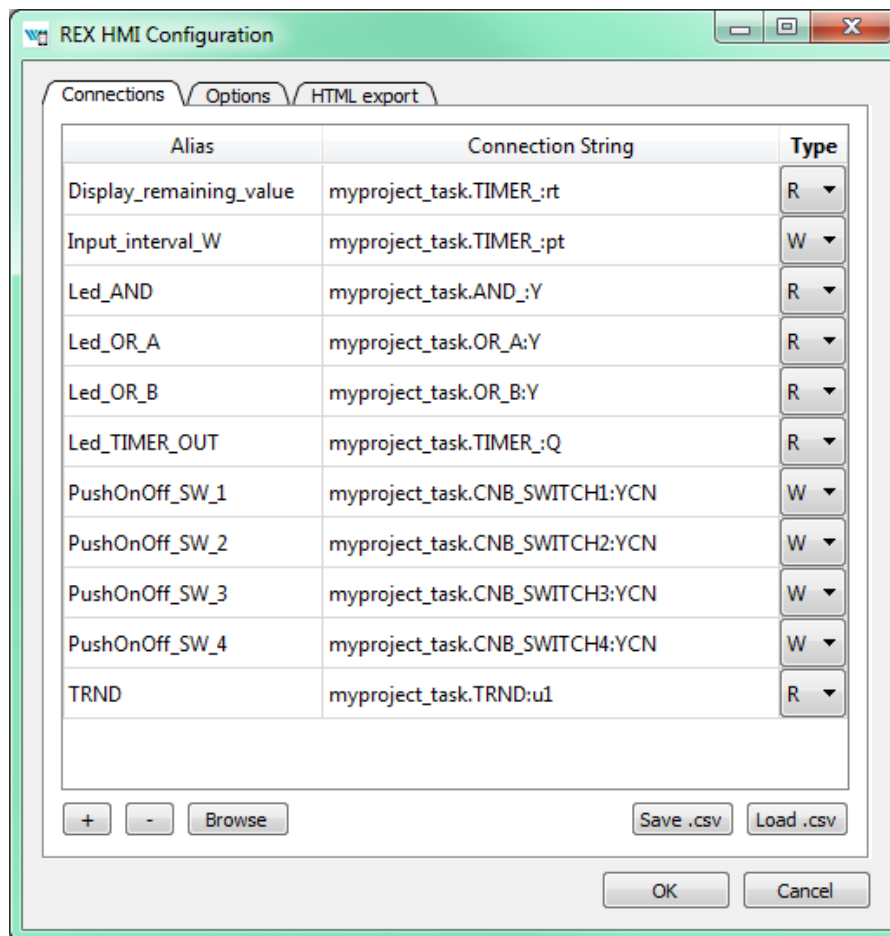


A.6 The final steps

Congratulations, your first graphical HMI is almost ready! Add a few rectangles which will visually divide the HMI into individual sections. Use the *Squares and rectangles tool* (F4), draw the rectangle, pick a color from the palette and send the rectangle to the background using the End key. Do not forget to save the drawing.

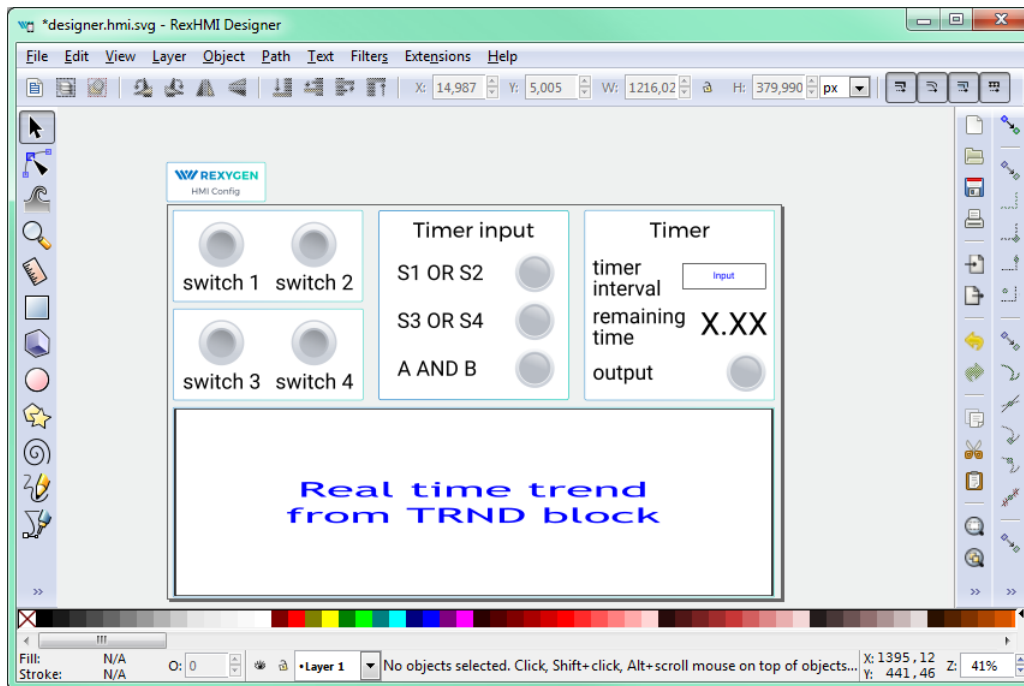

As mentioned earlier, the **.hmi.svg* files in the `hmisrc` folder are automatically processed while the project is compiled in the REXYGEN Studio application. The project main file must contain the HMI block with `GenerateRexHMI` parameter enabled. This was already covered in Section 4.3 so you should have everything ready.

Once you compile the project again and download it to your Pigeon PLC, the HMI will be accessible via a web browser. Navigate to `http://192.168.1.100:8008/hmi/designer.html` (replace 192.168.1.100 with the IP address of your Pigeon PLC). You will see your HMI with live data.

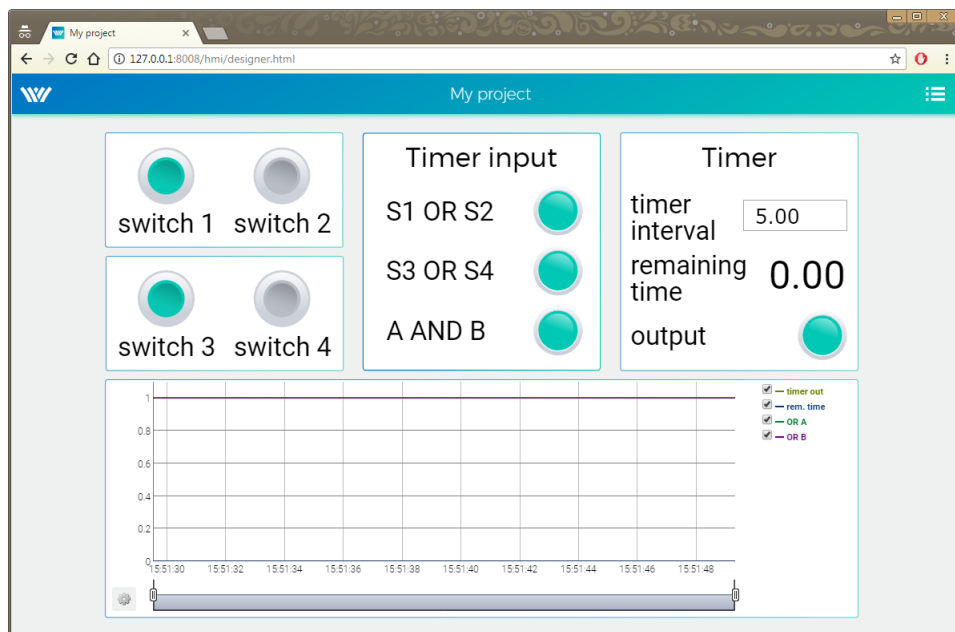

This tutorial covers only the very basic components. If you want to get more information about additional components, see [\[4\]](#).

Appendix B

Licensing of the REXYGEN system

The licensing model of the REXYGEN system is quite simple:

- The development tools are free to use, you can install it on as many computers as you want.
- The RexCore runtime module always needs a licence to run on your Pigeon PLC. There are DEMO licences available at no cost and there are permanent licences which you can purchase. Each Pigeon PLC needs an individual licence.

B.1 Obtaining a DEMO licence


The DEMO licence is intended for evaluating, testing and educational purposes. Feel free to experiment with the DEMO licence as long as you need. Commercial use of the DEMO licence is not allowed.

When you try to run your algorithm on a device which does not have a valid licence, you are offered a few options. Unless you already have a licence key or a licence voucher, you'll need to get a DEMO licence.


This is a dialog box titled "No licence on target device" with a close button (X) in the top right corner. The main text states: "No valid licence key has been found on the target device." Below this, there are three large buttons stacked vertically: "Request a free DEMO LICENCE" (with the subtext "Try REXYGEN at no cost"), "I have a LICENCE VOUCHER" (with the subtext "Apply your licence voucher and get a licence key"), and "I have a LICENCE KEY" (with the subtext "Enter your licence key and you are ready to go"). Below these buttons is a "Connect anyways" button. At the bottom, the dialog displays the "Target device identifier (Site ID):" as "WGWY-JJW8-GGSZ-NMA9-2EFI-S4LT-QW9Z-MSYH" and the "Version:" as "REXYGEN runtime core version 2.50.7.9077".


Identify yourself and you'll receive a DEMO licence key via e-mail. The licence key is called a **SiteKey**.

This is a dialog box titled "Get DEMO licence key" with a close button (X) in the top right corner. It contains a form with the following fields: "First name:" with the value "John", "Last name:" with the value "Doe", "Email:" with the value "johndoe@domain.com", and "Description (for your reference):" with the value "Crush test machine". Below the form is a "Get DEMO licence" button. At the bottom, there are two links: "Privacy policy statement" and "Registered REXYGEN user?".

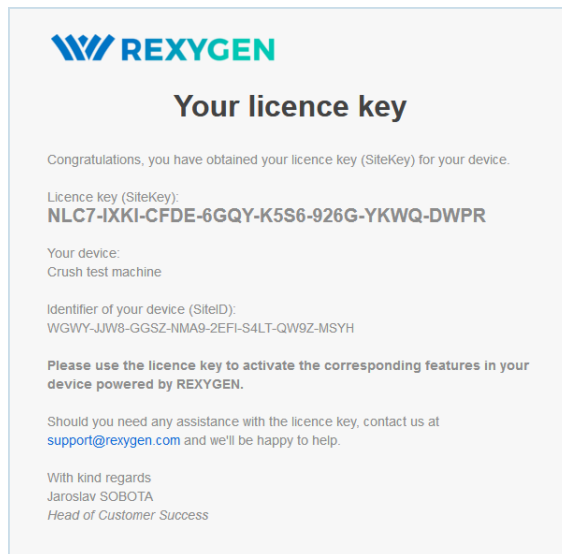


Once you have your DEMO licence key (SiteKey), apply it.

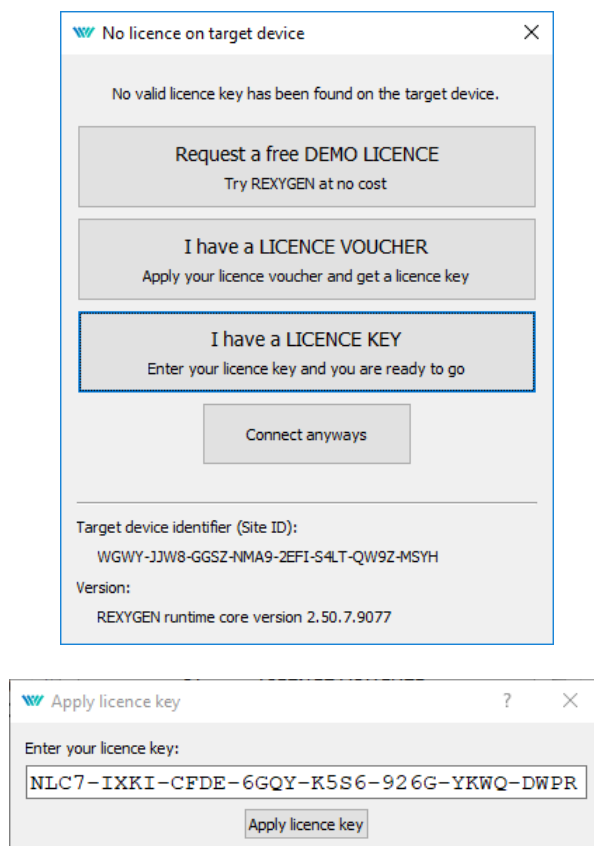

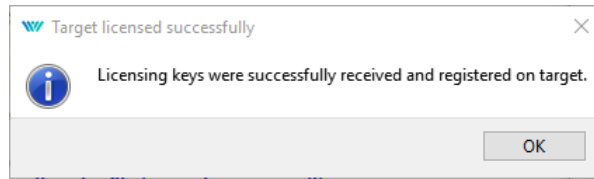

Once successfully applied, your algorithm will download to your Pigeon PLC.

You can review your licence keys in REXYGEN Studio. Go to menu *Target* → *Licensing* to list the licence keys and activated modules.

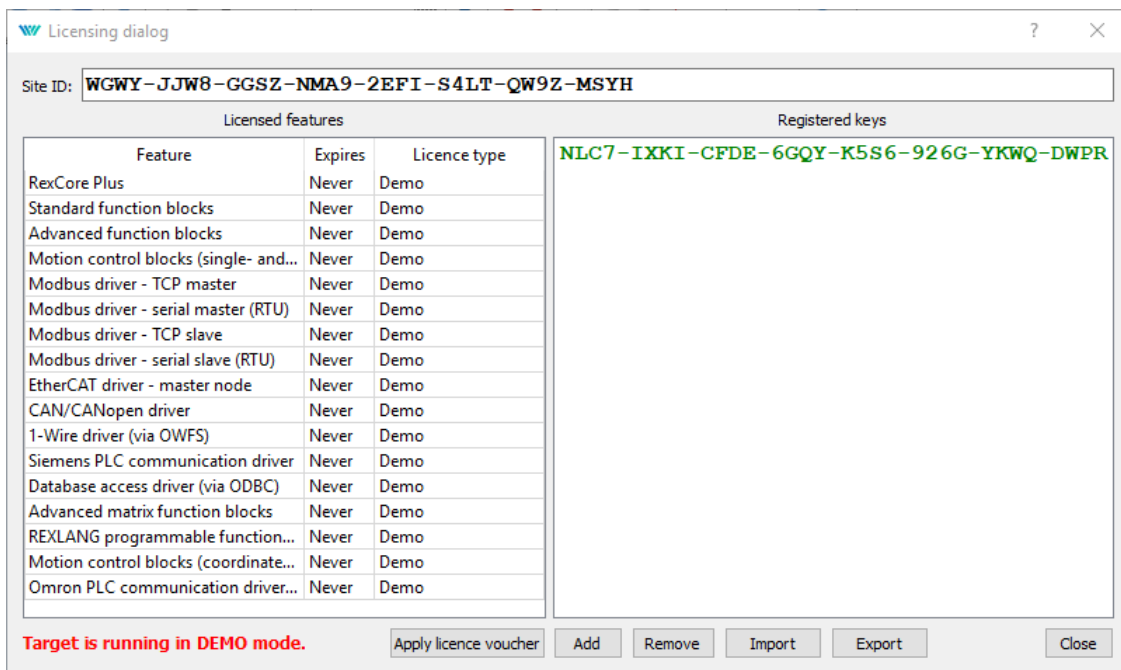

Evaluation version of RexCore (REXYGEN runtime core) is functional for 2 hours. It is possible to run your algorithm on the Pigeon PLC but you cannot store it permanently. The algorithm resides only in the RAM memory therefore it will not run after a restart or power-up. You can use almost all function blocks, see [1]. The RexCore runtime core on the target device is terminated after 2 hours of operation in demo mode without any warning. After a restart, you have another 2 hours for your experiments.

B.2 Obtaining a permanent licence


It is necessary to activate the RexCore runtime module and optional additional modules for permanent operation. This can be done using the licence, which you can obtain at

www.rexygen.com/pricing


B.2.1 Activation of the permanent licence

Each device running the RexCore runtime module is identified by the so-called **SiteID** tag. The purchased licence must be associated with the hardware device, i.e. with the **SiteID** tag.

1. In REXYGEN Studio, connect to the device and go to menu *Target* → *Licensing*. A dialog pops up and you will see the **SiteID** and your licences.

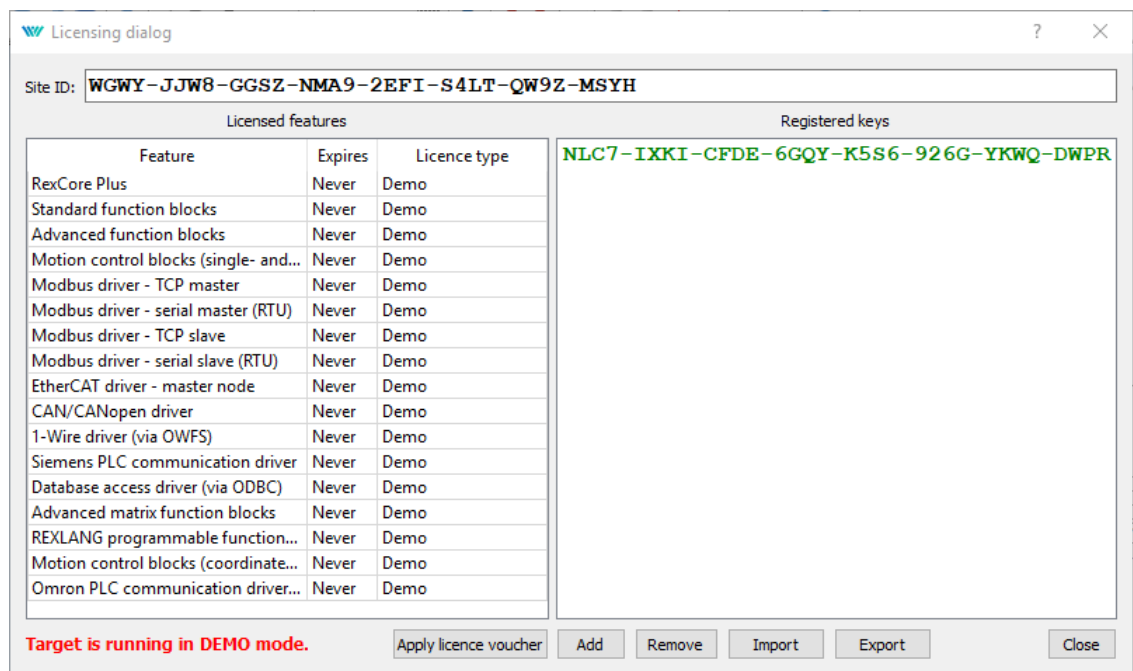

2. Delete any **DEMO** licence keys if present.
3. Afterwards, click the *Apply licence voucher* button and enter your licence voucher code.

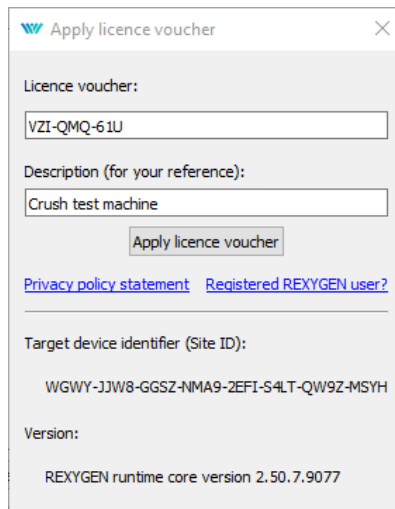

Apply licence voucher

Licence voucher:


Description (for your reference):

[Privacy policy statement](#) [Registered REXYGEN user?](#)

Target device identifier (Site ID):
 WGWY-JJW8-GGSZ-NMA9-2EFT-S4LT-QW9Z-MSYH

Version:
 REXYGEN runtime core version 2.50.7.9077

4. You are asked to confirm the association – this is the last and irreversible step.

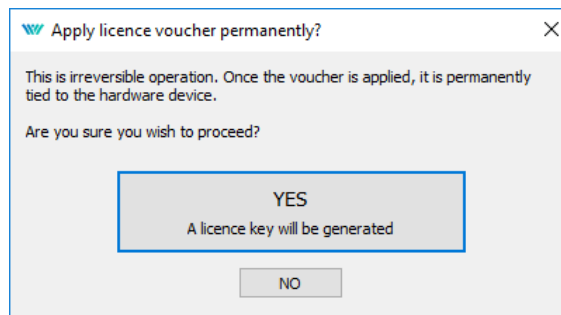


Apply licence voucher permanently?

This is irreversible operation. Once the voucher is applied, it is permanently tied to the hardware device.


Are you sure you wish to proceed?

A licence key will be generated


5. The so-called **SiteKey** licence key is generated from your licence voucher and it is stored in your device. The licence key allows permanent operation of the runtime core.

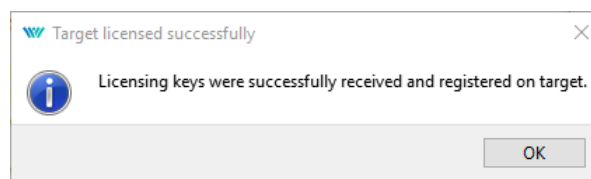

Target licensed successfully

 Licensing keys were successfully received and registered on target.

6. To check the licence, make sure the **REXYGEN Studio** is connected to the device and open the licensing dialog again (*Target* → *Licensing*). Check that the licence was applied correctly and that the **RexCore** runtime module no longer runs in demo mode.

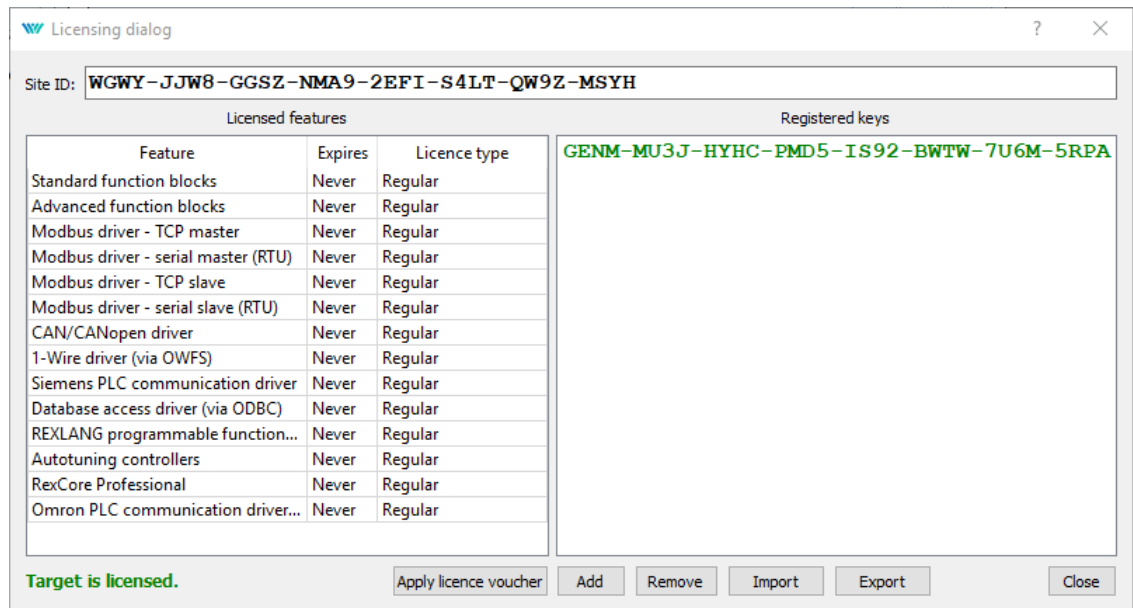

7. It is highly recommended to check the licence again after a reboot of the device.

Bibliography

- [1] REX Controls s.r.o.. *Function blocks of REXYGEN – reference manual*, 2018. [→](#).
- [2] REX Controls s.r.o.. *RexCore – User manual*, 2018. [→](#).
- [3] REX Controls s.r.o.. *REXYGEN Studio – User manual*, 2018. [→](#).
- [4] REX Controls s.r.o.. *REXYGEN HMI – User manual*, 2018. [→](#).
- [5] REX Controls s.r.o.. *RPiDrv driver of REXYGEN for Raspberry Pi – user guide*, 2018. [→](#).