



www.rexygen.com

Function Blocks of REXYGEN Reference manual

REX Controls s.r.o.

Version 2.50.11
2022-01-14
Plzeň (Pilsen), Czech Republic

Contents

1	Introduction	13
1.1	How to use this manual	13
1.2	The function block description format	15
1.3	Conventions for variables, blocks and subsystems naming	16
1.4	The signal quality corresponding with OPC	17
2	EXEC – Real-time executive configuration	19
ARC	– The REXYGEN system archive	20
EXEC	– Real-time executive	22
HMI	– Human-Machine Interface Configuration	24
INFO	– Description of Algorithm	26
IODRV	– The REXYGEN system input/output driver	27
IOTASK	– Driver-triggered task of the REXYGEN system	29
LPBRK	– Loop break	30
MODULE	– Extension module of the REXYGEN system	31
OSCALL	– Operating system calls	32
PROJECT	– Additional Project Settings	33
QTASK	– Quick task of the REXYGEN system	34
SLEEP	– Timing in Simulink	35
SRTF	– Set run-time flags	36
SYSEVENT	– * Read system log	38
SYSLOG	– Write system log	39
TASK	– Standard task of the REXYGEN system	40
TIODRV	– The REXYGEN system input/output driver with tasks	42
WWW	– Internal Web Server Content	44
3	INOUT – Input and output blocks	45
Display	– Numeric display of input values	46
From, INSTD	– Signal connection or input	47
Goto, OUTSTD	– Signal source or output	49
GotoTagVisibility	– Visibility of the signal source	51
Inport, Outport	– Input and output port	52
SubSystem	– Subsystem block	54

INQUAD, INOCT, INHEXD – Multi-input blocks	56
OUTQUAD, OUTOCT, OUTHEXD – Multi-output blocks	57
OUTRQUAD, OUTROCT, OUTRHEXD – Multi-output blocks with verification	59
OUTRSTD – Output block with verification	60
QFC – Quality flags coding	61
QFD – Quality flags decoding	62
VIN – Validation of the input signal	63
VOUT – Validation of the output signal	64
4 MATH – Math blocks	65
ABS_ – Absolute value	67
ADD – Addition of two signals	68
ADDQUAD, ADDOCT, ADDHEXD – Multi-input addition	69
CNB – Boolean (logic) constant	70
CNE – Enumeration constant	71
CNI – Integer constant	72
CNR – Real constant	73
DIF_ – Difference	74
DIV – Division of two signals	75
EAS – Extended addition and subtraction	76
EMD – Extended multiplication and division	77
FNX – Evaluation of single-variable function	78
FNXY – Evaluation of two-variables function	80
GAIN – Multiplication by a constant	82
GRADS – Gradient search optimization	83
IADD – Integer addition	85
ISUB – Integer subtraction	87
IMUL – Integer multiplication	88
IDIV – Integer division	90
IMOD – Remainder after integer division	91
LIN – Linear interpolation	92
MUL – Multiplication of two signals	93
POL – Polynomial evaluation	94
REC – Reciprocal value	95
REL – Relational operator	96
RTOI – Real to integer number conversion	97
SQR – Square value	98
SQRT_ – Square root	99
SUB – Subtraction of two signals	100
5 ANALOG – Analog signal processing	101
ABSROT – Processing data from absolute position sensor	103
ASW – Switch with automatic selection of input	105
AVG – Moving average filter	107

AVS – Motion control unit	108
BPF – Band-pass filter	109
CMP – Comparator with hysteresis	110
CNDR – Nonlinear conditioner	111
DEL – Delay with initialization	113
DELM – Time delay	114
DER – Derivation, filtering and prediction from the last n+1 samples	115
EVAR – Moving mean value and standard deviation	117
INTE – Controlled integrator	118
KDER – Derivation and filtering of the input signal	120
LPF – Low-pass filter	122
MINMAX – Running minimum and maximum	123
NSCL – Nonlinear scaling factor	124
RDFT – Running discrete Fourier transform	125
RLIM – Rate limiter	127
S10F2 – One of two analog signals selector	128
SAI – Safety analog input	131
SEL – Selector switch for analog signals	134
SELQUAD, SELOCT, SELHEXD – Selector switch for analog signals	135
SHFTOCT – Data shift register	137
SHLD – Sample and hold	139
SINT – Simple integrator	140
SPIKE – Spike filter	141
SSW – Simple switch	143
SWR – Selector with ramp	144
VDEL – Variable time delay	145
ZV4IS – Zero vibration input shaper	146
6 GEN – Signal generators	151
ANLS – Controlled generator of piecewise linear function	152
BINS – Controlled binary sequence generator	154
BIS – Binary sequence generator	156
MP – Manual pulse generator	158
PRBS – Pseudo-random binary sequence generator	159
SG, SGI – Signal generators	161
7 REG – Function blocks for control	163
ARLY – Advance relay	165
FLCU – Fuzzy logic controller unit	166
FRID – * Frequency response identification	168
I3PM – Identification of a three parameter model	170
LC – Lead compensator	172
LLC – Lead-lag compensator	173
MCU – Manual control unit	174

PIDAT – PID controller with relay autotuner	176
PIDE – PID controller with defined static error	179
PIDGS – PID controller with gain scheduling	181
PIDMA – PID controller with moment autotuner	183
PIDU – PID controller unit	189
PIDUI – PID controller unit with variable parameters	192
POUT – Pulse output	194
PRGM – Setpoint programmer	195
PSMPC – Pulse-step model predictive controller	197
PWM – Pulse width modulation	201
RLY – Relay with hysteresis	203
SAT – Saturation with variable limits	204
SC2FA – State controller for 2nd order system with frequency autotuner	206
SCU – Step controller with position feedback	213
SCUV – Step controller unit with velocity input	216
SELU – Controller selector unit	219
SMHCC – Sliding mode heating/cooling controller	220
SMHCCA – Sliding mode heating/cooling controller with autotuner	224
SWU – Switch unit	231
TSE – Three-state element	232
8 LOGIC – Logic control	233
AND_ – Logical product of two signals	234
ANDQUAD, ANDOCT, ANDHEXD – Logical product of multiple signals	235
ATMT – Finite-state automaton	236
BDOCT, BDHEXD – Bitwise demultiplexers	239
BITOP – Bitwise operation	240
BMOCT, BMHEXD – Bitwise multiplexers	241
COUNT – Controlled counter	242
EATMT – Extended finite-state automaton	244
EDGE_ – Falling/rising edge detection in a binary signal	247
EQ – Equivalence of two signals	248
INTSM – Integer number bit shift and mask	249
ISSW – Simple switch for integer signals	250
INTSM – Integer number bit shift and mask	251
ITOI – Transformation of integer and binary numbers	252
NOT_ – Boolean complementation	253
OR_ – Logical sum of two signals	254
ORQUAD, OROCT, ORHEXD – Logical sum of multiple signals	255
RS – Reset-set flip-flop circuit	256
SR – Set-reset flip-flop circuit	257
TIMER_ – Multipurpose timer	258

9 TIME – Blocks for handling time	261
DATE_ – Current date	262
DATETIME – Get, set and convert time	263
TIME – Current time	265
WSCH – Weekly schedule	266
10 ARC – Data archiving	269
10.1 Functionality of the archiving subsystem	270
10.2 Generating alarms and events	271
ALB, ALBI – Alarms for Boolean value	271
ALN, ALNI – Alarms for numerical value	273
ARS – Archive store value	276
10.3 Trends recording	278
ACD – Archive compression using Delta criterion	278
TRND – Real-time trend recording	280
TRNDV – Real-time trend recording with vector input	283
10.4 Archive management	284
AFLUSH – Forced archive flushing	284
11 STRING – Blocks for string operations	287
CNS – String constant	288
CONCAT – Concat string by pattern	289
FIND – Find a Substring	290
ITOS – Integer number to string conversion	291
LEN – String length	292
MID – Substring Extraction	293
PJROCT – Parse JSON string (real output)	294
PJSOCT – Parse JSON string (string output)	295
REGEEXP – Regular expresion parser	296
REPLACE – Replace substring	299
RTOS – Real Number to String Conversion	300
SELSOCT – Selector switch for string signals	301
STOR – String to real number conversion	302
12 PARAM – Blocks for parameter handling	303
GETPA – Block for remote array parameter acquirement	304
GETPR, GETPI, GETPB – Blocks for remote parameter acquirement	306
GETPS – * Block for remote string parameter acquirement	308
PARA – Block with input-defined array parameter	309
PARE – Block with input-defined enumeration parameter	310
PARR, PARI, PARB – Blocks with input-defined parameter	311
PARS – * Block with input-defined string parameter	313
SETPA – Block for remote array parameter setting	314
SETPR, SETPI, SETPB – Blocks for remote parameter setting	316

SETPS – * Block for remote string parameter setting	318
SGSLP – Set, get, save and load parameters	319
SILO – Save input value, load output value	323
SILOS – Save input string, load output string	325
13 MODEL – Dynamic systems simulation	327
CDELSSM – Continuous state space model of a linear system with time delay	328
CSSM – Continuous state space model of a linear system	331
DDELSSM – Discrete state space model of a linear system with time delay	333
DSSM – Discrete state space model of a linear system	335
EKF – Extended (nonlinear) Kalman filter	337
FOPDT – First order plus dead-time model	340
MDL – Process model	341
MDLI – Process model with input-defined parameters	342
MVD – Motorized valve drive	343
NSSM – Nonlinear State-Space Model	344
SOPDT – Second order plus dead-time model	347
14 MATRIX – Blocks for matrix and vector operations	349
CNA – Array (vector/matrix) constant	352
MB_DASUM – Sum of the absolute values	353
MB_DAXPY – Performs $y := a*x + y$ for vectors x, y	354
MB_DCOPY – Copies vector x to vector y	356
MB_DDOT – Dot product of two vectors	358
MB_DGEMM – Performs $C := \alpha*op(A)*op(B) + \beta*C$, where $op(X) = X$ or $op(X) = X^T$	360
MB_DGEMV – Performs $y := \alpha*A*x + \beta*y$ or $y := \alpha*A^T*x + \beta*y$	362
MB_DGER – Performs $A := \alpha*x*y^T + A$	364
MB_DNRM2 – Euclidean norm of a vector	366
MB_DR0T – Plain rotation of a vector	367
MB_DSCAL – Scales a vector by a constant	369
MB_DSWAP – Interchanges two vectors	370
MB_DTRMM – Performs $B := \alpha*op(A)*B$ or $B := \alpha*B*op(A)$, where $op(X) = X$ or $op(X) = X^T$ for triangular matrix A	372
MB_DTRMV – Performs $x := A*x$ or $x := A^T*x$ for triangular matrix A	374
MB_DTRSV – Solves one of the system of equations $A*x = b$ or $A^T*x = b$ for triangular matrix A	377
ML_DGEBAK – Backward transformation to ML_DGEBAK of left or right eigenvectors	380
ML_DGEBAK – Balancing of a general real matrix	382
ML_DGEBRD – Reduces a general real matrix to bidiagonal form by an orthogonal transformation	384

ML_DGECON – Estimates the reciprocal of the condition number of a general real matrix	386
ML_DGEEES – Computes the eigenvalues, the Schur form, and, optionally, the matrix of Schur vectors	388
ML_DGEEV – Computes the eigenvalues and, optionally, the left and/or right eigenvectors	390
ML_DGEHRD – Reduces a real general matrix A to upper Hessenberg form	392
ML_DGELQF – Computes an LQ factorization of a real M-by-N matrix A	394
ML_DGELSD – Computes the minimum-norm solution to a real linear least squares problem	396
ML_DGEQRF – Computes an QR factorization of a real M-by-N matrix A	398
ML_DGESDD – Computes the singular value decomposition (SVD) of a real M-by-N matrix A	400
ML_DLACPY – Copies all or part of one matrix to another matrix	402
ML_DLANGE – Computes one of the matrix norms of a general matrix	404
ML_DLASET – Initializes the off-diagonal elements and the diagonal elements of a matrix to given values	406
ML_DTRSYL – Solves the real Sylvester matrix equation for quasi-triangular matrices A and B	408
MX_AT – Get Matrix/Vector element	410
MX_ATSET – Set Matrix/Vector element	411
MX_CNADD – Add scalar to each Matrix/Vector element	412
MX_CNMUL – Multiply a Matrix/Vector by a scalar	413
MX_CTODPA – Discretizes continuous model given by (A,B) to (Ad,Bd) using Pade approximations	414
MX_DIM – Matrix/Vector dimensions	416
MX_DIMSET – Set Matrix/Vector dimensions	417
MX_DSAGET – Set subarray of A into B	419
MX_DSAREF – Set reference to subarray of A into B	421
MX_DSASET – Set A into subarray of B	423
MX_DTRNSP – General matrix transposition: B := alpha*A^T	425
MX_DTRNSQ – Square matrix in-place transposition: A := alpha*A^T	427
MX_FILL – Fill real matrix or vector	428
MX_MAT – Matrix data storage block	429
MX_RAND – Randomly generated matrix or vector	430
MX_REFCOPY – Copies input references of matrices A and B to their output references	432
MX_SLFS – Save or load a Matrix/Vector into file or string	433
MX_VEC – Vector data storage block	435
MX_WRITE – Write a Matrix/Vector to the console/system log	436
RTOV – Vector multiplexer	438
SWVMR – Vector/matrix/reference signal switch	439
VTOR – Vector demultiplexer	440

15 SPEC – Special blocks	441
EPC – External program call	442
HTTP – HTTP GET or POST request (obsolete)	445
HTTP2 – Block for generating HTTP GET or POST requests	447
SMTP – Send e-mail message via SMTP	449
RDC – Remote data connection	451
REXLANG – User programmable block	456
16 LANG – Special blocks	475
PYTHON – User programmable block in Python	476
17 MQTT – Communication via MQTT protocol	483
MqttPublish – Publish MQTT message	484
MqttSubscribe – Subscribe to MQTT topic	486
18 MC – SINGLE – Motion control - single axis blocks	489
RM_Axis – Motion control axis	492
MC_AccelerationProfile, MCP_AccelerationProfile – Acceleration profile	497
MC_Halt, MCP_Halt – Stopping a movement (interruptible)	501
MC_HaltSuperimposed, MCP_HaltSuperimposed – Stopping a movement (superimposed and interruptible)	502
MC_Home, MCP_Home – Homing	503
MC_MoveAbsolute, MCP_MoveAbsolute – Move to position (absolute coordinate)	505
MC_MoveAdditive, MCP_MoveAdditive – Move to position (relative to previous motion)	509
MC_MoveRelative, MCP_MoveRelative – Move to position (relative to execution point)	512
MC_MoveSuperimposed, MCP_MoveSuperimposed – Superimposed move	515
MC_MoveContinuousAbsolute, MCP_MoveContinuousAbsolute – Move to position (absolute coordinate)	518
MC_MoveContinuousRelative, MCP_MoveContinuousRelative – Move to position (relative to previous motion)	521
MC_MoveVelocity, MCP_MoveVelocity – Move with constant velocity	525
MC_PositionProfile, MCP_PositionProfile – Position profile	529
MC_Power – Axis activation (power on/off)	533
MC_ReadActualPosition – Read actual position	534
MC_ReadAxisError – Read axis error	535
MC_ReadBoolParameter – Read axis parameter (bool)	536
MC_ReadParameter – Read axis parameter	537
MC_ReadStatus – Read axis status	539
MC_Reset – Reset axis errors	541
MC_SetOverride, MCP_SetOverride – Set override factors	542

MC_Stop, MCP_Stop – Stopping a movement	544
MC_TorqueControl, MCP_TorqueControl – Torque/force control	546
MC_VelocityProfile, MCP_VelocityProfile – Velocity profile	549
MC_WriteBoolParameter – Write axis parameter (bool)	553
MC_WriteParameter – Write axis parameter	554
RM_AxisOut – Axis output	555
RM_AxisSpline – Commanded values interpolation	556
RM_Track – Tracking and inching	557
19 MC_MULTI – Motion control - multi axis blocks	559
MC_CamIn, MCP_CamIn – Engage the cam	560
MC_CamOut – Disengage the cam	564
MCP_CamTableSelect – Cam definition	566
MC_CombineAxes, MCP_CombineAxes – Combine the motion of 2 axes into a third axis	568
MC_GearIn, MCP_GearIn – Engange the master/slave velocity ratio	571
MC_GearInPos, MCP_GearInPos – Engage the master/slave velocity ratio in defined position	574
MC_GearOut – Disengange the master/slave velocity ratio	579
MC_PhasingAbsolute, MCP_PhasingAbsolute – Phase shift in synchronized motion (absolute coordinates)	581
MC_PhasingRelative, MCP_PhasingRelative – Phase shift in synchronized motion (relative coordinates)	584
20 MC_COORD – Motion control - coordinated movement blocks	587
RM_AxesGroup – Axes group for coordinated motion control	590
RM_Feed – * MC Feeder	593
RM_Gcode – * CNC motion control	594
MC_AddAxisToGroup – Adds one axis to a group	596
MC_UngroupAllAxes – Removes all axes from the group	597
MC_GroupEnable – Changes the state of a group to GroupEnable	598
MC_GroupDisable – Changes the state of a group to GroupDisabled	599
MC_SetCartesianTransform – Sets Cartesian transformation	600
MC_ReadCartesianTransform – Reads the parameter of the cartesian transformation	602
MC_GroupSetPosition, MCP_GroupSetPosition – Sets the position of all axes in a group	603
MC_GroupReadActualPosition – Read actual position in the selected coordinate system	605
MC_GroupReadActualVelocity – Read actual velocity in the selected coordinate system	606
MC_GroupReadActualAcceleration – Read actual acceleration in the selected coordinate system	607
MC_GroupStop – Stopping a group movement	608

MC_GroupHalt – Stopping a group movement (interruptible)	611
MC_GroupInterrupt, MCP_GroupInterrupt – Read a group interrupt	616
MC_GroupContinue – Continuation of interrupted movement	617
MC_GroupReadStatus – Read a group status	618
MC_GroupReadError – Read a group error	619
MC_GroupReset – Reset axes errors	620
MC_MoveLinearAbsolute – Linear move to position (absolute coordinates)	621
MC_MoveLinearRelative – Linear move to position (relative to execution point)	625
MC_MoveCircularAbsolute – Circular move to position (absolute coordinates)	629
MC_MoveCircularRelative – Circular move to position (relative to execution point)	633
MC_MoveDirectAbsolute – Direct move to position (absolute coordinates)	637
MC_MoveDirectRelative – Direct move to position (relative to execution point)	640
MC_MovePath – General spatial trajectory generation	643
MC_GroupSetOverride – Set group override factors	645
21 CanDrv – Communication via CAN bus	647
CanItem – Secondary received CAN message	648
CanRecv – Receive CAN message	649
CanSend – Send CAN message	651
22 OpcUaDrv – Communication using OPC UA	653
OpcUaReadValue – Read value from OPC UA Server	654
OpcUaServerValue – Expose value as an OPC UA Node	656
OpcUaWriteValue – Write value to OPC UA Server	658
A Licensing options	661
B Licensing of individual function blocks	663
C Error codes of the REXYGEN system	675
Bibliography	681
Index	683

Note: Only a partial documentation is available in blocks marked by * .

Chapter 1

Introduction

The manual “REXYGEN system function blocks” is a reference manual for the REXYGEN system function block library `RexLib`. It includes description and detailed information about all function blocks `RexLib` consists of.

1.1 How to use this manual

The extensive function block library `RexLib`, which is a standard part of the REXYGEN system, is divided into smaller sets of logically related blocks, the so-called *categories* (sublibraries). A separate chapter is devoted to each category, introducing the general properties of the whole category and its blocks followed by a detailed description of individual function blocks.

The content of individual chapters of this manual is following:

1 Introduction

This introductory chapter familiarizing the readers with the content and ordering of the manual. A convention used for individual function blocks description is presented.

2 EXEC – Runtime executive configuration

Blocks used mainly for configuration of the structure, priorities and timing of individual objects linked to the real-time subsystem of the REXYGEN system (the `RexCore` program) are described in this chapter.

3 INOUT – Input and output blocks

This sublibrary consists of the blocks used mainly for the REXYGEN system. These blocks provide the connection between the control tasks and input/output drivers.

4 MATH – Mathematic blocks

The blocks for arithmetic operations and basic math functions.

5 ANALOG – Analog signal processing

The integrator, derivator, time delay, moving average, various filters, comparators and selectors can be found among the blocks for analog signal processing. The starting unit block ([AVS](#)) is also very interesting.

6 GEN – Signal generators

This chapter deals with analog and logic signal generators.

7 REG – Function blocks for control

The control function blocks form the most extensive sublibrary of the RexLib library. Blocks ranging from simple dynamic compensators to several modifications of PID (P, I, PI, PD a PID) controller and some advanced controllers are included. The blocks for control schemes switching and conversion of output signals for various types of actuators can be found in this sublibrary. The involved controllers include the [PIDGS](#) block, enabling online switching of parameter sets (the so-called *gain scheduling*), the [PIDMA](#) block with built-in moment autotuner, the [PIDAT](#) block with built in relay autotuner, the [FLCU](#) fuzzy controller or the [PSMPC](#) predictive controller, etc.

8 LOGIC – Logic control

This chapter describes blocks for combinational and sequential logic control including the simplest Boolean operations (not, and, or) and also more complex blocks like the sequential logic automat [ATMT](#) implementing the SFC standard (Sequential Function Charts, formerly Grafset).

10 ARC – Data archiving

This sublibrary contains blocks for alarms generation and blocks for storing trend data directly on the target device.

12 PARAM – Parameter handling

This sublibrary contains blocks for parameter handling, namely saving, loading and remote manipulation with parameters.

13 MODEL – Dynamic systems modeling

The REXYGEN system can also be used for creating real-time mathematical models of dynamic systems. The function blocks of this sublibrary were developed for such cases.

14 MATRIX – Working with matrix and vector data

Function blocks for handling vector and matrix data in REXYGEN are included in this sublibrary.

18 MC_SINGLE – Single-axis motion control

Function blocks of this sublibrary were developed according to the PLCopen Motion Control standard for single axis motion control.

19 MC_MULTI – Multi-axes motion control

Function blocks of this sublibrary were developed according to the PLCopen Motion Control standard for motion control in multiple axes.

20 MC_COORD – Coordinated motion control

Function blocks of this sublibrary were developed according to the PLCopen Motion Control standard for coordinated motion control.

15 SPEC – Special blocks

The most interesting blocks of this sublibrary are the **REXLANG** and **RDC** blocks. It is possible to compile and interpret user algorithms using the **REXLANG** block, whose programming language is very similar to the C language (the syntax of the **REXLANG** commands is mostly the same as in the C language). The **RDC** block can be used for real-time communication between two REXYGEN-enabled target devices.

The individual chapters of this reference guide are not much interconnected, which means they can be read in almost any order or even only the necessary information for specific block can be read for understanding the function of that block. The electronic version of this manual (in the .pdf format) is well-suited for such case as it is equipped with hypertext bookmarks and contents, which makes the look-up of individual blocks very easy.

Despite of that it is recommended to read the following subchapter, which describes the conventions used for description of individual blocks in the rest of this manual.

1.2 The function block description format

The description of each function block consists of several sections (in the following order):

Block Symbol – displays the graphical symbol of the block

Function Description – brief description of the block function, omitting too detailed information.

Inputs – detailed description of all inputs of the block

Outputs – detailed description of all outputs of the block

Parameters – detailed description of all parameters of the block

Examples – a simple example of the use of the block in the context of other blocks and optional graph with input and output signals for better understanding of the block function.

If the block function is obvious, the section **Examples** is omitted. In case of block with no input or no output the corresponding section is omitted as well.

The inputs, outputs and parameters description has a tabular form:

<name> [nam] Detailed description of the input (output, parameter) <type>
 <name>. Mathematical symbol *nam* on the right side of the first column is used in the equations in the Function Description section. It is listed only if it differs from the name more than typographically. If the variable value is limited to only enumerated values, the meaning of these values is explained in this column.
 $\textcircled{\text{S}}\text{<def>} \downarrow\text{<min>} \uparrow\text{<max>}$

The meaning of the three columns is quite obvious. The third column contains the item <type>. The REXYGEN control system supports the types listed in table 1.1. But the most frequently used types are **Bool** for Boolean variables, **Long** (**I32**) for integer variables and **Double** (**F64**) for real variables (in floating point arithmetics).

Each described variable (input, output or parameter) has a default value <def> in the REXYGEN system, which is preceded by the \odot symbol. Also it has upper and lower limits, preceded by the symbols \downarrow and \uparrow respectively. All these three values are optional (marked by []). If the value $\odot\text{<def>}$ is not listed in the second column, it is equal to zero. If the values of $\downarrow\text{<min>}$ and/or $\uparrow\text{<max>}$ are missing, the limits are given by the the minimum and/or maximum of the corresponding type, see table 1.1¹.

Type	Meaning	Minimum	Maximum
Bool	Boolean value 0 or 1	0	1
Byte (U8)	8-bit integer number without the sign	0	255
Short (I16)	16-bit integer number with the sign	-32768	32767
Long (I32)	32-bit integer number with the sign	-2147483648	2147483647
Large (I64)	64-bit integer number with the sign	$-9.2234 \cdot 10^{18}$	$9.2234 \cdot 10^{18}$
Word (U16)	16-bit integer number without the sign	0	65535
DWord (U32)	32-bit integer number without the sign	0	4294967295
Float (F32)	32-bit real number in floating point arithmetics	$-3.4 \cdot 10^{38}$	$3.4 \cdot 10^{38}$
Double (F64)	64-bit real number in floating point arithmetics	$-1.7 \cdot 10^{308}$	$1.7 \cdot 10^{308}$
String	character string		

Table 1.1: Types of variables in the REXYGEN system.

1.3 Conventions for variables, blocks and subsystems naming

Several conventions are used to simplify the use of the REXYGEN control system. All used variable types were defined in the preceding chapter. The term variable refers to function block inputs, outputs and parameters in this chapter. The majority of the blocks uses only the following three types:

¹Precise range of the **Large** data type is -9223372036854775808 to 9223372036854775807.

Bool – for two-state logic variables, e.g. on/off, yes/no or true/false. The logic one (yes, true, on, 1) is referred to as **on** in this manual. Similarly the logic zero (no, false, off, 0) is represented by **off**. This holds also for REXYGEN Studio. Other tools and 3rd party software may display these values as 1 for **on** and 0 for **off**. The names of logic variables consist of uppercase letters, e.g. RUN, YCN, R1, UP, etc.

Long (I32) – for integer values, e.g. set of parameters ID, length of trend buffer, type of generated signal, error code, counter output, etc. The names of integer variables use usually lowercase letters and the initial character (always lowercase) is in most cases {i, k, l, m, n, or o}, e.g. ips, l, isig, iE, etc. But several exceptions to this rule exist, e.g. **cnt** in the **COUNT** block, **btype**, **pctype1**, **pfac** and **afac** in the **TRND** block, etc.

Double (F64) – for floating point values (real numbers), e.g. gain, saturation limits, results of the majority of math functions, PID controller parameters, time interval lengths in seconds, etc. The names of floating point variables use only lowercase letters, e.g. **hilim**, **y**, **ti**, **tt**.

The function block names in the REXYGEN system use uppercase letters, numbers and the ‘_’ (underscore) character. It is recommended to append a lowercase user-defined string to the standard block name when creating user instances of function blocks.

It is explicitly not recommended to use diacritic and special characters like spaces, CR (end of line), punctuation, operators, etc. in the user-defined names. The use of such characters limits the transferability to various platforms and it can lead to incomprehension. The names are checked by the **REXYGEN Compiler** compiler which generates warnings if inappropriate characters are found.

1.4 The signal quality corresponding with OPC

Every signal (input, output, parameter) in the REXYGEN system has the so-called *quality flags* in addition to its own value of corresponding type (table 1.1). The quality flags in the REXYGEN system correspond with the OPC (OLE for Process Control) specification [1]. They can be represented by one byte, whose structure is explained in the table 1.2.

Bit number	7	6	5	4	3	2	1	0
Bit weight	128	64	32	16	8	4	2	1
Bit field	Quality		Substatus			Limits		
	Q	Q	S	S	S	S	L	L
BAD	0	0	S	S	S	S	L	L
UNCERTAIN	0	1	S	S	S	S	L	L
not used in OPC	1	0	S	S	S	S	L	L
GOOD	1	1	S	S	S	S	L	L

Table 1.2: The quality flags structure

The basic quality type is determined by the QQ flags in the two most important bits. Based on these the quality is distinguished between **GOOD**, **UNCERTAIN** and **BAD**. The four SSSS bits provide more detailed information about the signal. They have different meaning for each basic quality. The two least significant bits LL inform whether the value exceeded its limits or if it is constant. Additional details and the meaning of all bits can be found in [1], chapter 6.8.

Chapter 2

EXEC – Real-time executive configuration

Contents

ARC – The REXYGEN system archive	20
EXEC – Real-time executive	22
HMI – Human-Machine Interface Configuration	24
INFO – Description of Algorithm	26
IODRV – The REXYGEN system input/output driver	27
IOTASK – Driver-triggered task of the REXYGEN system	29
LPBRK – Loop break	30
MODULE – Extension module of the REXYGEN system	31
OSCALL – Operating system calls	32
PROJECT – Additional Project Settings	33
QTASK – Quick task of the REXYGEN system	34
SLEEP – Timing in Simulink	35
SRTF – Set run-time flags	36
SYSEVENT – * Read system log	38
SYSLOG – Write system log	39
TASK – Standard task of the REXYGEN system	40
TIODRV – The REXYGEN system input/output driver with tasks	42
WWW – Internal Web Server Content	44

ARC – The REXYGEN system archive

Block Symbol

Licence: STANDARD



Function Description

The **ARC** block is intended for archives configuration in the REXYGEN control system. The archives can be used for continuous recording of alarms, events and history trends directly on the target platform. The output **Archives** of the **EXEC** block must be connected to the **prev** input of the first archive. The following archives can be added by connecting the input **prev** with the preceding archive's output **next**. Only one archive block can be connected to each **next** output, the output of the last archive remains unconnected. The resulting archives sequence determines the order of allocation and initialization of individual archives in the REXYGEN system and also the index of the archive, which is used in the **arc** parameter of the archiving blocks (see chapter 10). The archives are numbered from 1 and the maximum number of archives is limited to 15 (archive no. 0 is the internal system log).

The **atype** parameter determines the type of archive from the data-available-after-restarting point of view. The admissible types depend on the target platform properties, which can be inspected in the **Target** tab in the REXYGEN Diagnostics program after successful connecting to the target device.

Archive consists of sequenced variable-length items (memory and disk space optimization) with a timestamp. Therefore the other parameters are the total archive size in bytes **asize** and maximum number of timestamps **nmarks** for speeding-up the sequential seeking in the archive.

Input

prev Input for connecting with the **next** output of the preceding Long (I32) archive or with the **Archives** output of the **EXEC** block in the case of the first archive

Output

next Output for creating sequences of archives by connecting to the Long (I32) **prev** input of the following archive


Parameters

atype	Archive type	$\odot 1$	Long (I32)
1	archive is allocated in the RAM memory (data is irreversibly lost after restarting the target device)		
2	archive is allocated in backed-up memory, e.g. CMOS (data remains available after restarting the target device)		
3	archive is allocated on a drive (data remains available in the file after restarting)		
asize	Size of the archive in bytes	$\downarrow 256 \odot 102400$	Long (I32)
nmarks	Number of time stamps for speeding-up sequential seeking in the archive	$\downarrow 2 \odot 720$	Long (I32)
1daymax	Maximum size of archive per day [bytes]	$\downarrow 1000 \uparrow 2147480000 \odot 1048576$	Large (I64)
period	Period of writing data to disk [s]	$\odot 60.0$	Double (F64)

EXEC – Real-time executive

Block Symbol

Licence: STANDARD



Function Description

The **EXEC** block is a cornerstone of the so-called *project main file* in the **.mdl** format, which configures individual subsystems of the REXYGEN system. No similar block can be found in the Matlab-Simulink system. The **EXEC** block and all connected configuration blocks do not implement any mathematic algorithm. Such configuration structure is used by the **REXYGEN Compiler** compiler during building of the overall **REXYGEN** control system application.

The **REXYGEN** system configuration consists of modules (**Modules**), input/output drivers (**Drivers**), archive subsystem (**Archives**) and real-time subsystem, which includes quick computation tasks (see the **QTASK** function block description for details) and four priority levels (**Level0** to **Level3**) for inserting computation tasks (see the **TASK** function block description for details).

The base (shortest) period of the application is determined by the **tick** parameter. This value is checked by the **REXYGEN Compiler** compiler as its limits vary by selected target platform. Generally speaking, the lower period is used, the higher computational requirements of the **REXYGEN** system runtime core (**RexCore**) are.

The periods of individual computation levels (**Level0** to **Level3**) are determined by multiplying the base period **tick** by the parameters **ntick0** to **ntick3**. Parameters **prio0** to **prio3** are the logical priorities of corresponding computation levels in the **REXYGEN** system. The **REXYGEN** system uses 32 logical priorities, which are internally mapped to the target platform operating system dependent priorities. The highest logical priority of the **REXYGEN** system is 0, the value 31 means the lowest. Should two tasks with different priorities run at the same time, the lower priority (higher value) task would be

interrupted by the higher priority (lower value) task.

The default priorities `pri0` to `pri3` reflect the commonly accepted idea that the "fast" tasks (short sampling period) should have higher priority than the "slow" ones (the so-called *Rate monotonic scheduling*). This means that the default priorities need not to be changed in most cases. Impetuous changes can lead to unpredictable effects!

Outputs

Modules	Output for connecting the REXYGEN system expansion modules, see the MODULE function block description for details	Long (I32)
Drivers	Output for connecting the REXYGEN system input/output drivers, see the IODRV and TIODRV function block descriptions for details	Long (I32)
Archives	Output for archives configuration, see the ARC block	Long (I32)
QTask	Output for connecting quick tasks with the highest priority and the shortest period, see the QTASK block	Long (I32)
Level0	Computation level for inserting tasks (see the TASK block) with high priority <code>pri0</code> and short period determined by the <code>ntick0</code> parameter	Long (I32)
Level1	Computation level for inserting tasks with medium priority <code>pri1</code> and medium-length period determined by the <code>ntick1</code> parameter	Long (I32)
Level2	Computation level for inserting tasks with low priority <code>pri2</code> and long period determined by the <code>ntick2</code> parameter	Long (I32)
Level3	Computation level for inserting tasks with the lowest priority <code>pri3</code> and the longest period determined by the <code>ntick3</code> parameter	Long (I32)

Parameters

target	Target device	PC - Windows	String
tick	The base period (tick) of the REXYGEN system core and also the quick task (QTASK) period (in seconds)	0.05	Double (F64)
ntick0	The multiplication <code>tick*ntick0</code> determines the period of tasks connected to Level0	↓1 ⊕10	Long (I32)
ntick1	The multiplication <code>tick*ntick1</code> determines the period of tasks connected to Level1	↓ntick0+1 ⊕50	Long (I32)
ntick2	The multiplication <code>tick*ntick2</code> determines the period of tasks connected to Level2	↓ntick1+1 ⊕100	Long (I32)
ntick3	The multiplication <code>tick*ntick3</code> determines the period of tasks connected to Level3	↓ntick2+1 ⊕1200	Long (I32)
pri0	Priority of all Level0 tasks	↓3 ↑31 ⊕5	Long (I32)
pri1	Priority of all Level1 tasks	↓pri0+1 ↑31 ⊕9	Long (I32)
pri2	Priority of all Level2 tasks	↓pri1+1 ↑31 ⊕13	Long (I32)
pri3	Priority of all Level3 tasks	↓pri2+1 ↑31 ⊕18	Long (I32)

HMI – Human-Machine Interface Configuration

Block Symbol



Licence: STANDARD

Function Description

The **HMI** block is a so-called "pseudo-block" which stores additional settings and parameters related to the Human-Machine Interface (HMI) and the contents of the internal web server. The only file where the block can be placed is the main project file with a single **EXEC** block.

The REXYGEN system currently provides three straightforward methods of how to create Human-Machine Interface:

- **WebWatch** is an auto-generated HMI from the REXYGEN Studio development tool during project compilation. It has similar look, attributes and functions as the online mode of the REXYGEN Studio development tool. The main difference is that **WebWatch** is stored on the target device, is available from the integrated web server and may be viewed with any modern web browser or any application that is compatible with HTML, SVG and JavaScript. The **WebWatch** is a perfect tool for instant creation of HMI that is suitable for system developers or integrators. It provides a graphical interaction with almost all signals in the control algorithm.
- **WebBuDi**, which is an acronym for Web Buttons and Displays, is a simple JavaScript file with several declarative blocks that describe data points which the HMI is connected to and assemble a table in which all the data is presented. It provides a textual interaction with selected signals and is suitable for system developers and integrators or may serve as a fall-back mode HMI for non-standard situations.
- **RexHMI** is a standard SVG file that is edited using REXYGEN HMI Designer. The REXYGEN HMI Designer is a great tool for creating graphical HMI that is suitable for operators and other end users.

The **IncludeHMI** parameter includes or excludes the HMI files from the final binary form of the project. The **HmiDir** specifies a path to a directory where the final HMI is located and from where it is inserted into the binary file during project compilation. The path may be absolute or relative to the project. The **GenerateWebWatch** specifies whether a **WebWatch** HMI should be generated into **HmiDir** during compilation. The **GenerateRexHMI** specifies whether a **RexHMI** and **WebBuDi** should be generated into **HmiDir** during compilation.

The logic of generating and including HMI during project compilation is as follows:

1. Delete all contents from `HmiDir` when `GenerateWebWatch` or `GenerateRexHMI` is specified.
2. Generate RexHMI and WebBuDi from `SourceDir` into `HmiDir` if `GenerateRexHMI` is enabled. All **WebBuDi** source files should be named in a `*.hmi.js` format and all **RexHMI** source files should be named in a `*.hmi.svg` format. The generated files are then named `*.html`.
3. Copy all contents from `SourceDir` except **WebBuDi** or **RexHMI** source files into `HmiDir` if `IncludeHMI` is enabled.
4. Insert HMI from `HmiDir` into binary configuration if `IncludeHMI` is enabled.

The block does not have any inputs or outputs. The **HMI** block itself does not become a part of the final binary configuration, only the files it points to do. Be careful when inserting big files or directories as the integrated web server is not designed for massive data transfers. It is possible to shrink the data by enabling gzip compression. The compression also reduces amount of data transferred to the client, but decompression must be performed by the server when a client does not support gzip compression, which brings additional load on the target device.

For a proper operation of the **HMI** block the compilation must be launched from the REXYGEN Studio development tool and the REXYGEN HMI Designer must be installed.

Parameters

<code>IncludeHMI</code>	Include HMI files in the project	<code>④on</code>	<code>Bool</code>
<code>HmiDir</code>	Output folder for HMI files	<code>④hmi</code>	<code>String</code>
<code>SourceDir</code>	Source directory	<code>④hmisrc</code>	<code>String</code>
<code>GenerateWebWatch</code>	Generate WebWatch HMI files	<code>④on</code>	<code>Bool</code>
<code>GenerateRexHMI</code>	Generate HMI from SVG and JS files	<code>④on</code>	<code>Bool</code>
<code>RedirectToHMI</code>	Web server will automatically redirect to HMI webpage if enabled otherwise it will serve a standard home page as a starting page.	<code>④on</code>	<code>Bool</code>
<code>Compression</code>	Enables data compression in gzip format.		<code>Bool</code>

INFO – Description of Algorithm

Block Symbol



Licence: STANDARD

Function Description

The **INFO** block is a so-called "pseudo-block" which stores textual information about a real-time executive. The only file where the block can be placed is a main project file with a single **EXEC** block and so it belongs to the **EXEC** category. The block does not have any inputs or outputs. The information specified with this block becomes a part of the final configuration, is stored on the target device and may be seen on different diagnostics screens but does not have any impact on execution of the control algorithm or target's behavior.

Parameters

Title	Project title	String
Author	Project author	String
Description	Brief description of the project	String
Customer	Information about a customer	String

IODRV – The REXYGEN system input/output driver

Block Symbol

Licence: STANDARD



Function Description

The input/output drivers of the REXYGEN system are implemented as extension modules (see the [MODULE](#) block). A module can contain several drivers, which are added to the REXYGEN system configuration by using the [IODRV](#) blocks. The [prev](#) input of the block must be connected with the [Drivers](#) output of the [EXEC](#) block or with the [next](#) output of a [IODRV](#) block which is already included in the configuration. There can be only one driver connected to the [next](#) output of the [IODRV](#) block. The [next](#) output of the last driver in the configuration remains unconnected. This means that the drivers create a unidirectional chain which defines the order of initialization and execution of the individual drivers.

Each driver of the REXYGEN system is identified by its name, which is defined by the [classname](#) parameter (beware, the name is case-sensitive!). If the name of the driver differs from the name of the module containing the given driver, the module name must be specified by the [module](#) parameter, it is left blank otherwise. Details about these two parameters can be found in the documentation of the corresponding REXYGEN system driver.

The majority of drivers stores its own configuration data in files with [.rio](#) extension (REXYGEN Input/Output), whose name is specified by the [cfgname](#) parameter. The [.rio](#) files are created in the same directory where the project main file is located ([.mdl](#) file with the [EXEC](#) block). Driver is configured (e.g. names of the input/output signals, connection to physical inputs/outputs, parameters of communication with the input/output device, etc.) in an embedded editor provided by the driver itself. The editor is opened when the [Configure](#) button is pressed in the parameter dialog of the [IODRV](#) block in the REXYGEN Studio program of the REXYGEN control system. In Matlab/Simulink the editor is opened upon ticking the "Tick this checkbox to call [IOdrv EDIT dialog](#)" checkbox.

The remaining parameters are useful only when the driver implements its own computational task (see the corresponding driver documentation). The [factor](#) parameter defines the driver's task execution period by multiplying the [EXEC](#) block's [tick](#) parameter [factor*tick](#)). The [stack](#) parameter defines the stack size in bytes. It is recommended to keep the default setting unless stated otherwise in the driver documentation. The last parameter [pri](#) defines the logical priority of the driver's task. Inappropriate priority can influence the overall performance of the control system critically so it is highly recommended to check the driver documentation and the load of the control system (drivers, levels and tasks) in the REXYGEN Diagnostics diagnostic program.

Input

prev Input for connecting the driver with the **Drivers** output of the **EXEC** block or with the **next** output of the preceding driver Long (I32)

Output

next Output for connecting to the **prev** input of the succeeding driver Long (I32)

Parameters

module	Name of the module, which includes the input/output driver (mandatory only if module name differs from classname)	String
classname	I/O driver class name; case sensitive!	DrvClass
cfgname	Name of the driver configuration file	iodrv.rio
factor	Multiple of the EXEC block's tick parameter defining the driver's task execution period	Long (I32) ↓1 ⊕10
stack	Stack size of the driver's task in bytes	Long (I32) ↓1024 ⊕10240
pri	Logical priority of the driver's task	Long (I32) ↓1 ↑31 ⊕3
timer	Driver is a source of time	Bool

IOTASK – Driver-triggered task of the REXYGEN system

Block Symbol

Licence: STANDARD



Function Description

Standard tasks of the REXYGEN system are integrated into the configuration using the **TASK** or **QTASK** blocks. Such tasks are executed by the system timer, whose tick is configured by the **EXEC** block.

But the system timer can be unsuitable in some cases, e.g. when the shortest execution period is too long or when the task should be executed by an external event (input signal interrupt) etc. In such a case the IOTASK can be executed directly by the I/O driver configured by the **TIODRV** block. The user manual of the given driver provides more details about the possibility and conditions of using the above mentioned approach.

Input

prev Input for connecting the first task to the **Tasks** output of the **TIODRV** block or for connecting to the previous task's **next** output Long (I32)

Output

next Output for sequencing the tasks by connecting to the **prev** input Long (I32) of the following task

Parameters

factor	Execution factor which can be used to determine the task execution period, see the user guide of the corresponding I/O driver	Long (I32) ⊕1
stack	Stack size [bytes]	⊕10240 Long (I32)
filename	Name of the file with the .mdl extension which contains the task algorithm; in the case filename is not specified, the filename is given by the name of the IOTASK block in the project main file (the .mdl extension is attached automatically)	String

LPBRK – Loop break

Block Symbol



Licence: STANDARD

Function Description

The LPBRK block is an auxiliary block often used in the control schemes consisting of the REXYGEN system function blocks. The block is usually placed in all feedback loops in the scheme. Its behavior differs in the REXYGEN system and the Simulink system.

The LPBRK block creates a one-sample delay in the Simulink system. If there exists a feedback loop without the LPBRK block, the Simulink system detects an algebraic loop and issues a warning (Matlab version 6.1 and above). The simulation fails after some time.

The REXYGEN Compiler compiler omits the LPBRK block, the only effect of this block is the breaking of the feedback loop at the block's position. If there exists a loop without the LPBRK block, the REXYGEN Compiler compiler issues a warning and breaks the loop at an automatically determined position. It is recommended to use the LPBRK block in all loops to achieve the maximum compatibility between the REXYGEN system and the Simulink system.

Input

u	Input signal	Double (F64)
----------	--------------	--------------

Output

y	Output signal	Double (F64)
----------	---------------	--------------

MODULE – Extension module of the REXYGEN system

Block Symbol

Licence: STANDARD



Function Description

The REXYGEN system has an open architecture thus its functionality can be extended. Such extension is provided by modules. Each module is identified by its name placed below the block symbol. The individual modules are added to the project main file by connecting the **prev** input with the **Modules** output of the **EXEC** block or with the **next** output of a **MODULE** which is already included in the project. There can be only one module connected to the **next** output of the **MODULE** block. The **next** output of the last module in the project remains unconnected. This means that the modules create a unidirectional chain which defines the order of initialization of individual modules.

Input

prev Input for connecting the module with the **Modules** output of the **Long (I32) EXEC** block or with the **next** output of the preceding module

Output

next Output for connecting to the **prev** input of the succeeding **Long (I32)** module

OSCALL – Operating system calls

Block Symbol

Licence: STANDARD



Function Description

The OSCALL block is intended for executing operating system functions from within the REXYGEN system. The chosen action is performed upon a rising edge ($\text{off} \rightarrow \text{on}$) at the TRG input. However, not all actions are supported on individual platforms. The result of the operation and the possible error code are displayed by the E and iE outputs.

Note that there is also the [EPC](#) block available, which allows execution of external programs.

Input

TRG	Trigger of the selected action	Bool
-----	--------------------------------	------

Outputs

E	Error flag	Bool
iE	Error code i REXYGEN general error	Long (I32)

Parameter

action	System function to perform	⊕1 Long (I32)
1	Reboot system	
2	System shutdown	
3	System halt	
4	Flush disc caches	
5	Lock system partition	
6	Unlock system partition	
7	Disable internal webserver	
8	Enable internal webserver	

PROJECT – Additional Project Settings

Block Symbol

Licence: STANDARD



Function Description

The PROJECT block is a so-called "pseudo-block" which stores additional settings and parameters related to a project and a real-time executive. The only file where the block can be placed is a main project file with a single EXEC block and so it belongs to the EXEC category.

The block does not have any inputs or outputs. The block does not become a part of the final binary configuration.

Parameters

CompileParams	Command-line options which are passed to REXYGEN Compiler during project compilation.	String
SourcesOnTarget	Store source files on target device	Bool
TargetURL	URL address of a target on which the configuration should be run. The address is inserted into all connection dialogs automatically.	String
LibraryPath	Path to libraries referenced in the project. Can be absolute or relative to project folder.	String

QTASK – Quick task of the REXYGEN system

Block Symbol

Licence: STANDARD



Function Description

The QTASK block is used for including the so-called quick task with high priority into the executive of the REXYGEN system. This task is used where the fastest processing of the input signals is necessary, e.g. digital filtering of input signals corrupted with noise or immediate processing of switches connected via digital inputs. The quick task is added into the configuration by connecting the `prev` input with the EXEC block's QTask output. The quick task is initialized before the initialization of the Level10 computation level (see the TASK block).

There can be only one QTASK block in the REXYGEN control system. It runs with the logical priority no. 2. The algorithm of the quick task is configured the same way as the standard TASK, it is a separate .mdl file.

The execution period of the task is given by a multiple of the `factor` parameter and the tick of the EXEC block. The task is executed with the shortest period of `tick` seconds for `factor=1`. In that case the system load is the highest. Under all circumstances the QTASK must be executed within `tick` seconds, otherwise a real-time executive fatal error occurs and no other tasks are executed. Therefore the QTASK block must be used with consideration. The execution time of the block is displayed in the REXYGEN Diagnostics diagnostic program.

Input

<code>prev</code>	Input for connecting the task with the QTask output of the EXEC block	Long (I32)
-------------------	---	------------

Parameters

<code>factor</code>	Multiple of the EXEC block's <code>tick</code> parameter defining the quick task execution period	Long (I32) ⊕1
<code>stack</code>	Stack size [bytes]	Long (I32) ⊕10240
<code>filename</code>	Name of the file with the .mdl extension which contains the quick task algorithm; in the case <code>filename</code> is not specified, the filename is given by the name of the QTASK block in the project main file (the .mdl extension is attached automatically)	String

SLEEP – Timing in Simulink

Block Symbol

Licence: STANDARD



Function Description

The Matlab/Simulink system works natively in simulation time, which can run faster or slower than real time, depending on the complexity of the algorithm and the computing power available. Therefore the **SLEEP** block must be used when accurate timing and execution of the algorithm in the Matlab/Simulink system is required. In the REXYGEN system, timing and execution is provided by system resources (see the **EXEC** block) and the **SLEEP** block is ignored.

In order to perform real-time simulation of the algorithm, the **SLEEP** block must be included. It guarantees that the algorithm is executed with the period given by the **ts** parameter unless the execution time is longer than the requested period.

The **SLEEP** block is implemented for Matlab/Simulink running in Microsoft Windows operating system. It is recommended to use periods of 100 ms and above. For the proper functionality the 'Solver type' must be set to **fixed-step** and **discrete (no continuous states)** in the 'Solver' tab of the 'Simulation parameters' dialog. Further the **Fixed step size** parameter must be equal to the **ts** parameter of the **SLEEP** block. There should be at most one **SLEEP** block in the whole simulation scheme (including all subsystems).


Parameter

ts	Simulation scheme execution period (in seconds)	◎0.1 Double (F64)
-----------	---	-------------------

SRTF – Set run-time flags

Block Symbol

Licence: ADVANCED



Function Description

The SRTF block (Set Run-Time Flags) can be used to influence the execution of tasks, subsystems (sequences) and blocks of the REXYGEN system. This block is not meant for use in Matlab-Simulink. When describing this block, the term object refers to a REXYGEN system object running in real-time, i.e. input/output driver, one of the tasks, subsystem or a simple function block of the REXYGEN system.

All the operations described below affect the object, whose full path is given by the `bname` parameter. Should the parameter be left blank (empty string), the operation applies to the nearest owner of the SRTF object, i.e. the subsystem in which the block is directly included or the task containing the block.

The run-time flags allow the following operations:

- **Disable execution** of the object by setting the EXDIS input to `on`. The execution can be enabled again by using the input signal EXDIS = `off`. The EXDIS input sets the same run-time flag as the Halt/Run button in the upper right corner of the Workspace tab in the REXYGEN Diagnostics diagnostic program.
- **One-shot execution** of the object. If the object execution is disabled by the EXDIS = `on` input or by the REXYGEN Diagnostics program, it is possible to trigger one-shot execution by EXOSH = `on`.
- **Enable diagnostics** for the given object by DGEN = `on`. The result is equivalent to ticking the Enable checkbox in the diagnostic pane of the corresponding tab (I/O Driver, Level, Quick Task, Task, I/O Task, Sequence) in the REXYGEN Diagnostics program.
- **Reset diagnostic data** of the given object by DGRES = `on`. The same flag can be set by the Reset button in the diagnostic pane of the corresponding tab in the REXYGEN Diagnostics program. The flag is automatically set back to 0 when the data reset is performed.

The following table shows the flags available for various objects in the REXYGEN system.

Object type	EXDIS	EXOSH	DGEN	DGRES
I/O Driver	✓	✓	✓	✓
Level	✓	✗	✓	✓
Task	✓	✓	✓	✓
Quick Task	✓	✓	✓	✓
I/O Task	✓	✓	✓	✓
Sequence, subsystem	✓	✗	✓	✓
Block	✓	✗	✗	✗

Inputs

EXDIS	Disable execution	Bool
EXOSH	One-shot execution	Bool
DGEN	Enable diagnostics	Bool
DGRES	Reset diagnostic data	Bool
DLOG	Enable more verbose logging	Bool

Outputs

E	Error flag off ... No error on An error occurred	Bool
iE	Error code (for E = on) 0 No error 1 The object specified by the bname parameter was not found 2 REXYGEN system internal error (invalid pointers) 3 Flag could not be set (timeout)	Long (I32)

Parameter

bname	Full path to the block/object. Case sensitive. Individual layers are separated by dots, the object names excluding tasks (TASK , QTASK) start with the following special characters: ^ Computational level, e.g. ^0 for Level0 & Input/Output Driver, e.g. &WcnDrv	String
	Name of the task triggered by input/output driver (IOTASK) has the form &<driver_name>. <task_name>.	

"

SYSEVENT – * Read system log

Block Symbol

Licence: STANDARD



Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Parameters

<code>arc</code>	Archive to read (0=system log)	$\downarrow 0 \uparrow 16$	Long (I32)
<code>filter</code>	String that item must contain		String
<code>idfrom</code>	Minimum item ID to show	$\downarrow 0 \uparrow 65535$	Long (I32)
<code>idto</code>	Minimum item ID to show	$\downarrow 0 \uparrow 65535 \odot 65655$	Long (I32)
<code>lvlfrom</code>	Minimum item level to show	$\downarrow 0 \uparrow 255$	Long (I32)
<code>lvltō</code>	Maximum item level to show	$\downarrow 0 \uparrow 255 \odot 255$	Long (I32)

Outputs

<code>VALID</code>	Output data are valid (actual)	Bool
<code>sEvent</code>	Whole archive item in JSOM	String
<code>sVal</code>	Archive item value (string)	String
<code>iVal</code>	Archive item value (integer)	Long (I32)

SYSLOG – Write system log

Block Symbol

Licence: STANDARD



Function Description

The **SYSLOG** block is intended for writing any messages to the REXYGEN system log. It can be used for basic logging of user events. To write, it is necessary to have messages of the given level enabled in the System Logs Configuration (Target -> System Logs Configuration -> Function block messages).

Inputs

msg	The message you want to save to the log (max. 512 znaků)	String
lvl	Level of logged message:	Long (I32)
	0 Error	
	1 Warning	
	2 Info	
	3 Verbose	
RUN	Writing enable. Writing to the log continues as long as the RUN Bool input is ON	Bool

TASK – Standard task of the REXYGEN system

Block Symbol

Licence: STANDARD



Function Description

The overall control algorithm of the REXYGEN system consists of individual tasks. These are included by using the **TASK** block. There can be one or more tasks in the control algorithm. The REXYGEN system contains four main computational levels represented by the **Level0** to **Level3** outputs of the **EXEC** block. The individual tasks are added to the given computational level $<i>$ by connecting the **prev** input with the corresponding **Level $<i>$** output or with the **next** output of a **TASK**, which is already included in the given level $<i>$. There can be only one task connected to the **next** output of the **TASK** block. The **next** output of the last task in the given level remains unconnected. This means that the tasks in one level create a unidirectional chain which defines the order of initialization and execution of the individual tasks of the given level in the REXYGEN system. The individual levels are ordered from **Level0** to **Level3** (the **QTASK** block precedes **Level0**).

All the tasks of the given level $<i>$ are executed with the same priority given by the **pri $<i>$** parameter of the **EXEC** block. The execution period of the task is given by a multiple of the **factor** parameter and the base tick of the given level $<i> \text{ntick}<i>*\text{tick}$ in the **EXEC** block. The time allocated for the task to execute starts at the **start** tick and ends at the **stop** tick, where the inequality $0 \leq \text{start} < \text{stop} \leq \text{ntick}<i>$ must hold for the **start** and **stop** parameters. The REXYGEN Compiler compiler further checks whether the **stop** parameter of the preceding task is less or equal to the **stop** parameter of the succeeding task, i.e. the allocated time intervals for individual tasks cannot overlap. In the case the timing of individual levels is inappropriate, the tasks are interrupted by tasks and other events with higher priority and might not execute in the allocated time. In such a case the execution is not aborted but delayed (in contrary to the **QTASK** block). The REXYGEN Diagnostics program diagnoses whether the execution delay is occasional or permanent (the **Level** and **Task** tabs).

Input

prev Input for connecting the task with the corresponding **Level $<i>$** **Long (I32)** output of the **EXEC** block or with the **next** output of the preceding task of the given level

Output

next Output for connecting to the **prev** input of the succeeding task **Long (I32)** in the given level

Parameters

factor	Execution factor; multiple of the execution period of the i-th level of the EXEC block defining the execution period of the task: $\text{factor} * \text{tick} * \text{ntick}^{<i>} \odot 1$	Long (I32)
start	Number of tick of the given computational level which should trigger the task execution $\downarrow 0 \uparrow \text{ntick}^{<i>} \odot 0$	Long (I32)
stop	Number of tick of the given computational level by which the task execution should finish $\downarrow \text{start} + 1 \uparrow \text{ntick}^{<i>} \odot 1$	Long (I32)
stack	Stack size [bytes] $\odot 10240$	Long (I32)
filename	Name of the file with the .mdl extension which contains the task algorithm. In the case filename is not specified, the filename is given by the name of the TASK block in the project main file (the .mdl extension is attached automatically)	String

TIODRV – The REXYGEN system input/output driver with tasks

Block Symbol

Licence: STANDARD



Function Description

The TIODRV block is used for configuration of special drivers of the REXYGEN system which are able to execute tasks defined by the IOTASK blocks. See the corresponding driver documentation.

The **prev** input of the IOTASK block must be connected with the **Tasks** output of the TIODRV block. If the driver allows so, the **next** output of a TIODRV block which is already included in the configuration can be used to add more tasks. The **next** output of the last task remains unconnected. On the contrary to standard tasks, the number and order of the driver's tasks are not checked by the REXYGEN Compiler compiler but by the input-output driver itself.

If the driver cannot guarantee periodic execution of some task (e.g. task is triggered by an external event), a corresponding flag is set for the given task. Such a task cannot contain blocks which require constant sampling period (e.g. the majority of controllers). If some of these restricted blocks are used, the executive issues a task execution error, which can be traced using the REXYGEN Diagnostics program.

Input

prev Input for connecting the driver with the **Drivers** output of the EXEC block or with the **next** output of the preceding driver Long (I32)

Outputs

next Output for connecting to the **prev** input of the succeeding driver Long (I32)

Tasks The IOTASK blocks executed by the driver are connected to this output using the **prev** input Long (I32)

Parameters

module	Name of the module, which includes the input/output driver	String
	(mandatory only if module name differs from classname)	
classname	Name of the driver class; case sensitive!	DrvClass
cfgname	Name of the driver configuration file	iodrv.rio
		String

factor	Multiple of the EXEC block's tick parameter defining the driver's task execution period	$\downarrow 1 \odot 10$	Long (I32)
stack	Stack size of the driver's task in bytes	$\downarrow 1024 \odot 10240$	Long (I32)
pri	Logical priority of the driver's task	$\downarrow 1 \uparrow 31 \odot 3$	Long (I32)
timer	Driver is a source of time		Bool

WWW – Internal Web Server Content

Block Symbol

Licence: STANDARD



Function Description

The WWW block is a so-called "pseudo-block" which stores additional information about a contents of an internal web server. The only file where the block can be placed is a main project file with a single EXEC block an so it belongs to the EXEC category.

The block does not have any inputs or outputs. The block itself does not become a part of a final binary configuration but the data it points to does. Be careful when inserting big files or directories as the integrated web server is not optimized for a large data. It is possible to shrink the data by enabling gzip compression. The compression also reduces amount of data transferred to the client, but decompression must be performed on the server side when a client does not support gzip compression which brings additional load on the target device.

Parameters

Source	Specifies a source directory or a file name that should be placed on the target and should be available via integrated web server using standard HTTP and/or HTTPS protocol. The path may be absolute or relative to path of a main project file.	String
Target	Specifies a target directory or a file name on the integrated web server.	String
Compression	Enables data compression in gzip format.	Bool

Chapter 3

INOUT – Input and output blocks

Contents

Display – Numeric display of input values	46
From, INSTD – Signal connection or input	47
Goto, OUTSTD – Signal source or output	49
GotoTagVisibility – Visibility of the signal source	51
Inport, Outport – Input and output port	52
SubSystem – Subsystem block	54
INQUAD, INOCT, INHEXD – Multi-input blocks	56
OUTQUAD, OUTOCT, OUTHEXD – Multi-output blocks	57
OUTRQUAD, OUTROCT, OUTRHEXD – Multi-output blocks with verification	59
OUTRSTD – Output block with verification	60
QFC – Quality flags coding	61
QFD – Quality flags decoding	62
VIN – Validation of the input signal	63
VOUT – Validation of the output signal	64

Display – Numeric display of input values

Block Symbol

Licence: STANDARD



Function Description

The DISPLAY block shows input value in a selected format. A suffix may be appended to the value. An actual value is shown immediately in REXYGEN Studio even without turning on *Watch* mode for the block, and the same in *WebWatch*. Actual conversion of input into its textual representation is performed on the target device in each **Decimation** period so the value displayed may be also read via the *REST* interface or used in visualization.

Input

u	Input signal	Unknown
----------	--------------	---------

Parameters


Format	Format of displayed value Best fit short long .. short_e long_e bank .. hex ... bin ... det ...	⊕1 Long (I32)
---------------	--	---------------

Decimation	Value is evaluated in each Decimation period	↓1 ↑100000	⊕1 Long (I32)
Suffix	A string to be appended to the value		String

From, INSTD – Signal connection or input

Block Symbols

Licence: STANDARD



Function Description

The two blocks **From** (signal connection) and **INSTD** (standard input) share the same symbol. They are used for referring to another signal, either internal or external.

In the function block library, you can only find the **From** block. It is converted to the **INSTD** block at compile time if necessary. The following rules define how the **REXYGEN Compiler** compiler distinguishes between the two block types:

- If the parameter **GotoTag** contains the **__** delimiter (two successive '**_**' characters), then the block is of the **INSTD** type. The part (substring) of the parameter before the delimiter (**DRV** in the block symbol above) is considered to be the name of an **IODRV** type block contained in the main file of the project. The **REXYGEN Compiler** compiler returns an error when such block does not exist. If the driver exists in the project, the other part of the **GotoTag** parameter (following the delimiter, **signal** in this case) is considered to be the name of a signal within the corresponding driver. This name is validated by the driver and in the case of success, an instance of the **INSTD** block is created. This instance collects real-time data from the driver and feeds the data into the control algorithm at each execution of the task it is included in.
- If there is no **__** delimiter in the **GotoTag** parameter, the block is of type **From**. A matching **Goto** block with the same **GotoTag** parameter and required visibility given by the **TagVisibility** parameter (see the **Goto** block description) is searched. In case it is not found, the **REXYGEN Compiler** compiler issues a warning and deletes the **From** block. Otherwise an "invisible" connection is created between the corresponding blocks. The **From** block is removed also in this case and thus it is not contained in the resulting control system configuration.

In the case of **INSTD** block, the **GotoTag** parameter includes the symbol of the driver **<DRV>** and the name of the signal **<signal>** of the given driver:

<DRV>__<signal>

E.g. the first digital input of a Modbus I/O device might be referenced by **MBM__DI1**. Detailed information about signal naming can be found in the user manual of the corresponding I/O driver.

Since version 2.50.5 it is possible to use placeholders in names of I/O driver signals. This is useful inside subsystems where this placeholder is replaced by the value of subsystem parameter. E.g. the flag `MBM__DI<id>` will refer to digital input 1, 2, 3 etc. depending on the parameter `id` of the subsystem the block is contained in. See the [SubSystem](#) function block for information on defining subsystem parameters.

Output

`value` Signal coming from I/O driver or [Goto](#) block. The type of output `Unknown` is determined by the type of the signal which is being referred by the `GotoTag` parameter.


Parameter

`GotoTag` Reference to a [Goto](#) block with the same `GotoTag` parameter, `String` which should be connected with the `From` block or a reference to input signal of the REXYGEN I/O driver, which should provide data through the block's output.

Goto, OUTSTD – Signal source or output

Block Symbols

Licence: STANDARD



Function Description

The two blocks **Goto** (signal source) and **OUTSTD** (standard output) share the same symbol. They are used for providing signals, either internal or external.

In the function block library, you can only find the **Goto** block. It is converted to the **OUTSTD** block at compile time if necessary. The following rules define how the **REXYGEN Compiler** distinguishes between the two block types:

- If the parameter **GotoTag** contains the **__** delimiter (two successive '**_**' characters), then the block is of the **OUTSTD** type. The part (substring) of the parameter before the delimiter (**DRV** in the block symbol above) is considered to be the name of an **IODRV** type block contained in the main file of the project. The **REXYGEN Compiler** compiler returns an error when such block does not exist. If the driver exists in the project, the other part of the **GotoTag** parameter (following the delimiter, **signal** in this case) is considered to be the name of a signal within the appropriate driver. This name is validated by the driver and in the case of success, an instance of the **OUTSTD** block is created. This instance collects real-time data from the driver and feeds the data into the control algorithm at each execution of the task it is included in.
- If there is no **__** delimiter in the **GotoTag** parameter, the block is of type **Goto**. A matching **From** block with the same **GotoTag** parameter for which the **Goto** block is visible is searched. In case it is not found, the **REXYGEN Compiler** compiler issues a warning and deletes the **Goto** block. Otherwise an "invisible" connection is created between the corresponding blocks. The **Goto** block is removed also in this case thus it is not contained in the resulting control system configuration.

The other parameter of the **Goto** block defines the visibility of the block within the given **.mdl** file. The **TagVisibility** parameter can be **local**, **global** or **scoped**, whose meaning is explained in the table below. This parameter is ignored if the block is compiled as the **OUTSTD** block.

In the case of **OUTSTD** block, the **GotoTag** parameter includes the symbol of the driver **<DRV>** and the name of the signal **<signal>** of the given driver:

<DRV>__<signal>

E.g. the first digital output of a Modbus I/O device might be referenced by `MBM__D01`. Detailed information about signal naming can be found in the user manual of the corresponding I/O driver.

Since version 2.50.5 it is possible to use placeholders in names of I/O driver signals. This is useful inside subsystems where this placeholder is replaced by the value of subsystem parameter. E.g. the flag `MBM__D0<id>` will refer to digital output 1, 2, 3 etc. depending on the parameter `id` of the subsystem the block is contained in. See the [SubSystem](#) function block for information on defining subsystem parameters.

Input

<code>value</code>	Signal going to I/O driver or From block. In case of connection to an I/O driver, the type of input is determined by the I/O driver from the <code>GotoTag</code> parameter.	<code>Unknown</code>
--------------------	--	----------------------

Parameters

<code>GotoTag</code>	Reference to a From block with the same <code>GotoTag</code> parameter, which should be connected with the Goto block or a reference to output signal of the REXYGEN control system driver, which should send the data from block input to the process.	<code>String</code>
<code>TagVisibility</code>	Visibility (availability) of the block within the .mdl file. Defines conditions under which the two corresponding Goto and From blocks are reciprocally available: <code>local</code> the two blocks must be in the same subsystem <code>global</code> blocks can be anywhere in the given task (.mdl file) <code>scoped</code> the From block must be placed in the same subsystem or in any lower hierarchical level below the GotoTagVisibility block with the same <code>GotoTag</code> parameter	<code>String</code> <code>local</code> <code>global</code> <code>scoped</code>

GotoTagVisibility – Visibility of the signal source

Block Symbol

Licence: STANDARD



Function Description

The **GotoTagVisibility** blocks specify the visibility of the **Goto** blocks with **scoped** visibility. The symbol (tag) defined in the **Goto** block by the **GotoTag** parameter is available for all **From** blocks in the subsystem which contains the appropriate **GotoTagVisibility** block and also in all subsystems below in the hierarchy.

The **GotoTagVisibility** block is required only for **Goto** blocks whose **TagVisibility** parameter is set to **scoped**. There is no need for the **GotoTagVisibility** block for **local** or **global** visibility.

The **GotoTagVisibility** block is used only during project compilation by the **REXY-GEN Compiler** compiler. It is not included in the binary configuration file for real-time execution.

Parameter

GotoTag	Reference to a Goto block with the GotoTag parameter, String whose visibility is defined by the position of this block (GotoTagVisibility)
----------------	---

Import, Outport – Input and output port

Block Symbols

Licence: STANDARD



Function Description

The **Import** and **Outport** blocks are used for connecting signals over individual hierarchical levels. There are two possible ways to use these blocks in the REXYGEN system:

1. To connect inputs and outputs of the subsystem. The blocks create an interface between the symbol of the subsystem and its inner algorithm (sequence of blocks contained in the subsystem). The **Import** or **Outport** blocks are located inside the subsystem, the name of the given port is displayed in the subsystem symbol in the upper hierarchy level.
2. To provide connection between various tasks. The port blocks are located in the highest hierarchy level of the given task (.mdl file) in this case. The connection of **Import** and **Outport** blocks in various tasks is checked and created by the REXYGEN Compiler compiler.

The ordering of the blocks to be connected is based on the **Port** parameter of the given block. The numberings of the input and output ports are independent on each other. The numbering is automatic in REXYGEN Studio and it starts at 1. The numbers of ports must be unique in the given hierarchy level, in case of manual modification of the port number the other ports are re-numbered automatically. Be aware that after re-numbering in an already connected subsystem the inputs (or outputs) in the upper hierarchy level are re-ordered, which results in probably unintended change in signal mapping!

Input

value	Value going to the output pin or Import	Unknown
-------	---	---------

Output

value	Value coming from the input pin or Outport	Unknown
-------	--	---------

Parameters


Port	Ordering of the Import or Outport pins	Long (I32)
------	--	------------

<code>OutDataTypeStr</code>	Data type of item	<code>String</code>
	Inherit: auto	
	double	
	single	
	uint8	
	int16	
	uint16	
	int32	
	uint32	
	boolean	
	float	
	int64	
	string	
	array	

SubSystem – Subsystem block

Block Symbol


Licence: STANDARD



Function Description


The **SubSystem** block is a cornerstone of hierarchical organization of block diagrams in REXYGEN. A subsystem is a container for a group of function blocks and their connections, which then appear as a single block. Nesting of subsystems is allowed, i.e. a subsystem can include additional subsystems.

The runtime core or REXYGEN executes the subsystem as an ordered sequence of blocks. Therefore the subsystem is sometimes referred to as sequence. All blocks from the surroundings of the subsystem are executed strictly before or strictly after the whole subsystem is executed.

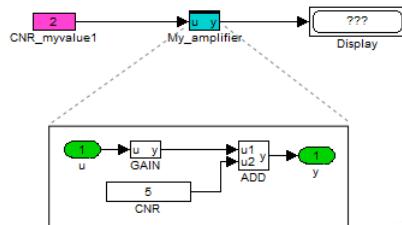

Subsystems are also used for creating user-defined reusable components, which are then placed in user libraries.

A library reference can be distinguished from a standard subsystem by the style of the upper border.

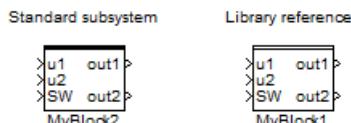

Please refer to [2] for details on using subsystems and creating reusable components in REXYGEN.

Also see examples 0101-02 and 0101-03 demonstrating the use of subsystems. The examples are included in REXYGEN Studio.

Inputs

The ordering and names of the inputs are given by the numbers and names of the **Import** blocks contained within the subsystem. See REXYGEN Studio manual [2] for details.

Outputs

The ordering and names of the outputs are given by the numbers and names of the **Outport** blocks contained within the subsystem. See REXYGEN Studio manual [2] for details.


Parameters

The parameters of the subsystem are defined by the so-called subsystem mask. See REXYGEN Studio manual [2] for details.

INQUAD, INOCT, INHEXD – Multi-input blocks

Block Symbols

Licence: STANDARD

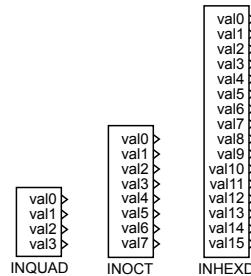

Function Description

The REXYGEN system allows not only reading of a single input signal but also simultaneous reading of multiple signals through just one block (for example all signals from one module or plug-in board). The blocks **INQUAD**, **INOCT** and **INHEXD** are designed for these purposes. They differ only in the maximum number of signals (4, 8 and 16, respectively).

The name of the block instance includes the symbol of the driver <DRV> and the name of the signal <signal> of the given driver:

<DRV>_<signal>

It is created the same way as the **GotoTag** parameter of the **INSTD** and **OUTSTD** blocks. E.g. the digital inputs of a Modbus I/O device might be referenced by **MBM__DI**. Detailed information about signal naming can be found in the user manual of the corresponding I/O driver.

The overhead necessary for data acquisition through input/output drivers is minimized when using these blocks, which is important mainly for very fast control algorithms with sampling period of 1 ms and lower. Moreover, all the inputs are read simultaneously or as successively as possible. Detailed information about using these blocks for particular driver can be found in the user manual for the given driver.

Since version 2.50.5 it is possible to use placeholders in names of I/O driver signals. This is useful inside subsystems where this placeholder is replaced by the value of subsystem parameter. E.g. the name **MBM__module<id>** will refer to module 1, 2, 3 etc. depending on the parameter **id** of the subsystem the block is contained in. See the **SubSystem** function block for information on defining subsystem parameters.


Outputs

val*i* Input signals fed into the control algorithm through Unknown input/output drivers. The type and location of individual signals is described in the user manual for the given driver.

OUTQUAD, OUTOCT, OUTHEXD – Multi-output blocks

Block Symbols

Licence: STANDARD

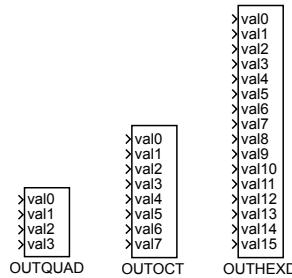

Function Description

The REXYGEN system allows not only writing of a single output signal but also simultaneous writing of multiple signals through just one block (for example all signals of one module or plug-in board). The blocks **OUTQUAD**, **OUTOCT** and **OUTHEXD** are designed for these purposes. They differ only in the maximum number of signals (4, 8 and 16, respectively). These blocks are not included in the **RexLib** function block library for Matlab-Simulink.

The name of the block instance includes the symbol of the driver <DRV> and the name of the signal <signal> of the given driver:

<DRV>_<signal>

It is created the same way as the **GotoTag** parameter of the **INSTD** and **OUTSTD** blocks. E.g. the digital outputs of a Modbus I/O device might be referenced by **MBM_D0**. Detailed information about signal naming can be found in the user manual of the corresponding I/O driver.

The overhead necessary for setting the outputs through input/output drivers is minimized when using these blocks, which is important mainly for very fast control algorithms with sampling period of 1 ms and lower. Moreover, all the inputs are written simultaneously or as successively as possible. Detailed information about using these blocks for particular driver can be found in the user manual for the given driver.

Since version 2.50.5 it is possible to use placeholders in names of I/O driver signals. This is useful inside subsystems where this placeholder is replaced by the value of subsystem parameter. E.g. the name **MBM_module<id>** will refer to signals of module 1, 2, 3 etc. depending on the parameter **id** of the subsystem the block is contained in. See the **SubSystem** function block for information on defining subsystem parameters.


Inputs

- val*i*** Signals to be sent to the process via the input/output driver. Unknown
The type and location of individual signals is described in the user manual for the given driver.

OUTRQUAD, OUTROCT, OUTRHEXD – Multi-output blocks with verification

Block Symbols

Licence: **ADVANCED**

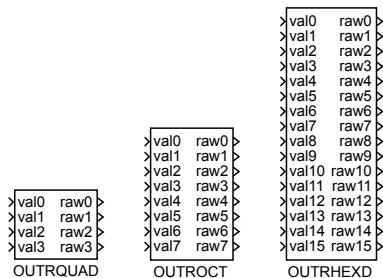

Function Description

The OUTRQUAD, OUTROCT and OUTRHEXD blocks allow simultaneous writing of multiple signals, they are similar to the OUTQUAD, OUTOCT and OUTHEXD blocks. Additionally they provide feedback information about the result of write operation for the given output.

There are two ways to inform the control algorithm about the result of write operation through the `rawi` output:

- Through the value of the output, which can e.g. contain the real bit value in case of exceeding the limits of D/A converter (thus the `raw` notation).
- Through reading the quality flags of the signal. This information can be separated from the signal by the `VIN` and `QFD` blocks.

The `rawi` outputs are not always refreshed right at the moment of block execution, there is some delay given by the properties of the driver, communication line and/or target platform.

Inputs

`vali` Output signals defined by the control algorithm through the Unknown input/output driver. The type and location of individual signals is described in the user manual for the given driver.


Outputs

`rawi` Feedback information about the write operation result. The type Unknown and meaning of individual signals is described in the user manual for the given driver.

OUTRSTD – Output block with verification

Block Symbol

Licence: **ADVANCED**



Function Description

The **OUTRSTD** block is similar to the **OUTSTD** block. Additionally it provides feedback information about the result of write operation for the output signal.

There are two ways to inform the control algorithm about the result of write operation through the **raw** output:

- Through the value of the output, which can e.g. contain the real bit value in case of exceeding the limits of D/A converter (thus the **raw** notation).
- Through reading the quality flags of the signal. This information can be separated from the signal by the **VIN** and **QFD** blocks.

The **raw** outputs is not refreshed right at the moment of block execution, there is some delay given by the properties of the driver, communication line and/or target platform.

Input

value Output signal defined by the control algorithm through the **Unknown** input/output driver. The type and naming of the signal is described in the user manual for the given driver.

Output

raw Feedback information about the write operation result. The type **Unknown** and meaning of the signal is described in the user manual for the given driver.

QFC – Quality flags coding

Block Symbol

Licence: **ADVANCED**



Function Description

The **QFC** block creates the resulting signal **iqf** representing the quality flags by combining three components **iq**, **is** and **il**. The quality flags are part of each input or output signal in the **REXYGEN** system. Further details about quality flags can be found in chapter [1.4](#) of this manual. The **RexLib** function block library for Matlab-Simulink does not use any quality flags.

It is possible to use the **QFC** block together with the **VOUT** block to force arbitrary quality flags for a given signal. Reversed function to the **QFC** block is performed by the **QFD** block.

Inputs

iq	Basic quality type flags, see table 1.2 , page 17	Long (I32)
is	Substatus flags, see [1]	Long (I32)
il	Limits flags, see [1]	Long (I32)

Output

iqf	Bit combination of the iq , is and il input signals	Long (I32)
------------	--	------------

QFD – Quality flags decoding

Block Symbol

Licence: **ADVANCED**



Function Description

The QFD decomposes quality flags to individual components `iq`, `is` and `il`. The quality flags are part of each input or output signal in the REXYGEN system. Further details about quality flags can be found in chapter 1.4 of this manual. The RexLib function block library for Matlab-Simulink does not use any quality flags.

It is possible to use the QFD block together with the `VIN` block for detailed processing of quality flags of a given signal. Reversed function to the QFD block is performed by the `QFC` block.

Input

<code>iqf</code>	Quality flags to be decomposed to <code>iq</code> , <code>is</code> and <code>il</code> components	Long (I32)
------------------	--	------------

Outputs

<code>iq</code>	Basic quality type flags, see table 1.2, page 17	Long (I32)
<code>is</code>	Substatus flags, see [1]	Long (I32)
<code>il</code>	Limits flags, see [1]	Long (I32)

VIN – Validation of the input signal

Block Symbol

Licence: **ADVANCED**



Function Description

The VIN block can be used for verification of the input signal quality in the REXYGEN system. Further details about quality flags can be found in chapter [1.4](#) of this manual.

The block continuously separates the quality flags from the input **u** and feeds them to the **iqf** output. Based on these quality flags and the **GU** parameter (Good if Uncertain), the input signals are processed in the following manner:

- For **GU = off** the output **QG** is set to **on** if the quality is **GOOD**. It is set to **QG = off** in case of **BAD** or **UNCERTAIN** quality.
- For **GU = on** the output **QG** is set to **on** if the quality is **GOOD** or **UNCERTAIN**. It is set to **QG = off** only in case of **BAD** quality.

The output **yg** is equal to the **u** input if **QG = on**. Otherwise it is set to **yg = sv** (substitution variable).

Inputs

u	Input signal whose quality is assessed. The type of the signal is Unknown determined upon the connected signal.
sv	Substitute value for an error case

Outputs

yg	Validated output signal (yg = u for QG = on or yg = sv for QG = off)	Unknown
QG	Indicator of input signal acceptability	Bool
iqf	Complete quality flag separated from the u input signal	Long (I32)

Parameter

GU	Acceptability of UNCERTAIN quality	Bool
	off ... Uncertain quality unacceptable	

VOUT – Validation of the output signal

Block Symbol

Licence: **ADVANCED**



Function Description

It is possible to use the **VOUT** block to force arbitrary quality flags for a given signal. The desired quality flags are given by the input signal **iqf**. Further details about quality flags can be found in chapter [1.4](#) of this manual.

Inputs

u	Input signal whose quality flags are being replaced. The type of the signal is determined upon the connected signal.	Unknown
iqf	Desired quality flags	Long (I32)

Output

yq	Resulting signal composed from input u and quality flags given by the iqf input	Unknown
-----------	--	---------

Chapter 4

MATH – Math blocks

Contents

ABS_ – Absolute value	67
ADD – Addition of two signals	68
ADDQUAD, ADDOCT, ADDHEXD – Multi-input addition	69
CNB – Boolean (logic) constant	70
CNE – Enumeration constant	71
CNI – Integer constant	72
CNR – Real constant	73
DIF_ – Difference	74
DIV – Division of two signals	75
EAS – Extended addition and subtraction	76
EMD – Extended multiplication and division	77
FNX – Evaluation of single-variable function	78
FNXY – Evaluation of two-variables function	80
GAIN – Multiplication by a constant	82
GRADS – Gradient search optimization	83
IADD – Integer addition	85
ISUB – Integer subtraction	87
IMUL – Integer multiplication	88
IDIV – Integer division	90
IMOD – Remainder after integer division	91
LIN – Linear interpolation	92
MUL – Multiplication of two signals	93
POL – Polynomial evaluation	94
REC – Reciprocal value	95
REL – Relational operator	96
RTOI – Real to integer number conversion	97

SQR – Square value	98
SQRT_ – Square root	99
SUB – Subtraction of two signals	100

ABS_ – Absolute value

Block Symbol

Licence: STANDARD



Function Description

The **ABS_** block computes the absolute value of the analog input signal **u**. The output **y** is equal to the absolute value of the input and the **sgn** output denotes the sign of the input signal.

$$\text{sgn} = \begin{cases} -1, & \text{for } u < 0, \\ 0, & \text{for } u = 0, \\ 1, & \text{for } u > 0. \end{cases}$$

Input

u	Analog input of the block	Double (F64)
----------	---------------------------	---------------------

Outputs

y	Absolute value of the input signal	Double (F64)
sgn	Indication of the input signal sign	Long (I32)

ADD – Addition of two signals

Block Symbol

Licence: STANDARD



Function Description

The ADD blocks sums two analog input signals. The output is given by

$$y = u_1 + u_2.$$

Consider using the [ADDOCT](#) block for addition or subtraction of multiple signals.

Inputs

<code>u1</code>	First analog input of the block	<code>Double (F64)</code>
<code>u2</code>	Second analog input of the block	<code>Double (F64)</code>


Output

<code>y</code>	Sum of the input signals	<code>Double (F64)</code>
----------------	--------------------------	---------------------------

ADDQUAD, ADDOCT, ADDHEXD – Multi-input addition

Block Symbols

Licence: STANDARD

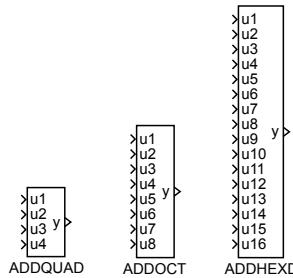

Function Description

The **ADDQUAD**, **ADDOCT** and **ADDHEXD** blocks sum (or subtract) up to 16 input signals. The **n1** parameter defines the inputs which are subtracted instead of adding. For an empty **n1** parameter the block output is given by $y = u_1 + u_2 + u_3 + u_4 + u_5 + u_6 + u_7 + \dots + u_{16}$. For e.g. $n1=2, 5, 7$, the block implements the function $y = u_1 - u_2 + u_3 + u_4 - u_5 + u_6 - u_7 + \dots + u_{16}$.

Note that the **ADD** and **SUB** blocks are available for simple addition and subtraction operations.

Inputs

u1..u16	Analog input signals	Double (F64)
----------------	----------------------	---------------------

Output

y	Resulting value	Double (F64)
----------	-----------------	---------------------

Parameter

n1	List of signals to subtract instead of adding. The format of the list is e.g. 1,3..5,8. Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.	Long (I32)
-----------	--	-------------------

CNB – Boolean (logic) constant

Block Symbol

Licence: STANDARD



Function Description

The CNB block stands for a Boolean (logic) constant.

Output

Y	Logical output of the block	Bool
---	-----------------------------	------


Parameter

YCN	Boolean constant	On	Bool
	off ... Disabled		
	on Enabled		

CNE – Enumeration constant

Block Symbol

Licence: STANDARD



Function Description

The **CNE** block allows selection of a constant from a predefined popup list. The popup list of constants is defined by the **pupstr** string, whose syntax is obvious from the default value shown below. The output value corresponds to the number at the beginning of the selected item. In case the **pupstr** string format is invalid, the output is set to 0.

There is a library called CNEs in Simulink, which contains **CNE** blocks with the most common lists of constants.

Parameters

yenum	Enumeration constant	①: option A String
pupstr	Popup list definition	String
		②: option A ③: option B ④: option C

Output

iy	Integer output of the block	Long (I32)
-----------	-----------------------------	------------

CNI – Integer constant

Block Symbol

Licence: STANDARD



Function Description

The CNI block stands for an integer constant.

Output

iy	Integer output of the block	Long (I32)
----	-----------------------------	------------

Parameter

icn	Integer constant	⊕1 Long (I32)
-----	------------------	---------------

CNR – Real constant

Block Symbol

Licence: STANDARD



Function Description

The CNR block stands for a real constant.

Output

y Analog output of the block Double (F64)

Parameter

ycn Real constant ⊙1.0 Double (F64)

DIF_ – Difference

Block Symbol

Licence: STANDARD



Function Description

The DIF_ block differentiates the input signal u according to the following formula

$$y_k = u_k - u_{k-1},$$

where $u_k = u$, $y_k = y$ and u_{k-1} is the value of input u in the previous cycle (delay T_S , which is the execution period of the block).

Input

u	Analog input of the block	Double (F64)
---	---------------------------	--------------

Output

y	Difference of the input signal	Double (F64)
---	--------------------------------	--------------

Parameters

ISSF	Zero output at start-up	Bool
	off ... In the first cycle the output will be $y = u$.	
	on Zero output in the first cycle, $y = 0$.	

DIV – Division of two signals

Block Symbol

Licence: STANDARD



Function Description

The DIV block divides two analog input signals $y = u1/u2$. In case $u2 = 0$, the output E is set to on and the output y is substituted by y = yerr.

Inputs

u1	First analog input of the block	Double (F64)
u2	Second analog input of the block	Double (F64)

Outputs

y	Quotient of the inputs	Double (F64)
E	Error flag – division by zero	Bool

Parameter

yerr	Substitute value for an error case	⊖1.0 Double (F64)
------	------------------------------------	-------------------

EAS – Extended addition and subtraction

Block Symbol

Licence: STANDARD



Function Description

The **EAS** block sums input analog signals u_1 , u_2 , u_3 and u_4 with corresponding weights a , b , c and d . The output y is then given by

$$y = a * u_1 + b * u_2 + c * u_3 + d * u_4 + y_0.$$

Inputs

u_1	First analog input of the block	Double (F64)
u_2	Second analog input of the block	Double (F64)
u_3	Third analog input of the block	Double (F64)
u_4	Fourth analog input of the block	Double (F64)

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------

Parameters

a	Weighting coefficient of the u_1 input	$\odot 1.0$	Double (F64)
b	Weighting coefficient of the u_2 input	$\odot 1.0$	Double (F64)
c	Weighting coefficient of the u_3 input	$\odot 1.0$	Double (F64)
d	Weighting coefficient of the u_4 input	$\odot 1.0$	Double (F64)
y_0	Additive constant (bias)		Double (F64)

EMD – Extended multiplication and division

Block Symbol

Licence: STANDARD



Function Description

The EMD block multiplies and divides analog input signals u_1 , u_2 , u_3 and u_4 with corresponding weights a , b , c and d . The output y is then given by

$$y = \frac{(a * u_1 + a_0)(b * u_2 + b_0)}{(c * u_3 + c_0)(d * u_4 + d_0)}. \quad (4.1)$$

The output E is set to **on** in the case that the denominator in the equation (4.1) is equal to 0 and the output y is substituted by $y = y_{err}$.

Inputs

u_1	First analog input of the block	Double (F64)
u_2	Second analog input of the block	Double (F64)
u_3	Third analog input of the block	Double (F64)
u_4	Fourth analog input of the block	Double (F64)

Outputs

y	Analog output of the block	Double (F64)
E	Error flag – division by zero	Bool

Parameters

a	Weighting coefficient of the u_1 input	$\odot 1.0$	Double (F64)
a_0	Additive constant for u_1 input		Double (F64)
b	Weighting coefficient of the u_2 input	$\odot 1.0$	Double (F64)
b_0	Additive constant for u_2 input		Double (F64)
c	Weighting coefficient of the u_3 input	$\odot 1.0$	Double (F64)
c_0	Additive constant for u_3 input		Double (F64)
d	Weighting coefficient of the u_4 input	$\odot 1.0$	Double (F64)
d_0	Additive constant for u_4 input		Double (F64)
y_{err}	Substitute value for an error case	$\odot 1.0$	Double (F64)

FNX – Evaluation of single-variable function

Block Symbol

Licence: STANDARD



Function Description

The FNX block evaluates basic math functions of single variable. The table below shows the list of supported functions with corresponding constraints. The **ifn** parameter determines the active function.

List of functions:

ifn: shortcut	function	constraints on u
1: acos	arccosine	$u \in < -1.0, 1.0 >$
2: asin	arcsine	$u \in < -1.0, 1.0 >$
3: atan	arctangent	–
4: ceil	rounding towards the nearest higher integer	–
5: cos	cosine	–
6: cosh	hyperbolic cosine	–
7: exp	exponential function e^u	–
8: exp10	exponential function 10^u	–
9: fabs	absolute value	–
10: floor	rounding towards the nearest lower integer	–
11: log	logarithm	$u > 0$
12: log10	decimal logarithm	$u > 0$
13: random	arbitrary number $z \in < 0, 1 >$ (u independent)	–
14: sin	sine	–
15: sinh	hyperbolic sine	–
16: sqr	square function	–
17: sqrt	square root	$u > 0$
18: srand	changes the seed for the random function to u	$u \in \mathbb{N}$
19: tan	tangent	–
20: tanh	hyperbolic tangent	–

Note: All trigonometric functions process data in radians.

The error output is activated (**E = on**) in the case when the input value **u** falls out of its bounds or an error occurs during evaluation of the selected function (implementation dependent), e.g. square root of negative number. The output is set to substitute value in such case (**y = yerr**).

Input

u Analog input of the block **Double (F64)**

Outputs

y Result of the selected function **Double (F64)**
E Error flag **Bool**

Parameters

ifn Function type (see table above) **⊖1 Long (I32)**
yerr Substitute value for an error case **Double (F64)**

FNXY – Evaluation of two-variables function

Block Symbol

Licence: STANDARD



Function Description

The FNXY block evaluates basic math functions of two variables. The table below shows the list of supported functions with corresponding constraints. The **ifn** parameter determines the active function.

List of functions:

ifn: shortcut	function	constraints on u1 , u2
1: atan2	arctangent u_1/u_2	–
2: fmod	remainder after division u_1/u_2	$u_2 \neq 0.0$
3: pow	exponentiation of the inputs $y = u_1^{u_2}$	–

The **atan2** function result belongs to the interval $(-\pi, \pi)$. The signs of both inputs **u1** a **u2** are used to determine the appropriate quadrant.

The **fmod** function computes the remainder after division u_1/u_2 such that $u_1 = i \cdot u_2 + y$, where i is an integer, the signs of the **y** output and the **u1** input are the same and the following holds for the absolute value of the **y** output: $|y| < |u_2|$.

The error output is activated (**E = on**) in the case when the input value **u2** does not meet the constraints or an error occurs during evaluation of the selected function (implementation dependent), e.g. division by zero. The output is set to substitute value in such case (**y = yerr**).

Inputs

u1	First analog input of the block	Double (F64)
u2	Second analog input of the block	Double (F64)

Outputs

y	Result of the selected function	Double (F64)
E	Error flag	Bool
	off ... No error	
	on An error occurred	

Parameters

ifn	Function type (see the table above)	⊖1 Long (I32)
1 atan2	
2 fmod	
3 pow	
yerr	Substitute value for an error case	Double (F64)

GAIN – Multiplication by a constant

Block Symbol

Licence: STANDARD



Function Description

The GAIN block multiplies the analog input u by a real constant k . The output is then

$$y = ku.$$

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------


Parameter

k	Gain	⊕1.0 Double (F64)
-----	------	-------------------

GRADS – Gradient search optimization

Block Symbol

Licence: **ADVANCED**



Function Description

The **GRADS** block performs one-dimensional optimization of the $f(\mathbf{x}, v)$ function by gradient method, where $\mathbf{x} \in \langle \mathbf{x}_{\min}, \mathbf{x}_{\max} \rangle$ is the optimized variable and v is an arbitrary vector variable. It is assumed that the value of the function $f(\mathbf{x}, v)$ for given \mathbf{x} at time k is enumerated and fed to the **f** input at time $k + n * T_S$, where T_S is the execution period of the **GRADS** block. This means that the individual optimization iterations have a period of $n * T_S$. The length of step of the gradient method is given by

$$\begin{aligned} grad &= (\mathbf{f}_i - \mathbf{f}_{i-1}) * (dx)_{i-1} \\ (dx)_i &= -\text{gamma} * grad, \end{aligned}$$

where i stands for i -th iteration. The step size is restricted to lie within the interval $\langle d_{\min}, d_{\max} \rangle$. The value of the optimized variable for the next iteration is given by

$$x_{i+1} = x_i + (dx)_i$$

Inputs

f	Value of the optimized $f(\cdot)$ for given variable \mathbf{x}	Double (F64)
x0	Optimization starting point	Double (F64)
START	Starting signal (rising edge)	Bool
BRK	Termination signal	Bool

Outputs

x	Current value of the optimized variable	Double (F64)
xopt	Resulting optimal value of the \mathbf{x} variable	Double (F64)
fopt	Resulting optimal value of the function $f(\mathbf{x}, v)$	Double (F64)
BSY	Indicator of running optimization	Bool
iter	Number of current iteration	Long (I32)
E	Error flag	Bool

iE	Error code	Long (I32)
	1 $x \notin [x_{\min}, x_{\max}]$	
	2 $x = x_{\min}$ or $x = x_{\max}$	

Parameters

xmin	Lower limit for the x variable	Double (F64)
xmax	Upper limit for the x variable	$\odot 10.0$ Double (F64)
gamma	Coefficient for determining the step size of the gradient optimization method	$\odot 0.3$ Double (F64)
d0	Initial step size	$\odot 0.05$ Double (F64)
dmin	Minimum step size	$\odot 0.01$ Double (F64)
dmax	Maximum step size	$\odot 1.0$ Double (F64)
n	Iteration period (in sampling periods T_S)	$\odot 100$ Long (I32)
itermax	Maximum number of iterations	$\odot 20$ Long (I32)

IADD – Integer addition

Block Symbol

Licence: STANDARD



Function Description

The IADD block sums two integer input signals $n = i1 + i2$. The range of integer numbers in a computer is always restricted by the variable type. This block uses the `vtype` parameter to specify the type. If the sum fits in the range of the given type, the result is the ordinary sum. In the other cases the result depends on the `SAT` parameter.

The overflow is not checked for `SAT = off`, i.e. the output `E = off` and the output value `n` corresponds with the arithmetics of the processor. E.g. for the `Short` type, which has the range of $-32768 \dots +32767$, we obtain $30000 + 2770 = -32766$.

For `SAT = on` the overflow results in setting the error output to `E = on` and the `n` output to the nearest displayable value. For the above mentioned example we get $30000 + 2770 = 32767$.

Inputs

<code>i1</code>	First integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)
<code>i2</code>	Second integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)

Outputs

<code>n</code>	Integer sum of the input signals	Long (I32)
<code>E</code>	Error flag	Bool
	<code>off</code> ... No error	
	<code>on</code> An error occurred	

Parameters

<code>vtype</code>	Numeric type	$\odot 4$	Long (I32)
-- .. .			
2 .. .	Byte (U8)		
3 .. .	Short (I16)		
4 .. .	Long (I32)		
5 .. .	Word (U16)		
6 .. .	DWord (U32)		
-- .. .			
-- .. .			
-- .. .			
10 .. .	Large (I64)		

SAT	Saturation (overflow) checking off ... Overflow is not checked on Overflow is checked	Bool
-----	--	------

ISUB – Integer subtraction

Block Symbol

Licence: STANDARD



Function Description

The **ISUB** block subtracts two integer input signals $n = i_1 - i_2$. The range of integer numbers in a computer is always restricted by the variable type. This block uses the **vtype** parameter to specify the type. If the difference fits in the range of the given type, the result is the ordinary sum. In the other cases the result depends on the **SAT** parameter.

The overflow is not checked for **SAT = off**, i.e. the output **E = off** and the output value **n** corresponds with the arithmetics of the processor. E.g. for the **Short** type, which has the range of $-32768 \dots +32767$, we obtain $30000 - -2770 = -32766$.

For **SAT = on** the overflow results in setting the error output to **E = on** and the **n** output to the nearest displayable value. For the above mentioned example we get $30000 - -2770 = 32767$.

Inputs

i1	First integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)
i2	Second integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)

Parameters

vtype	Numeric type	$\odot 4$	Long (I32)
2	Byte (range 0 ... 255)		
3	Short (range -32768 ... 32767)		
4	Long (range -2147483648 ... 2147483647)		
5	Word (range 0 ... 65536)		
6	DWord (range 0 ... 4294967295)		
10	Large (range -9223372036854775808...9223372036854775807)		
SAT	Saturation (overflow) checking		Bool
off	Overflow is not checked		
on	Overflow is checked		

Outputs

n	Integer difference between the input signals	Long (I32)
E	Error flag	Bool
off	No error	
on	An error occurred	

IMUL – Integer multiplication

Block Symbol

Licence: STANDARD



Function Description

The **IMUL** block multiplies two integer input signals $n = i1 * i2$. The range of integer numbers in a computer is always restricted by the variable type. This block uses the **vtype** parameter to specify the type. If the multiple fits in the range of the given type, the result is the ordinary multiple. In the other cases the result depends on the **SAT** parameter.

The overflow is not checked for **SAT = off**, i.e. the output **E = off** and the output value **n** corresponds with the arithmetics of the processor. E.g. for the **Short** type, which has the range of $-32768..+32767$, we obtain $2000 * 20 = -25536$.

For **SAT = on** the overflow results in setting the error output to **E = on** and the **n** output to the nearest displayable value. For the above mentioned example we get $2000 * 20 = 32767$.

Inputs

i1	First integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)
i2	Second integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)

Parameters

vtype	Numeric type	$\odot 4$ Long (I32)
	--	
	2 Byte (U8)	
	3 Short (I16)	
	4 Long (I32)	
	5 Word (U16)	
	6 DWord (U32)	
	--	
	--	
	--	
	10 Large (I64)	
SAT	Saturation (overflow) checking	Bool
	off ... Overflow is not checked	
	on Overflow is checked	

Outputs

n	Integer product of the input signals	Long (I32)
E	Error flag	Bool
	off ... No error	
	on An error occurred	

IDIV – Integer division

Block Symbol

Licence: STANDARD



Function Description

The IDIV block performs an integer division of two integer input signals, $n = i1 \div i2$, where \div stands for integer division operator. If the ordinary (non-integer, normal) quotient of the two operands is an integer number, the result of integer division is the same. In other cases the resulting value is obtained by trimming the non-integer quotient's decimals (i.e. rounding towards lower integer number). In case $i2 = 0$, the output E is set to on and the output n is substituted by n = nerr.

Inputs

i1	First integer input of the block	$\downarrow -9.22E+18$	$\uparrow 9.22E+18$	Long (I32)
i2	Second integer input of the block	$\downarrow -9.22E+18$	$\uparrow 9.22E+18$	Long (I32)

Outputs

n	Integer quotient of the inputs	Long (I32)
E	Error flag – division by zero	Bool

Parameters

vtype	Numeric type	$\odot 4$	Long (I32)
	2 Byte		
	3 Short		
	4 Long		
	5 Word		
	6 DWord		
	10 Large		
nerr	Substitute value for an error case	$\odot 1$	Long (I32)

IMOD – Remainder after integer division

Block Symbol

Licence: STANDARD



Function Description

The IMOD block divides two integer input signals, $n = i1 \% i2$, where $\%$ stands for remainder after integer division operator (modulo). If both numbers are positive and the divisor is greater than one, the result is either zero (for commensurable numbers) or a positive integer lower than the divisor. In the case that one of the numbers is negative, the result has the sign of the dividend, e.g. $15\%10 = 5$, $15\%(-10) = 5$, but $(-15)\%10 = -5$. In case $i2 = 0$, the output E is set to **on** and the output n is substituted by $n = nerr$.

Inputs

i1	First integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)
i2	Second integer input of the block	$\downarrow -9.22E+18 \uparrow 9.22E+18$	Long (I32)

Outputs

n	Remainder after integer division	Long (I32)
E	Error flag – division by zero	Bool

Parameters

vtype	Numeric type	$\odot 4$ Long (I32)
2 Byte	
3 Short	
4 Long	
5 Word	
6 DWord	
10 Large	
nerr	Substitute value for an error case	$\odot 1$ Long (I32)

LIN – Linear interpolation


Block Symbol

Licence: STANDARD



Function Description

The LIN block performs linear interpolation. The following figure illustrates the influence of the input u and given interpolation points $[u_1, y_1]$ and $[u_2, y_2]$ on the output y .

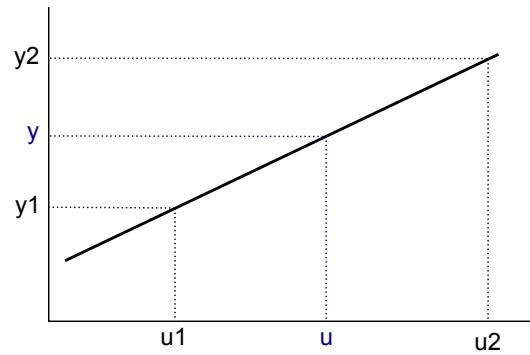

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------

Parameters

u_1	x-coordinate of the 1st interpolation node	Double (F64)
y_1	y-coordinate of the 1st interpolation node	Double (F64)
u_2	x-coordinate of the 2nd interpolation node	Double (F64)
y_2	y-coordinate of the 2nd interpolation node	Double (F64)

MUL – Multiplication of two signals

Block Symbol

Licence: STANDARD



Function Description

The MUL block multiplies two analog input signals $y = u1 \cdot u2$.

Inputs

u1	First analog input of the block	Double (F64)
u2	Second analog input of the block	Double (F64)

Output

y	Product of the input signals	Double (F64)
---	------------------------------	--------------

POL – Polynomial evaluation

Block Symbol

Licence: STANDARD



Function Description

The POL block evaluates the polynomial of the form:

$$y = a_0 + a_1 u + a_2 u^2 + a_3 u^3 + a_4 u^4 + a_5 u^5 + a_6 u^6 + a_7 u^7 + a_8 u^8.$$

The polynomial is internally evaluated by using the Horner scheme to improve the numerical robustness.

Input

u	Analog input of the block	Double (F64)
---	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
---	----------------------------	--------------

Parameters

ai	The i -th coefficient of the polynomial, $i = 0, 1, \dots, 8$	Double (F64)
----	---	--------------

REC – Reciprocal value

Block Symbol

Licence: STANDARD



Function Description

The REC block computes the reciprocal value of the input signal u. The output is then

$$y = \frac{1}{u}.$$

In case $u = 0$, the error indicator is set to $E = \text{on}$ and the output is set to the substitutional value $y = y_{\text{err}}$.

Input

u	Analog input of the block	Double (F64)
---	---------------------------	--------------

Outputs

y	Analog output of the block	Double (F64)
E	Error flag – division by zero	Bool

Parameter

yerr	Substitute value for an error case	◎1.0 Double (F64)
------	------------------------------------	-------------------

REL – Relational operator

Block Symbol

Licence: STANDARD



Function Description

The **REL** block evaluates the binary relation $u1 \circ u2$ between the values of the input signals and sets the output Y according to the result of the relation " \circ ". The output is set to $Y = \text{on}$ when relation holds, otherwise it is zero (relation does not hold). The binary operation codes are listed below.

Inputs

u1	First analog input of the block	Double (F64)
u2	Second analog input of the block	Double (F64)

Output

Y	Logical output indicating whether the relation holds	Bool
----------	--	-------------

Parameter

i_{rel}	Relation type	⊕1 Long (I32)
1 equality (==)	
2 inequality (!=)	
3 less than (<)	
4 greater than (>)	
5 less than or equal to (<=)	
6 greater than or equal to (>=)	

RTOI – Real to integer number conversion

Block Symbol

Licence: STANDARD



Function Description

The **RTOI** block converts the real number **r** to a signed integer number **i**. The resulting rounded value is defined by:

$$i := \begin{cases} -2147483648 & \text{for } r \leq -2147483648.0 \\ \text{round}(r) & \text{for } -2147483648.0 < r \leq 2147483647.0, \\ 2147483647 & \text{for } r > 2147483647.0 \end{cases}$$

where $\text{round}(r)$ stands for rounding to the nearest integer number. The number of the form $n+0.5$ (n is integer) is rounded to the integer number with the higher absolute value, i.e. $\text{round}(1.5) = 2$, $\text{round}(-2.5) = -3$. Note that the numbers -2147483648 and 2147483647 correspond with the lowest and the highest signed number representable in 32-bit format respectively (0x7FFFFFFF and 0x80000000 in hexadecimal form in the C language).

Input

r	Analog input of the block	Double (F64)
----------	---------------------------	---------------------

Output

i	Rounded and converted input signal	Long (I32)
----------	------------------------------------	-------------------

SQR – Square value

Block Symbol

Licence: STANDARD

**Function Description**

The SQR block raises the input u to the power of 2. The output is then

$$y = u^2.$$

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Output

y	Square of the input signal	Double (F64)
-----	----------------------------	--------------

SQRT_ – Square root

Block Symbol

Licence: STANDARD



Function Description

The **SQRT_** block computes the square root of the input **u**. The output is then

$$y = \sqrt{u}.$$

In case $u < 0$, the error indicator is activated (**E** = on) and the output **y** is set to the substitute value $y = y_{err}$.

Input

u	Analog input of the block	Double (F64)
----------	---------------------------	---------------------

Outputs

y	Square root of the input signal	Double (F64)
E	Error flag	Bool
	off ... No error	
	on Square root of negative number	

Parameter

yerr	Substitute value for an error case	Double (F64)
-------------	------------------------------------	---------------------

SUB – Subtraction of two signals

Block Symbol

Licence: STANDARD



Function Description

The SUB block subtracts two input signals. The output is given by

$$y = u_1 - u_2.$$

Consider using the ADDOCT block for addition or subtraction of multiple signals.

Inputs

<code>u1</code>	Analog input of the block	<code>Double (F64)</code>
<code>u2</code>	Analog input of the block	<code>Double (F64)</code>

Output

<code>y</code>	Difference between the two input signals	<code>Double (F64)</code>
----------------	--	---------------------------

Chapter 5

ANALOG – Analog signal processing

Contents

ABSROT – Processing data from absolute position sensor	103
ASW – Switch with automatic selection of input	105
AVG – Moving average filter	107
AVS – Motion control unit	108
BPF – Band-pass filter	109
CMP – Comparator with hysteresis	110
CNDR – Nonlinear conditioner	111
DEL – Delay with initialization	113
DELM – Time delay	114
DER – Derivation, filtering and prediction from the last n+1 samples	115
EVAR – Moving mean value and standard deviation	117
INTE – Controlled integrator	118
KDER – Derivation and filtering of the input signal	120
LPF – Low-pass filter	122
MINMAX – Running minimum and maximum	123
NSCL – Nonlinear scaling factor	124
RDFT – Running discrete Fourier transform	125
RLIM – Rate limiter	127
S10F2 – One of two analog signals selector	128
SAI – Safety analog input	131
SEL – Selector switch for analog signals	134
SELQUAD, SELOCT, SELHEXD – Selector switch for analog signals . . .	135
SHIFTOCT – Data shift register	137
SHLD – Sample and hold	139

SINT – Simple integrator	140
SPIKE – Spike filter	141
SSW – Simple switch	143
SWR – Selector with ramp	144
VDEL – Variable time delay	145
ZV4IS – Zero vibration input shaper	146

ABSROT – Processing data from absolute position sensor

Block Symbol

Licence: **ADVANCED**



Function Description

The **ABSROT** function block is intended for processing the data from absolute position sensor on rotary equipment, e.g. a shaft. The absolute sensor has a typical range of 5° to 355° (or -175° to $+175^\circ$) but in some cases it is necessary to control the rotation over a range of more than one revolution. The function block assumes a continuous position signal, therefore the transition from 355° to 5° in the input signal means that one revolution has been completed and the angle is in fact 365° .

In the case of long-term unidirectional operation the precision of the estimated position y deteriorates due to the precision of the double data type. For that case the **R1** input is available to reset the position y to the base range of the sensor. If the **RESR** flag is set to **on**, the **irev** revolutions counter is also reset by the **R1** input. In all cases it is necessary to reset all accompanying signals (e.g. the **sp** input of the corresponding controller).

The **MPI** output indicates that the absolute sensor reading is near to the middle of the range, which may be the appropriate time to reset the block. On the other hand, the **OLI** output indicates that the sensor reached the so-called dead-angle where it cannot report valid data.

Inputs

u	Signal from the absolute position sensor	Double (F64)
R1	Block reset	Bool

Outputs

y	Position output	Double (F64)
irev	Number of finished revolutions	Long (I32)
MPI	Mid-point indicator	Bool
OLI	Off-limits indicator	Bool

Parameters


lolim	Lower limit of the sensor reading	$\odot -3.14159265$	Double (F64)
hilim	Upper limit of the sensor reading	$\odot 3.14159265$	Double (F64)
tol	Tolerance for the mid-point indicator	$\odot 0.5$	Double (F64)

hys	Hysteresis for the mid-point indicator	Double (F64)
RESR	Flag for resetting the revolutions counter	Bool
	off ... Reset only the estimated position <i>y</i>	
	on Reset also the <i>irev</i> revolutions counter	

ASW – Switch with automatic selection of input

Block Symbol

Licence: **ADVANCED**



Function Description

The **ASW** block copies one of the inputs u_1, \dots, u_4 or one of the parameters p_1, \dots, p_4 to the output y . The appropriate input signal is copied to the output as long as the input signal i_{SW} belongs to the set $\{1, 2, 3, 4\}$ and the parameters are copied when i_{SW} belongs to the set $\{-1, -2, -3, -4\}$ (i.e. $y = p_1$ for $i_{SW} = -1$, $y = u_3$ for $i_{SW} = 3$ etc.). If the i_{SW} input signal differs from any of these values (i.e. $i_{SW} = 0$ or $i_{SW} < -4$ or $i_{SW} > 4$), the output is set to the value of input or parameter which has changed the most recently. The signal or parameter is considered changed when it differs by more than **delta** from its value at the moment of its last change (i.e. the changes are measured integrally, not as a difference from the last sample). The following priority order is used when changes occur simultaneously in more than one signal: $p_4, p_3, p_2, p_1, u_4, u_3, u_2, u_1$. The identifier of input signal or parameter which is copied to the output y is always available at the o_{SW} output.

The **ASW** block has one special feature. The updated value of y is copied to all the parameters p_1, \dots, p_4 . This results in all external tools reading the same value y . This is particularly useful in higher-level systems which use the set&follow method (e.g. a slider in Iconics Genesis). This feature is not implemented in Simulink as there are no ways to read the values of inputs by external programs.

ATTENTION! One of the inputs u_1, \dots, u_4 can be delayed by one step when the block is contained in a loop. This might result in an illusion, that the priority is broken (the o_{SW} output then shows that the most recently changed signal is the delayed one). In such a situation the **LPBRK** block(s) must be used in appropriate positions.

Inputs

$u_1 \dots u_4$	Analog input signals to be selected from	Double (F64)
i_{SW}	Active signal or parameter selector	Long (I32)

Outputs

y	The selected analog signal or parameter	Double (F64)
o_{SW}	Identifier of the selected signal or parameter	Long (I32)

Parameters

delta	Threshold for detecting a change	⊕1e-06	Double (F64)
p1..p4	Parameters to be selected from		Double (F64)

AVG – Moving average filter

Block Symbol

Licence: STANDARD



Function Description

The AVG block computes a moving average from the last n samples according to the formula

$$y_k = \frac{1}{n}(u_k + u_{k-1} + \dots + u_{k-n+1}).$$

There is a limitation $n < N$, where N depends on the implementation.

If the last n samples are not yet known, the average is computed from the samples available.

Input

u	Input signal to be filtered	Double (F64)
---	-----------------------------	--------------

Output

y	Filtered output signal	Double (F64)
---	------------------------	--------------

Parameter

n	Number of samples to compute the average from	Long (I32) ↓1 ↑10000000 ⊖10
nmax	Limit for parameter n (used for internal memory allocation)	Long (I32) ↓10 ↑10000000 ⊖100

AVS – Motion control unit

Block Symbol

Licence: **ADVANCED**



Function Description

The AVS block generates time-optimal trajectory from initial steady position 0 to a final steady position sm while respecting the constraints on the maximal acceleration am , maximal deceleration dm and maximal velocity vm . When rising edge ($off \rightarrow on$) occurs at the **SET** input, the block is initialized for current values of the inputs am , dm , vm and sm . The **RDY** output is set to **off** before the first initialization and during the initialization phase, otherwise it is set to 1. When rising edge ($off \rightarrow on$) occurs at the **START** input, the block generates the trajectory at the outputs **a**, **v**, **s** and **tt**, where the signals correspond to acceleration, velocity, position and time respectively. The **BSY** output is set to **on** while the trajectory is being generated, otherwise it is **off**.

Inputs

START	Starting signal (rising edge)	Bool
SET	Initialize/compute the trajectory for the current inputs	Bool
am	Maximal allowed acceleration [m/s^2]	Double (F64)
dm	Maximal allowed deceleration [m/s^2]	Double (F64)
vm	Maximum allowed velocity [m/s]	Double (F64)
sm	Desired final position [m] (initial position is 0)	Double (F64)

Outputs

a	Acceleration [m/s^2]	Double (F64)
v	Velocity [m/s]	Double (F64)
s	Position [m]	Double (F64)
tt	Time [s]	Double (F64)
RDY	Flag indicating that the block is ready to generate the trajectory	Bool
BSY	Flag indicating that the trajectory is being generated	Bool

BPF – Band-pass filter

Block Symbol

Licence: STANDARD



Function Description

The BPF implements a second order filter in the form

$$F_s = \frac{2\xi as}{a^2 s^2 + 2\xi as + 1},$$

where a and ξ are the block parameters **fm** and **xi** respectively. The **fm** parameter defines the middle of the frequency transmission band and **xi** is the relative damping coefficient.

If **ISSF** = **on**, then the state of the filter is set to the steady value at the block initialization according to the input signal **u**.

Input

u	Input signal to be filtered	Double (F64)
----------	-----------------------------	--------------

Output

y	Filtered output signal	Double (F64)
----------	------------------------	--------------

Parameters

fm	Peak frequency, middle of the frequency transmission band [Hz]	Double (F64)
		⊕1.0
xi	Relative damping coefficient (recommended value 0.5 to 1)	Double (F64)
		⊕0.707
ISSF	Steady state at start-up flag	Bool
	off ... Zero initial state	
	on Initial steady state	

CMP – Comparator with hysteresis

Block Symbol

Licence: STANDARD



Function Description

The CMP block compares the inputs u_1 and u_2 with the hysteresis h as follows:

$$\begin{aligned} Y_{-1} &= 0, \\ Y_k &= \text{hyst}(e_k), \quad k = 0, 1, 2, \dots \end{aligned}$$

where

$$e_k = u1_k - u2_k$$

and

$$\text{hyst}(e_k) = \begin{cases} 0 & \text{for } e_k \leq -h \\ Y_{k-1} & \text{for } e_k \in (-h, h) \\ 1 & \text{for } e_k \geq h \quad (e_k > h \text{ for } h = 0) \end{cases}$$

The indexed variables refer to the values of the corresponding signal in the cycle defined by the index, i.e. Y_{k-1} denotes the value of output in the previous cycle/step. The value Y_{-1} is used only once when the block is initialized ($k = 0$) and the difference of the input signals e_k is within the hysteresis limits.

Inputs

u_1	First analog input of the block	Double (F64)
u_2	Second analog input of the block	Double (F64)

Output

Y	Logical output of the block	Bool
-----	-----------------------------	------

Parameter

hys	Hysteresis	$\odot 0.5$	Double (F64)
-------	------------	-------------	--------------

CNDR – Nonlinear conditioner


Block Symbol

Licence: STANDARD



Function Description

The **CNDR** block can be used for compensation of complex nonlinearities by a piecewise linear transformation which is depicted below.

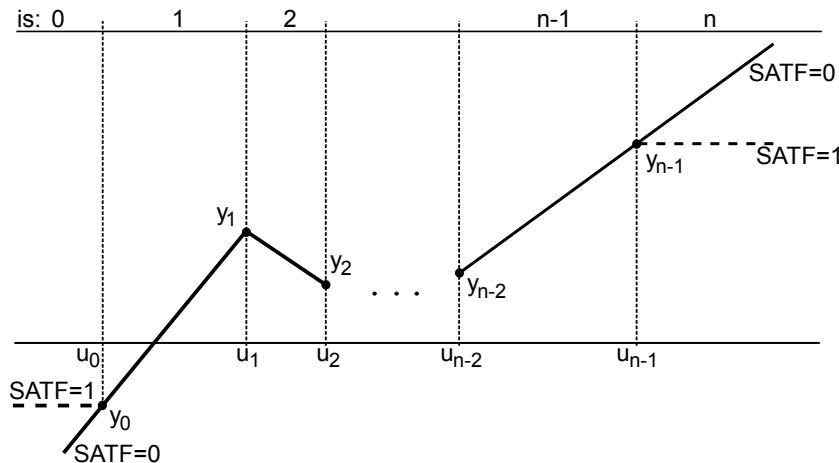

It is important to note that in the case of $u < u_0$ or $u > u_{n-1}$ the output depends on the SATF parameter.

Input

u Analog input of the block **Double (F64)**

Outputs

y Analog output of the block **Double (F64)**
is Active sector of nonlinearity (see the figure above) **Long (I32)**

Parameters

n	Number of (u, y) node pairs	⊕6 Long (I32)
SATF	Saturation flag off ... Signal not limited on Saturation limits active	⊕on Bool

up	Vector of increasing u -coordinates $\odot[0.0 \ 3.9 \ 3.9 \ 9.0 \ 14.5 \ 20.0]$	Double (F64)
yp	Vector of y -coordinates $\odot[0.0 \ 0.0 \ 15.8 \ 38.4 \ 72.0 \ 115.0]$	Double (F64)

DEL – Delay with initialization

Block Symbol

Licence: STANDARD



Function Description

The DEL block implements a delay of the input signal u . The signal is shifted n samples backwards, i.e.

$$y_k = u_{k-n}.$$

If the last n samples are not yet known, the output is set to

$$y_k = y_0,$$

where y_0 is the initialization input signal. This can happen after restarting the control system or after resetting the block (R1: off → on → off) and it is indicated by the output RDY = off.

Inputs

u	Analog input of the block	Double (F64)
R1	Block reset	Bool
y_0	Initial output value	Double (F64)

Outputs

y	Delayed input signal	Double (F64)
RDY	Ready flag indicating that the buffer is filled with the input signal samples	Bool

Parameter

n	Delay (number of samples). The resulting time delay is $n \cdot T_S$, where T_S is the block execution period.	Long (I32) ↓0 ↑10000000 ⊖10
n_{max}	Limit for parameter n (used for internal memory allocation)	Long (I32) ↓10 ↑10000000 ⊖100

DELM – Time delay

Block Symbol

Licence: STANDARD



Function Description

The DELM block implements a time delay of the input signal. The length of the delay is given by rounding the `del` parameter to the nearest integer multiple of the block execution period. The output signal is $y = 0$ for the first `del` seconds after initialization.

Input

<code>u</code>	Analog input of the block	Double (F64)
----------------	---------------------------	--------------

Output

<code>y</code>	Delayed input signal	Double (F64)
----------------	----------------------	--------------

Parameter

<code>del</code>	Time delay [s]	$\odot 1.0$	Double (F64)
<code>nmax</code>	Size of delay buffer <code>del</code> (number of samples). Used for internal memory allocation.	$\downarrow 10 \uparrow 10000000 \odot 100$	Long (I32)

DER – Derivation, filtering and prediction from the last $n+1$ samples

Block Symbol

Licence: STANDARD



Function Description

The DER block interpolates the last $n + 1$ samples ($n \leq N - 1$, N is implementation dependent) of the input signal u by a line $y = at + b$ using the least squares method. The starting point of the time axis is set to the current sampling instant.

In case of **RUN = on** the outputs y and z are computed from the obtained parameters a and b of the linear interpolation as follows:

$$\begin{aligned} \text{Derivation: } & y = a \\ \text{Filtering: } & z = b, \text{ for } t_p = 0 \\ \text{Prediction: } & z = at_p + b, \text{ for } t_p > 0 \\ \text{Retrodiction: } & z = at_p + b, \text{ for } t_p < 0 \end{aligned}$$

In case of **RUN = off** or $n + 1$ samples of the input signal are not yet available (**RDY = off**), the outputs are set to $y = 0$, $z = u$.

Inputs

u	Analog output of the block	Double (F64)
RUN	Enable execution off ... tracking ($z = u$) on filtering (y – estimate of the derivative, z – estimate of u at time t_p)	Bool
tp	Time instant for prediction/filtering ($tp = 0$ corresponds with the current sampling instant)	Double (F64)

Outputs

y	Estimate of input signal derivative	Double (F64)
z	Predicted/filtered input signal	Double (F64)
RDY	Ready flag (all $n + 1$ samples are available)	Bool

Parameters

n	Number of samples for interpolation ($n + 1$ samples are used); $1 \leq n \leq nmax$	Long (I32) $\downarrow 1 \uparrow 10000000 \odot 10$
-----	--	---

nmax Limit for parameter n (used for internal memory allocation) Long (I32)
↓1↑10000000 ⊙10

EVAR – Moving mean value and standard deviation

Block Symbol

Licence: STANDARD



Function Description

The EVAR block estimates the mean value **mu** (μ) and standard deviation **si** (σ) from the last **n** samples of the input signal **u** according to the formulas

$$\begin{aligned}\mu_k &= \frac{1}{n} \sum_{i=0}^{n-1} u_{k-i} \\ \sigma_k &= \sqrt{\frac{1}{n} \sum_{i=0}^{n-1} u_{k-i}^2 - \mu_k^2}\end{aligned}$$

where k stands for the current sampling instant.

Input

u	Analog input of the block	Double (F64)
----------	---------------------------	--------------

Outputs

mu	Mean value of the input signal	Double (F64)
si	Standard deviation of the input signal	Double (F64)

Parameter

n	Number of samples to estimate the statistical properties from ↓2 ↑10000000 ⊖100	Long (I32)
nmax	Limit value of parameter n (used for internal memory allocation) ↓10 ↑10000000 ⊖200	Long (I32)

INTE – Controlled integrator

Block Symbol

Licence: STANDARD



Function Description

The INTE block implements a controlled integrator with variable integral time constant ti and two indicators of the output signal level (y_{min} a y_{max}). If $RUN = \text{on}$ and $R1 = \text{off}$ then

$$y(t) = \frac{1}{T_i} \int_0^t u(\tau) d\tau + C,$$

where $C = y0$. If $RUN = \text{off}$ and $R1 = \text{off}$ then the output y is frozen to the last value before the falling edge at the RUN input signal. If $R1 = \text{on}$ then the output y is set to the initial value $y0$. The integration uses the trapezoidal method as follows

$$y_k = y_{k-1} + \frac{T_S}{2T_i} (u_k + u_{k-1}),$$

where T_S is the block execution period.

Consider using the SINT block, whose simpler structure and functionality might be sufficient for elementary tasks.

Inputs

u	Analog input of the block	Double (F64)
RUN	Enable execution off ... Integration stopped ... Integration running	Bool
R1	Block reset, initialization of the integrator output to $y0$	Bool
$y0$	Initial output value	Double (F64)
ti	Integral time constant	Double (F64)

Outputs

y	Integrator output	Double (F64)
Q	Running integration indicator	Bool
LY	Lower level indicator ($y < y_{min}$)	Bool
HY	Upper level indicator ($y > y_{max}$)	Bool


Parameters

<code>ymin</code>	Lower level definition	<code>⊖1.0 Double (F64)</code>
<code>ymax</code>	Upper level definition	<code>⊕1.0 Double (F64)</code>

KDER – Derivation and filtering of the input signal

Block Symbol

Licence: **ADVANCED**



Function Description

The KDER block is a Kalman-type filter of the `norder`-th order aimed at estimation of derivatives of locally polynomial signals corrupted by noise. The order of derivatives ranges from 0 to `norder` – 1. The block can be used for derivation of almost arbitrary input signal $u = u_0(t) + v(t)$, assuming that the frequency spectrums of the signal and noise differ.

The block is configured by only two parameters `pbeta` and `norder`. The `pbeta` parameter depends on the sampling period T_S , frequency properties of the input signal u and also the noise to signal ratio. An approximate formula $\text{pbeta} \approx T_S \omega_0$ can be used. The frequency spectrum of the input signal u should be located deep down below the cutoff frequency ω_0 . But at the same time, the frequency spectrum of the noise should be as far away from the cutoff frequency ω_0 as possible. The cutoff frequency ω_0 and thus also the `pbeta` parameter must be lowered for strengthening the noise rejection.

The other parameter `norder` must be chosen with respect to the order of the estimated derivations. In most cases the 2nd or 3rd order filter is sufficient. Higher orders of the filter produce better derivation estimates for non-polynomial signals at the cost of slower tracking and higher computational cost.

Input

<code>u</code>	Input signal to be filtered	Double (F64)
----------------	-----------------------------	--------------

Outputs

<code>y</code>	Filtered input signal	Double (F64)
<code>dy</code>	Estimated 1st order derivative	Double (F64)
<code>d2y</code>	Estimated 2nd order derivative	Double (F64)
<code>d3y</code>	Estimated 3rd order derivative	Double (F64)
<code>d4y</code>	Estimated 4th order derivative	Double (F64)
<code>d5y</code>	Estimated 5th order derivative	Double (F64)

Parameters

<code>norder</code>	Order of the derivative filter	$\downarrow 2 \uparrow 10 \odot 3$ Long (I32)
---------------------	--------------------------------	---

`pbeta` Bandwidth of the derivative filter $\downarrow 0.0 \odot 0.1$ Double (F64)

LPF – Low-pass filter

Block Symbol

Licence: STANDARD



Function Description

The LPF block implements a second order filter in the form

$$F_s = \frac{1}{a^2 s^2 + 2\xi a s + 1},$$

where

$$a = \frac{\sqrt{\sqrt{2}\sqrt{2\xi^4 - 2\xi^2 + 1} - 2\xi^2 + 1}}{2\pi f_b}$$

and **fb** and $\xi = \text{xi}$ are the block parameters. The **fb** parameter defines the filter bandwidth and **xi** is the relative damping coefficient. The recommended value is **xi** = 0.71 for the Butterworth filter and **xi** = 0.87 for the Bessel filter.

If **ISSF** = **on**, then the state of the filter is set to the steady value at the block initialization according to the input signal **u**.

Input

u	Input signal to be filtered	Double (F64)
----------	-----------------------------	--------------

Output

y	Filtered output signal	Double (F64)
----------	------------------------	--------------

Parameters

fb	Filter bandwidth [Hz]; the frequencies in the range $\langle 0, \text{fb} \rangle$ pass through the filter, the attenuation at the frequency fb is 3 dB and approximately 40 dB at $10 \cdot \text{fb}$; it must hold $f_b < \frac{1}{10T_S}$ for proper function of the filter, where T_S is the block execution period	Double (F64) ⊕1.0
xi	Relative damping coefficient (recommended value 0.5 to 1)	Double (F64) ⊕0.707
ISSF	Steady state at start-up off ... Zero initial state on Initial steady state	Bool

MINMAX – Running minimum and maximum

Block Symbol

Licence: STANDARD



Function Description

The MINMAX function block evaluates minimum and maximum from the last **n** samples of the **u** input signal. The output **RDY = off** indicates that the buffer contains less than **n** samples. In such a case the minimum and maximum are found among the available samples.

Inputs

u	Analog input of the block	Double (F64)
R1	Block reset	Bool

Outputs

ymin	Minimal value found	Double (F64)
ymax	Maximal value found	Double (F64)
RDY	Ready flag (buffer filled)	Bool

Parameters

n	Number of samples for analysis (buffer length) ↓1 ↑10000000 ⊖100	Long (I32)
nmax	Limit value of parameter n (used for internal memory allocation) ↓10 ↑10000000 ⊖200	Long (I32)

NSCL – Nonlinear scaling factor

Block Symbol

Licence: STANDARD




Function Description

The NSCL block compensates common nonlinearities of the real world (e.g. the servo valve nonlinearity) by using the formula

$$y = \text{gain} \frac{u}{ze + (1 - ze) \cdot u},$$

where **gain** and **ze** are the parameters of the block. The choice of **ze** within the interval $(0, 1)$ leads to concave transformation, while $ze > 1$ gives a convex transformation.

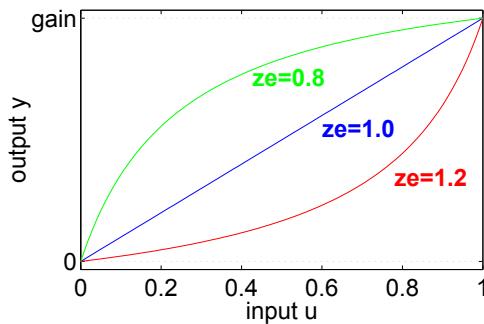

Input

u	Analog input of the block	Double (F64)
----------	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
----------	----------------------------	--------------


Parameters

gain	Signal gain	⊕1.0 Double (F64)
ze	Shaping parameter	⊕1.0 Double (F64)

RDFT – Running discrete Fourier transform

Block Symbol

Licence: **ADVANCED**



Function Description

The RDFT function block analyzes the analog input signal using the discrete Fourier transform with the fundamental frequency **freq** and optional higher harmonic frequencies. The computations are performed over the last **m** samples of the input signal **u**, where $m = nper/freq/T_S$, i.e. from the time-window of the length equivalent to **nper** periods of the fundamental frequency.

If **nharm** > 0 the number of monitored higher harmonic frequencies is given solely by this parameter. On the contrary, for **nharm** = 0 the monitored frequencies are given by the user-defined vector parameter **freq2**.

For each frequency the amplitude (**vAmp** output), phase-shift (**vPhi** output), real/cosine part (**vRe** output) and imaginary/sine part (**vIm** output). The output signals have the vector form, therefore the computed values for all the frequencies are contained within. Use the **VTOR** function block to disassemble the vector signals.

Inputs

u	Analog input of the block	Double (F64)
HLD	Hold	Bool

Outputs

amp	Amplitude of the fundamental frequency	Double (F64)
thd	Total harmonic distortion (only for nharm ≥ 1)	Double (F64)
vAmp	Vector of amplitudes at given frequencies	Reference
vPhi	Vector of phase-shifts at given frequencies	Reference
vRe	Vector of real parts at given frequencies	Reference
vIm	Vector of imaginary parts at given frequencies	Reference
E	Error flag	Bool
iE	Error code	Error
	i REXYGEN general error	

Parameters

freq	Fundamental frequency	$\downarrow 1e-09 \uparrow 1e+09 \odot 1.0$	Double (F64)
nper	Number of periods to calculate upon	$\downarrow 1 \uparrow 10000 \odot 10$	Long (I32)
nharm	Number of monitored harmonic frequencies	$\downarrow 0 \uparrow 16 \odot 3$	Long (I32)
ifrunit	Frequency units	$\downarrow 1 \uparrow 2 \odot 1$	Long (I32)
	1 Hz		
	2 rad/s		
iphunit	Phase shift units	$\downarrow 0 \uparrow 2 \odot 1$	Long (I32)
	1 degrees		
	2 radians		
nmax	Allocated size of array	$\downarrow 10 \uparrow 10000000 \odot 8192$	Long (I32)
freq2	Vector of user-defined monitored frequencies	$\odot [2.0 \ 3.0 \ 4.0]$	Double (F64)

RLIM – Rate limiter

Block Symbol

Licence: STANDARD



Function Description

The **RLIM** block copies the input signal **u** to the output **y**, but the maximum allowed rate of change is limited. The limits are given by the time constants **tp** and **tn**:

$$\begin{aligned} \text{the steepest rise per second: } & 1/\text{tp} \\ \text{the steepest descent per second: } & -1/\text{tn} \end{aligned}$$

Input

u	Input signal to be filtered	Double (F64)
----------	-----------------------------	--------------

Output

y	Filtered output signal	Double (F64)
----------	------------------------	--------------

Parameters

tp	Time constant defining the maximum allowed rise	⊖2.0	Double (F64)
tn	Time constant defining the maximum allowed descent (note that $\text{tn} > 0$)	⊖2.0	Double (F64)

S10F2 – One of two analog signals selector

Block Symbol

Licence: ADVANCED



Function Description

The S10F2 block assesses the validity of two input signals u_1 and u_2 separately. The validation method is equal to the method used in the [SAI](#) block. If the signal u_1 (or u_2) is marked invalid, the output E_1 (or E_2) is set to **on** and the error code is sent to the iE_1 (or iE_2) output. The S10F2 block also evaluates the difference between the two input signals. The internal flag D is set to **on** if the differences $|u_1 - u_2|$ in the last **nd** samples exceed the given limit, which is given by the following inequation

$$|u_1 - u_2| > pdev \frac{vmax - vmin}{100},$$

where $vmin$ and $vmax$ are the minimal and maximal limits of the inputs u_1 and u_2 and $pdev$ is the allowed percentage difference with respect to the overall range of the input signals. The value of the output y depends on the validity of the input signals (flags E_1 and E_2) and the internal difference flag D as follows:

- (i) **If $E_1 = off$ and $E_2 = off$ and $D = off$** , then the output y depends on the **mode** parameter:

$$y = \begin{cases} \frac{u_1+u_2}{2}, & \text{for mode = 1,} \\ \min(u_1, u_2), & \text{for mode = 2,} \\ \max(u_1, u_2), & \text{for mode = 3,} \end{cases}$$

and the output E is set to **off** unless set to **on** earlier.

- (ii) **If $E_1 = off$ and $E_2 = off$ and $D = on$** , then $y = sv$ and $E = on$.
- (iii) **If $E_1 = on$ and $E_2 = off$ ($E_1 = off$ and $E_2 = on$)**, then $y = u_2$ ($y = u_1$) and the output E is set to **off** unless set to **on** earlier.
- (iv) **If $E_1 = on$ and $E_2 = on$** , then $y = sv$ and $E = on$.

The input R resets the inner error flags F1–F4 (see the [SAI](#) block) and the D flag. For the input R set permanently to **on**, the invalidity indicator E_1 (E_2) is set to **on** for only one cycle period whenever some invalidity condition is fulfilled. On the other hand, for $R = 0$, the output E_1 (E_2) is set to **on** and remains true until the reset ($R: off \rightarrow on$). A

similar rule holds for the **E** output. For the input **R** set permanently to **on**, the **E** output is set to **on** for only one cycle period whenever a rising edge occurs in the internal **D** flag (**D = off** \rightarrow **on**). On the other hand, for **R = 0**, the output **E** is set to **on** and remains true until the reset (rising edge **R**: **off** \rightarrow **on**). The output **W** is set to **on** only in the (iii) or (iv) cases, i.e. at least one input signal is invalid.

Inputs

u1	First analog input of the block	Double (F64)
u2	Second analog input of the block	Double (F64)
sv	Substitute value for an error case, i.e. E = on	Double (F64)
HF1	Hardware error flag for signal u1	Bool
	off ... The input module of the signal works normally	
	on Hardware error of the input module occurred	
HF2	Hardware error flag for signal u2	Bool
	off ... The input module of the signal works normally	
	on Hardware error of the input module occurred	
R	Reset inner error flags of the input signals u1 and u2	Bool

Outputs

y	Analog output of the block	Double (F64)
E	Output signal invalidity indicator	Bool
	off ... Signal is valid on Signal is invalid	
E1	Invalidity indicator for input u1	Bool
	off ... Signal is valid on Signal is invalid, y = u2	
E2	Invalidity indicator for input u2	Bool
	off ... Signal is valid on Signal is invalid, y = u1	
iE1	Reason of input u1 invalidity	Long (I32)
	0 Signal valid	
	1 Signal out of range	
	2 Signal varies too little	
	3 Signal varies too little and signal out of range	
	4 Signal varies too much	
	5 Signal varies too much and signal out of range	
	6 Signal varies too much and too little	
	7 Signal varies too much and too little and signal out of range	
	8 Hardware error	
iE2	Reason of input u2 invalidity, see the iE1 output	Long (I32)
W	Warning flag (invalid input signal)	Bool
	off ... Both input signals u1 and u2 are valid	
	on At least one of the input signals is invalid	

Parameters

nb	Number of samples which are not included in the validity assessment of the signals u_1 and u_2 after initialization of the block	Long (I32) ⊕10
nc	Number of samples for invariability testing (see the SAI block, condition F2)	Long (I32) ⊕10
nbits	Number of A/D converter bits (source of the signals u_1 and u_2)	Long (I32) ⊕12
nr	Number of samples for variability testing (see the SAI block, condition F3)	Long (I32) ⊕10
prate	Maximum allowed percentage change of the input u_1 (u_2) within the last nr samples (with respect to the overall range of the input signals $v_{max} - v_{min}$, see the SAI block)	Double (F64) ⊕10.0
nv	Number of samples for out-of-range testing (see the SAI block, condition F4)	Long (I32) ⊕1
vmin	Lower limit for the input signals u_1 and u_2	Double (F64) ⊕-1.0
vmax	Upper limit for the input signals u_1 and u_2	Double (F64) ⊕1.0
nd	Number of samples for deviation testing (inner flag D; D is always off for nd = 0)	Long (I32) ⊕5
pdev	Maximum allowed percentage deviation of the inputs u_1 and u_2 with respect to the overall range of the input signals $v_{max} - v_{min}$	Double (F64) ⊕10.0
mode	Defines how to compute the output signal y when both input signals are valid ($E_1 = \text{off}$, $E_2 = \text{off}$ and $D = \text{off}$) 1 Average, $y = \frac{u_1+u_2}{2}$ 2 Minimum, $y = \min(u_1, u_2)$ 3 Maximum, $y = \max(u_1, u_2)$	Long (I32) ⊕1

SAI – Safety analog input

Block Symbol

Licence: **ADVANCED**



Function Description


The SAI block tests the input signal u and assesses its validity. The input signal u is considered invalid (the output $E = \text{on}$) in the following cases:

F1: Hardware error. The input signal $HWF = \text{on}$.

F2: The input signal u varies too little. The last nc samples of the input u lies within the interval of width du ,

$$du = \begin{cases} \frac{v_{\max} - v_{\min}}{2^{\text{nbits}}}, & \text{for } \text{nbits} \in \{8, 9, \dots, 16\} \\ 0, & \text{for } \text{nbits} \notin \{8, 9, \dots, 16\}, \end{cases}$$

where v_{\min} and v_{\max} are the lower and upper limits of the input u , respectively, and nbits is the number of A/D converter bits. The situation when the input signal u varies too little is shown in the following picture:

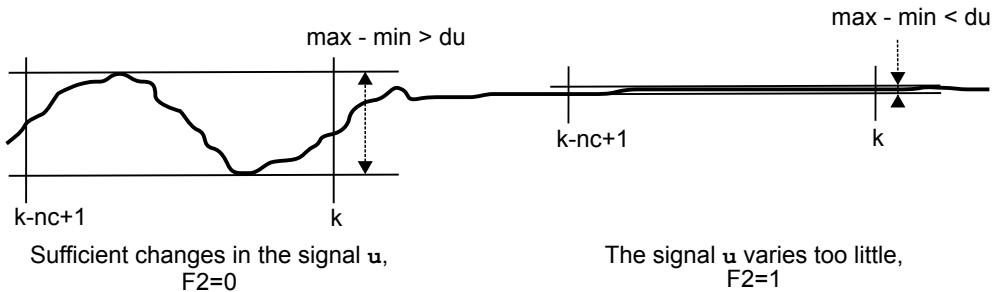


If the parameter nc is set to $nc = 0$, the condition F2 is never fulfilled.

F3: The input signal u varies too much. The last nr samples of the input u filtered by the **SPIKE** filter have a span which is greater than $rate$,

$$\text{rate} = \text{prate} \frac{v_{\max} - v_{\min}}{100},$$

where prate defines the allowed percentage change in the input signal u within the last nr samples (with respect to the overall range of the input signal $u \in (v_{\min}, v_{\max})$).

The block includes a **SPIKE** filter with fixed parameters $\text{mingap} = \frac{\text{vmax}-\text{vmin}}{100}$ and $q = 2$ suppressing peaks in the input signal to avoid undesirable fulfilling of this condition. See the **SPIKE** block description for more details. The situation when the input signal u varies too much is shown in the following picture:

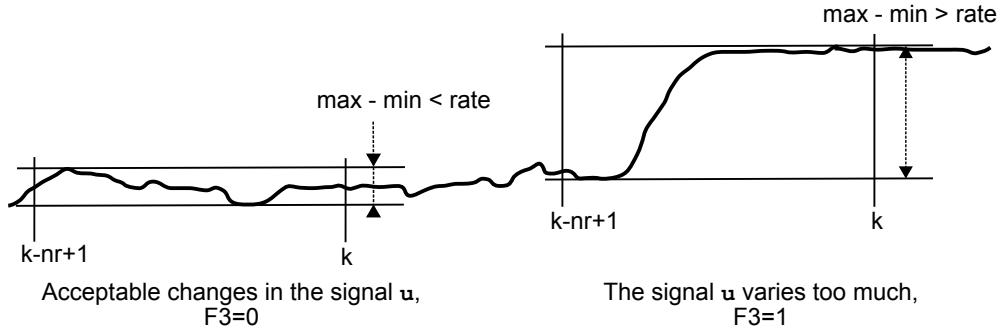

If the parameter nr is set to $\text{nr} = 0$, the condition F3 is never fulfilled.

F4: The input signal u is out of range. The last nv samples of the input signal u lie out of the allowed range $(\text{vmin}, \text{vmax})$.

If the parameter nv is set to $\text{nv} = 0$, the condition F4 is never fulfilled.

The signal u is copied to the output y without any modification when it is considered valid. In the other case, the output y is determined by a substitute value from the sv input. In such a case the output E is set to **on** and the output iE provides the error code. The input R resets the inner error flags F1–F4. For the input R set permanently to **on**, the invalidity indicator E is set to **on** for only one cycle period whenever some invalidity condition is fulfilled. On the other hand, for $R = \text{off}$, the output E is set to **on** and remains true until the reset (rising edge $R: \text{off} \rightarrow \text{on}$).

The table of error codes iE resulting from the inner error flags F1–F4:

F1	F2	F3	F4	iE
0	0	0	0	0
0	0	0	1	1
0	0	1	0	2
0	0	1	1	3
0	1	0	0	4
0	1	0	1	5
0	1	1	0	6
0	1	1	1	7
1	*	*	*	8

The nb parameter defines the number of samples which are not included in the validity assessment after initialization of the block (restart). Recommended setting is $\text{nb} \geq 5$ to allow the **SPIKE** filter initial conditions to fade away.

Inputs

u	Analog input of the block	Double (F64)
sv	Substitute value to be used when the signal u is marked as invalid	Double (F64)
HWF	Hardware error indicator off ... The input module of the signal works normally on Hardware error of the input module occurred	Bool
R	Reset inner error flags F1–F4	Bool

Outputs

y	Analog output of the block	Double (F64)
yf	Filtered analog output signal y , output of the SPIKE filter	Double (F64)
E	Output signal invalidity indicator off ... Signal is valid yf = sv on Signal is invalid, y =	Bool
iE	Reason of invalidity 0 Signal valid 1 Signal out of range 2 Signal varies too little 3 Signal varies too little and signal out of range 4 Signal varies too much 5 Signal varies too much and signal out of range 6 Signal varies too much and too little 7 Signal varies too much and too little and signal out of range 8 Hardware error	Long (I32)


Parameters

nb	Number of samples which are not included in the validity assessment of the signal u after initialization of the block	Long (I32)
nc	Number of samples for invariability testing (the F2 condition)	Long (I32)
		⊕10
nbits	Number of A/D converter bits	Long (I32)
nr	Number of samples for variability testing (the F3 condition)	Long (I32)
		⊕10
prate	Maximum allowed percentage change of the input u within the last nr samples (with respect to the overall range of the input signal vmax – vmin)	Double (F64)
		⊕10.0
nv	Number of samples for out-of-range testing (the F4 condition)	Long (I32)
		⊕1
vmin	Lower limit for the input signal u	Double (F64)
vmax	Upper limit for the input signal u	Double (F64)

SEL – Selector switch for analog signals

Block Symbol

Licence: STANDARD

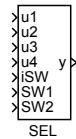

Function Description

The SEL block is obsolete, replace it by the [SELQUAD](#) block. Note the difference in binary selector signals SW_n .

The SEL block selects one of the four input signals u_1 , u_2 , u_3 and u_4 and copies it to the output signal y . The selection is based on the iSW input or the binary inputs SW_1 and SW_2 . These two modes are distinguished by the $BINF$ binary flag. The signal is selected according to the following table:

iSW	SW_1	SW_2	y
0	off	off	u_1
1	off	on	u_2
2	on	off	u_3
3	on	on	u_4

Inputs

u_1	First analog input of the block	Double (F64)
u_2	Second analog input of the block	Double (F64)
u_3	Third analog input of the block	Double (F64)
u_4	Fourth analog input of the block	Double (F64)
iSW	Active signal selector, active when $BINF = \text{off}$	Long (I32)
SW_1	Binary signal selector, active when $BINF = \text{on}$	Bool
SW_2	Binary signal selector, active when $BINF = \text{on}$	Bool

Output

y	The selected signal	Double (F64)
-----	---------------------	--------------


Parameter

$BINF$	Enable the binary selectors	Bool
	$\text{off} \dots$ Disabled (analog selector)	
	$\text{on} \dots$ Enabled (binary selectors)	

SELQUAD, SELSELECT, SELHEXD – Selector switch for analog signals

Block Symbols

Licence: STANDARD

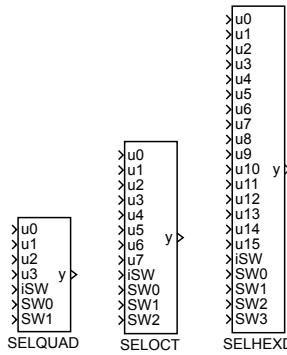

Function Description

The **SELQUAD**, **SELSELECT** and **SELHEXD** blocks select one of the input signals and copy it to the output signal **y**. The selection of the active signal **u0**...**u15** is based on the **iSW** input or the binary inputs **SW0**...**SW3**. These two modes are distinguished by the **BINF** binary flag. The signal is selected according to the following table:

iSW	SW0	SW1	SW2	SW3	y
0	off	off	off	off	u0
1	on	off	off	off	u1
2	off	on	off	off	u2
3	on	on	off	off	u3
4	off	off	on	off	u4
5	on	off	on	off	u5
6	off	on	on	off	u6
7	on	on	on	off	u7
8	off	off	off	on	u8
9	on	off	off	on	u9
10	off	on	off	on	u10
11	on	on	off	on	u11
12	off	off	on	on	u12
13	on	off	on	on	u13
14	off	on	on	on	u14
15	on	on	on	on	u15

Please note that the only difference among the blocks is the number of inputs.

Inputs

u0..15	Analog inputs of the block	Double (F64)
iSW	Active signal selector	Long (I32)
SW0..3	Binary signal selectors	Bool

Output

y	The selected input signal	Double (F64)
----------	---------------------------	---------------------

Parameter

BINF	Enable the binary selectors	Bool
	off ... Disabled (analog selector)	
	on Enabled (binary selectors)	

SHIFTOCT – Data shift register

Block Symbol

Licence: STANDARD



Function Description

The SHIFTOCT block works as a shift register with eight outputs of arbitrary data type.

If the RUN input is active, the following assignment is performed with each algorithm tick:

$$\begin{aligned} y_i &= y_{i-1}, \quad i = 1..7 \\ y0 &= u \end{aligned}$$

Thus the value on each output y_0 to y_6 is shifted to the following output and the value on input u is assigned to output y_0 .

The block works with any data type of signal connected to the input u . Data type has to be specified by the vtype parameter. Outputs y_0 to y_8 then have the same data type.

If you need a triggered shift register, place the EDGE_ block in front of the RUN input.

Inputs

u	Data input of the register	Unknown
RUN	Enables outputs shift	Bool

Outputs

y_0	First output of the block	Unknown
y_1	Second output of the block	Unknown
y_2	Third output of the block	Unknown
y_3	Fourth output of the block	Unknown
y_4	Fifth output of the block	Unknown
y_5	Sixth output of the block	Unknown
y_6	Seventh output of the block	Unknown
y_7	Eighth output of the block	Unknown

Parameters

vtype	Output data type	
1	Bool	⊕8 Long (I32)
2	Byte (U8)	
3	Short (I16)	
4	Long (I32)	
5	Word (U16)	
6	DWord (U32)	
7	Float (F32)	
8	Double (F64)	
--		
10	Large (I64)	

SHLD – Sample and hold

Block Symbol

Licence: STANDARD



Function Description

The **SHLD** block is intended for holding the value of the input signal. It processes the input signal according to the **mode** parameter.

In *Triggered sampling* mode the block sets the output signal **y** to the value of the input signal **u** when rising edge (**off**→**on**) occurs at the **SETH** input. The output is held constant unless a new rising edge occurs at the **SETH** input.

If *Hold last value* mode is selected, the output signal **y** is set to the last value of the input signal **u** before the rising edge at the **SETH** input occurred. It is kept constant as long as **SETH = on**. For **SETH = off** the input signal **u** is simply copied to the output **y**.

In *Hold current value* mode the **u** input is sampled right when the rising edge (**off**→**on**) occurs at the **SETH** input. It is kept constant as long as **SETH = on**. For **SETH = off** the input signal **u** is simply copied to the output **y**.

The binary input **R1** sets the output **y** to the value **y0**, it overpowers the **SETH** input signal.

See also the [PARR](#) block, which can be used for storing a numeric value as well.

Inputs

u	Analog input of the block	Double (F64)
SETH	Trigger for the set and hold operation	Bool
R1	Block reset, R1 = on → y = y0	Bool

Output

y	Analog output of the block	Double (F64)
----------	----------------------------	---------------------

Parameter

y0	Initial output value	Double (F64)
mode	Sampling mode	⊕3 Long (I32)
1 Triggered sampling	
2 Hold last value	
3 Hold current value	

SINT – Simple integrator

Block Symbol

Licence: STANDARD



Function Description

The SINT block implements a discrete integrator described by the following difference equation

$$y_k = y_{k-1} + \frac{T_S}{2T_i}(u_k + u_{k-1}),$$

where T_S is the block execution period and T_i is the integral time constant. If y_k falls out of the saturation limits `ymin` and `ymax`, the output and state of the block are appropriately modified.

For more complex tasks, consider using the INTE block, which provides extended functionality.

Input

<code>u</code>	Analog input of the block	Double (F64)
----------------	---------------------------	--------------

Output

<code>y</code>	Analog output of the block	Double (F64)
----------------	----------------------------	--------------

Parameters

<code>ti</code>	Integral time constant T_i	$\odot 1.0$	Double (F64)
<code>y0</code>	Initial output value		Double (F64)
<code>ymax</code>	Upper limit of the output signal	$\odot 1.0$	Double (F64)
<code>ymin</code>	Lower limit of the output signal	$\odot -1.0$	Double (F64)

SPIKE – Spike filter

Block Symbol

Licence: **ADVANCED**



Function Description

The **SPIKE** block implements a nonlinear filter for suppressing isolated peaks (pulses) in the input signal u . One cycle of the **SPIKE** filter performs the following transformation $(u, y) \rightarrow y$:

```

delta := y - u;
if abs(delta) < gap
then
begin
    y := u;
    gap := gap/q;
    if gap < mingap then gap:= mingap;
end
else
begin
    if delta < 0
    then y := y + gap
    else y := y - gap;
    gap := gap * q;
end

```

where **mingap** and **q** are the block parameters.

The signal passes through the filter unaffected for sufficiently large **mingap** parameter, which defines the minimal size of the tolerance window. By lowering this parameter it is possible to find an appropriate value, which leads to suppression of the undesirable peaks but leaves the input signal intact otherwise. The recommended value is 1 % of the overall input signal range. The **q** parameter determines the adaptation speed of the tolerance window.

Input

u	Input signal to be filtered	Double (F64)
----------	-----------------------------	---------------------

Output

y	Filtered output signal	Double (F64)
----------	------------------------	---------------------

Parameters

<code>mingap</code>	Minimum size of the tolerance window	<code>⊖0.01</code>	<code>Double (F64)</code>
<code>q</code>	Tolerance window adaptation speed	<code>↓1.0 ⊖2.0</code>	<code>Double (F64)</code>

SSW – Simple switch

Block Symbol

Licence: STANDARD



Function Description

The SSW block selects one of two input signals u_1 and u_2 with respect to the binary input SW . The selected input is copied to the output y . If $SW = \text{off}$ ($SW = \text{on}$), then the selected signal is u_1 (u_2).

Inputs

u_1	First analog input of the block	Double (F64)
u_2	Second analog input of the block	Double (F64)
SW	Signal selector	Bool
	off ... The u_1 signal is selected, $y = u_1$	
	on The u_2 signal is selected, $y = u_2$	

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------

SWR – Selector with ramp

Block Symbol

Licence: STANDARD



Function Description

The SWR block selects one of two input signals u_1 and u_2 with respect to the binary input SW . The selected input is copied to the output y . If $SW = \text{off}$ ($SW = \text{on}$), then the selected signal is u_1 (u_2). The output signal is not set immediately to the value of the selected input signal but tracks the selected input with given rate constraint (i.e. it follows a ramp). This rate constraint is configured independently for each input u_1 , u_2 and is defined by time constants t_1 and t_2 . As soon as the output reaches the level of the selected input signal, the rate limiter is disabled and remains inactive until the next signal switching.

Inputs

u_1	First analog input of the block	Double (F64)
u_2	Second analog input of the block	Double (F64)
SW	Signal selector	Bool
	off ... The u_1 signal is selected	
	on The u_2 signal is selected	

Parameters

t_1	Rate limiter time constant for switching from u_2 to u_1	$\odot 1.0$	Double (F64)
t_2	Rate limiter time constant for switching from u_1 to u_2	$\odot 1.0$	Double (F64)
y_0	Initial output value to start the tracking from (before the first switching of signals occurs)		Double (F64)

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------

VDEL – Variable time delay

Block Symbol

Licence: STANDARD



Function Description

The VDEL block delays the input signal u by the time defined by the input signal d . More precisely, the delay is given by rounding the input signal d to the nearest integer multiple of the block execution period ($n \cdot T_S$). A substitute value y_0 is used until n previous samples are available after the block initialization.

Inputs

u	Analog input of the block	Double (F64)
d	Time delay [s]	Double (F64)

Output

y	Delayed input signal	Double (F64)
-----	----------------------	--------------

Parameter

y_0	Initial/substitute output value	Double (F64)
n_{max}	Size of delay buffer (number of samples) for the time delay d . Used for internal memory allocation.	Long (I32) $\downarrow 10 \uparrow 10000000 \odot 1000$

ZV4IS – Zero vibration input shaper


Block Symbol

Licence: ADVANCED



Function Description

The function block ZV4IS implements a band-stop frequency filter. The main field of application is in motion control of flexible systems where the low stiffness of mechanical construction causes an excitation of residual vibrations which can be observed in form of mechanical oscillations. Such vibration can cause significant deterioration of quality of control or even instability of control loops. They often lead to increased wear of mechanical components. Generally, the filter can be used in arbitrary application for a purpose of control of an oscillatory system or in signal processing for selective suppression of particular frequency.

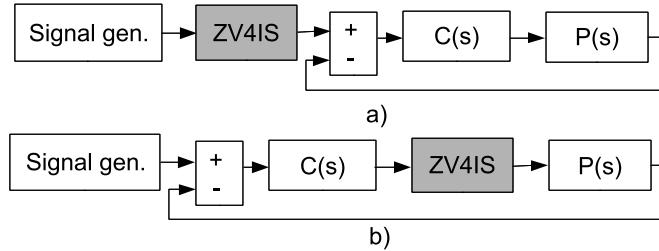

The input shaping filter can be used in two different ways. By using an *open loop connection*, the input reference signal for a feedback loop coming from human operator or higher level of control structure is properly shaped in order to attenuate any unwanted oscillations. The internal dynamics of the filter does not influence a behaviour of the inferior loop. The only condition is correct tuning of feedback compensator $C(s)$, which has to work in linear mode. Otherwise, the frequency spectrum of the manipulating variable gets corrupted and unwanted oscillations can still be excited in a plant $P(s)$. The main disadvantage is passive vibration damping which works only in reference signal path. In case of any external disturbances acting on the plant, the vibrations may still arise. The second possible way of use is *feedback connection*. The input shaper is placed on the output side of feedback compensator $C(s)$ and modifies the manipulating variable acting on the plant. An additional dynamics of the filter is introduced and the compensator $C(s)$ needs to be properly tuned.

The algorithm of input shaper can be described in time domain


$$y(t) = A_1 u(t - t_1) + A_2 u(t - t_2) + A_3 u(t - t_3) + A_4 u(t - t_4)$$

Thus, the filter has a structure of sum of weighted time delays of an input signal. The gains $A_1..A_4$ and time delay values $t_1..t_4$ depend on a choice of filter type, natural


frequency and damping of controlled oscillatory mode of the system. The main advantage of this structure compared to commonly used notch filters is finite impulse response (which is especially important in motion control applications), warranted stability and monotone step response of the filter and generally lower dynamic delay introduced into a signal path.

For correct function of the filter, natural frequency `omega` and damping `xi` of the oscillatory mode need to be set. The parameter `ipar` sets a filter type. For `ipar = 1`, one of ten basic filter types chosen by `istype` is used. Particular basic filters differ in shape and width of stop band in frequency domain. In case of precise knowledge of natural frequency and damping, the ZV (Zero Vibration) or ZVD filters can be used, because their response to input signal is faster compared to the other filters. In case of large uncertainty in system/signal model, robust UEI (Extra Insensitive) or UTHEI filters are good choice. Their advantage is wider stopband at the cost of slower response. The number on the end of the name has the meaning of maximum allowed level of excited vibrations for the given `omega` and `xi` (one, two or five percent).


For precise tuning of the filter, complete parameterization `ipar = 2` can be selected. For this choice, three parameters `p_alpha`, `p_a2` and `p_a3` which affect the shape of the filter frequency response can freely be assigned. These parameters can be used for finding of optimal compromise between robustness of the filter and introduced dynamical delay.

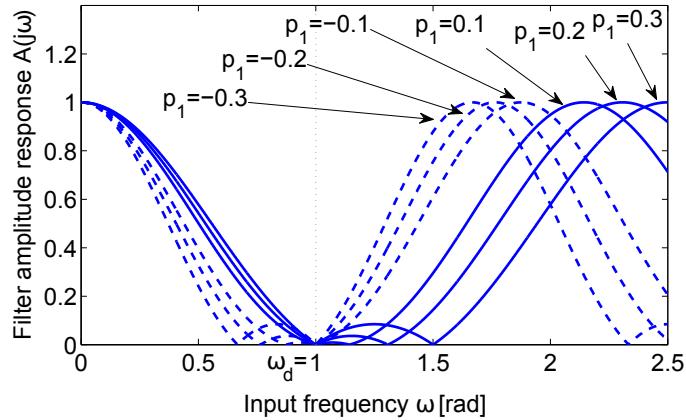

The asymmetry parameter `p_alpha` determines relative location of the stopband of filter frequency response with respect to chosen natural frequency. Positive values mean a shift to higher frequency range, negative values to lower frequency range, zero value leads to symmetrical shape of the characteristic (see the figure above). The parameter `p_alpha` also affects the overall filter length, thus the overall delay introduced into a signal path. Lower values result in slower filters and higher delay. Asymmetric filters can be used in cases where a lower or higher bound of the uncertainty in natural frequency parameter is known.

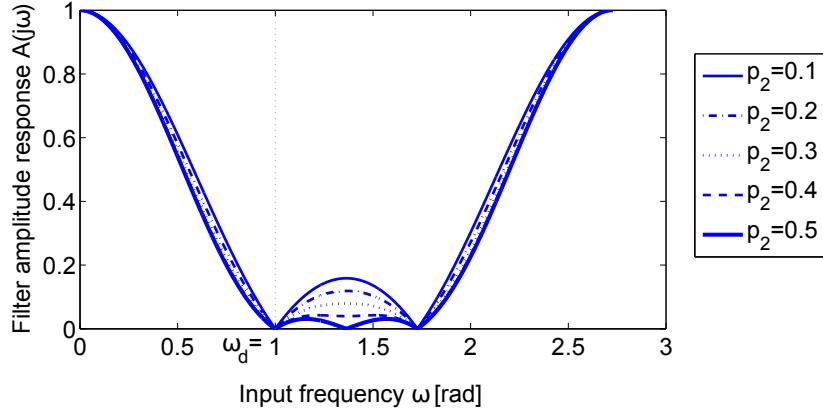

Insensitivity parameter p_{a2} determines the width and attenuation level of the filter stopband. Higher values result in wider stopband and higher attenuation. For most applications, the value $p_{a2} = 0.5$ is recommended for highest achievable robustness with respect to modeling errors.

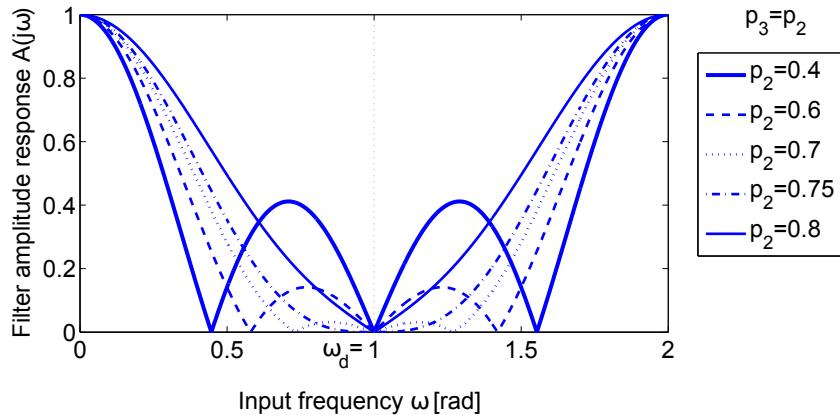

The additional parameter p_{a3} needs to be chosen for symmetrical filters ($p_{alpha} = 0$). A rule for the most of the practical applications is to chose *equal values* $p_{a2} = p_{a3}$ from interval $< 0, 0.75 >$. Overall filter length is constant for this choice and only the shape of filter stopband is affected. Lower values lead to robust shapers with wide stopband and frequency response shape similar to standard THEI (Two-hump extra insensitive) filters. Higher values lead to narrow stopband and synchronous drop of two stopband peaks. The choice $p_{a2} = p_{a3} = 0.75$ results in standard ZVDD filter with maximally flat and symmetric stopband shape. The proposed scheme can be used for systematic tuning of the filter.

Input

u Input signal to be filtered

Double (F64)

Outputs

y	Filtered output signal	Double (F64)
E	Error flag	Bool
	off ... No error	on An error occurred

Parameters

omega	Natural frequency	⊕1.0 Double (F64)
xi	Relative damping coefficient	Double (F64)
ipar	Specification	⊕1 Long (I32)
	1 Basic types of IS	
	2 Complete parametrization	
istype	Type	⊕2 Long (I32)
	1 ZV	
	2 ZVD	
	3 ZVDD	
	4 MISZV	
	5 UEI1	
	6 UEI2	
	7 UEI5	
	8 UTHEI1	
	9 UTHEI2	
	10 UTHEI5	
p_alpha	Shaper duration/assymetry parameter	⊕0.2 Double (F64)
p_a2	Insensitivity parameter	⊕0.5 Double (F64)
p_a3	Additional parameter (only for p_alpha = 0)	⊕0.5 Double (F64)
nmax	Size of data buffer (number of samples). Used for internal memory allocation.	Long (I32) ↓10 ↑10000000 ⊕1000

Chapter 6

GEN – Signal generators

Contents

ANLS – Controlled generator of piecewise linear function	152
BINS – Controlled binary sequence generator	154
BIS – Binary sequence generator	156
MP – Manual pulse generator	158
PRBS – Pseudo-random binary sequence generator	159
SG, SGI – Signal generators	161

ANLS – Controlled generator of piecewise linear function

Block Symbol

Licence: STANDARD



Function Description

The ANLS block generates a piecewise linear function of time given by nodes $t_1, y_1; t_2, y_2; t_3, y_3; t_4, y_4$. The initial value of output y is defined by the y_0 parameter. The generation of the function starts when a rising edge occurs at the **RUN** input (and the internal timer is set to 0). The output y is then given by

$$y = y_i + \frac{y_{i+1} - y_i}{t_{i+1} - t_i}(t - t_i)$$

within the time intervals $\langle t_i, t_{i+1} \rangle, i = 0, \dots, 3, t_0 = 0$.

To generate a step change in the output signal, it is necessary to define two nodes in the same time instant (i.e. $t_i = t_{i+1}$). The generation ends when time t_4 is reached or when time t_i is reached and the following node precedes the active one (i.e. $t_{i+1} < t_i$). The output holds its final value afterwards. But for the **RPT** parameter set to **on**, instead of holding the final value, the block returns to its initial state y_0 , the internal block timer is set to 0 and the sequence is generated repeatedly. This can be used to generate square or sawtooth functions. The generation can also be prematurely terminated by the **RUN** input signal set to **off**. In that case the block returns to its initial state y_0 , the internal block timer is set to 0 and $is = 0$ becomes the active time interval.

Input

RUN	Enable execution, run the analog sequence generation	Bool
------------	--	------

Outputs

y	Analog output of the block	Double (F64)
is	Index of the active time interval	Long (I32)

Parameters

y0	Initial output value	Double (F64)
t1	Node 1 time	⊖1.0 Double (F64)
y1	Node 1 value	Double (F64)
t2	Node 2 time	⊖1.0 Double (F64)
y2	Node 2 value	⊖1.0 Double (F64)

t3	Node 3 time	⌚2.0 Double (F64)
y3	Node 3 value	⌚1.0 Double (F64)
t4	Node 4 time	⌚2.0 Double (F64)
y4	Node 4 value	Double (F64)
RPT	Repeating sequence	Bool
	off ... Disabled	
	on Enabled	

BINS – Controlled binary sequence generator

Block Symbol

Licence: STANDARD



Function Description

The **BINS** block generates a binary sequence at the **Y** output, similarly to the **BIS** block. The binary sequence is given by the block parameters.

- The initial value of the output is given by the **Y0** parameter.
- Whenever a rising edge (**off**→**on**) occurs at the **START** input (even when a binary sequence is being generated), the internal timer of the block is set to 0 and started.
- Whenever a rising edge occurs at the **START** input, the output **Y** is set to **Y0**.
- The output value is inverted at time instants **t1, t2, ..., t8** (**off**→**on**, **on**→**off**).
- For **RPT = off**, the last switching of the output occurs at time t_i , where $t_{i+1} = 0$ and the output then holds its value until another rising edge (**off**→**on**) occurs at the **START** input.
- For **RPT = on**, instead of switching the output for the last time, the block returns to its initial state, the **Y** output is set to **Y0**, the internal block timer is set to 0 and started. As a result, the binary sequence is generated repeatedly.

On the contrary to the **BIS** block the changes in parameters **t1...t8** are accepted only when a rising edge occurs at the **START** input.

The switching times are internally rounded to the nearest integer multiple of the execution period, which may result in e.g. disappearing of very thin pulses ($< T_S/2$) or melting successive thin pulses into one thick pulse. Therefore it is strongly recommended to use integer multiples of the execution period as the switching times.

Input

START	Starting signal (rising edge)	Bool
--------------	-------------------------------	-------------

Outputs

Y	Logical output of the block	Bool
is	Index of the active time interval	Long (I32)

Parameters

y_0	Initial output value off ... Disabled/false	on Enabled/true	Bool
t_1	Switching time 1 [s]	$\downarrow 0.0 \odot 1.0$	Double (F64)
t_2	Switching time 2 [s]	$\downarrow 0.0 \odot 2.0$	Double (F64)
t_3	Switching time 3 [s]	$\downarrow 0.0 \odot 3.0$	Double (F64)
t_4	Switching time 4 [s]	$\downarrow 0.0 \odot 4.0$	Double (F64)
t_5	Switching time 5 [s]	$\downarrow 0.0 \odot 5.0$	Double (F64)
t_6	Switching time 6 [s]	$\downarrow 0.0 \odot 6.0$	Double (F64)
t_7	Switching time 7 [s]	$\downarrow 0.0 \odot 7.0$	Double (F64)
t_8	Switching time 8 [s]	$\downarrow 0.0 \odot 8.0$	Double (F64)
RPT	Repeating sequence off ... Disabled	on Enabled	Bool

BIS – Binary sequence generator

Block Symbol

Licence: STANDARD



Function Description

The BIS block generates a binary sequence at the Y output. The sequence is given by the block parameters.

- The initial value of the output is given by the Y0 parameter.
- The internal timer of the block is set to 0 when the block initializes.
- The internal timer of the block is immediately started when the block initializes.
- The output value is inverted at time instants t1, t2, ..., t8 (off→on, on→off).
- For RPT = off, the last switching of the output occurs at time t_i , where $t_{i+1} = 0$ and the output then holds its value indefinitely.
- For RPT = on, instead of switching the output for the last time, the block returns to its initial state, the Y output is set to Y0, the internal block timer is set to 0 and started. As a result, the binary sequence is generated repeatedly.

All the parameters t1...t8 can be changed in runtime and all changes are immediately accepted.

The switching times are internally rounded to the nearest integer multiple of the execution period, which may result in e.g. disappearing of very thin pulses ($< T_S/2$) or melting successive thin pulses into one thick pulse. Therefore it is strongly recommended to use integer multiples of the execution period as the switching times.

See also the [BINS](#) block, which allows for triggering the sequence by external signal.

Outputs

Y	Logical output of the block	Bool
is	Index of the active time interval	Long (I32)

Parameters

Y0	Initial output value off ... Disabled/false on Enabled/true	Bool
t1	Switching time 1 [s]	↓0.0 ⊕1.0 Double (F64)

t2	Switching time 2 [s]	$\downarrow 0.0 \odot 2.0$	Double (F64)
t3	Switching time 3 [s]	$\downarrow 0.0 \odot 3.0$	Double (F64)
t4	Switching time 4 [s]	$\downarrow 0.0 \odot 4.0$	Double (F64)
t5	Switching time 5 [s]	$\downarrow 0.0 \odot 5.0$	Double (F64)
t6	Switching time 6 [s]	$\downarrow 0.0 \odot 6.0$	Double (F64)
t7	Switching time 7 [s]	$\downarrow 0.0 \odot 7.0$	Double (F64)
t8	Switching time 8 [s]	$\downarrow 0.0 \odot 8.0$	Double (F64)
RPT	Repeating sequence off ... Disabled	on Enabled	Bool

MP – Manual pulse generator

Block Symbol



Licence: STANDARD

Function Description

The MP block generates a pulse of width **pwidth** when a rising edge occurs at the **BSTATE** parameter (**off** → **on**). The algorithm immediately reverts the **BSTATE** parameter back to **off** (**BSTATE** stands for a shortly pressed button). If repetition is enabled (**RPTF = on**), it is possible to extend the pulse by repeated setting the **BSTATE** parameter to **on**. When repetition is disabled, the parameter **BSTATE** is not taken into account during generation of a pulse, i.e. the output pulses have always the specified width of **pwidth**.

The MP block reacts only to rising edge of the **BSTATE** parameter, therefore it cannot be used for generating a pulse immediately at the start of the REXYGEN system executive. Use the **BIS** block for such a purpose.

Output

Y	Logical output of the block	Bool
----------	-----------------------------	------

Parameters

pwidth	Pulse width [s]	⊕1.0 Double (F64)
BSTATE	Output pulse activation off ... No action on Generate output pulse	Bool
RPTF	Allow pulse extension off ... Disabled on Enabled	Bool

PRBS – Pseudo-random binary sequence generator


Block Symbol

Licence: STANDARD



Function Description

The PRBS block generates a pseudo-random binary sequence. The figure below displays how the sequence is generated.

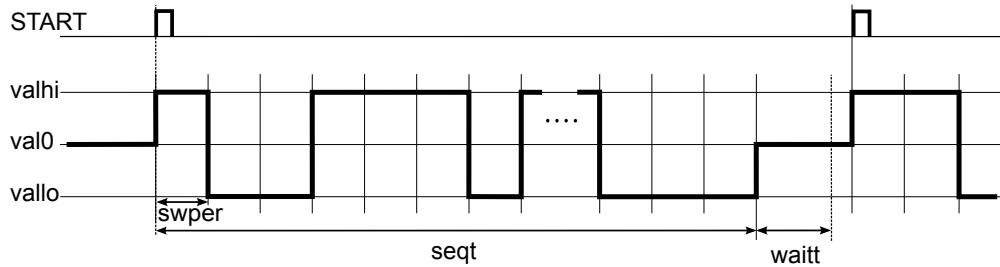

The initial and final values of the sequence are **val0**. The sequence starts from this value when rising edge occurs at the **START** input (**off**→**on**), the output **y** is immediately switched to the **valhi** value. The generator then switches the output to the other limit value with the period of **swper** seconds and the probability of switching **swprob**. After **seqt** seconds the output is set back to **val0**. A **waitt**-second period follows to allow the settling of the controlled system response. Only then it is possible to start a new sequence. It is possible to terminate the sequence prematurely by the **BRK = on** input when necessary.

Inputs

START	Starting signal (rising edge)	Bool
BRK	Termination signal	Bool

Outputs

y	Generated pseudo-random binary sequence	Double (F64)
BSY	Busy flag	Bool

Parameters


val0	Initial and final value	Double (F64)
valhi	Upper level of the y output	Double (F64)
vallo	Lower level of the y output	Double (F64)

swper	Period of random output switching [s]	$\odot 1.0$	Double (F64)
swprob	Probability of switching	$\downarrow 0.0 \uparrow 1.0$	$\odot 0.2$ Double (F64)
seqt	Length of the sequence [s]	$\odot 10.0$	Double (F64)
waitt	Settling period [s]	$\odot 2.0$	Double (F64)

SG, SGI – Signal generators

Block Symbols

Licence: STANDARD



Function Description

The **SG** and **SGI** blocks generate periodic signals of chosen type (**isig** parameter): sine wave, square, sawtooth and white noise with uniform distribution. The amplitude and frequency of the output signal **y** are given by the **amp** and **freq** parameter respectively. The output **y** can have a phase shift of $\text{phase} \in (0, 2\pi)$ in the deterministic signals ($\text{isig} \in \{1, 2, 3\}$).

The **SGI** block allows synchronization of multiple generators using the **RUN** and **SYN** inputs. The **RUN** parameter must be set to **on** to enable the generator, the **SYN** input synchronizes the generators during the output signal generation.

Inputs

RUN	Enable execution, run the binary sequence generation	Bool
SYN	Synchronization signal	Bool

Output

y	Analog output of the block	Double (F64)
----------	----------------------------	--------------

Parameters

isig	Generated signal type	⊕1 Long (I32)
1	Sine wave	
2	Symmetrical rectangular signal	
3	Sawtooth signal	
4	White noise with uniform distribution	
amp	Amplitude of the generated signal	⊕1.0 Double (F64)
freq	Frequency of the generated signal	⊕1.0 Double (F64)
phase	Phase shift of the generated signal	Double (F64)
offset	Value added to the generated signal	⊕1.0 Double (F64)
ifrunit	Frequency units	⊕1 Long (I32)
1	Hz	
2	rad/s	
iphunit	Phase shift units	⊕1 Long (I32)
1	degrees	
2	radians	

Chapter 7

REG – Function blocks for control

Contents

ARLY – Advance relay	165
FLCU – Fuzzy logic controller unit	166
FRID – * Frequency response identification	168
I3PM – Identification of a three parameter model	170
LC – Lead compensator	172
LLC – Lead-lag compensator	173
MCU – Manual control unit	174
PIDAT – PID controller with relay autotuner	176
PIDE – PID controller with defined static error	179
PIDGS – PID controller with gain scheduling	181
PIDMA – PID controller with moment autotuner	183
PIDU – PID controller unit	189
PIDUI – PID controller unit with variable parameters	192
POUT – Pulse output	194
PRGM – Setpoint programmer	195
PSMPC – Pulse-step model predictive controller	197
PWM – Pulse width modulation	201
RLY – Relay with hysteresis	203
SAT – Saturation with variable limits	204
SC2FA – State controller for 2nd order system with frequency autotuner	206
SCU – Step controller with position feedback	213
SCUV – Step controller unit with velocity input	216
SELU – Controller selector unit	219
SMHCC – Sliding mode heating/cooling controller	220
SMHCCA – Sliding mode heating/cooling controller with autotuner	224
SWU – Switch unit	231

TSE – Three-state element	232
-------------------------------------	-----

ARLY – Advance relay


Block Symbol

Licence: STANDARD



Function Description

The **ARLY** block is a modification of the **RLY** block, which allows lowering the amplitude of steady state oscillations in relay feedback control loops. The block transforms the input signal u to the output signal y according to the diagram below.

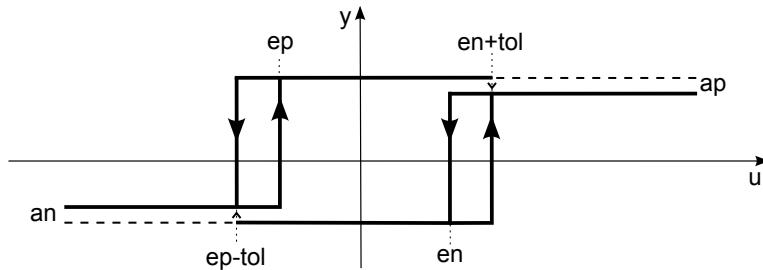

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------

Parameters

ep	Value for switching the output to the "On" state	$\odot -1.0$	Double (F64)
en	Value for switching the output to the "Off" state	$\odot 1.0$	Double (F64)
tol	Tolerance limit for the superposed noise of the input signal u	$\odot 0.0 \odot 0.5$	Double (F64)
ap	Value of the y output in the "On" state	$\odot 1.0$	Double (F64)
an	Value of the y output in the "Off" state	$\odot -1.0$	Double (F64)
$y0$	Initial output value		Double (F64)

FLCU – Fuzzy logic controller unit

Block Symbol

Licence: ADVANCED




Function Description

The FLCU block implements a simple fuzzy logic controller with two inputs and one output. Introduction to fuzzy logic problems can be found in [3].

The output is defined by trapezoidal membership functions of linguistic terms of the u and v inputs, impulse membership functions of linguistic terms of the y output and inference rules in the form

$$\text{If } (u \text{ is } U_i) \text{ AND } (v \text{ is } V_j), \text{ then } (y \text{ is } Y_k),$$

where $U_i, i = 1, \dots, n_u$ are the linguistic terms of the u input; $V_j, j = 1, \dots, n_v$ are the linguistic terms of the v input and $Y_k, k = 1, \dots, n_y$ are the linguistic terms of the y output. Trapezoidal (triangular) membership functions of the u and v inputs are defined by four numbers as depicted below.

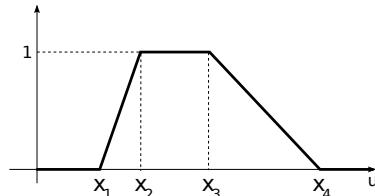

Not all numbers x_1, \dots, x_4 are mutually different in triangular functions. The matrices of membership functions of the u and v input are composed of rows $[x_1, x_2, x_3, x_4]$. The dimensions of matrices mfu and mfv are $(n_u \times 4)$ and $(n_v \times 4)$ respectively.

The impulse 1st order membership functions of the y output are defined by the triplet

$$y_k, a_k, b_k,$$

where y_k is the value assigned to the linguistic term $Y_k, k = 1, \dots, n_y$ in the case of $a_k = b_k = 0$. If $a_k \neq 0$ and $b_k \neq 0$, then the term Y_k is assigned the value of $y_k + a_k u + b_k v$. The output membership function matrix sty has a dimension of $(n_y \times 3)$ and contains the rows $[y_k, a_k, b_k], k = 1, \dots, n_y$.

The set of inference rules is also a matrix whose rows are $[i_l, j_l, k_l, w_l], l = 1, \dots, n_r$, where i_l, j_l and k_l defines a particular linguistic term of the u and v inputs and y output respectively. The number w_l defines the weight of the rule in percents $w_l \in \{0, 1, \dots, 100\}$. It is possible to suppress or emphasize a particular inference rule if necessary.

Inputs

u	First analog input of the block	Double (F64)
v	Second analog input of the block	Double (F64)

Outputs

y	Analog output of the block	Double (F64)
ir	Dominant rule	Long (I32)
wr	Degree of truth of the dominant rule	Double (F64)

Parameters

umax	Upper limit of the u input	⊕1.0	Double (F64)
umin	Lower limit of the u input	⊖-1.0	Double (F64)
nu	Number of membership functions of the input u	↓1 ↑25 ⊕3	Long (I32)
vmax	Upper limit of the v input	⊕1.0	Double (F64)
vmin	Lower limit of the v input	⊖-1.0	Double (F64)
nv	Number of membership functions of the input v	↓1 ↑25 ⊕3	Long (I32)
ny	Number of membership functions of the output y	↓1 ↑100 ⊕3	Long (I32)
nr	Number of inference rules	↓1 ↑25 ⊕3	Long (I32)
mfu	Matrix of membership functions of the input u ⊕[-1 -1 -1 0; -1 0 0 1; 0 1 1 1]		Double (F64)
mfv	Matrix of membership functions of the input v ⊕[-1 -1 -1 0; -1 0 0 1; 0 1 1 1]		Double (F64)
sty	Matrix of membership functions of the output y ⊕[-1 0 0; 0 0 0; 1 0 0]		Double (F64)
rls	Matrix of inference rules ⊕[1 2 3 100; 1 1 1 100; 1 0 3 100]		Byte (U8)

FRID – * Frequency response identification

Block Symbol

Licence: ADVANCED



Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

dv	Feedforward control variable	Double (F64)
pv	Process variable	Double (F64)
ID	Start the tuning experiment	Bool
HLD	Hold	Bool
BRK	Stop the tuning experiment	Bool

Parameters

ubias	Static component of the exciting signal	Double (F64)
uamp	Amplitude of the exciting signal	⊕1.0 Double (F64)
wb	Frequency interval lower limit [rad/s]	⊕1.0 Double (F64)
wf	Frequency interval higher limit [rad/s]	⊕10.0 Double (F64)
isweep	Frequency sweeping mode 1 Logarithmic 2 Linear	⊕1 Long (I32)
cp	Sweeping Rate	⊕0.995 Double (F64)
iavg	Number of values for averaging	⊕10 Long (I32)
obw	Observer bandwith 1 LOW 2 NORMAL 3 HIGH	⊕2 Long (I32)
stime	Settling period [s]	⊕10.0 Double (F64)

umax	Maximum generator amplitude	$\odot 1.0$	Double (F64)
thdmin	Minimum demanded THD threshold	$\odot 0.1$	Double (F64)
adapt_rc	Maximum rate of amplitude variation	$\odot 0.001$	Double (F64)
pv_max	Maximum desired process value	$\odot 1.0$	Double (F64)
pv_sat	Maximum allowed process value	$\odot 2.0$	Double (F64)
ADAPT_EN	Enable automatic amplitude adaptation	$\odot \text{on}$	Bool
immode	Mesurement mode	$\odot 1$	Long (I32)
	1 Manual specification of frequency points		
	2 Linear series of nmw points in the interval <wb;wf>		
	3 Logarithmic series of nmw points in the interval <wb;wf>		
	4 Automatic detection of important frequencies (N/A)		
nwm	Number of frequency response point for automatic mode		Long (I32)
wm	Frequency measurement points for manual meas. mode [array of rad/s]	$\odot [2.0 \ 4.0 \ 6.0 \ 8.0]$	Double (F64)


Outputs

mv	Manipulated variable (controller output)	Double (F64)
SAT	Saturation flag	Bool
IDBSY	Tuner busy flag	Bool
w	Actual frequency [rad/s]	Double (F64)
xres	real part of frequency response (sweeping)	Double (F64)
xims	imaginary part of frequency response (sweeping)	Double (F64)
xrem	real part of frequency response (measurement)	Double (F64)
ximm	imaginary part of frequency response (measurement)	Double (F64)
epv	Estimated process value	Double (F64)
IDE	Error indicator	Bool
i IDE	Error code	Long (I32)
A0	Estimated DC value	Double (F64)
A1	Estimated 1st harmonics amlitude	Double (F64)
A2	Estimated 2nd harmonics amlitude	Double (F64)
A3	Estimated 3rd harmonics amlitude	Double (F64)
A4	Estimated 4th harmonics amlitude	Double (F64)
A5	Estimated 5th harmonics amlitude	Double (F64)
THD	Total harmonic distortion	Double (F64)
DAV	Data Valid	Bool

I3PM – Identification of a three parameter model

Block Symbol

Licence: ADVANCED



Function Description

The I3PM block is based on the generalized moment identification method. It provides a three parameter model of the system.

Inputs

u	Input of the identified system	Double (F64)
y	Output of the identified system	Double (F64)
u0	Input steady state	Double (F64)
y0	Output steady state	Double (F64)
RUN	Execute identification	Bool
CLR	Block reset	Bool
ips	Meaning of the output signals	Long (I32)
	0 FOPDT model	
	p1 ... gain	
	p2 ... time delay	
	p3 ... time constant	
	1 moments of input and output	
	p1 ... parameter μu_0	
	p2 ... parameter μu_1	
	p3 ... parameter μu_2	
	p4 ... parameter μy_0	
	p5 ... parameter μy_1	
	p6 ... parameter μy_2	
	2 process moments	
	p1 ... parameter $m p_0$	
	p2 ... parameter $m p_1$	
	p3 ... parameter $m p_2$	
	3 characteristic numbers	
	p1 ... parameter κ	
	p2 ... parameter μ	
	p3 ... parameter σ^2	
	p4 ... parameter σ	

Outputs

p_i	Identified parameters with respect to <code>ips</code> , $i = 1, \dots, 8$	Double (F64)
<code>BSY</code>	Busy flag	Bool
<code>RDY</code>	Ready flag	Bool
<code>E</code>	Error flag	Bool
<code>iE</code>	Error code	Long (I32)
	1 Premature termination (<code>RUN = off</code>)	
	2 $\mu_0 = 0$	
	3 $\mu_0 = 0$	
	4 $\sigma^2 < 0$	

Parameters

<code>tident</code>	Duration of identification [s]	⊕100.0 Double (F64)
<code>irtype</code>	Controller type (control law)	⊕6 Long (I32)
	1 D 3 ID 5 PD 7 PID	
	2 I 4 P 6 PI	
<code>ispeed</code>	Desired closed loop speed	⊕2 Long (I32)
	1 Slow closed loop	
	2 Normal (middle fast) closed loop	
	3 Fast closed loop	

LC – Lead compensator

Block Symbol

Licence: STANDARD



Function Description

The LC block is a discrete simulator of derivative element

$$C(s) = \frac{td * s}{\frac{td}{nd} * s + 1},$$

where **td** is the derivative constant and **nd** determines the influence of parasite 1st order filter. It is recommended to use $2 \leq nd \leq 10$. If **ISSF** = **on**, then the state of the parasite filter is set to the steady value at the block initialization according to the input signal **u**.

The exact discretization at the sampling instants is used for discretization of the $C(s)$ transfer function.

Input

u	Analog input of the block	Double (F64)
----------	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
----------	----------------------------	--------------

Parameters

td	Derivative time constant	⊕1.0 Double (F64)
nd	Derivative filtering parameter	⊕10.0 Double (F64)
ISSF	Steady state at start-up off ... Zero initial state on Initial steady state	Bool

LLC – Lead-lag compensator

Block Symbol

Licence: STANDARD



Function Description

The LLC block is a discrete simulator of integral-derivative element

$$C(s) = \frac{a * \tau_{au} * s + 1}{\tau_{au} * s + 1},$$

where τ_{au} is the denominator time constant and the time constant of numerator is an a -multiple of τ_{au} ($a * \tau_{au}$). If ISSF = on, then the state of the filter is set to the steady value at the block initialization according to the input signal u .

The exact discretization at the sampling instants is used for discretization of the $C(s)$ transfer function. The sampling period used for discretization is equivalent to the execution period of the LLC block.

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------


Parameters

τ_{au}	Time constant	⊕1.0 Double (F64)
a	Numerator time constant coefficient	Double (F64)
ISSF	Steady state at start-up	Bool
	off ... Zero initial state	
	on Initial steady state	

MCU – Manual control unit

Block Symbol


Licence: STANDARD



Function Description

The MCU block is suitable for manual setting of the numerical output value y , e.g. a setpoint. In the local mode ($\text{LOC} = \text{on}$) the value is set using the buttons UP and DN. The rate of increasing/decreasing of the output y from the initial value y_0 is determined by the integration time constant T_m and pushing time of the buttons. After elapsing t_a seconds while a button is pushed, the rate is always multiplied by the factor q until the time t_f is elapsed. Optionally, the output y range can be constrained ($\text{SATF} = \text{on}$) by saturation limits lolim and hilim . If none of the buttons is pushed ($\text{UP} = \text{off}$ and $\text{DN} = \text{off}$), the output y tracks the input value tv . The tracking speed is controlled by the integration time constant tt .

In the remote mode ($\text{LOC} = \text{off}$), the input rv is optionally saturated ($\text{SATF} = \text{on}$) and copied to the output y . The detailed function of the block is depicted in the following diagram.

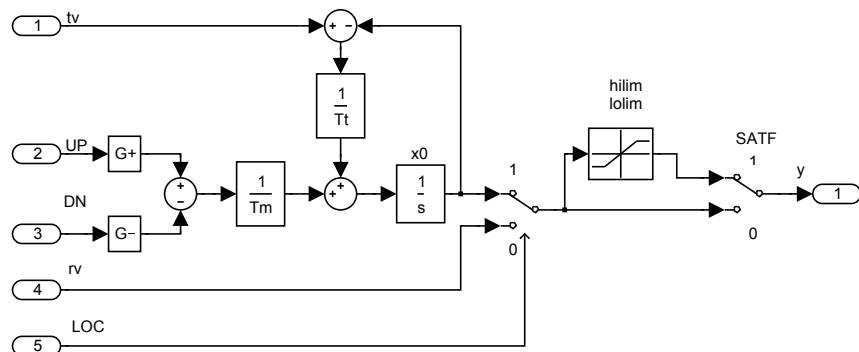

Inputs

tv	Tracking variable	Double (F64)
UP	The "up" signal	Bool
DN	The "down" signal	Bool
rv	Remote output value in the mode $\text{LOC} = \text{off}$	Double (F64)
LOC	Local or remote mode	Bool

Output

y	Analog output of the block	Double (F64)
---	----------------------------	--------------


Parameters

tt	Tracking time constant of the input tv	⊕1.0 Double (F64)
tm	Initial value of integration time constant	⊕100.0 Double (F64)
y0	Initial output value	Double (F64)
q	Multiplication quotient	⊕5.0 Double (F64)
ta	Interval after which the rate is changed [s]	⊕4.0 Double (F64)
tf	Interval after which the rate changes no more [s]	⊕8.0 Double (F64)
SATF	Saturation flag off ... Signal not limited on Saturation limits active	Bool
hilim	Upper limit of the output signal	⊕1.0 Double (F64)
lolim	Lower limit of the output signal	⊕-1.0 Double (F64)

PIDAT – PID controller with relay autotuner

Block Symbol

Licence: **AUTOTUNING**



Function Description

The PIDAT block has the same control function as the **PIDU** block. Additionally it is equipped with the relay autotuning function.

In order to perform the autotuning experiment, it is necessary to drive the system to approximately steady state (at a suitable working point), choose the type of controller to be autotuned (PI or PID) and activate the **TUNE** input by setting it to **on**. The controlled process is regulated by special adaptive relay controller in the experiment which follows. One point of frequency response is estimated from the data measured during the experiment. Based on this information the controller parameters are computed. The amplitude of the relay controller (the level of system excitation) and its hysteresis is defined by the **amp** and **hys** parameters. In case of **hys=0** the hysteresis is determined automatically according to the measurement noise properties on the controlled variable signal. The signal **TBSY** is set to **on** during the tuning experiment. A successful experiment is indicated by and the controller parameters can be found on the outputs **pk**, **pti**, **ptd**, **pnd** and **pb**. The **c** weighting factor is assumed (and recommended) **c=0**. A failure during the experiment causes **TE = on** and the output **ite** provides further information about the problem. It is recommended to increase the amplitude **amp** in the case of error. The controller is equipped with a built-in function which decreases the amplitude when the deviation of output from the initial steady state exceeds the **maxdev** limit. The tuning experiment can be prematurely terminated by activating the **TBRK** input.

Inputs

dv	Feedforward control variable	Double (F64)
sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable	Double (F64)
hv	Manual value	Double (F64)
MAN	Manual or automatic mode off ... Automatic mode on Manual mode	Bool

TUNE	Start the tuning experiment	Bool
TBRK	Stop the tuning experiment	Bool

Outputs

mv	Manipulated variable (controller output)	Double (F64)
de	Deviation error	Double (F64)
SAT	Saturation flag	Bool
	off ... The controller implements a linear control law	
	on The controller output is saturated	
TBSY	Tuner busy flag	Bool
TE	Tuning error	Bool
	off ... Autotuning successful	
	on An error occurred during the experiment	
ite	Error code; expected time (in seconds) to finishing the tuning experiment while the tuning experiment is active	Long (I32)
	1000 ... Signal/noise ratio too low	
	1001 ... Hysteresis too high	
	1002 ... Too tight termination rule	
	1003 ... Phase out of interval	
pk	Proposed controller gain	Double (F64)
pti	Proposed integral time constant	Double (F64)
ptd	Proposed derivative time constant	Double (F64)
pnd	Proposed derivative component filtering	Double (F64)
pb	Proposed weighting factor – proportional component	Double (F64)

Parameters

irtpe	Controller type (control law)	⊕6 Long (I32)
	1 D 4 P 7 PID	
	2 I 5 PD	
	3 ID 6 PI	
RACT	Reverse action flag	Bool
	off ... Higher mv → higher pv	
	on Higher mv → lower pv	
k	Controller gain K . By definition, the value 0 turns the controller off. Negative values are not allowed, use the RACT parameter for such a purpose.	Double (F64) ↓0.0 ⊕1.0
ti	Integral time constant T_i . The value 0 disables the integrating part (the same effect as disabling it by the irtpe parameter).	Double (F64) ↓0.0 ⊕4.0
td	Derivative time constant T_d . The value 0 disables the derivative part (the same effect as disabling it by the irtpe parameter).	Double (F64) ↓0.0 ⊕1.0
nd	Derivative filtering parameter N . The value 0 disables the derivative part (the same effect as disabling it by the irtpe parameter).	Double (F64) ↓0.0 ⊕10.0

b	Setpoint weighting – proportional part	$\downarrow 0.0$	$\odot 1.0$	Double (F64)
c	Setpoint weighting – derivative part	$\downarrow 0.0$		Double (F64)
tt	Tracking time constant.	$\downarrow 0.0$	$\odot 1.0$	Double (F64)
hilim	Upper limit of the controller output		$\odot 1.0$	Double (F64)
lolim	Lower limit of the controller output		$\odot -1.0$	Double (F64)
iainf	Type of apriori information		$\odot 1$	Long (I32)
	1 No apriori information			
	2 Astatic process (process with integration)			
	3 Low order process			
	4 Static process + slow closed loop step response			
	5 Static process + middle fast (normal) closed loop step response			
	6 Static process + fast closed loop step response			
k0	Static gain of the process (must be provided in case of iainf = 3, 4, 5)		$\odot 1.0$	Double (F64)
n1	Maximum number of half-periods for estimation of frequency response point		$\odot 20$	Long (I32)
mm	Maximum number of half-periods for averaging		$\odot 4$	Long (I32)
amp	Relay controller amplitude		$\odot 0.1$	Double (F64)
uhys	Relay controller hysteresis			Double (F64)
ntime	Length of noise amplitude estimation period at the beginning of the tuning experiment [s]		$\odot 5.0$	Double (F64)
rerrap	Termination value of the oscillation amplitude relative error		$\odot 0.1$	Double (F64)
aerrph	Termination value of the absolute error in oscillation phase		$\odot 10.0$	Double (F64)
maxdev	Maximal admissible deviation error from the initial steady state		$\odot 1.0$	Double (F64)

It is recommended not to change the parameters **n1**, **mm**, **ntime**, **rerrap** and **aerrph**.

PIDE – PID controller with defined static error

Block Symbol

Licence: **ADVANCED**



Function Description

The **PIDE** block is a basis for creating a modified PI(D) controller which differs from the standard PI(D) controller (the **PIDU** block) by having a finite static gain (in fact, the value ε which causes the saturation of the output is entered). In the simplest case it can work autonomously and provide the standard functionality of the modified PID controller with two degrees of freedom in the automatic (**MAN = off**) or manual mode (**MAN = on**).

If in automatic mode and if the saturation limits are not active, the controller implements a linear control law given by

$$U(s) = \pm K \left[bW(s) - Y(s) + \frac{1}{T_i s + \beta} E(s) + \frac{T_d s}{\frac{T_d s}{N} + 1} (cW(s) - Y(s)) \right] + Z(s),$$

where

$$\beta = \frac{K\varepsilon}{1 - K\varepsilon}$$

$U(s)$ is the Laplace transform of the manipulated variable **mv**, $W(s)$ is the Laplace transform of the setpoint **sp**, $Y(s)$ is the Laplace transform of the process variable **pv**, $E(s)$ is the Laplace transform of the deviation error, $Z(s)$ is the Laplace transform of the feedforward control variable **dv** and $K, T_i, T_d, N, \varepsilon (= b_p/100)$, b and c are the controller parameters. The sign of the right hand side depends on the parameter **RACT**. The range of the manipulated variable **mv** (position controller output) is limited by parameters **hilim**, **lolim**.

By connecting the output **mv** of the controller to the controller input **tv** and properly setting the tracking time constant **tt** we obtain the bumpless operation of the controller in the case of the mode switching (manual, automatic) and also the correct operation of the controller when saturation of the output **mv** occurs (antiwindup).

In the manual mode (**MAN = on**), the input **hv** is copied to the output **mv** unless saturated. In this mode the inner controller state tracks the signal connected to the **tv** input so the successive switching to the automatic mode is bumpless. But the tracking is not precise for $\varepsilon > 0$.

Inputs

dv	Feedforward control variable	Double (F64)
sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable	Double (F64)
hv	Manual value	Double (F64)
MAN	Manual or automatic mode off ... Automatic mode on Manual mode	Bool

Outputs

mv	Manipulated variable (controller output)	Double (F64)
de	Deviation error	Double (F64)
SAT	Saturation flag off ... The controller implements a linear control law on The controller output is saturated	Bool

Parameters

irtype	Controller type (control law) 1 D 4 P 7 PID 2 I 5 PD 3 ID 6 PI	⊕6 Long (I32)
RACT	Reverse action flag off ... Higher mv → higher pv on Higher mv → lower pv	Bool
k	Controller gain K	↓0.0 ⊕1.0 Double (F64)
ti	Integral time constant T_i	↓0.0 ⊕4.0 Double (F64)
td	Derivative time constant T_d	↓0.0 ⊕1.0 Double (F64)
nd	Derivative filtering parameter N	↓0.0 ⊕10.0 Double (F64)
b	Setpoint weighting – proportional part	↓0.0 ⊕1.0 Double (F64)
c	Setpoint weighting – derivative part	↓0.0 Double (F64)
tt	Tracking time constant. No meaning for controllers without integrator.	↓0.0 ⊕1.0 Double (F64)
bp	Static error coefficient	Double (F64)
hilim	Upper limit of the controller output	⊕1.0 Double (F64)
lolim	Lower limit of the controller output	⊕-1.0 Double (F64)

PIDGS – PID controller with gain scheduling

Block Symbol

Licence: **ADVANCED**



Function Description

The functionality of the **PIDGS** block is completely equivalent to the **PIDU** block. The only difference is that the **PIDGS** block has at most six sets of basic PID controller parameters and allow bumpless switching of these sets by the **ip** (parameter set index) or **vp** inputs. In the latter case it is necessary to set **GSCF = on** and provide an array of threshold values **thrsha**. The following rules define the active parameter set: the set 0 is active for **vp < thrsha(0)**, the set 1 for **thrsha(1) < vp < thrsha(2)** etc. till the set 5 for **thrsha(5) < vp**. The index of the active parameter set is available at the **kp** output.

Inputs

dv	Feedforward control variable	Double (F64)
sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable	Double (F64)
hv	Manual value	Double (F64)
MAN	Manual or automatic mode off Automatic mode on Manual mode	Bool
IH	Integrator hold off Integration enabled on Integration disabled	Bool
ip	Parameter set index	↓0 ↑5 Long (I32)
vp	Switching analog signal	Double (F64)

Outputs

mv	Manipulated variable (controller output)	Double (F64)
dmv	Controller velocity output (difference)	Double (F64)
de	Deviation error	Double (F64)
SAT	Saturation flag off The controller implements a linear control law on The controller output is saturated	Bool

kp	Active parameter set index	Long (I32)
----	----------------------------	------------


Parameters

hilim	Upper limit of the controller output	$\odot 1.0$	Double (F64)
lolim	Lower limit of the controller output	$\odot -1.0$	Double (F64)
dz	Dead zone		Double (F64)
icotype	Controller output type	$\odot 1$	Long (I32)
	1 Analog output		
	2 Pulse width modulation (PWM)		
	3 Step controller unit with position feedback (SCU)		
	4 Step controller unit without position feedback (SCUV)		
npars	Number of controller parameter sets	$\odot 6$	Long (I32)
GSCF	Switch parameters by analog signal vp		Bool
	off ... Index-based switching		
	on Analog signal based switching		
hys	Hysteresis for controller parameters switching		Double (F64)
irtypea	Vector of controller types (control laws)	$\odot [6 \ 6 \ 6 \ 6 \ 6 \ 6]$	Byte (U8)
	1 D 4 P 7 PID		
	2 I 5 PD		
	3 ID 6 PI		
RACTA	Vector of reverse action flags	$\odot [0 \ 0 \ 0 \ 0 \ 0 \ 0]$	Bool
	0 Higher mv → higher pv		
	1 Higher mv → lower pv		
ka	Vector of controller gains K	$\odot [1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0]$	Double (F64)
tia	Vector of integral time constants T_i	$\odot [4.0 \ 4.0 \ 4.0 \ 4.0 \ 4.0 \ 4.0]$	Double (F64)
tda	Vector of derivative time constants T_d	$\odot [1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0]$	Double (F64)
nda	Vector of derivative filtering parameters N	$\odot [10.0 \ 10.0 \ 10.0 \ 10.0 \ 10.0 \ 10.0]$	Double (F64)
ba	Setpoint weighting factors – proportional part	$\odot [1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0]$	Double (F64)
ca	Setpoint weighting factors – derivative part	$\odot [0.0 \ 0.0 \ 0.0 \ 0.0 \ 0.0 \ 0.0]$	Double (F64)
tta	Vector of tracking time constants	$\odot [1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0 \ 1.0]$	Double (F64)
thrsha	Vector of thresholds for switching the parameters	$\odot [0.1 \ 0.2 \ 0.3 \ 0.4 \ 0.5 \ 0]$	Double (F64)

PIDMA – PID controller with moment autotuner

Block Symbol

Licence: **AUTOTUNING**



Function Description

The **PIDMA** block has the same control function as the **PIDU** block. Additionally it is equipped with the moment autotuning function.

In the automatic mode (**MAN = off**), the block **PIDMA** implements the PID control law with two degrees of freedom in the form

$$U(s) = \pm K \left\{ bW(s) - Y(s) + \frac{1}{T_i s} [W(s) - Y(s)] + \frac{T_d s}{\frac{T_d}{N} s + 1} [cW(s) - Y(s)] \right\} + Z(s)$$

where $U(s)$ is Laplace transform of the manipulated variable **mv**, $W(s)$ is Laplace transform of the setpoint variable **sp**, $Y(s)$ is Laplace transform of the process variable **pv**, $Z(s)$ is Laplace transform of the feedforward control variable **dv** and K , T_i , T_d , N , b and c are the parameters of the controller. The sign of the right hand side depends on the parameter **RACT**. The range of the manipulated variable **mv** (position controller output) is limited by parameters **hilim**, **lolim**. The parameter **dz** determines the dead zone in the integral part of the controller. The integral part of the control law can be switched off and fixed on the current value by the integrator hold input **IH = on**. For the proper function of the controller it is necessary to connect the output **mv** of the controller to the controller input **tv** and properly set the tracking time constant **tt**.


The rule of thumb for a PID controller is $tt \approx \sqrt{T_i T_d}$. For a PI controller the formula is $tt \approx T_i/2$. In this way we obtain the bumpless operation of the controller in the case of the mode switching (manual, automatic) and also the correct operation of the controller when saturation of the output **mv** occurs (antiwindup).

The additional outputs **dmv**, **de** and **SAT** generate the velocity output (difference of **mv**), deviation error and saturation flag, respectively.

If the **PIDMA** block is connected with the block **SCUV** to configure the 3-point step controller without the positional feedback, then the parameter **icotype** must be set to **4** and the meaning of the outputs **mv** and **dmv** and **SAT** is modified in the following way: **mv** and **dmv** give the PD part and difference of I part of the control law, respectively, and

SAT provides the information for the SCUV block whether the deviation error is less than the dead zone **dz** in the automatic mode. In this case, the setpoint weighting factor **c** should be zero.


In the manual mode (**MAN = on**), the input **hv** is copied to the output **mv** unless saturated. The overall control function of the PIDMA block is quite clear from the following diagram:

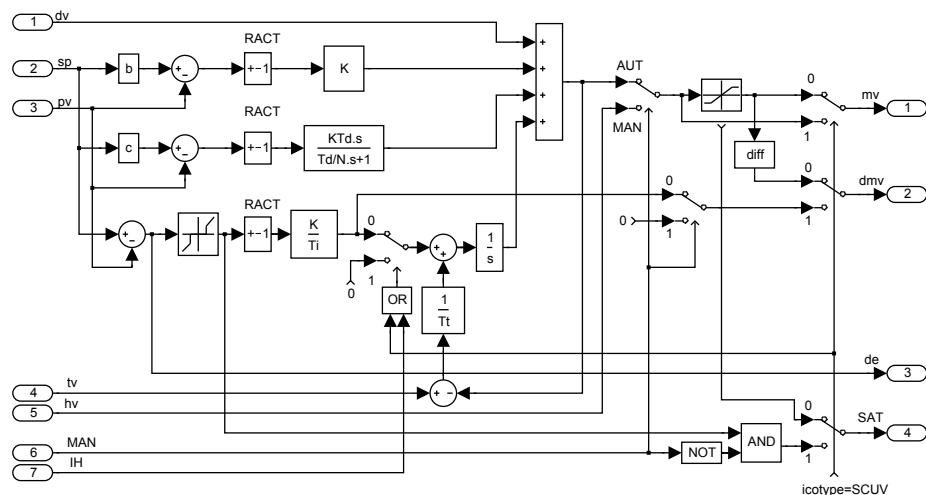

The block **PIDMA** extends the control function of the standard PID controller by the built in autotuning feature. Before start of the autotuner the operator have to reach the steady state of the process at a suitable working point (in manual or automatic mode) and specify the required type of the controller **ittype** (PI or PID) and other tuning parameters (**iainf**, **DGC**, **tdg**, **tn**, **amp**, **dy** and **ispeed**). The identification experiment is started by the input **TUNE** (input **TBRK** finishes the experiment). In this mode (**TBSY = on**), first of all the noise and possible drift gradient (**DGC = on**) are estimated during the user specified time (**tdg+tn**) and then the rectangle pulse is applied to the input of the process and the first three process moments are identified from the pulse response. The amplitude of the pulse is set by the parameter **amp**. The pulse is finished when the process variable **PV** deviates from the steady value more than the **dy** threshold defines. The threshold is an absolute difference, therefore it is always a positive value. The duration of the tuning experiment depends on the dynamic behavior of the process. The remaining time to the end of the tuning is provided by the output **trem**.

If the identification experiment is properly finished (**TE = off**) and the input **ips** is equal to zero, then the optimal parameters immediately appear on the block outputs **pk**, **pti**, **ptd**, **pnd**, **pb**, **pc**. In the opposite case (**TE = on**) the output **ite** specifies the experiment error more closely. Other values of the **ips** input are reserved for custom specific purposes.

The function of the autotuner is illustrated in the following picture.

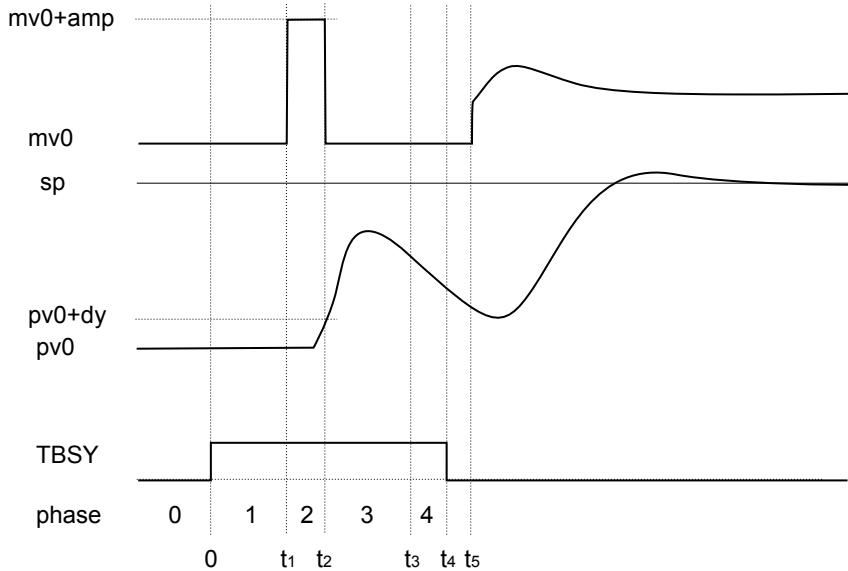

During the experiment, the output `ite` indicates the autotuner phases. In the phase of estimation of the response decay rate (`ite = -4`) the tuning experiment may be finished manually before its regular end. In this case the controller parameters are designed but the potential warning is indicated by setting the output `ite=100`.

At the end of the experiment (TBSY on→off), the function of the controller depends on the current controller mode. If the `TAFF = on` the designed controller parameters are immediately accepted.

Inputs

<code>dv</code>	Feedforward control variable	<code>Double (F64)</code>
<code>sp</code>	Setpoint variable	<code>Double (F64)</code>
<code>pv</code>	Process variable	<code>Double (F64)</code>
<code>tv</code>	Tracking variable	<code>Double (F64)</code>
<code>hv</code>	Manual value	<code>Double (F64)</code>
<code>MAN</code>	Manual or automatic mode <code>off</code> ... Automatic mode <code>on</code> Manual mode	<code>Bool</code>
<code>IH</code>	Integrator hold <code>off</code> ... Integration enabled <code>on</code> Integration disabled	<code>Bool</code>
<code>TUNE</code>	Start the tuning experiment (<code>off→on</code>) or force transition to the next tuning phase (see the description of the <code>ite</code> output)	<code>Bool</code>
<code>TBRK</code>	Stop the tuning experiment	<code>Bool</code>
<code>TAFF</code>	Tuning affirmation; determines the way the computed parameters are handled <code>off</code> ... Parameters are only computed <code>on</code> Parameters are set into the control law	<code>Bool</code>

ips	Meaning of the output signals pk, pti, ptd, pnd, pb and pc	Long (I32)
0	Designed parameters k, ti, td, nd, b and c of the PID control law	
1	Process moments: static gain (pk), resident time constant (pti), measure of the system response length (ptd)	
2	Three-parameter first-order plus dead-time model: static gain (pk), dead-time (pti), time constant (ptd)	
3	Three-parameter second-order plus dead-time model with double time constant: static gain (pk), dead-time (pti), time constant (ptd)	
4	Estimated boundaries for manual fine-tuning of the PID controller (irtype = 7) gain k: upper boundary k_{hi} (pk), lower boundary k_{lo} (pti)	
>99 ...	Reserved for diagnostic purposes	

Outputs

mv	Manipulated variable (controller output)	Double (F64)
d_{mv}	Controller velocity output (difference)	Double (F64)
de	Deviation error	Double (F64)
SAT	Saturation flag	Bool
	off ... The controller implements a linear control law	
	on The controller output is saturated	
TBSY	Tuner busy flag	Bool
TE	Tuning error	Bool
	off ... Autotuning successful	
	on An error occurred during the experiment	
ite	Error code	Long (I32)
	<i>Tuning error codes (after the experiment):</i>	
	0	No error or waiting for steady state
	1	Too small pulse getdown threshold
	2	Too large pulse amplitude
	3	Steady state condition violation
	4	Too small pulse aplitude
	5	Peak search procedure failure
	6	Output saturation occurred during experiment
	7	Selected controller type not supported
	8	Process not monotonous
	9	Extrapolation failure
	10	Unexpected values of moments (fatal)
	11	Abnormal manual termination of tuning
	12	Wrong direction of manipulated variable
	100 ...	Manual termination of tuning (warning)

Tuning phases codes (during the experiment):

- 0 Steady state reaching before the start of the experiment
- 1 Drift gradient and noise estimation phase
- 2 Pulse generation phase
- 3 Searching the peak of system response
- 4 Estimation of the system response decay rate

Remark about terminating the tuning phases

TUNE .. The rising edge of the TUNE input during the phases -2, -3 and -4 causes the finishing of the current phase and transition to the next one (or finishing the experiment in the phase -4).

trem	Estimated time to finish the tuning experiment [s]	Double (F64)
pk	Proposed controller gain K ($\text{ips} = 0$)	Double (F64)
pti	Proposed integral time constant T_i ($\text{ips} = 0$)	Double (F64)
ptd	Proposed derivative time constant T_d ($\text{ips} = 0$)	Double (F64)
pnd	Proposed derivative component filtering N ($\text{ips} = 0$)	Double (F64)
pb	Proposed weighting factor – proportional component ($\text{ips} = 0$)	Double (F64)
pc	Proposed weighting factor – derivative component ($\text{ips} = 0$)	Double (F64)

Parameters

irtyp	Controller type (control law)	⊕6 Long (I32)
	1 D 4 P 7 PID	
	2 I 5 PD	
	3 ID 6 PI	
RACT	Reverse action flag	Bool
	off ... Higher mv → higher pv	
	on Higher mv → lower pv	
k	Controller gain K . By definition, the value 0 turns the controller off. Negative values are not allowed, use the RACT parameter for such a purpose.	Double (F64) ↓0.0 ⊕1.0
ti	Integral time constant T_i . The value 0 disables the integrating part (the same effect as disabling it by the irtyp parameter).	Double (F64) ↓0.0 ⊕4.0
td	Derivative time constant T_d . The value 0 disables the derivative part (the same effect as disabling it by the irtyp parameter).	Double (F64) ↓0.0 ⊕1.0
nd	Derivative filtering parameter N . The value 0 disables the derivative part (the same effect as disabling it by the irtyp parameter).	Double (F64) ↓0.0 ⊕10.0
b	Setpoint weighting – proportional part	Double (F64) ↓0.0 ↑2.0 ⊕1.0
c	Setpoint weighting – derivative part	Double (F64) ↓0.0 ↑2.0

tt	Tracking time constant. The value 0 stands for an implicit value, which is $T_i/2$ or $\sqrt{T_i T_d}$ (see above) for controllers with integrating part. For controllers without integrating part, the value 0 disables tracking. If tracking is needed for a P or PD controller, it can be enabled by entering a positive value greater than the sampling time. It is not possible to turn off tracking for controllers with the integrating part (due to the windup effect).	$\downarrow 0.0 \odot 1.0$	Double (F64)
hilim	Upper limit of the controller output	$\odot 1.0$	Double (F64)
lolim	Lower limit of the controller output	$\odot -1.0$	Double (F64)
dz	Dead zone		Double (F64)
icotype	Controller output type	$\odot 1$	Long (I32)
	1 Analog output		
	2 Pulse width modulation (PWM)		
	3 Step controller unit with position feedback (SCU)		
	4 Step controller unit without position feedback (SCUV)		
ittype	Controller type to be designed	$\odot 6$	Long (I32)
	6 PI controller		
	7 PID controller		
iainf	Type of apriori information	$\odot 1$	Long (I32)
	1 Static process		
	2 Astatic process		
DGC	Drift gradient compensation	$\odot \text{on}$	Bool
	off ... Disabled		
	on Enabled		
tdg	Drift gradient estimation time [s]	$\odot 60.0$	Double (F64)
tn	Length of noise estimation period [s]	$\odot 5.0$	Double (F64)
amp	Tuning pulse amplitude	$\odot 0.5$	Double (F64)
dy	Tuning pulse get down threshold (absolute difference from the steady pv value)	$\downarrow 0.0 \odot 0.1$	Double (F64)
ispeed	Desired closed loop speed	$\odot 2$	Long (I32)
	1 Slow closed loop		
	2 Normal (middle fast) closed loop		
	3 Fast closed loop		
ipid	PID controller form	$\odot 1$	Long (I32)
	1 Parallel form		
	2 Series form		

PIDU – PID controller unit

Block Symbol

Licence: STANDARD



Function Description

The PIDU block is a basic block for creating a complete PID controller (or P, I, PI, PD, PID, PI+S). In the most simple case it works as a standalone unit with the standard PID controller functionality with two degrees of freedom. It can operate in automatic mode (**MAN = off**) or manual mode (**MAN = on**).

In the automatic mode (**MAN = off**), the block PIDU implements the PID control law with two degrees of freedom in the form

$$U(s) = \pm K \left\{ bW(s) - Y(s) + \frac{1}{T_i s} [W(s) - Y(s)] + \frac{T_d s}{\frac{T_d}{N} s + 1} [cW(s) - Y(s)] \right\} + Z(s)$$

where $U(s)$ is Laplace transform of the manipulated variable **mv**, $W(s)$ is Laplace transform of the setpoint variable **sp**, $Y(s)$ is Laplace transform of the process variable **pv**, $Z(s)$ is Laplace transform of the feedforward control variable **dv** and K , T_i , T_d , N , b and c are the parameters of the controller. The sign of the right hand side depends on the parameter **RACT**. The range of the manipulated variable **mv** (position controller output) is limited by parameters **hilim**, **lolim**. The parameter **dz** determines the dead zone in the integral part of the controller. The integral part of the control law can be switched off and fixed on the current value by the integrator hold input **IH** (**IH = on**). For the proper function of the controller it is necessary to connect the output **mv** of the controller to the controller input **tv** and properly set the tracking time constant **tt**.

The rule of thumb for a PID controller is $tt \approx \sqrt{T_i T_d}$. For a PI controller the formula is $tt \approx T_i/2$. In this way we obtain the bumpless operation of the controller in the case of the mode switching (manual, automatic) and also the correct operation of the controller when saturation of the output **mv** occurs (antiwindup).


By adjusting the **tt** parameter, it is possible to tune the behaviour at saturation limits (so-called bouncing from limits due to noise) and when switching multiple controllers (bump in the controller output occurs when switching controllers while the control error is non-zero).

The additional outputs **dmv**, **de** and **SAT** generate the velocity output (difference of **mv**), deviation error and saturation flag, respectively.

If the PIDU block is connected with the **SCUV** block to configure the 3-point step controller without the positional feedback, then the parameter **icotype** must be set to

4 and the meaning of the outputs **mv** and **dmv** and **SAT** is modified in the following way: **mv** and **dmv** give the PD part and difference of I part of the control law, respectively, and **SAT** provides the information for the **SCUV** block whether the deviation error is less than the dead zone **dz** in the automatic mode. In this case, the setpoint weighting factor **c** should be zero.

In the manual mode (**MAN = on**), the input **hv** is copied to the output **mv** unless saturated. The overall control function of the **PIDU** block is quite clear from the following diagram:

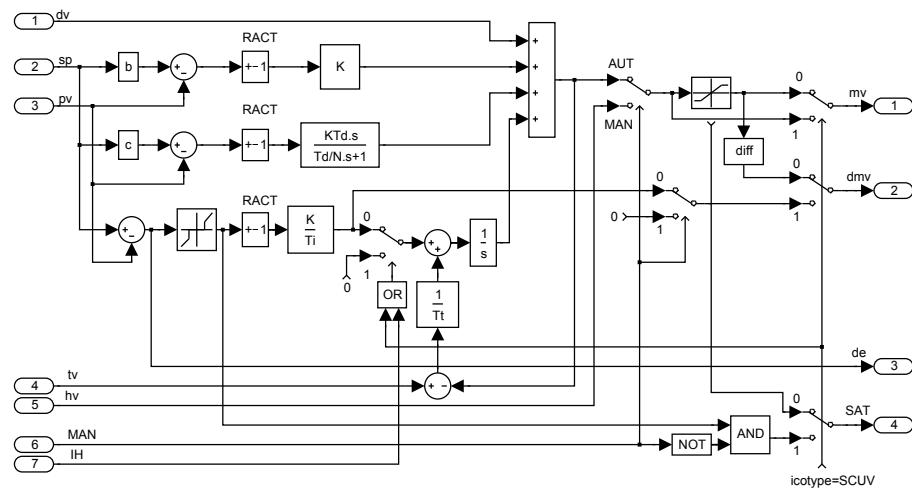

Inputs

dv	Feedforward control variable	Double (F64)
sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable	Double (F64)
hv	Manual value	Double (F64)
MAN	Manual or automatic mode off ... Automatic mode on Manual mode	Bool
IH	Integrator hold off ... Integration enabled on Integration disabled	Bool

Outputs

mv	Manipulated variable (controller output)	Double (F64)
dmv	Controller velocity output (difference)	Double (F64)
de	Deviation error	Double (F64)

SAT	Saturation flag	Bool
	off ... The controller implements a linear control law	
	on The controller output is saturated	

Parameters

irttype	Controller type (control law)	⊕6 Long (I32)
	1 D 4 P 7 PID	
	2 I 5 PD	
	3 ID 6 PI	
RACT	Reverse action flag	Bool
	off ... Higher mv → higher pv	
	on Higher mv → lower pv	
k	Controller gain K . By definition, the value 0 turns the controller off. Negative values are not allowed, use the RACT parameter for such a purpose.	Double (F64) ↓0.0 ⊕1.0
ti	Integral time constant T_i . The value 0 disables the integrating part (the same effect as disabling it by the irttype parameter).	Double (F64) ↓0.0 ⊕4.0
td	Derivative time constant T_d . The value 0 disables the derivative part (the same effect as disabling it by the irttype parameter).	Double (F64) ↓0.0 ⊕1.0
nd	Derivative filtering parameter N . The value 0 disables the derivative part (the same effect as disabling it by the irttype parameter).	Double (F64) ↓0.0 ⊕10.0
b	Setpoint weighting – proportional part	Double (F64) ↓0.0 ↑2.0 ⊕1.0
c	Setpoint weighting – derivative part	Double (F64) ↓0.0 ↑2.0
tt	Tracking time constant. The value 0 stands for an implicit value, which is $T_i/2$ or $\sqrt{T_i T_d}$ (see above) for controllers with integrating part. For controllers without integrating part, the value 0 disables tracking. If tracking is needed for a P or PD controller, it can be enabled by entering a positive value greater than the sampling time. It is not possible to turn off tracking for controllers with the integrating part (due to the windup effect).	Double (F64) ↓0.0 ⊕1.0
hilim	Upper limit of the controller output	⊕1.0 Double (F64)
lolim	Lower limit of the controller output	⊖1.0 Double (F64)
dz	Dead zone	Double (F64)
icotype	Controller output type	⊕1 Long (I32)
	1 Analog output	
	2 Pulse width modulation (PWM)	
	3 Step controller unit with position feedback (SCU)	
	4 Step controller unit without position feedback (SCUV)	

PIDUI – PID controller unit with variable parameters

Block Symbol

Licence: **ADVANCED**



Function Description

The functionality of the PIDUI block is completely equivalent to the [PIDU](#) block. The only difference is that the PID control algorithm parameters are defined by the input signals and therefore they can depend on the outputs of other blocks. This allows creation of special adaptive PID controllers.

Inputs

dv	Feedforward control variable	Double (F64)
sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable	Double (F64)
hv	Manual value	Double (F64)
MAN	Manual or automatic mode off ... Automatic mode on Manual mode	Bool
IH	Integrator hold off ... Integration enabled on Integration disabled	Bool
k	Controller gain K	Double (F64)
ti	Integral time constant T_i	Double (F64)
td	Derivative time constant T_d	Double (F64)
nd	Derivative filtering parameter N	Double (F64)
b	Setpoint weighting – proportional part	Double (F64)
c	Setpoint weighting – derivative part	Double (F64)

Outputs

mv	Manipulated variable (controller output)	Double (F64)
dmv	Controller velocity output (difference)	Double (F64)
de	Deviation error	Double (F64)

SAT	Saturation flag	Bool
	off ... The controller implements a linear control law	
	on The controller output is saturated	

Parameters

irtype	Controller type (control law)	⊕6 Long (I32)
	1 D 4 P 7 PID	
	2 I 5 PD	
	3 ID 6 PI	
RACT	Reverse action flag	Bool
	off ... Higher mv → higher pv	
	on Higher mv → lower pv	
tt	Tracking time constant	⊕1.0 Double (F64)
hilim	Upper limit of the controller output	⊕1.0 Double (F64)
lolim	Lower limit of the controller output	⊕-1.0 Double (F64)
dz	Dead zone	Double (F64)
icotype	Controller output type	⊕1 Long (I32)
	1 Analog output	
	2 Pulse width modulation (PWM)	
	3 Step controller unit with position feedback (SCU)	
	4 Step controller unit without position feedback (SCUV)	

POUT – Pulse output

Block Symbol

Licence: STANDARD



Function Description

The POUT block shapes the input pulses U in such a way, that the output pulse Y has a duration of at least **dtime** seconds and the idle period between two successive output pulses is at least **btime** seconds. The input pulse occurring sooner than the period of **btime** seconds since the last falling edge of the output signal elapses has no effect on the output signal Y.

Input

U	Logical input of the block	Bool
---	----------------------------	------

Output

Y	Logical output of the block	Bool
---	-----------------------------	------

Parameters

dtime	Minimum width of the output pulse [s]	$\odot 1.0$	Double (F64)
btime	Minimum delay between two successive output pulses [s]	$\odot 1.0$	Double (F64)

PRGM – Setpoint programmer


Block Symbol

Licence: STANDARD



Function Description

The PRGM block generates functions of time (programs) composed of n linear parts defined by $(n + 1)$ -dimensional vectors of time ($\mathbf{tm} = [t_0, \dots, t_n]$) and output values ($\mathbf{y} = [y_0, \dots, y_n]$). The generated time-course is continuous piecewise linear, see figure below. This block is most commonly used as a setpoint generator for a controller. The program generation starts when **RUN** = on. In the case of **RUN** = off the programmer is set back to the initial state. The input **DEF** = on sets the output **sp** to the value **spv**. It follows a ramp to the nearest future node of the time function when **DEF** = off. The internal time of the generator is not affected by this input. The input **HLD** = on freezes the output **sp** and the internal time, thus also the outputs **tsc**, **tt** and **rt**. The program follows from freezing point as planned when **HLD** = off unless the input **CON** = on at the moment when the signal **HLD** on → off. In that case the program follows a ramp to reach the node with index **ind** in time **trt**. The node index **ind** must be equal to or higher than the index of current sector **isc** (at the moment when **HLD** on → off). If **RPT** = on, the program is generated repeatedly.

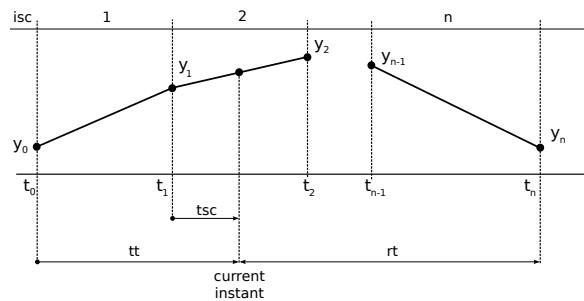

Inputs

RUN	Enable execution	Bool
DEF	Initialize sp to the value of spv	Bool
spv	Initializing constant	Double (F64)
HLD	Output and timer freezing	Bool

CON	Continue from defined node	Bool
ind	Index of the node to continue from	Long (I32)
trt	Time to reach the defined node with index ind	Double (F64)
RPT	Repetition flag	Bool

Outputs

sp	Setpoint variable (function value of the time function at given time)	Double (F64)
isc	Current function sector	Long (I32)
tsc	Time elapsed since the start of current sector	Double (F64)
tt	Time elapsed since the start of program generation	Double (F64)
rt	Remaining time till the end of program	Double (F64)
CNF	Flag indicating that the configured curve is being followed	Bool
E	Error flag – the node times are not ascending	Bool


Parameters

n	Number of sectors	$\downarrow 1 \uparrow 10000000$	$\odot 2$	Long (I32)
tmunits	Time units		$\odot 1$	Long (I32)
	1 seconds			
	2 minutes			
	3 hours			
tm	$(n + 1)$ -dimensional vector of ascending node times	$\odot [0 \ 1 \ 2]$		Double (F64)
y	$(n + 1)$ -dimensional vector of node values (values of the time function)		$\odot [0 \ 1 \ 0]$	Double (F64)

PSMPC – Pulse-step model predictive controller


Block Symbol

Licence: **ADVANCED**



Function Description

The PSMPC block can be used for control of hardly controllable linear time-invariant systems with manipulated value constraints (e.g. time delay or non-minimum phase systems). It is especially well suited for the case when fast transition without overshoot from one level of controlled variable to another is required. In general, the PSMPC block can be used where the PID controllers are commonly used.

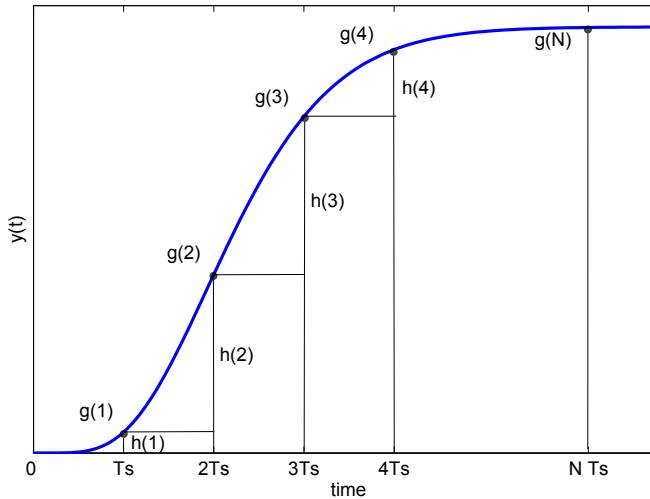

The PSMPC block is a predictive controller with explicitly defined constraints on the amplitude of manipulated variable.

The prediction is based on the discrete step response $g(j)$, $j = 1, \dots, N$ is used. The figure above shows how to obtain the discrete step response $g(j)$, $j = 0, 1, \dots, N$ and the discrete impulse response $h(j)$, $j = 0, 1, \dots, N$ with sampling period T_S from continuous step response. Note that N must be chosen such that $N \cdot T_S > t_{95}$, where t_{95} is the time to reach 95 % of the final steady state value.

For stable, linear and t-invariant systems with monotonous step response it is also possible to use the moment model set approach [4] and describe the system by only 3 characteristic numbers κ , μ , and σ^2 , which can be obtained easily from a very short

and simple experiment. The controlled system can be approximated by first order plus dead-time system


$$F_{FOPDT}(s) = \frac{K}{\tau s + 1} \cdot e^{-Ds}, \quad \kappa = K, \quad \mu = \tau + D, \quad \sigma^2 = \tau^2 \quad (7.1)$$

or second order plus dead-time system

$$F_{SOPDT}(s) = \frac{K}{(\tau s + 1)^2} \cdot e^{-Ds}, \quad \kappa = K, \quad \mu = 2\tau + D, \quad \sigma^2 = 2\tau^2 \quad (7.2)$$

with the same characteristic numbers. The type of approximation is selected by the `imtype` parameter.

To lower the computational burden of the open-loop optimization, the family of admissible control sequences contains only sequences in the so-called pulse-step shape depicted below:

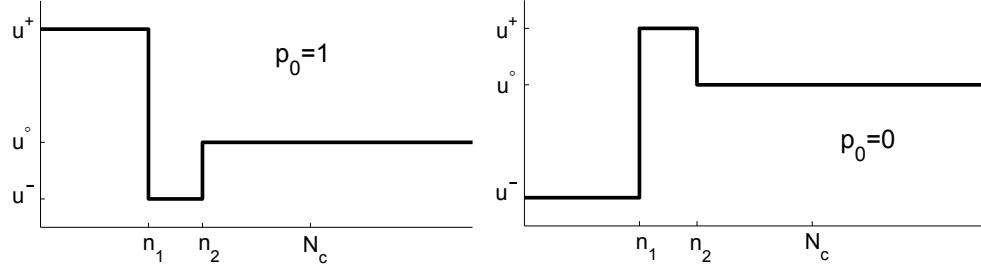

Note that each of these sequences is uniquely defined by only four numbers $n_1, n_2 \in \{0, \dots, N_C\}$, p_0 and $u^\infty \in \langle u^-, u^+ \rangle$, where $N_C \in \{0, 1, \dots\}$ is the control horizon and u^-, u^+ stand for the given lower and upper limit of the manipulated variable. The on-line optimization (with respect to p_0 , n_1 , n_2 and u^∞) minimizes the criterion

$$I = \sum_{i=N_1}^{N_2} \hat{e}(k+i|k)^2 + \lambda \sum_{i=0}^{N_C} \Delta \hat{u}(k+i|k)^2 \rightarrow \min, \quad (7.3)$$

where $\hat{e}(k+i|k)$ is the predicted control error at time k over the coincidence interval $i \in \{N_1, N_2\}$, $\Delta \hat{u}(k+i|k)$ are the differences of the control signal over the interval $i \in \{0, N_C\}$ and λ penalizes the changes in the control signal. The algorithm used for solving the optimization task (7.3) combines brute force and the least squares method. The value u^∞ is determined using the least squares method for all admissible combinations of p_0 , n_1 and n_2 and the optimal control sequence is selected afterwards. The selected sequence in the pulse-step shape is optimal in the open-loop sense. To convert from open-loop to closed-loop control strategy, only the first element of the computed control sequence is applied and the whole optimization procedure is repeated in the next sampling instant.

The parameters N_1 , N_2 , H_C , and λ in the criterion (7.3) take the role of design parameters. Only the last parameter λ is meant for manual tuning of the controller. In the case the model in the form (7.1) or (7.2) is used, the parameters N_1 and N_2 are determined automatically with respect to the μ and σ^2 characteristic numbers. The

controller can be then effectively tuned by adjusting the characteristic numbers κ , μ and σ^2 .

Warning

It is necessary to set the **nsr** parameter to sufficiently large number to avoid Matlab/Simulink crash when using the **PSMPC** block for simulation purposes. Especially when using FOPDT or SOPDT model, the **nsr** parameter must be greater than the length of the internally computed discrete step response.

Inputs

sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable (applied control signal)	Double (F64)
hv	Manual value	Double (F64)
MAN	Manual or automatic mode	Bool
	off ... Automatic mode	
	on Manual mode	

Outputs

mv	Manipulated variable (controller output)	Double (F64)
dmv	Controller velocity output (difference)	Double (F64)
de	Deviation error	Double (F64)
SAT	Saturation flag	Bool
	off ... The controller implements a linear control law	
	on The controller output is saturated	
pve	Predicted process variable based on the controlled process model	Double (F64)
iE	Error code	Long (I32)
	0 No error	
	1 Incorrect FOPDT model	
	2 Incorrect SOPDT model	
	3 Invalid step response sequence	

Parameters

nc	Control horizon length (N_C)	⊕5	Long (I32)
np1	Start of coincidence interval (N_1)	⊕1	Long (I32)
np2	End of coincidence interval (N_2)	⊕10	Long (I32)
lambda	Control signal penalization coefficient (λ)	⊕0.05	Double (F64)
umax	Upper limit of the controller output (u^+)	⊕1.0	Double (F64)
umin	Lower limit of the controller output (u^-)	⊕-1.0	Double (F64)

imtype	Controlled process model type 1 FOPDT model (7.1) 2 SOPDT model (7.2) 3 Discrete step response	$\odot 3$ Long (I32)
kappa	Static gain (κ)	$\odot 1.0$ Double (F64)
mu	Resident time constant (μ)	$\odot 20.0$ Double (F64)
sigma	Measure of the system response length ($\sqrt{\sigma^2}$)	$\odot 10.0$ Double (F64)
nsr	Length of the discrete step response (N), see the warning above $\downarrow 10 \uparrow 10000000 \odot 11$	Long (I32)
sr	Discrete step response sequence ($[g(1), \dots, g(N)]$) $\odot [0 \ 0.2642 \ 0.5940 \ 0.8009 \ 0.9084 \ 0.9596 \ 0.9826 \ 0.9927 \ 0.9970 \ 0.9988 \ 0.9995]$	Double (F64)

PWM – Pulse width modulation

Block Symbol

Licence: STANDARD



Function Description

The PWM block implements a pulse width modulation algorithm for proportional actuators. In the general, it is assumed the input signal u ranges in the interval from -1 to +1. The width L of the output pulse is computed by the expression:

$$L = \text{pertm} * |u|,$$

where `pertm` is the modulation time period. If $u > 0$ ($u < 0$), the pulse is generated in the output UP (DN). However, the width of the generated pulses are affected by other parameters of the block. The asymmetry factor `asyfac` determines the ratio of negative pulses duration to positive pulses duration. The modified pulse widths are given by:

$$\begin{aligned} \text{if } u > 0 \text{ then } L(\text{UP}) &:= \begin{cases} L & \text{for } \text{asyfac} \leq 1.0 \\ L/\text{asyfac} & \text{for } \text{asyfac} > 1.0 \end{cases} \\ \text{if } u < 0 \text{ then } L(\text{DN}) &:= \begin{cases} L * \text{asyfac} & \text{for } \text{asyfac} \leq 1.0 \\ L & \text{for } \text{asyfac} > 1.0 \end{cases} \end{aligned}$$

Further, if the computed width is less than minimum pulse duration `dtime` the width is set to zero. If the pulse width differs from the modulation period `pertm` less than minimum pulse break time `btime` then width of the pulse is set to `pertm`. In the case the positive pulse is succeeded by the negative one (or vice versa) the latter pulse is possibly shifted in such a way that the distance between these pulses is at least equal to the minimum off time `offtime`. If `SYNCH = on`, then the change of the input value u causes the immediate recalculation of the current pulse widths if a synchronization condition is violated.

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Outputs

UP	The "up" signal	Bool
DN	The "down" signal	Bool

Parameters

pertm	Modulation period length [s]	$\odot 10.0$	Double (F64)
dtime	Minimum width of the output pulse [s]	$\odot 0.1$	Double (F64)
btime	Minimum delay between output pulses [s]	$\odot 0.1$	Double (F64)
offftime	Minimum delay when altering direction [s]	$\odot 1.0$	Double (F64)
asyfac	Asymmetry factor	$\odot 1.0$	Double (F64)
SYNCH	Synchronization flag of the period start off ... Synchronization disabled on Synchronization enabled		Bool

RLY – Relay with hysteresis


Block Symbol

Licence: STANDARD



Function Description

The RLY block transforms the input signal u to the output signal y according to the figure below.

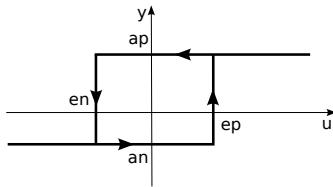

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Output

y	Analog output of the block	Double (F64)
-----	----------------------------	--------------

Parameters

ep	The value $u > ep$ causes $y = ap$ ("On")	$\odot 1.0$	Double (F64)
en	The value $u < en$ causes $y = an$ ("Off")	$\odot -1.0$	Double (F64)
ap	Output value y in the "On" state	$\odot 1.0$	Double (F64)
an	Output value y in the "Off" state	$\odot -1.0$	Double (F64)
$y0$	Initial output value at start-up		Double (F64)

SAT – Saturation with variable limits

Block Symbol

Licence: STANDARD



Function Description

The SAT block copies the input u to the output y if the input signal satisfies $\text{lolim} \leq u$ and $u \leq \text{hilim}$, where lolim and hilim are state variables of the block. If $u < \text{lolim}$ ($u > \text{hilim}$), then $y = \text{lolim}$ ($y = \text{hilim}$). The upper and lower limits are either constants ($\text{HLD} = \text{on}$) defined by parameters hilim0 and lolim0 respectively or input-driven variables ($\text{HLD} = \text{off}$, hi and lo inputs). The maximal rate at which the active limits may vary is given by time constants tp (positive slope) and tn (negative slope). These rates are active even if the saturation limits are changed manually ($\text{HLD} = \text{on}$) using the hilim0 and lolim0 parameters. To allow immediate changes of the saturation limits, set $\text{tp} = 0$ and $\text{tn} = 0$. The HL and LL outputs indicate the upper and lower saturation respectively.

If necessary, the hilim0 and lolim0 parameters are used as initial values for the input-driven saturation limits.

Inputs

u	Analog input of the block	Double (F64)
hi	Upper limit of the output signal (for the case $\text{HLD} = \text{off}$)	Double (F64)
lo	Lower limit of the output signal (for the case $\text{HLD} = \text{off}$)	Double (F64)

Outputs

y	Analog output of the block	Double (F64)
HL	Upper limit saturation indicator	Bool
LL	Lower limit saturation indicator	Bool

Parameters

tp	Time constant defining the maximal positive slope of active limit changes	Double (F64) ⊕1.0
tn	Time constant defining the maximum negative slope of active limit changes	Double (F64) ⊕1.0
hilim0	Upper limit of the output (valid for $\text{HLD} = \text{on}$)	Double (F64) ⊕1.0
lolim0	Lower limit of the output (valid for $\text{HLD} = \text{on}$)	Double (F64) ⊕-1.0

HLD Fixed saturation limits \odot on Bool
 off ... Variable limits on Fixed limits

SC2FA – State controller for 2nd order system with frequency autotuner

Block Symbol

Licence: AUTOTUNING



Function Description

The **SC2FA** block implements a state controller for 2nd order system (7.4) with frequency autotuner. It is well suited especially for control (active damping) of lightly damped systems ($\xi < 0.1$). But it can be used as an autotuning controller for arbitrary system which can be described with sufficient precision by the transfer function

$$F(s) = \frac{b_1 s + b_0}{s^2 + 2\xi\Omega s + \Omega^2}, \quad (7.4)$$

where $\Omega > 0$ is the natural (undamped) frequency, ξ , $0 < \xi < 1$, is the damping coefficient and b_1, b_0 are arbitrary real numbers. The block has two operating modes: "Identification and design mode" and "Controller mode".

The "Identification and design mode" is activated by the binary input **ID** = **on**. Two points of frequency response with given phase delay are measured during the identification experiment. Based on these two points a model of the controlled system is built. The experiment itself is initiated by the rising edge of the **RUN** input. A harmonic signal with amplitude **uamp**, frequency ω and bias **ubias** then appears at the output **mv**. The frequency runs through the interval $\langle wb, wf \rangle$, it increases gradually. The current frequency is copied to the output **w**. The rate at which the frequency changes (sweeping) is determined by the **cp** parameter, which defines the relative shrinking of the initial period $T_b = \frac{2\pi}{wb}$ of the exciting sine wave in time T_b , thus

$$c_p = \frac{wb}{\omega(T_b)} = \frac{wb}{wbe^{\gamma T_b}} = e^{-\gamma T_b}.$$

The **cp** parameter usually lies within the interval $cp \in (0,95; 1)$. The lower the damping coefficient ξ of the controlled system is, the closer to one the **cp** parameter must be.


At the beginning of the identification period the exciting signal has a frequency of $\omega = \text{wb}$. After a period of **stime** seconds the estimation of current frequency response point starts. Its real and imaginary parts are available at the **xre** and **xim** outputs. If the **MANF** parameter is set to 0, then the frequency sweeping is stopped two times during the identification period. This happens when points with phase delay of **ph1** and **ph2** are reached for the first time. The breaks are **stime** seconds long. Default phase delay values are -60° and -120° , respectively, but these can be changed to arbitrary values within the interval $(-360^\circ, 0^\circ)$, where $\text{ph1} > \text{ph2}$. At the end of each break an arithmetic average is computed from the last **iavg** frequency point estimates. Thus we get two points of frequency response which are successively used to compute the controlled process model in the form of (7.4). If the **MANF** parameter is set to 1, then the selection of two frequency response points is manual. To select the frequency, set the input **HLD** = **on**, which stops the frequency sweeping. The identification experiment continues after returning the input **HLD** to 0. The remaining functionality is unchanged.

It is possible to terminate the identification experiment prematurely in case of necessity by the input **BRK** = **on**. If the two points of frequency response are already identified at that moment, the controller parameters are designed in a standard way. Otherwise the controller design cannot be performed and the identification error is indicated by the output signal **IDE** = **on**.


The **IDBSY** output is set to 1 during the "identification and design" phase. It is set back to 0 after the identification experiment finishes. A successful controller design is indicated by the output **IDE** = **off**. During the identification experiment the output **iIDE** displays the individual phases of the identification: **iIDE** = -1 means approaching the first point, **iIDE** = 1 means the break at the first point, **iIDE** = -2 means approaching the second point, **iIDE** = 2 means the break at the second point and **iIDE** = -3 means the last phase after leaving the second frequency response point. An error during the identification phase is indicated by the output **IDE** = **on** and the output **iIDE** provides more information about the error.

The computed state controller parameters are taken over by the control algorithm as soon as the **SETC** input is set to 1 (i.e. immediately if **SETC** is constantly set to **on**). The identified model and controller parameters can be obtained from the **p1**, **p2**, ..., **p6** outputs after setting the **ips** input to the appropriate value. After a successful identification it is possible to generate the frequency response of the controlled system model, which is initiated by a rising edge at the **MFR** input. The frequency response can be read from the **w**, **xre** and **xim** outputs, which allows easy confrontation of the model and the measured data.

The "Controller mode" (binary input **ID** = **off**) has manual (**MAN** = **on**) and automatic (**MAN** = **off**) submodes. After a cold start of the block with the input **ID** = **off** it is assumed that the block parameters **mb0**, **mb1**, **ma0** and **ma1** reflect formerly identified coefficients b_0 , b_1 , a_0 and a_1 of the controlled system transfer function and the state controller design is performed automatically. Moreover if the controller is in the automatic mode and **SETC** = **on**, then the control law uses the parameters from the very beginning. In this way the identification phase can be skipped when starting the block repeatedly.

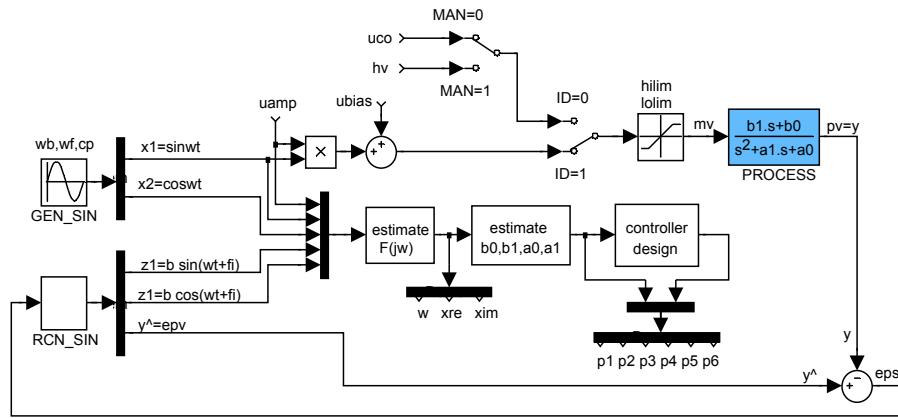

The diagram above is a simplified inner structure of the frequency autotuning part of the controller. The diagram below shows the state feedback, observer and integrator anti-wind-up. The diagram does not show the fact, that the controller design block automatically adjusts the observer and state feedback parameters f_1, \dots, f_5 after identification experiment (and **SETC = on**).

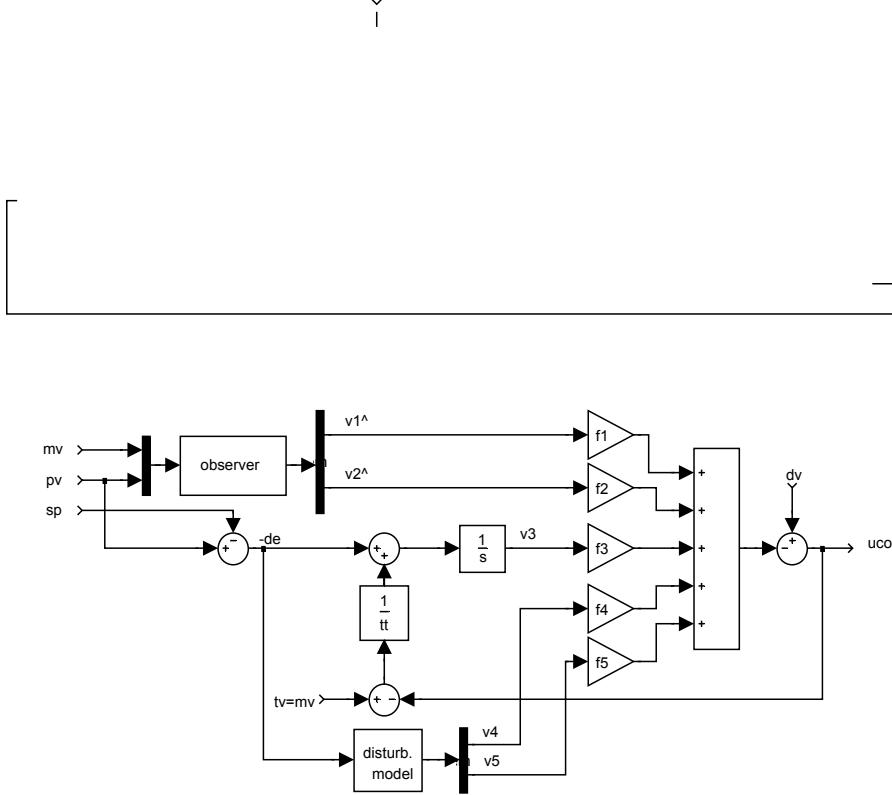

The controlled system is assumed in the form of (7.4). Another forms of this transfer function are

$$F(s) = \frac{(b_1 s + b_0)}{s^2 + a_1 s + a_0} \quad (7.5)$$

and

$$F(s) = \frac{K_0 \Omega^2 (\tau s + 1)}{s^2 + 2\xi\Omega s + \Omega^2}. \quad (7.6)$$

The coefficients of these transfer functions can be found at the outputs p1,...,p6 after the identification experiment (**IDBSY = off**). The output signals meaning is switched when a change occurs at the **ips** input.

Inputs

dv	Feedforward control variable	Double (F64)
sp	Setpoint variable	Double (F64)
pv	Process variable	Double (F64)
tv	Tracking variable	Double (F64)
hv	Manual value	Double (F64)

MAN	Manual or automatic mode off ... Automatic mode on Manual mode	Bool
ID	Identification or controller operating mode off ... Controller mode mode on Identification and design	Bool
TUNE	Start the tuning experiment (off→on), the exciting harmonic signal is generated	Bool
HLD	Stop frequency sweeping	Bool
BRK	Termination signal	Bool
SETC	Flag for accepting the new controller parameters and updating the control law off ... Parameters are only computed on Parameters are accepted as soon as computed off→on One-shot confirmation of the computed parameters	Bool
ips	Switch for changing the meaning of the output signals 0 Two points of frequency response p1 ... frequency of the 1st measured point in rad/s p2 ... real part of the 1st point p3 ... imaginary part of the 1st point p4 ... frequency of the 2nd measured point in rad/s p5 ... real part of the 2nd point p6 ... imaginary part of the 2nd point 1 Second order model in the form (7.5) p1 ... b_1 parameter p2 ... b_0 parameter p3 ... a_1 parameter p4 ... a_0 parameter 2 Second order model in the form (7.6) p1 ... K_0 parameter p2 ... τ parameter p3 ... Ω parameter in rad/s p4 ... ξ parameter p5 ... Ω parameter in Hz p6 ... resonance frequency in Hz 3 State feedback parameters p1 ... f_1 parameter p2 ... f_2 parameter p3 ... f_3 parameter p4 ... f_4 parameter p5 ... f_5 parameter	Long (I32)
MFR	Generation of the parametric model frequency response at the w, xre and xim outputs (off→on triggers the generator)	Bool

Outputs

mv	Manipulated variable (controller output)	Double (F64)
de	Deviation error	Double (F64)

SAT	Saturation flag	Bool
	off ... The controller implements a linear control law	
	on The controller output is saturated	
IDBSY	Identification running	Bool
	off ... Identification not running	
	on Identification in progress	
w	Frequency response point estimate - frequency in rad/s	Double (F64)
xre	Frequency response point estimate - real part	Double (F64)
xim	Frequency response point estimate - imaginary part	Double (F64)
epv	Reconstructed pv signal	Double (F64)
IDE	Identification error indicator	Bool
	off ... Successful identification experiment	
	on Identification error occurred	
iIDE	Error code	Long (I32)
	101 ... Sampling period too low	
	102 ... Error identifying one or both frequency response point(s)	
	103 ... Manipulated variable saturation occurred during the identification experiment	
	104 ... Invalid process model	
p1..p6	Results of identification and design phase	Double (F64)

Parameters


ubias	Static component of the exciting harmonic signal	Double (F64)
uamp	Amplitude of the exciting harmonic signal	⊕1.0 Double (F64)
wb	Frequency interval lower limit [rad/s]	⊕1.0 Double (F64)
wf	Frequency interval upper limit [rad/s]	⊕10.0 Double (F64)
isweep	Frequency sweeping mode	⊕1 Long (I32)
	1 Logarithmic	
	2 Linear (not implemented yet)	
cp	Sweeping rate	↓0.5 ↑1.0 ⊕0.995 Double (F64)
iavg	Number of values for averaging	⊕10 Long (I32)
alpha	Relative positioning of the observer poles (in identification phase)	⊕2.0 Double (F64)
xi	Observer damping coefficient (in identification phase)	⊕0.707 Double (F64)
MANF	Manual frequency response points selection	Bool
	off ... Disabled	
	on Enabled	
ph1	Phase delay of the 1st point in degrees	⊕-60.0 Double (F64)
ph2	Phase delay of the 2nd point in degrees	⊕-120.0 Double (F64)
stime	Settling period [s]	⊕10.0 Double (F64)
ralpha	Relative positioning of the observer poles	⊕4.0 Double (F64)
rxi	Observer damping coefficient	⊕0.707 Double (F64)
acl1	Relative positioning of the 1st closed-loop poles couple	⊕1.0 Double (F64)
xicl1	Damping of the 1st closed-loop poles couple	⊕0.707 Double (F64)

INTGF	Integrator flag off State-space model without integrator on Integrator included in the state-space model	⊕on Bool
apcl	Relative position of the real pole	⊕1.0 Double (F64)
DISF	Disturbance flag off State space model without disturbance model on Disturbance model is included in the state space model	Bool
dom	Disturbance model natural frequency	⊕1.0 Double (F64)
dxi	Disturbance model damping coefficient	Double (F64)
acl2	Relative positioning of the 2nd closed-loop poles couple	⊕2.0 Double (F64)
xic12	Damping of the 2nd closed-loop poles couple	⊕0.707 Double (F64)
tt	Tracking time constant	⊕1.0 Double (F64)
hilim	Upper limit of the controller output	⊕1.0 Double (F64)
lolim	Lower limit of the controller output	⊕-1.0 Double (F64)
mb1p	Controlled system transfer function coefficient b_1	Double (F64)
mb0p	Controlled system transfer function coefficient b_0	⊕1.0 Double (F64)
ma1p	Controlled system transfer function coefficient a_1	⊕0.2 Double (F64)
ma0p	Controlled system transfer function coefficient a_0	⊕1.0 Double (F64)

SCU – Step controller with position feedback

Block Symbol

Licence: STANDARD




Function Description

The SCU block implements the secondary (inner) position controller of the step controller loop. PIDU function block or some of the derived function blocks (PIDMA, etc.) is assumed as the primary controller.

The SCU block processes the control deviation $sp - pv$ by a three state element with parameters (thresholds) `thron` and `throff` (see the TSE block, use parameters `ep = thron`, `epoff = throff`, `en = -thron` and `enoff = -throff`). The parameter `RACT` determines whether the UP or DN pulse is generated for positive or negative value of the controller deviation. Two pulse outputs of the three state element are further shaped so that minimum pulse duration `dtime` and minimum pulse break time `btime` are guaranteed at the block UP and DN outputs. If signals from high and low limit switches of the valve are available, they should be connected to the HS and LS inputs.


There is also a group of input signals for manual control available. The manual mode is activated by the `MAN = on` input signal. Then it is possible to move the motor back and forth by the `MUP` and `MDN` input signals. It is also possible to specify a position increment/decrement request by the `mdv` input. In this case the request must be confirmed by a rising edge (`off → on`) in the `DVC` input signal.

The control function of the SCU block is quite clear from the following diagram.

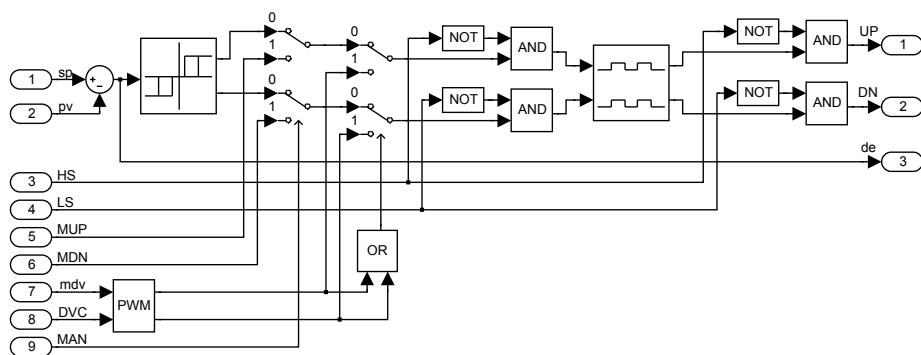

The complete structure of the three-state step controller is depicted in the following

figure.

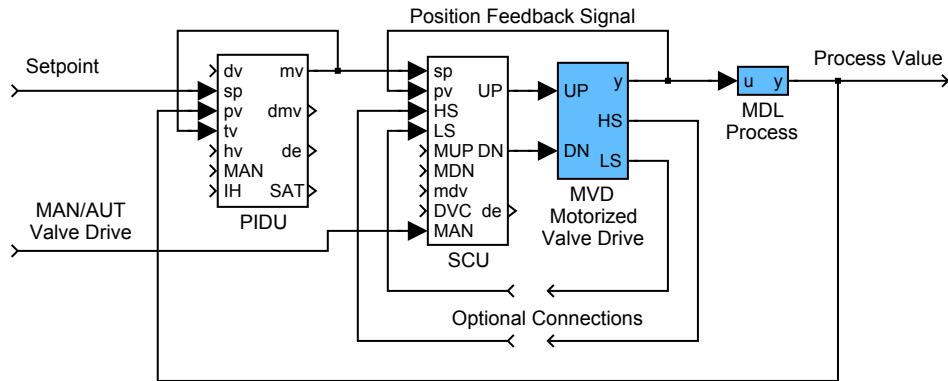

Inputs

sp	Setpoint (output of the primary controller)	Double (F64)
pv	Controlled variable (position of the motorized valve drive)	Double (F64)
HS	Upper end switch (detects the upper limit position of the valve)	Bool
LS	Lower end switch (detects the lower limit position of the valve)	Bool
MUP	Manual UP signal	Bool
MDN	Manual DN signal	Bool
mdv	Manual differential value (requested position increment/decrement with higher priority than direct signals MUP/MDN)	Double (F64)
DVC	Differential value change command (off→on)	Bool
MAN	Manual or automatic mode off Automatic mode on Manual mode	Bool

Outputs

UP	The "up" signal	Bool
DN	The "down" signal	Bool
de	Deviation error	Double (F64)

Parameters


thron	Switch-on value	$\downarrow 0.0 \odot 0.02$	Double (F64)
throff	Switch-off value	$\downarrow 0.0 \odot 0.01$	Double (F64)
dtime	Minimum width of the output pulse [s]	$\downarrow 0.0 \odot 0.1$	Double (F64)
btime	Minimum delay between two subsequent output pulses [s] to do	$\downarrow 0.0 \odot 0.1$	Double (F64)

RACT	Reverse action flag	Bool
	off ... Higher mv → higher pv	
	on Higher mv → lower pv	
trun	Motor time constant (determines the time during which the motor position changes by one unit)	Double (F64) ↓0.0 ⊕10.0

SCUV – Step controller unit with velocity input

Block Symbol

Licence: STANDARD



Function Description

The block **SCUV** substitutes the secondary position controller **SCU** in the step controller loop when the position signal is not available. The primary controller **PIDU** (or some of the derived function blocks) is connected with the block **SCUV** using the block inputs **mv**, **dmv** and **SAT**.


If the primary controller uses PI or PID control law (**CWOI = off**), then all three inputs **mv**, **dmv** and **SAT** of the block **SCUV** are sequentially processed by the special integration algorithm and by the three state element with parameters **thron** and **throff** (see the **TSE** block, use parameters **ep = thron**, **epoff = throff**, **en = -thron** and **enoff = -throff**). Pulse outputs of the three state element are further shaped in such a way that the minimum pulse duration time **dtime** and minimum pulse break time **btime** are guaranteed at the block outputs **UP** and **DN**. The parameter **RACT** determines the direction of motor moving. Note, the velocity output of the primary controller is reconstructed from input signals **mv** and **dmv**. Moreover, if the deviation error of the primary controller with **icotype = 4** (working in automatic mode) is less than its dead zone (**SAT = on**), then the output of the corresponding internal integrator is set to zero.

The position **pos** of the valve is estimated by an integrator with the time constant **trun**. If signals from high and low limit switches of the valve are available, they should be connected to the inputs **HS** and **LS**.



If the primary controller uses P or PD control law (**CWOI = on**), then the deviation error of the primary controller can be eliminated by the bias **ub** manually. In this case, the control algorithm is slightly modified, the position of the motor **pos** is used and the proper settings of **thron**, **throff** and the tracking time constant **tt** are necessary for the suppressing of up/down pulses in the steady state.

There is also a group of input signals for manual control available. The manual mode is activated by the **MAN = on** input signal. Then it is possible to move the motor back and forth by the **MUP** and **MDN** input signals. It is also possible to specify a position increment/decrement request by the **mdv** input. In this case the request must be confirmed by a rising edge (**off → on**) in the **DVC** input signal.

The overall control function of the SCUV block is obvious from the following diagram:

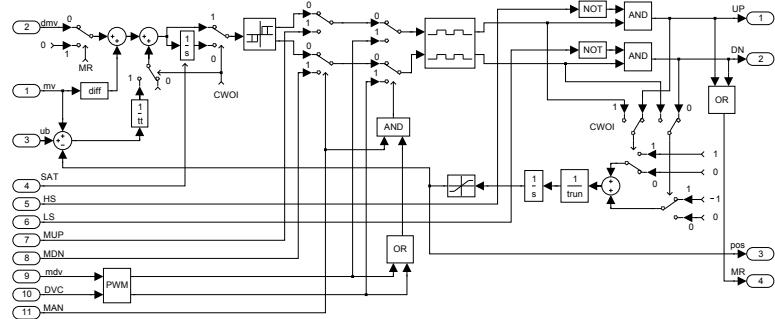

The complete structures of the three-state controllers are depicted in the following figures:

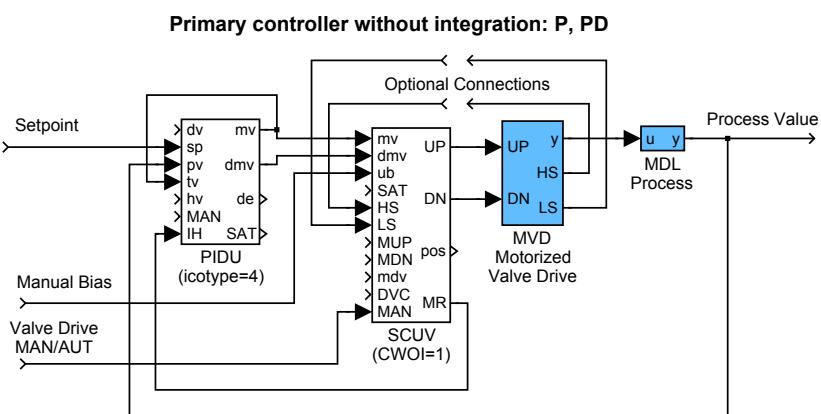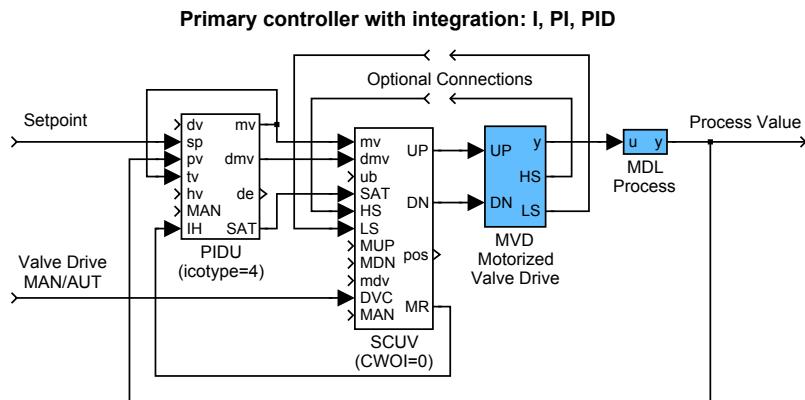

Inputs

mv	Manipulated variable (controller output)	Double (F64)
dmv	Controller velocity output (difference)	Double (F64)

ub	Bias (only for P or PD primary controller)	Double (F64)
SAT	Internal integrator reset (connected to the SAT output of the primary controller)	Bool
HS	Upper end switch (detects the upper limit position of the valve)	Bool
LS	Lower end switch (detects the lower limit position of the valve)	Bool
MUP	Manual UP signal	Bool
MDN	Manual DN signal	Bool
mdv	Manual differential value (requested position increment/decrement with higher priority than direct signals MUP/MDN)	Double (F64)
DVC	Differential value change command (off → on)	Bool
MAN	Manual or automatic mode off ... Automatic mode on Manual mode	Bool

Outputs

UP	The "up" signal	Bool
DN	The "down" signal	Bool
pos	Position output of motor simulator	Double (F64)
MR	Request to move the motor off ... Motor idle (UP = off and DN = off) on Request to move (UP = on or DN = on)	Bool


Parameters

thron	Switch-on value	$\downarrow 0.0 \odot 0.02$	Double (F64)
throff	Switch-off value	$\downarrow 0.0 \odot 0.01$	Double (F64)
dtime	Minimum width of the output pulse [s]	$\downarrow 0.0 \odot 0.1$	Double (F64)
btime	Minimum delay between two subsequent output pulses [s]	$\downarrow 0.0 \odot 0.1$	Double (F64)
RACT	Reverse action flag off ... Higher mv → higher pv on Higher mv → lower pv		Bool
trun	Motor time constant (determines the time during which the motor position changes by one unit)	$\downarrow 0.0 \odot 10.0$	Double (F64)
CWOI	Controller without integration flag off ... The primary controller has an integrator (I, PI, PID) on The primary controller does not have an integrator (P, PD)		Bool
tt	Tracking time constant	$\downarrow 0.0 \odot 1.0$	Double (F64)

SELU – Controller selector unit

Block Symbol

Licence: STANDARD



Function Description

The **SELU** block is tailored for selecting the active controller in selector control. It chooses one of the input signals u_1, u_2, u_3, u_4 and copies it to the output y . For $BINF = \text{off}$ the active signal is selected by the iSW input. In the case of $BINF = \text{on}$ the selection is based on the binary inputs $SW1$ and $SW2$ according to the following table:

iSW	$SW1$	$SW2$	y	$U1$	$U2$	$U3$	$U4$
0	off	off	u_1	off	on	on	on
1	off	on	u_2	on	off	on	on
2	on	off	u_3	on	on	off	on
3	on	on	u_4	on	on	on	off

This table also explains the meaning of the binary outputs $U1, U2, U3$ and $U4$, which are used by the inactive controllers in selector control for tracking purposes (via the **SWU** blocks).

Inputs

$u_{1..4}$	Signals to be selected from	Double (F64)
iSW	Active signal selector in case of $BINF = \text{off}$	Long (I32)
$SW1$	Binary signal selector, used when $BINF = \text{on}$	Bool
$SW2$	Binary signal selector, used when $BINF = \text{on}$	Bool

Outputs

y	Analog output of the block	Double (F64)
$U_{1..4}$	Binary output signal for selector control	Bool


Parameter

$BINF$	Enable the binary selectors	Bool
	$\text{off} \dots$ Disabled (analog selector)	
	$\text{on} \dots$ Enabled (binary selectors)	

SMHCC – Sliding mode heating/cooling controller


Block Symbol

Licence: ADVANCED



Function Description

The sliding mode heating/cooling controller SMHCC is a novel high quality control algorithm intended for temperature control of heating-cooling (possibly asymmetrical) processes with ON-OFF heaters and/or ON-OFF coolers. The plastic extruder is a typical example of such process. However, it can also be applied to many similar cases, for example in thermal systems where a conventional thermostat is employed. To provide the proper control function the block SMHCC must be combined with the block **PWM** (Pulse Width Modulation) as depicted in the following figure.

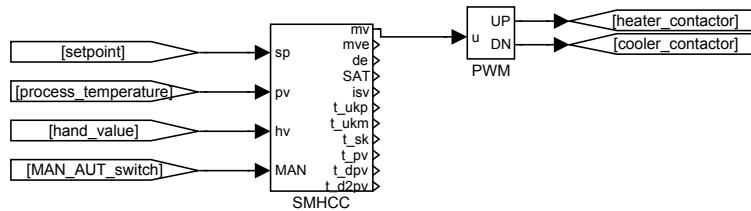

It is important to note that the block SMHCC works with two time periods. The first period T_S is the sampling time of the process temperature, and this period is equal to the period with which the block SMHCC itself is executed. The second period $T_C = i_{pwmc} T_S$ is the control period with which the block SMHCC generates manipulated variable. This period T_C is also equal to the cycle time of PWM block. At every instant when the manipulated variable mv is changed by SMHCC the PWM algorithm recalculates the width of the output pulse and starts a new PWM cycle. The time resolution T_R of the PWM block is third time period involved with. This period is equal to the period with which the block PWM is run and generally may be different from T_S . To achieve the high quality of control it is recommended to choose T_S as minimal as possible (i_{pwmc} as maximal as possible), the ratio T_C/T_S as maximal as possible but T_C should be sufficiently small with respect to the process dynamics. An example of reasonable values for an extruder temperature control is as follows:

$$T_S = 0.1, \quad i_{pwmc} = 100, \quad T_C = 10s, \quad T_R = 0.01s.$$

The control law of the block **SMHCC** in automatic mode (**MAN = off**) is based on the discrete dynamic sliding mode control technique and special 3rd order filters for estimation of the first and second derivatives of the control error.

The first control stage, after a setpoint change or upset, is the *reaching phase* when the dynamic sliding variable

$$s_k \triangleq \ddot{e}_k + 2\xi\Omega\dot{e}_k + \Omega^2 e_k$$

is forced to zero. In the above definition of the sliding variable, $e_k, \dot{e}_k, \ddot{e}_k$ denote the filtered deviation error (**pv - sp**) and its first and second derivatives in the control period k , respectively, and ξ, Ω are the control parameters described below. In the second phase, s_k is held at the zero value (*the sliding phase*) by the proper control "bangs". Here, the heating action is alternated by cooling action and *vice versa* rapidly. The amplitudes of control actions are adapted appropriately to guarantee $s_k = 0$ approximately. Thus, the hypothetical continuous dynamic sliding variable

$$s \triangleq \ddot{e} + 2\xi\Omega\dot{e} + \Omega^2 e$$

is approximately equal to zero at any time. Therefore the control deviation behaves according to the second order differential equation

$$s \triangleq \ddot{e} + 2\xi\Omega\dot{e} + \Omega^2 e = 0$$

describing so called *zero sliding dynamics*. From it follows that the evolution of e can be prescribed by the parameters ξ, Ω . For stable behavior, it must hold $\xi > 0, \Omega > 0$. A typical optimal value of ξ ranges in the interval [4, 8] and ξ about 6 is often a satisfactory value. The optimal value of Ω strongly depends on the controlled process. The slower processes the lower optimal Ω . The recommended value of Ω for start of tuning is $\pi/(5T_C)$.

The manipulated variable **mv** usually ranges in the interval $[-1, 1]$. The positive (negative) value corresponds to heating (cooling). For example, **mv** = 1 means the full heating. The limits of **mv** can be reduced when needed by the controller parameters **hilim_p** and **hilim_m**. This reduction is probably necessary when the asymmetry between heating and cooling is significant. For example, if in the working zone the cooling is much more aggressive than heating, then these parameters should be set as **hilim_p** = 1 and **hilim_m** < 1. If we want to apply such limitation only in some time interval after a change of setpoint (during the transient response) then it is necessary to set initial value of the heating (cooling) action amplitude **u0_p** (**u0_m**) to the suitable value less than **hilim_p** (**hilim_m**). Otherwise set **u0_p** = **hilim_p** and **u0_m** = **hilim_m**.

The current amplitudes of heating and cooling **uk_p**, **uk_m**, respectively, are automatically adapted by the special algorithm to achieve so called *quasi sliding mode*, where the sign of s_k alternately changes its value. In such a case the controller output **isv** alternates the values 1 and -1. The rate of adaptation of the heating (cooling) amplitude is given by the time constant **taup** (**taum**). Both of these time constants have to be sufficiently high to provide the proper function of adaptation but the fine tuning is not necessary.

Note for completeness that the manipulated variable `mv` is determined from the action amplitudes `uk_p`, `uk_m` by the following expression

$$\text{if } (s_k < 0.0) \text{ then } \text{mv} = \text{uk_p} \text{ else } \text{mv} = -\text{uk_m}.$$

Further, it is important to note that quasi sliding is seldom achievable because of a process dead time or disturbances. The suitable indicator of the quality of sliding is again the output `isv`. If the extraordinary fine tuning is required then it may be tried to find the better value for the bandwidth parameter `beta` of derivative filter, otherwise the default value 0.1 is preferred. In the manual mode (`MAN = on`) the controller input `hv` is (after limitation to the range $[-\text{hilim_m}, \text{hilim_p}]$) copied to the manipulated variable `mv`.

Inputs

<code>sp</code>	setpoint variable	Double (F64)
<code>pv</code>	process variable	Double (F64)
<code>hv</code>	manual value	Double (F64)
<code>MAN</code>	controller mode 0 automatic mode 1 manual mode	Bool

Outputs

<code>mv</code>	manipulated variable (position controller output)	Double (F64)
<code>mve</code>	equivalent manipulated variable	Double (F64)
<code>de</code>	deviation error	Double (F64)
<code>SAT</code>	saturation flag 0 the controller implements a linear control law 1 the controller output is saturated, $\text{mv} \geq \text{hilim_p}$ or $\text{mv} \leq -\text{hilim_m}$	Bool
<code>isv</code>	number of the positive (+) or negative (-) sliding variable steps	Long (I32)
<code>t_ukp</code>	current amplitude of heating	Double (F64)
<code>t_ukm</code>	current amplitude of cooling	Double (F64)
<code>t_sk</code>	discrete dynamic sliding variable s_k	Double (F64)
<code>t_pv</code>	filtered control error $-de$	Double (F64)
<code>t_dpv</code>	filtered first derivative of the control error <code>t_ek</code>	Double (F64)
<code>t_d2pv</code>	filtered second derivative of the control error <code>t_ek</code>	Double (F64)

Parameters


<code>ipwmc</code>	PWM cycle in the sampling periods of SMHCC (T_C/T_S)	Long (I32)
<code>xi</code>	relative damping ξ of sliding zero dynamics $xi \geq 0$	Double (F64)
<code>om</code>	natural frequency Ω of sliding zero dynamics	$\downarrow(0.0)$ Double (F64)
<code>taup</code>	time constant for adaptation of heating action amplitude in seconds	Double (F64)

taum	time constant for adaptation of cooling action amplitude in seconds	Double (F64)
beta	bandwidth parameter of the derivative filter	$\downarrow 0$ Double (F64)
hilim_p	high limit of the heating action amplitude	$\downarrow 0.0 \uparrow 1.0$ Double (F64)
hilim_m	high limit of the cooling action amplitude	$\downarrow 0.0 \uparrow 1.0$ Double (F64)
u0_p	initial value of the heating action amplitude after setpoint change and start of the block	Double (F64)
u0_m	initial value of the cooling action amplitude after setpoint change and start of the block	Double (F64)
sp_dif	Setpoint difference threshold	$\odot 10.0$ Double (F64)
tauf	Equivalent manipulated variable filter time constant	$\odot 400.0$ Double (F64)

SMHCCA – Sliding mode heating/cooling controller with auto-tuner


Block Symbol

Licence: AUTOTUNING

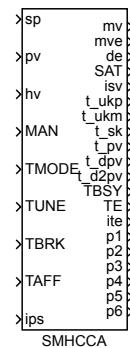

Function Description

The sliding mode heating/cooling controller (**SMHCCA**) is a novel high quality control algorithm with a built-in autotuner for automatic tuning of the controller parameters. The controller is mainly intended for temperature control of heating-cooling (possibly asymmetrical) processes with ON-OFF heaters and/or ON-OFF coolers. The plastic extruder heating/cooling system is a typical example of such process. However, it can also be applied to many similar cases, for example, to thermal systems where a conventional thermostat is normally employed. To provide the proper control function, the **SMHCCA** block must be combined with the **PWM** block (Pulse Width Modulation) as depicted in the following figure.

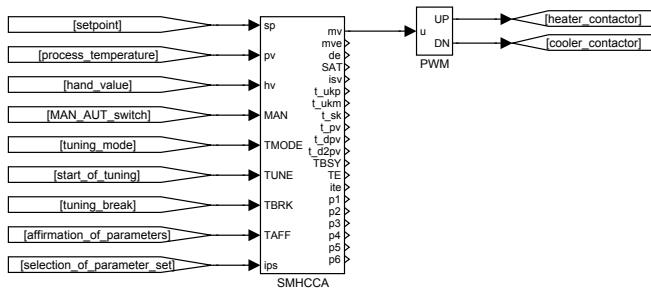

It is important to note that the block **SMHCCA** works with two time periods. The first period T_S is the sampling time of the process temperature, and this period is equal to the period with which the block **SMHCCA** itself is executed. The other period $T_C = i_{pwm} T_S$ is the control period with which the block **SMHCCA** generates the manipulated variable. This period T_C is equal to the cycle time of **PWM** block. At every instant when the manipulated variable **mv** is changed by **SMHCCA** the **PWM** algorithm recalculates the width of the output

pulse and starts a new PWM cycle. The time resolution T_R of the **PWM** block is third time period involved in. This period is equal to the period with which the block **PWM** is executed and generally may be different from T_S . To achieve the high quality of control it is recommended to choose T_S as minimal as possible (i_{pwmc} as maximal as possible), the ratio T_C/T_S as maximal as possible but T_C should be sufficiently small with respect to the process dynamics. An example of reasonable values for an extruder temperature control is as follows:


$$T_S = 0.1, i_{pwmc} = 50, T_C = 5s, T_R = 0.1s.$$


Notice however that for a faster controlled system the sampling periods T_S , T_C and T_R must be shortened! More precisely, the three minimal time constant of the process are important for selection of these time periods (all real thermal process has at least three time constants). For example, the sampling period $T_S = 0.1$ is sufficiently short for such processes that have at least three time constants, the minimal of them is greater than 10s and the maximal is greater than 100s. For the proper function of the controller it is necessary that these time parameters are suitably chosen by the user according to the actual dynamics of the process! If **SMHCCA** is implemented on a processor with floating point arithmetic then the accurate setting of the sampling periods T_S , T_C , T_R and the parameter **beta** is critical for correct function of the controller. Also, some other parameters with the clear meaning described below have to be chosen manually. All the remaining parameters (**xi**, **om**, **taup**, **taum**, **tauf**) can be set by the built-in autotuner automatically. The autotuner uses the two methods for this purpose.

- The first one is dedicated to situations where the asymmetry of the process is not enormous (approximately, it means that the gain ratio of heating/cooling or cooling/heating is less than 5).
- The second method provides the tuning support for the strong asymmetric processes and is not implemented yet (So far, this method has been developed and tested in Simulink only).

Despite the fact that the first method of the tuning is based only on the heating regime, the resulting parameters are usually satisfactory for both heating and cooling regimes because of the strong robustness of sliding mode control. The tuning procedure is very quick and can be accomplished during the normal rise time period of the process temperature from cold state to the setpoint usually without any temporization or degradation of control performance. Thus the tuning procedure can be included in every start up from cold state to the working point specified by the sufficiently high temperature setpoint. Now the implemented procedure will be described in detail. The tuning procedure starts in the tuning mode or in the manual mode. If the tuning mode (**TMODE = on**) is selected the manipulated variable **mv** is automatically set to zero and the output **TBSY** is set to 1 for indication of the tuning stage of the controller. The cold state of the process is preserved until the initialization pulse is applied to the input **TUNE** ($0 \rightarrow 1$). After some time (depending on **beta**), when the noise amplitude is estimated,

the heating is switched on with the amplitude given by the parameter `ut_p`. The process temperature `pv` and its two derivatives (outputs `t_pv`, `t_dpv`, `t_d2pv`) are observed to obtain the optimal parameters of the controller. If the tuning procedure ends without errors, then `TBSY` is set to 0 and the controller begins to work in manual or automatic mode according to the input `MAN`. If `MAN = off` and affirmation input `TAFF` is set to 1, then the controller starts to work in automatic mode with the new parameter set provided by the tuner (if `TAFF = off`, then the new parameters are only displayed on the outputs `p1..p6`). If some error occurs during the tuning, then the tuning procedure stops immediately or stops after the condition `pv>sp` is fulfilled, the output `TE` is set to 1 and `ite` indicate the type of error. Also in this case, the controller starts to work in the mode determined by the input `MAN`. If `MAN = off` then works in automatic mode with the initial parameters before tuning! The tuning errors are usually caused either by an inappropriate setting of the parameter `beta` or by the too low value of `sp`. The suitable value of `beta` ranges in the interval (0.001,0.1). If a drift and noise in `pv` are large the small `beta` must be chosen especially for the tuning phase. The default value (`beta=0.01`) should work well for extruder applications. The correct value gives properly filtered signal of the second derivative of the process temperature `t_d2pv`. This well-filtered signal (corresponding to the low value of beta) is mainly necessary for proper tuning. For control, the parameter `beta` may be sometimes slightly increased. The tuning procedure may be also started from manual mode (`MAN = off`) with any constant value of the input `hv`. However, the steady state must be provided in this case. Again, the tuning is started by the initialization pulse at the input `TUNE` (`0 → 1`) and after the stop of tuning the controller continues in the manual mode. In both cases the resulting parameters appear on the outputs `p1, …, p6`.

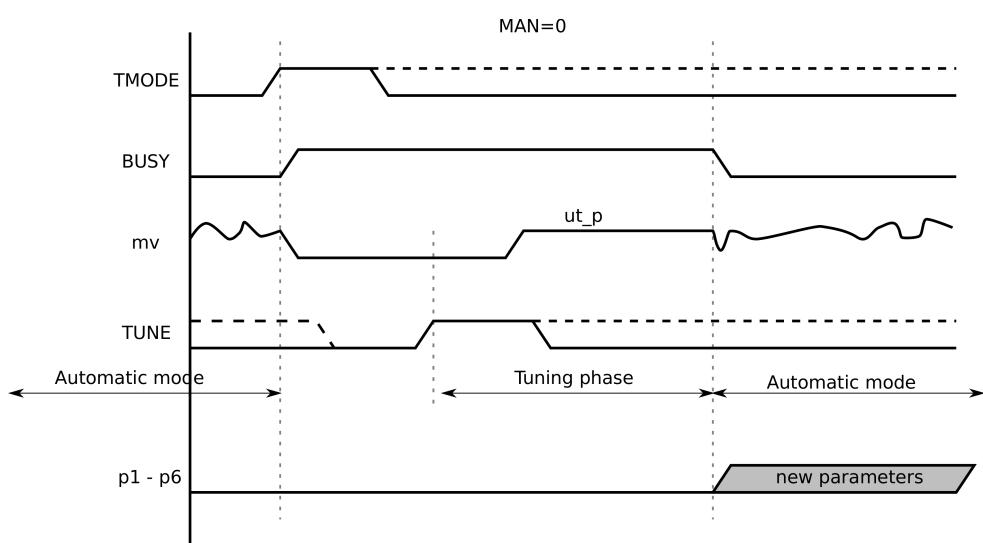

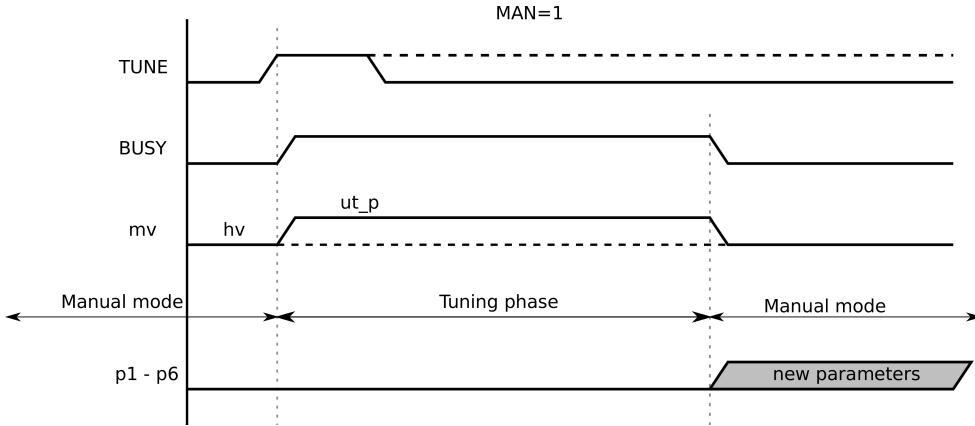

The control law of the block **SMHCCA** in automatic mode (**MAN = off**) is based on the discrete dynamic sliding mode control technique and special 3rd order filters for estimation of the first and second derivatives of the control error.

The first control stage, after a setpoint change or upset, is the *reaching phase* when the dynamic sliding variable

$$s_k \triangleq \ddot{e}_k + 2\xi\Omega\dot{e}_k + \Omega^2 e_k$$

is forced to zero. In the above definition of the sliding variable, $e_k, \dot{e}_k, \ddot{e}_k$ denote the filtered deviation error (**pv – sp**) and its first and second derivatives in the control period k , respectively, and ξ, Ω are the control parameters described below. In the second phase, s_k is held at the zero value (*the sliding phase*) by the proper control "bangs". Here, the heating action is alternated by cooling action and *vice versa* rapidly. The amplitudes of control actions are adapted appropriately to guarantee $s_k = 0$ approximately. Thus, the hypothetical continuous dynamic sliding variable

$$s \triangleq \ddot{e} + 2\xi\Omega\dot{e} + \Omega^2 e$$

is approximately equal to zero at any time. Therefore the control deviation behaves according to the second order differential equation

$$\ddot{s} + 2\xi\Omega\dot{s} + \Omega^2 s = 0$$

describing so called *zero sliding dynamics*. From it follows that the evolution of e can be prescribed by the parameters ξ, Ω . For stable behavior, it must hold $\xi > 0, \Omega > 0$. A typical optimal value of ξ ranges in the interval [4, 8] and ξ about 6 is often a satisfactory value. The optimal value of Ω strongly depends on the controlled process. The slower processes the lower optimal Ω . The recommended value of Ω for start of tuning is $\pi/(5T_C)$.

The manipulated variable **mv** usually ranges in the interval $[-1, 1]$. The positive (negative) value corresponds to heating (cooling). For example, **mv** = 1 means the full heating. The limits of **mv** can be reduced when needed by the controller parameters **hilim_p**

and `hilim_m`. This reduction is probably necessary when the asymmetry between heating and cooling is significant. For example, if in the working zone the cooling is much more aggressive than heating, then these parameters should be set as `hilim_p` = 1 and `hilim_m` < 1. If we want to apply such limitation only in some time interval after a change of setpoint (during the transient response) then it is necessary to set initial value of the heating (cooling) action amplitude `u0_p` (`u0_m`) to the suitable value less than `hilim_p` (`hilim_m`). Otherwise set `u0_p` = `hilim_p` and `u0_m` = `hilim_m`.

The current amplitudes of heating and cooling `uk_p`, `uk_m`, respectively, are automatically adapted by the special algorithm to achieve so called *quasi sliding mode*, where the sign of s_k alternately changes its value. In such a case the controller output `isv` alternates the values 1 and -1. The rate of adaptation of the heating (cooling) amplitude is given by time constant `taup` (`taum`). Both of these time constants have to be sufficiently high to provide the proper function of adaptation but the fine tuning is not necessary. Note for completeness that the manipulated variable `mv` is determined from the action amplitudes `uk_p`, `uk_m` by the following expression

$$\text{if } (s_k < 0.0) \text{ then } mv = uk_p \text{ else } mv = -uk_m.$$

Further, it is important to note that quasi sliding is seldom achievable because of a process dead time or disturbances. The suitable indicator of the quality of sliding is again the output `isv`. If the extraordinary fine tuning is required then it may be tried to find the better value for the bandwidth parameter `beta` of derivative filter, otherwise the default value 0.1 is preferred.

In the manual mode (`MAN = on`) the controller input `hv` is (after limitation to the range $[-\text{hilim}_m, \text{hilim}_p]$) copied to the manipulated variable `mv`. The controller output `mve` provides the equivalent amplitude-modulated value of the manipulated variable `mv` for informative purposes. The output `mve` is obtained by the first order filter with the time constant `tauf` applied to `mv`.

Inputs

<code>sp</code>	Setpoint variable	Double (F64)
<code>pv</code>	Process variable	Double (F64)
<code>hv</code>	Manual value	Double (F64)
<code>MAN</code>	Manual or automatic mode 0 Automatic mode 1 Manual mode	Bool
<code>TMODE</code>	Tuning mode	Bool
<code>TUNE</code>	Start the tuning experiment: TUNE off→on	Bool
<code>TBRK</code>	Stop the tuning experiment: TBRK off→on	Bool
<code>TAFF</code>	Affirmation of the parameter set provided by the tuning procedure: TAFF = on	Bool

ips	Meaning of the output signals p1,...,p6	Long (I32)
0	Controller parameters	
	p1 ... recommended control period T_C	
	p2 ... xi	
	p3 ... om	
	p4 ... taup	
	p5 ... taum	
	p6 ... tauf	
1	Auxiliary parameters	
	p1 ... htp2 – time of the peak in the second derivative of pv	
	p2 ... hpeak2 – peak value in the second derivative of pv	
	p3 ... d2 – peak to peak amplitude of t_d2pv	
	p4 ... tgain	

Outputs

mv	Manipulated variable (controller output)	Double (F64)
mve	Equivalent manipulated variable	Double (F64)
de	Deviation error	Double (F64)
SAT	Saturation flag	Bool
0	Signal not limited	
1	Saturation limits active, $mv \geq hilim_p$ or $mv \leq -hilim_m$	
isv	Number of the positive (+) or negative (-) sliding variable steps	Long (I32)
t_ukp	Current amplitude of heating	Double (F64)
t_ukm	Current amplitude of cooling	Double (F64)
t_sk	Discrete dynamic sliding variable	Double (F64)
t_pv	Filtered process variable pv by 3rd order filter	Double (F64)
t_dpv	Filtered first derivative of pv by 3rd order filter	Double (F64)
t_d2pv	Filtered second derivative of pv by 3rd order filter	Double (F64)
TBSY	Tuner busy flag (TBSY = on)	Bool
TE	Tuning error	Bool
off	Autotuning successful	
on	An error occurred during the experiment	

ite	Error code	Long (I32)
0	No error	
1	Noise level in pv too high, check the temperature input	
2	Incorrect parameter ut_p	
3	Setpoint sp too low	
4	The two minimal process time constants are probably too small with respect to the sampling period T_S OR too high level of noise in the second derivative of pv (try to decrease the beta parameter)	
5	Premature termination of the tuning procedure (TBRK)	
p_i	Identified parameters with respect to ips , $i = 1, \dots, 6$	Double (F64)

Parameters

ipwmc	PWM cycle (in sampling periods of the block, T_C/T_S)	$\odot 100$	Long (I32)
xi	Relative damping of sliding zero dynamics	$\downarrow 0.5 \uparrow 8.0 \odot 1.0$	Double (F64)
om	Natural frequency ω of sliding zero dynamics	$\downarrow 0.0 \odot 0.01$	Double (F64)
taup	Time constant for adaptation of heating action amplitude [s]	Double (F64)	$\odot 700.0$
taum	Time constant for adaptation of cooling action amplitude [s]	Double (F64)	$\odot 400.0$
beta	Bandwidth parameter of the derivative filter	$\odot 0.01$	Double (F64)
hilim_p	Upper limit of the heating action amplitude	$\downarrow 0.0 \uparrow 1.0 \odot 1.0$	Double (F64)
hilim_m	Upper limit of the cooling action amplitude	$\downarrow 0.0 \uparrow 1.0 \odot 1.0$	Double (F64)
u0_p	Initial amplitude of the heating action	$\odot 1.0$	Double (F64)
u0_m	Initial amplitude of the cooling action	$\odot 1.0$	Double (F64)
sp_dif	Setpoint difference threshold for blocking of heating/cooling amplitudes reset	$\odot 10.0$	Double (F64)
tauf	Time constant of the filter for obtaining the equivalent manipulated variable	$\odot 400.0$	Double (F64)
itm	Tuning method	$\odot 1$	Long (I32)
	1	Restricted to symmetrical processes	
	2	Asymmetrical processes (not implemented yet)	
ut_p	Amplitude of heating for tuning experiment	$\downarrow 0.0 \uparrow 1.0 \odot 1.0$	Double (F64)
ut_m	Amplitude of cooling for tuning experiment	$\downarrow 0.0 \uparrow 1.0 \odot 1.0$	Double (F64)

SWU – Switch unit

Block Symbol

Licence: STANDARD



Function Description

The SWU block is used to select the appropriate signal which should be tracked by the inactive **PIDU** and **MCU** units in complex control structures. The input signal **uc** is copied to the output **y** when all the binary inputs **OR1**, ..., **OR4** are **off**, otherwise the output **y** takes over the **uo** input signal.

Inputs

uc	This input is copied to output y when all the binary inputs OR1 , OR2 , OR3 and OR4 are off	Double (F64)
uo	This input is copied to output y when any of the binary inputs OR1 , OR2 , OR3 , OR4 is on	Double (F64)
OR1	First logical output of the block	Bool
OR2	Second logical output of the block	Bool
OR3	Third logical output of the block	Bool
OR4	Fourth logical output of the block	Bool

Output

y	Analog output of the block	Double (F64)
----------	----------------------------	---------------------

TSE – Three-state element


Block Symbol

Licence: STANDARD



Function Description

The TSE block transforms the analog input u to a three-state signal ("up", "idle" and "down") according to the diagram below.

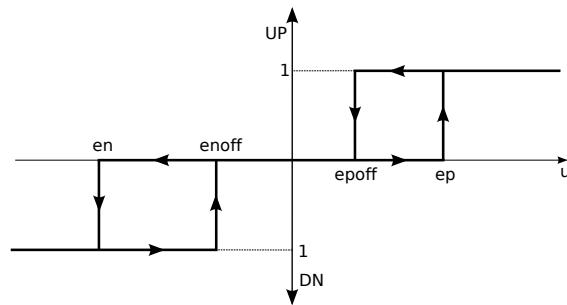

Input

u	Analog input of the block	Double (F64)
-----	---------------------------	--------------

Outputs

UP	The "up" signal	Bool
DN	The "down" signal	Bool

Parameters

ep	The input value $u > ep$ results in UP = on and DN = off	$\odot 1.0$	Double (F64)
en	The input value $u < en$ results in UP = off and DN = off	$\odot -1.0$	Double (F64)
$epoff$	UP switch off value; if UP = on and $u < epoff$ then UP = off	$\odot 0.5$	Double (F64)
$enoff$	DN switch off value; if DN = on and $u > enoff$ then DN = off	$\odot -0.5$	Double (F64)

Chapter 8

LOGIC – Logic control

Contents

AND_ – Logical product of two signals	234
ANDQUAD, ANDOCT, ANDHEXD – Logical product of multiple signals	235
ATMT – Finite-state automaton	236
BDOCT, BDHEXD – Bitwise demultiplexers	239
BITOP – Bitwise operation	240
BMOCT, BMHEXD – Bitwise multiplexers	241
COUNT – Controlled counter	242
EATMT – Extended finite-state automaton	244
EDGE_ – Falling/rising edge detection in a binary signal	247
EQ – Equivalence of two signals	248
INTSM – Integer number bit shift and mask	249
ISSW – Simple switch for integer signals	250
INTSM – Integer number bit shift and mask	251
ITOI – Transformation of integer and binary numbers	252
NOT_ – Boolean complementation	253
OR_ – Logical sum of two signals	254
ORQUAD, OROCT, ORHEXD – Logical sum of multiple signals	255
RS – Reset-set flip-flop circuit	256
SR – Set-reset flip-flop circuit	257
TIMER_ – Multipurpose timer	258

AND_ – Logical product of two signals

Block Symbol

Licence: STANDARD



Function Description

The **AND_** block computes the logical product of two input signals **U1** and **U2**.

If you need to work with more input signals, use the **ANDOCT** block.

Inputs

U1	First logical input of the block	Bool
U2	Second logical input of the block	Bool


Outputs

Y	Output signal, logical product ($U1 \wedge U2$)	Bool
NY	Boolean complementation of Y ($NY = \neg Y$)	Bool

ANDQUAD, ANDOCT, ANDHEXD – Logical product of multiple signals

Block Symbols

Licence: STANDARD

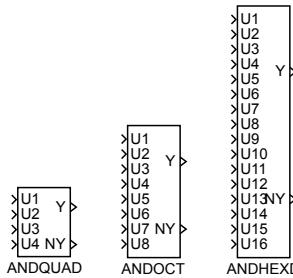

Function Description

The ANDQUAD, ANDOCT and ANDHEXD blocks compute the logical product of up to sixteen input signals U_1, U_2, \dots, U_{16} . The signals listed in the `n1` parameter are negated prior to computing the logical product.

For an empty `n1` parameter a simple logical product $Y = U_1 \wedge U_2 \wedge U_3 \wedge U_4 \wedge U_5 \wedge U_6 \wedge U_7 \wedge U_8$ is computed. For e.g. `n1=1,3..5`, the logical function is $Y = \neg U_1 \wedge U_2 \wedge \neg U_3 \wedge \neg U_4 \wedge \neg U_5 \wedge U_6 \wedge \dots U_{16}$.

If you have less than 4/8/16 signals, use the `n1` parameter to handle the unconnected inputs. If you have only two input signals, consider using the [AND_](#) block.

Inputs

$U_{1..16}$	Logical inputs of the block	Bool
-------------	-----------------------------	------

Outputs

Y	Result of the logical operation	Bool
NY	Boolean complementation of Y	Bool


Parameter

<code>n1</code>	List of signals to negate. The format of the list is e.g. <code>1,3..5,8</code> . Long (I32) Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.
-----------------	--

ATMT – Finite-state automaton

Block Symbol

Licence: STANDARD



Function Description

The ATMT block implements a finite state machine with at most 16 states and 16 transition rules.

The current state of the machine i , $i = 0, 1, \dots, 15$ is indicated by the binary outputs Q_0, Q_1, \dots, Q_{15} . If the state i is active, the corresponding output is set to $Qi=on$. The current state is also indicated by the ksa output ($ksa \in \{0, 1, \dots, 15\}$).

The transition conditions C_k , $k = 0, 1, \dots, 15$ are activated by the binary inputs C_0, C_1, \dots, C_{15} . If $C_k = on$ the k -th transition condition is fulfilled. The transition cannot happen when $C_k = off$.

The automat function is defined by the following table of transitions:

S_1	C_1	FS_1
S_2	C_2	FS_2
...		
S_n	C_n	FS_n

Each row of this table represents one transition rule. For example the first row

$S_1 \quad C_1 \quad FS_1$

has the meaning

If (S_1 is the current state AND transition condition C_1 is fulfilled)
then proceed to the following state FS_1 .

The above mentioned table can be easily constructed from the automat state diagram or SFC description (Sequential Function Charts, formerly Grafset).

The $R1 = on$ input resets the automat to the initial state S_0 . The SET input allows manual transition from the current state to the $ns0$ state when rising edge occurs. The

R1 input overpowers the **SET** input. The **HLD = on** input freezes the automat activity, the automat stays in the current state regardless of the **C_i** input signals and the **tstep** timer is not incremented. The **TOUT** output indicates that the machine remains in the given state longer than expected. The time limits TO_i for individual states are defined by the **touts** array. There is no time limit for the given state when TO_i is set to zero. The **TOUT** output is set to **off** whenever the automat changes its state.

It is possible to allow more state transitions in one cycle by the **morestps** parameter. However, this option must be thoroughly considered and tested, namely when the **TOUT** output is used in transition conditions. In such a case it is strongly recommended to incorporate the **ksa** output in the transition conditions as well.

The development tools of the REXYGEN system include also the SFCEditor program. You can create SFC schemes graphically using this tool. Run this editor from REXYGEN Studio by clicking the *Configure* button in the parameter dialog of the ATMT block.

Inputs

R1	Reset signal, R1 = on brings the automat to the initial state S0 ; the R1 input overpowers the SET input	Bool
ns0	This state is reached when rising edge occurs at the the SET input	Long (I32)
SET	The rising edge of this signal forces the transition to the ns0 state	Bool
HLD	The HLD = on freezes the automat, no transitions occur regardless of the input signals, tstep is not increasing	Bool
C0...C15	The transition conditions; C_i = on means that the <i>i</i> -th condition was fulfilled and the corresponding transition rule can be executed	Bool

Outputs

Q0...Q15	Output signals indicating the current state of the automat; the current state <i>i</i> is indicated by Q_i = on	Bool
ksa	Integer code of the active state	Long (I32)
tstep	Time elapsed since the current state was reached; the timer is set to 0 whenever a state transition occurs	Double (F64)
TOUT	Flag indicating that the time limit for the current state was exceeded	Bool

Parameters


morestps	Allow multiple transitions in one cycle of the automat off ... Disabled on Enabled	Bool
ntr	Number of state transition table rows	$\downarrow 0 \uparrow 64 \odot 4$ Long (I32)
sfcname	Filename of block configurator data file (filename is generated by system if parameter is empty)	String

STT	State transition table (matrix) $\odot[0\ 0\ 1; 1\ 1\ 2; 2\ 2\ 3; 3\ 3\ 0]$	Byte (U8)
touts	Vector of timeouts $TO_0, TO_1, \dots, TO_{15}$ for the states S_0, S_1, \dots, S_{15} $\odot[1\ 2\ 3\ 4\ 5\ 6\ 7\ 8\ 9\ 10\ 11\ 12\ 13\ 14\ 15\ 16]$	Double (F64)

BDOCT, BDHEXD – Bitwise demultiplexers

Block Symbols

Licence: STANDARD

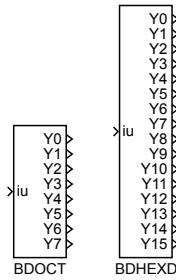

Function Description

Both **BDOCT** and **BDHEXD** are bitwise demultiplexers for easy decomposition of the input signal to individual bits. The only difference is the number of outputs, the **BDOCT** block has 8 Boolean outputs while the **BDHEXD** block offers 16-bit decomposition. The output signals Y_i correspond with the individual bits of the input signal iu , the Y_0 output is the least significant bit.

Input

iu	Input signal to be decomposed	Long (I32)
------	-------------------------------	------------

Outputs

$y_0 \dots y_{15}$	Individual bits of the input signal	Bool
--------------------	-------------------------------------	------

Parameter

$shift$	Bit shift of the input signal	$\downarrow 0 \uparrow 31$ Long (I32)
---------	-------------------------------	---------------------------------------

BITOP – Bitwise operation

Block Symbol

Licence: STANDARD



Function Description

The BITOP block performs bitwise operation $i_1 \circ i_2$ on the signals i_1 and i_2 , resulting in an integer output n . The type of operation is selected by the iop parameter described below. In case of logical negation or 2's complements the input i_2 is ignored (i.e. the operation is unary).

Inputs

i_1	First integer input of the block	Long (I32)
i_2	Second integer input of the block	Long (I32)

Output

n	Result of the bitwise operation iop	Long (I32)
-----	---------------------------------------	------------


Parameter

iop	Bitwise operation	$\odot 1$ Long (I32)
1	Bitwise negation (Bit NOT)	
2	Bitwise logical sum (Bit OR)	
3	Bitwise logical product (Bit AND)	
4	Bitwise logical exclusive sum (Bit XOR)	
5	Shift of the i_1 signal by i_2 bits to the left (Shift Left)	
6	Shift of the i_1 signal by i_2 bits to the right (Shift Right)	
7	2's complement of the i_1 signal on 8 bits (2's Complement - Byte)	
8	2's complement of the i_1 signal on 16 bits (2's Complement - Word)	
9	2's complement of the i_1 signal on 32 bits (2's Complement - Long)	

BMOCT, BMHEXD – Bitwise multiplexers

Block Symbols

Licence: STANDARD

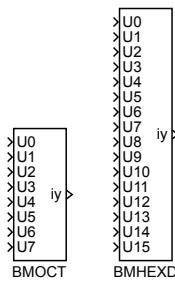

Function Description

Both **BMOCT** and **BMHEXD** are bitwise multiplexers for easy composition of the output signal from individual bits. The only difference is the number of inputs, the **BMOCT** block has 8 Boolean inputs while the **BMHEXD** block offers 16-bit composition. The input signals U_i correspond with the individual bits of the output signal iy , the U_0 input is the least significant bit.

Inputs

$U_0 \dots U_{15}$	Individual bits of the output signal	Bool
--------------------	--------------------------------------	------

Output

iy	Composed output signal	Long (I32)
------	------------------------	------------


Parameter

$shift$	Bit shift of the output signal	$\downarrow 0 \uparrow 31$ Long (I32)
---------	--------------------------------	---------------------------------------

COUNT – Controlled counter

Block Symbol

Licence: STANDARD



Function Description

The COUNT block is designed for bidirectional pulse counting – more precisely, counting rising edges of the UP and DN input signals. When a rising edge occurs at the UP (DN) input, the **cnt** output is incremented (decremented) by 1. Simultaneous occurrence of rising edges at both inputs is indicated by the error output **E** set to **on**. The R1 input resets the counter to 0 and no addition or subtraction is performed unless the R1 input returns to **off** again. It is also possible to set the output **cnt** to the value **n0** by the SETH input. Again, no addition or subtraction is performed unless the SETH input returns to **off** again. The R1 input has higher priority than the SETH input. The input **HLD = on** prevents both incrementing and decrementing. When the counter reaches the value $\text{cnt} \geq \text{nmax}$, the **Q** output is set to **on**.

Inputs

R1	Block reset (R1 = on)	Bool
n0	Value to set the counter to (using the SETH input)	Long (I32)
SETH	Set the counter value to n0 (SETH = on)	Bool
UP	Incrementing input signal	Bool
DN	Decrementing input signal	Bool
HLD	Counter freeze off ... Counter is running on Counter is locked	Bool
nmax	Counter target value	Long (I32)

Outputs


cnt	Total number of pulses	Long (I32)
SGN	Sign of the cnt output off ... for $\text{cnt} < 0$ on for $\text{cnt} \geq 0$	Bool
Q	Target value indicator off ... for $\text{cnt} < \text{nmax}$ on for $\text{cnt} \geq \text{nmax}$	Bool

E Indicator of simultaneous occurrence of rising edges at both Bool inputs UP and DN

EATMT – Extended finite-state automaton

Block Symbol

Licence: ADVANCED



Function Description

The EATMT block implements a finite automaton with at most 256 states and 256 transition rules, thus it extends the possibilities of the ATMT block.

The current state of the automaton i , $i = 0, 1, \dots, 255$ is indicated by individual bits of the integer outputs q_0, q_1, \dots, q_{15} . Only a single bit with index $i \text{ MOD } 16$ of the $q(i \text{ DIV } 16)$ output is set to 1. The remaining bits of that output and the other outputs are zero. The bits are numbered from zero, least significant bit first. Note that the DIV and MOD operators denote integer division and remainder after integer division respectively. The current state is also indicated by the $\text{ksa} \in \{0, 1, \dots, 255\}$ output.

The transition conditions C_k , $k = 0, 1, \dots, 255$ are activated by individual bits of the inputs c_0, c_1, \dots, c_{15} . The k -th transition condition is fulfilled when the $(k \text{ MOD } 16)$ -th bit of the input $c(k \text{ DIV } 16)$ is equal to 1. The transition cannot happen otherwise.

The BMHEXD or BMOCT bitwise multiplexers can be used for composition of the input signals c_0, c_1, \dots, c_{15} from individual Boolean signals. Similarly the output signals q_0, q_1, \dots, q_{15} can be decomposed using the BDHEXD or BDOCT bitwise demultiplexers.

The automaton function is defined by the following table of transitions:

S_1	C_1	FS_1
S_2	C_2	FS_2
...		
S_n	C_n	FS_n

Each row of this table represents one transition rule. For example the first row

$$S_1 \quad C_1 \quad FS_1$$

has the meaning

If (S_1 is the current state AND transition condition C_1 is fulfilled)
then proceed to the following state FS_1 .

The above described meaning of the table row holds for $C1 < 1000$. Negation of the $(C1 - 1000)$ -th transition condition is assumed for $C1 \geq 1000$.

The above mentioned table can be easily constructed from the automat state diagram or SFC description (Sequential Function Charts, formerly Grafcet).

The **R1 = on** input resets the automat to the initial state **S0**. The **SET** input allows manual transition from the current state to the **ns0** state when rising edge occurs. The **R1** input overpowers the **SET** input. The **HLD = on** input freezes the automat activity, the automat stays in the current state regardless of the **ci** input signals and the **tstep** timer is not incremented. The **TOUT** output indicates that the machine remains in the given state longer than expected. The time limits TO_i for individual states are defined by the **touts** array. There is no time limit for the given state when TO_i is set to zero. The **TOUT** output is set to **off** whenever the automat changes its state.

It is possible to allow more state transitions in one cycle by the **moresteps** parameter. However, this option must be thoroughly considered and tested, namely when the **TOUT** output is used in transition conditions. In such a case it is strongly recommended to incorporate the **ksa** output in the transition conditions as well.

The development tools of the REXYGEN system include also the **SFCEditor** program. You can create SFC schemes graphically using this tool. Run this editor from REXYGEN Studio by clicking the *Configure* button in the parameter dialog of the **EATMT** block.

Inputs

R1	Reset signal, R1 = on brings the automat to the initial state S0 ; the R1 input overpowers the SET input	Bool
ns0	This state is reached when rising edge occurs at the the SET input	Long (I32)
SET	The rising edge of this signal forces the transition to the ns0 state	Bool
HLD	The HLD = on freezes the automat, no transitions occur regardless of the input signals, tstep is not increasing	Bool
c0...c15	Transition conditions, each input signal contains 16 transition conditions, see details above	

Outputs

q0...q15	Output signals indicating the current state of the automat, see details above	Long (I32)
ksa	Integer code of the active state	Long (I32)
tstep	Time elapsed since the current state was reached; the timer is set to 0 whenever a state transition occurs	Double (F64)
TOUT	Flag indicating that the time limit for the current state was exceeded	Bool

Parameters

morestps	Allow multiple transitions in one cycle of the automat off ... Disabled on Enabled	Bool
ntr	Number of state transition table rows	$\downarrow 0 \uparrow 1024 \odot 4$ Long (I32)
sfcname	Filename of block configurator data file (filename is generated by system if parameter is empty)	String
STT	State transition table (matrix) $\odot [0\ 0\ 1; 1\ 1\ 2; 2\ 2\ 3; 3\ 3\ 0]$	Short (I16)
touts	Vector of timeouts T00, T01, ..., T0255 for the states S0, S1, ..., S255 $\odot [1\ 2\ 3\ 4\ 5\ 6\ 7\ 8\ 9\ 10\ 11\ 12\ 13\ 14\ 15\ 16]$	Double (F64)

EDGE_ – Falling/rising edge detection in a binary signal

Block Symbol

Licence: STANDARD



Function Description

The **EDGE_** block detects rising (**off**→**on**) and/or falling (**on**→**off**) edges in the binary input signal **U**. The type of edges to detect is determined by the **iedge** parameter. As long as the input signal remains constant, the output **Y** is **off**. In the case when an edge corresponding with the **iedge** parameter is detected, the output **Y** is set to **on** for one sampling period.

Input

U	Logical input of the block	Bool
----------	----------------------------	------

Output

Y	Logical output of the block	Bool
----------	-----------------------------	------

Parameter

iedge	Type of edges to detect	⊕1 Long (I32)
1 Rising edge	
2 Falling edge	
3 Both edges	

EQ – Equivalence of two signals

Block Symbol

Licence: STANDARD



Function Description

The block compares two input signals and **Y=on** is set if both signals have the same value. Both signals must be either of a numeric type or strings. A conversion between numeric types is performed: for example 2.0 (double) and 2 (long) are evaluated as equivalent. Comparison of matrices or other complex types is not supported.

Inputs

u1	Block input signal	Unknown
u2	Block input signal	Unknown

Output

Y	Output signal	Bool
----------	---------------	------

INTSM – Integer number bit shift and mask

Block Symbol

Licence: STANDARD



Function Description

The INTSM block performs bit shift of input value **i** by **shift** bits right (if **shift** is positive) or left (if **shift** is negative). Free space resulting from shifting is filled with zeros.

Output value **n** is calculated as bitwise AND of shifted input **i** and bit mask **mask**.

Typical application of this block is extraction of one or more adjacent bits from a given position in integer register which was read from some external system.

Input

i	Integer value to shift and mask	$\downarrow -9.22337E+18$	$\uparrow 9.22337E+18$	Large (I64)
----------	---------------------------------	---------------------------	------------------------	-------------

Parameters

shift	Bit shift (negative=left, positive=right)	$\downarrow -63$	$\uparrow 63$	Long (I32)
mask	Bit mask (applied after bit shift)	$\downarrow 0$	$\uparrow 4294970000$	Large (I64)
		$\odot 4294967295$		

Output

n	Resulting integer value	Large (I64)
----------	-------------------------	-------------

ISSW – Simple switch for integer signals

Block Symbol

Licence: STANDARD



Function Description

The ISSW block is a simple switch for integer input signals *i1* and *i2* whose decision variable is the binary input *SW*. If *SW* is off, then the output *n* is equal to the *i1* signal. If *SW* is on, then the output *n* is equal to the *i2* signal.

Inputs

<i>i1</i>	First integer input of the block	Long (I32)
<i>i2</i>	Second integer input of the block	Long (I32)
<i>SW</i>	Signal selector off ... The <i>i1</i> signal is selected on The <i>i2</i> signal is selected	Bool

Output

<i>n</i>	Integer output of the block	Long (I32)
----------	-----------------------------	------------

INTSM – Integer number bit shift and mask

Block Symbol

Licence: STANDARD



Function Description

The INTSM block performs bit shift of input value **i** by **shift** bits right (if **shift** is positive) or left (if **shift** is negative). Free space resulting from shifting is filled with zeros.

Output value **n** is calculated as bitwise AND of shifted input **i** and bit mask **mask**.

Typical application of this block is extraction of one or more adjacent bits from a given position in integer register which was read from some external system.

Input

i	Integer value to shift and mask	$\downarrow -9.22337E+18$	$\uparrow 9.22337E+18$	Large (I64)
----------	---------------------------------	---------------------------	------------------------	-------------

Parameters

shift	Bit shift (negative=left, positive=right)	$\downarrow -63$	$\uparrow 63$	Long (I32)
mask	Bit mask (applied after bit shift)	$\downarrow 0$	$\uparrow 4294970000$	Large (I64)
		$\odot 4294967295$		

Output

n	Resulting integer value	Large (I64)
----------	-------------------------	-------------

ITOI – Transformation of integer and binary numbers

Block Symbol

Licence: STANDARD



Function Description

The ITOI block transforms the input number k , or the binary number $(U_3\ U_2\ U_1\ U_0)_2$, from the set $\{0, 1, 2, \dots, 15\}$ to the output number nk and its binary representation $(Y_3\ Y_2\ Y_1\ Y_0)_2$ from the same set. The transformation is described by the following table

k	0	1	2	...	15
nk	n_0	n_1	n_2	...	n_{15}

where n_0, \dots, n_{15} are given by the mapping table target vector $fktab$.

If $BINF = \text{off}$, then the integer input k is active, while for $BINF = \text{on}$ the input is defined by the binary inputs $(U_3\ U_2\ U_1\ U_0)_2$.

Inputs

k	Integer input of the block	Long (I32)
U_0	Binary input digit, weight of 1	Bool
U_1	Binary input digit, weight of 2	Bool
U_2	Binary input digit, weight of 4	Bool
U_3	Binary input digit, weight of 8	Bool

Outputs

nk	Integer output of the block	Long (I32)
Y_0	Binary output digit, weight of 1	Bool
Y_1	Binary output digit, weight of 2	Bool
Y_2	Binary output digit, weight of 4	Bool
Y_3	Binary output digit, weight of 8	Bool

Parameters

$BINF$	Enable the binary selectors	$\odot\text{on}$ Bool
	$\text{off} \dots$ Disabled (integer input k)	
	$\text{on} \dots$ Enabled (binary input signals $U_3 \dots U_0$)	
$fktab$	Vector of mapping table target values	Byte (U8)
	$\odot[0\ 1\ 2\ 3\ 4\ 5\ 6\ 7\ 8\ 9\ 10\ 11\ 12\ 13\ 14\ 15]$	

NOT_ – Boolean complementation

Block Symbol

Licence: STANDARD



Function Description

The NOT block negates the input signal.

Input

U	Logical input of the block	Bool
---	----------------------------	------

Output

Y	Logical output of the block ($Y = \neg U$)	Bool
---	--	------

OR_ – Logical sum of two signals

Block Symbol

Licence: STANDARD



Function Description

The **OR** block computes the logical sum of two input signals **U1** and **U2**.

If you need to work with more input signals, use the **OROCT** block.

Inputs

U1	First logical input of the block	Bool
U2	Second logical input of the block	Bool


Outputs

Y	Logical output of the block ($U1 \vee U2$)	Bool
NY	Boolean complementation of Y ($NY = \neg Y$)	Bool

ORQUAD, OROCT, ORHEXD – Logical sum of multiple signals

Block Symbols

Licence: STANDARD

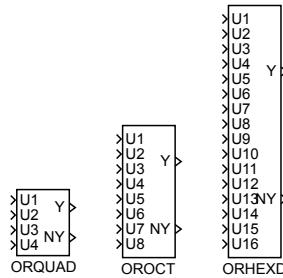

Function Description

The **ORQUAD**, **OROCT** and **ORHEXD** blocks compute the logical sum of up to sixteen input signals U_1, U_2, \dots, U_{16} . The signals listed in the **n1** parameter are negated prior to computing the logical sum.

For an empty **n1** parameter a simple logical sum $Y = U_1 \vee U_2 \vee U_3 \vee U_4 \vee U_5 \vee U_6 \vee U_7 \vee \dots \vee U_{16}$ is computed. For e.g. **n1=1,3..5**, the logical function is $Y = \neg U_1 \vee U_2 \vee \neg U_3 \vee \neg U_4 \vee \neg U_5 \vee U_6 \vee \dots \vee U_{16}$.

If you have only two input signals, consider using the **OR_** block.

Inputs

$U_1 \dots U_{16}$	Logical inputs of the block	Bool
--------------------	-----------------------------	------

Outputs

Y	Result of the logical operation	Bool
NY	Boolean complementation of Y	Bool

Parameter

n1	List of signals to negate. The format of the list is e.g. 1,3..5,8 . Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.	Long (I32)
-----------	--	------------

RS – Reset-set flip-flop circuit

Block Symbol


Licence: STANDARD



Function Description

The RS block is a flip-flop circuit, which sets its output permanently to **on** as soon as the input signal S is equal to **on**. The other input signal R1 resets the Q output to **off** even if the S input is **on**. The NQ output is simply the negation of the signal Q.

The block function is evident from the inner block structure depicted below.

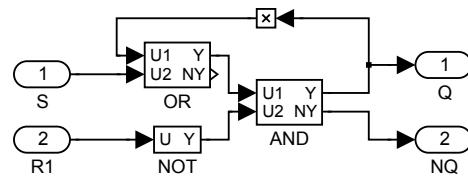

Inputs

S	Flip-flop set, sets the Q output to on	Bool
R1	Priority flip-flop reset, sets the Q output to off , overpowers the S input	Bool

Outputs

Q	Flip-flop circuit state	Bool
NQ	Boolean complementation of Q	Bool

SR – Set-reset flip-flop circuit

Block Symbol


Licence: STANDARD



Function Description

The SR block is a flip-flop circuit, which sets its output permanently to **on** as soon as the input signal S1 is **on**. The other input signal R resets the Q output to **off**, but only if the S1 input is **off**. The NQ output is simply the negation of the signal Q.

The block function is evident from the inner block structure depicted below.

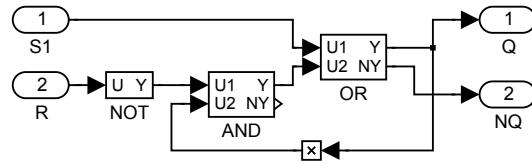

Inputs

S1	Priority flip-flop set, sets the Q output to on, overpowers the R input	Bool
R	Flip-flop reset, sets the Q output to off	Bool

Outputs

Q	Flip-flop circuit state	Bool
NQ	Boolean complementation of Q	Bool

TIMER_ – Multipurpose timer

Block Symbol


Licence: STANDARD



Function Description

The TIMER_ block either generates an output pulse of the given width pt (in seconds) or filters narrow pulses in the **U** input signal whose width is less than pt seconds. The operation mode is determined by the **mode** parameter.

The graph illustrates the behaviour of the block in individual modes for $pt = 3$:

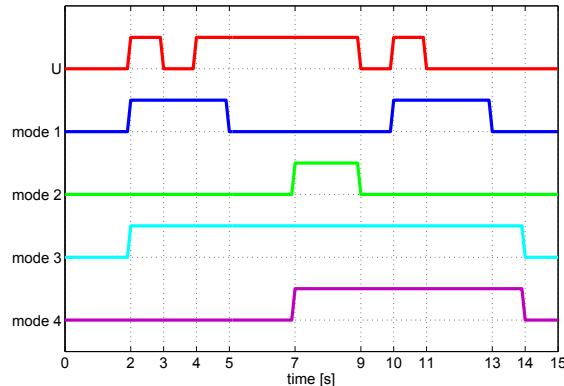

The timer can be paused by the **HLD** input. The **R1** input resets the timer. The reset signal overpowers the **U** input.

Inputs

U	Trigger of the timer	Bool
HLD	Timer hold	Bool
R1	Block reset (R1 = on)	Bool

Outputs

Q	Timer output	Bool
et	Elapsed time [s]	Double (F64)
rt	Remaining time [s]	Double (F64)

Parameters

mode	Timer mode	$\odot 1$	Long (I32)
1	Pulse – an output pulse of the length pt is generated upon rising edge at the U input. All input pulses during the generation of the output pulse are ignored.		
2	Delayed ON – the input signal U is copied to the Q output, but the start of the pulse is delayed by pt seconds. Any pulse shorter than pt is does not pass through the block.		
3	Delayed OFF – the input signal U is copied to the Q output, but the end of the pulse is delayed by pt seconds. If the break between two pulses is shorter than pt , the output remains on for the whole time.		
4	Delayed change – the Q output is set to the value of the U input no sooner than the input remains unchanged for pt seconds		
pt	Timer interval [s]	$\odot 1.0$	Double (F64)

Chapter 9

TIME – Blocks for handling time

Contents

DATE_ – Current date	262
DATETIME – Get, set and convert time	263
TIME – Current time	265
WSCH – Weekly schedule	266

DATE_ – Current date

Block Symbol

Licence: STANDARD



Function Description

The outputs of the DATE_ function block correspond with the actual date of the operating system. Use the [DATETIME](#) block for advanced operations with date and time.

Outputs

year	Year	Long (I32)
month	Month	Long (I32)
day	Day	Long (I32)
dow	Day of week, first day of week is Sunday (1)	Long (I32)


Parameter

tz	Timezone	⊕1 Long (I32)
	1 Local time	
	2 UTC	

DATETIME – Get, set and convert time

Block Symbol

Licence: STANDARD

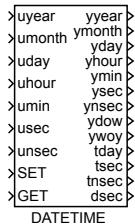

Function Description

The DATETIME block is intended for advanced date/time operations in the REXYGEN system.

It allows synchronization of the operating system clock and the clock of the REXYGEN system. When the executive of the REXYGEN system is initialized, both clocks are the same. But during long-term operation the clocks may loose synchronization (e.g. due to daylight saving time). If re-synchronization is required, the rising edge (**off**→**on**) at the SET input adjusts the clock of the REXYGEN system according to the block inputs and parameters.

It is highly recommended not to adjust the REXYGEN system time when the controlled machine/process is in operation. Unexpected behavior might occur.

If date/time reading or conversion is required, the rising edge (**off**→**on**) at the GET input triggers the action and the block outputs are updated. The outputs starting with 't' denote the total number of respective units since January 1st, 2000 UTC.

Both reading and adjusting clock can be repeated periodically if set by **getper** and **setper** parameters.

If the difference of the two clocks is below the tolerance limit **settol**, the clock of the REXYGEN system is not adjusted at once, a gradual synchronization is used instead. In such a case, the timing of the REXYGEN system executive is negligibly altered and the clocks synchronization is achieved after some time. Afterwards the timing of the REXYGEN executive is reverted back to normal.

For simple date/time reading use the DATE_ and TIME function blocks.

Inputs

uyear	Input for setting year	$\odot 0.00E+00$	Long (I32)
umonth	Input for setting month	$\odot 0.00E+00$	Long (I32)
uday	Input for setting day	$\odot 0.00E+00$	Long (I32)
uhour	Input for setting hours	$\odot 0.00E+00$	Long (I32)
umin	Input for setting minutes	$\odot 0.00E+00$	Long (I32)

usec	Input for setting seconds	$\odot 0.00E+00$	Long (I32)
unsec	Input for setting nanoseconds $\downarrow -9.22E+18 \uparrow 9.22E+18 \odot 0.00E+00$		Large (I64)
SET	Trigger for setting time		Bool
GET	Trigger for getting time		Bool

Outputs

yyear	Year	Long (I32)
ymonth	Month	Long (I32)
yday	Day	Long (I32)
yhour	Hours	Long (I32)
ymin	Minutes	Long (I32)
ysec	Seconds	Long (I32)
ynsec	Nanoseconds	Long (I32)
ydow	Day of week	Long (I32)
ywoy	Week of year	Long (I32)
tday	Total number of days	Long (I32)
tsec	Total number of seconds	Long (I32)
tnsec	Total number of nanoseconds	Large (I64)
dsec	Number of seconds since midnight	Long (I32)

Parameters

isetmode	Source for setting time 1 OS clock 2 Block inputs 3 The unsec input 4 The usec input 5 The unsec input, relative	$\odot 1.00E+00$	Long (I32)
igetmode	Source for getting or converting time 1 OS clock 2 Block inputs 3 The unsec input 4 The usec input 5 The uday input 6 REXYGEN clock	$\odot 6.00E+00$	Long (I32)
settol	Tolerance for setting the REXYGEN clock [s]	$\odot 1.0$	Double (F64)
setper	Period for setting time [s] (0=not periodic)	$\odot 0.0$	Double (F64)
getper	Period for getting time [s] (0=not periodic)	$\odot 0.001$	Double (F64)
FDOW	First day of week is Sunday off ... Week starts on Monday on Week starts on Sunday		Bool
tz	Timezone 1 Local time 2 UTC	$\odot 1.00E+00$	Long (I32)

TIME – Current time

Block Symbol

Licence: STANDARD



Function Description

The outputs of the TIME function block correspond with the actual time of the operating system. Use the [DATETIME](#) block for advanced operations with date and time.

Outputs

<code>hour</code>	Hours	Long (I32)
<code>min</code>	Minutes	Long (I32)
<code>sec</code>	Seconds	Long (I32)


Parameter

<code>tz</code>	Timezone	⊕1 Long (I32)
1	Local time	
2	UTC	

WSCH – Weekly schedule

Block Symbol

Licence: STANDARD



Function Description

The **WSCH** function block is a weekly scheduler for e.g. heating (day, night, eco), ventilation (high, low, off), lighting, irrigation etc. Its outputs can be used for switching individual appliances on/off or adjusting the intensity or power of the connected devices.

During regular weekly schedule the outputs **iy** and **y** reflect the values from the **wst** table. This table contains triplets *day-hour-value*. E.g. the notation [2 6.5 21.5] states that on Tuesday, at 6:30 in the morning (24-hour format), the output **y** will be set to 21.5. The output **iy** will be set to 22 (rounding to nearest integer). The individual triplets are separated by semicolons.

The days in a week are numbered from 1 (Monday) to 7 (Sunday). Higher values can be used for special daily schedules, which can be forced using the **fsch** input or the **specdays** table. The active daily program is indicated by the **isch** output.

Alternatively it is possible to temporarily force a specific output value using the **val** input and a rising edge at the **SET** input (**off→on**). When a rising edge occurs at the **SET** input, the **val** input is copied to the **y** output and the **isch** output is set to 0. The forced value remains set until:

- the next interval as defined by the **wst** table, or
- another rising edge occurs at the **SET** input, or
- a different daily schedule is forced using the **fsch** input.

The list of special days (**specdays**) can be used for forcing a special daily schedule at given dates. E.g. you can force a Sunday daily schedule on holidays, Christmas, New Year, etc. The date is entered in the YYYYMMDD format. The notation [20160328 7] thus means that on March 28th, 2016, the Sunday daily schedule should be used. Individual pairs are separated by semicolons.

The **trem** and **ynext** outputs can be used for triggering specific actions in advance, before the **y** and **iy** are changed.

The **iy** output is meant for direct connection to function blocks with Boolean inputs (the conversion from type **long** to type **bool** is done automatically).

The **nmax** parameter defines memory allocation for the **wst** and **specdays** arrays. For **nmax** = 100 the **wst** list can contain up to 100 triplets *day-hour-value*. In typical applications there is no need to modify the **nmax** parameter.

Inputs

SET	Trigger for setting the y and iy outputs	Bool
val	Temporary value to set the y and iy outputs to	Double (F64)
fsch	Forced schedule 0 standard weekly schedule 1 Monday 2 Tuesday 7 Sunday 8 and above additional daily programs as defined by the wst table	Long (I32)

Outputs

iy	Integer output value	Long (I32)
y	Output value	Double (F64)
isch	Daily schedule identifier	Long (I32)
trem	Time remaining in the current section (in seconds)	Double (F64)
ynext	Output in the next section	Double (F64)

Parameters

tz	Timezone 1 Local time 2 UTC	$\odot 1.00E+00$	Long (I32)
nmax	Allocated size of arrays	$\downarrow 10 \uparrow 1000000 \odot 1.00E+02$	Long (I32)
wst	Weekly schedule table (list of triplets <i>day-hour-value</i>)		Double (F64)
specdays	List of special days (list of pairs <i>date-daily program</i>) $\odot [20150406 1; 20151224 1; 20151225 1; 20151226 1; 20160101 1; 20160328 1; 20170417 1; 20170418 1]$		Long (I32)

Chapter 10

ARC – Data archiving

Contents

10.1	Functionality of the archiving subsystem	270
10.2	Generating alarms and events	271
	ALB, ALBI – Alarms for Boolean value	271
	ALN, ALNI – Alarms for numerical value	273
	ARS – Archive store value	276
10.3	Trends recording	278
	ACD – Archive compression using Delta criterion	278
	TRND – Real-time trend recording	280
	TRNDV – Real-time trend recording with vector input	283
10.4	Archive management	284
	AFLUSH – Forced archive flushing	284

The RexCore executive of the REXYGEN system consists of various interconnected subsystems (real-time subsystem, diagnostic subsystem, drivers subsystem, etc.). One of these subsystems is the *archiving subsystem*.

The archiving subsystem takes care of recording the history of the control algorithm. The first chapter describes the functionality of the archiving subsystem while the subsequent chapters describe the function blocks of the REXYGEN system.

The function blocks can be divided into groups by their use:

- Blocks for generating alarms and events
- Blocks for recording trends
- Blocks for handling archives

10.1 Functionality of the archiving subsystem

The archive in the REXYGEN system stores the history of events, alarms and trends of selected signals. There can be up to 15 archives in each target device. The types or archives are listed below:

RAM memory archive – Suitable for short-term data storage. The data access rate is very high but the data is lost on reboot.

Archive in a backed-up memory – Similar to the RAM archive but the data is not lost on restart. Data can be accessed fast but the capacity is usually quite limited (depends on the target platform).

Disk archive The disk archives are files in a proprietary binary format. The files are easily transferrable among individual platforms and the main advantage is the size, which is limited only by the capacity of the storage medium. On the other hand, the drawback is the relatively slow data access.


Not all hardware platforms support all types of archives. The individual types which are supported by the platform can be displayed in the REXYGEN Diagnostics program or in REXYGEN Studio in the Diagnostics tree view panel after clicking on the name of the target device (IP address). The supported types are listed in the lower left part of the Target tab.

10.2 Generating alarms and events

ALB, ALBI – Alarms for Boolean value

Block Symbols

Licence: STANDARD



Function Description

The **ALB** and **ALBI** blocks generate alarms or events when a Boolean input signal **U** changes. The **men** parameter selects whether the rising or falling or both edges in the input signal should be indicated. The **iac** output shows the current alarm (event) code.

The **ALBI** block is an extension of the **ALB** block as the alarms (events) are indicated also by Boolean output signals **HA**, **LA** and **NACK**. The type of edges to watch is selected by the **men** input signal and the alarms are acknowledged by the **iACK** input signal instead of parameters with the same name and meaning.

The events and alarms are differentiated by the **lv1** parameter in the REXYGEN system. The range $1 \leq lv1 \leq 127$ is reserved for alarms. All starts, ends and acknowledgements of the alarms are stored in the archive. On the contrary, the range $128 \leq lv1 \leq 255$ indicates events. Only the start (the time instant) of the event is stored in the archive.

Inputs

U	Logical input of the block whose changes are watched	Bool
men	Enable alarms	Long (I32)
	0 All alarms disabled	
	1 Low-alarm enabled (LA) (falling edge in the input signal U)	
	2 High-alarm enabled (HA) (rising edge in the input signal U)	
	3 All alarms enabled	
iACK	Acknowledge alarm	Byte (U8)
	1 Low-alarm acknowledge	
	2 High-alarm acknowledge	
	3 Both alarms acknowledge	
	Alarm is acknowledged on rising edge	

Outputs

iac	Current alarm code	Long (I32)
	0 All alarms inactive	
	1 Low-alarm active (LA)	
	2 High-alarm active (HA)	
	256 ... Low-alarm not acknowledged (NACK)	
	512 ... High-alarm not acknowledged (NACK)	
HA	High-alarm indicator	Bool
LA	Low-alarm indicator	Bool
NACK	Alarm-not-acknowledged indicator	Bool


Parameters

arc	List of archives to store the events. The format of the list is e.g. 1,3..5,8. The event will be stored in all listed archives (see the ARC block for details on archives numbering). Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.	Word (U16)
id	Identification code of the alarm in the archive. This identifier must be unique in the whole target device with the REXYGEN control system (i.e. in all archiving blocks). Disabled for id = 0. ⊕1	Word (U16)
lvl	The level of the alarms (HA and LA) which differentiates alarms from events and defines the severity of the alarm/event ↓1 ⊕1	Byte (U8)
Desc	Extended description of the alarm which is displayed by the diagnostic tools of the REXYGEN system ⊕Alarm Description	String

ALN, ALNI – Alarms for numerical value

Block Symbols

Licence: STANDARD

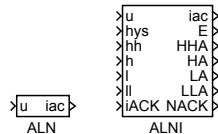

Function Description

The **ALN** and **ALNI** blocks generate two-level alarms or events when a limit value is exceeded (or not reached). There are four limit values the input signal **u** is compared to, namely high-limits **h** and **hh** and low-limits **l** and **ll**. The **iac** output shows the current alarm (event) code.

The **ALNI** block is an extension of the **ALN** block as the alarms (events) are indicated also by Boolean output signals **HHA**, **HA**, **LA** and **LLA** and the variables of the alarm algorithm are given by the input signals **hys**, **hh**, **h**, **l** and **ll** instead of parameters with the same name and meaning.

The events and alarms are differentiated by the **lv1** parameter in the REXYGEN system. The range $1 \leq lv1 \leq 127$ is reserved for alarms. All starts, ends and acknowledgements of the alarms are stored in the archive. On the contrary, the range $128 \leq lv1 \leq 255$ indicates events. Only the start (the time instant) of the event is stored in the archive.

Inputs

u	Analog input of the block which is checked to remain within the given limits	Double (F64)
hys	Alarm hysteresis for switching the alarm off	$\downarrow 1e-10 \uparrow 1e+10$ Double (F64)
hh	The second high-alarm limit, must be greater than h	Double (F64)
h	High-alarm limit, must be greater than l	Double (F64)
l	Low-alarm limit, must be greater than ll	Double (F64)
ll	The second low-alarm limit	Double (F64)
iACK	Alarm is acknowledged on rising edge of the individual bits of this input/parameter. E.g. value 15 acknowledges all alarms. Byte (U8)	
	1 Second low-alarm acknowledge	
	2 Low-alarm acknowledge	
	4 High-alarm acknowledge	
	8 Second high-alarm acknowledge	

In case a one-level alarm is required, it is sufficient to set **lv1=0** or set the **hh** and **ll** limits to extreme values which can never be reached by the input signal.

Outputs

iac	Current alarm code. Additional bitwise combinations of the codes may appear. E.g. 12 means both high alarms.	Long (I32)
	0 Signal within limits	
	1 Low-alarm active	
	2 High-alarm active	
	4 Second low-alarm active	
	8 Second high-alarm active	
	256 ... Low-alarm not acknowledged	
	512 ... High-alarm not acknowledged	
	1024 .. Second low-alarm not acknowledged	
	2048 .. Second high-alarm not acknowledged	
	-1 Invalid alarm limits	
E	Error flag	Bool
	off ... No error	
	on An error occurred, alarm limits disordered	
HHA	The second high-alarm indicator	Bool
HA	High-alarm indicator	Bool
LA	Low-alarm indicator	Bool
LLA	The second low-alarm indicator	Bool
NACK	Alarm-not-acknowledged indicator	Bool

Parameters

acls	Alarm class (data type to store)	⊕8 Byte (U8)
	1 Bool 5 Word (U16)	
	2 Byte (U8) DWord (U32) ... Large (I64)	
	3 Short (I16) Float (F32)	
	4 Long (I32) Double (F64)	
arc	List of archives to store the events. The format of the list is e.g. 1,3..5,8. The event will be stored in all listed archives (see the ARC block for details on archives numbering). Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.	Word (U16)
id	Identification code of the alarm in the archive. This identifier must be unique in the whole target device with the REXYGEN control system (i.e. in all archiving blocks). Disabled for id = 0.	Word (U16)
	⊕1	
lvl1	The level of first high- and low-alarms (HA and LA) which differentiates alarms from events and defines the severity of the alarm/event	Byte (U8)
	↓1 ⊕1	
lvl2	The level of second high- and low-alarms (HHA and LLA) which differentiates alarms from events and defines the severity of the alarm/event	Byte (U8)
	↓1 ⊕10	

Desc Extended description of the alarm which is displayed by the String diagnostic tools of the REXYGEN system
 ⒶAlarm Description

ARS – Archive store value

Block Symbol

Licence: STANDARD



Function Description

The block allow to store value into archive subsystem. Written value must be connected to the **u** input. Value could be simple like bool, int or float, string or matrix/vector. Type of value must be set by the **type** parameter. The the parameter **codetype=13:Reference** must be set for vector or matrix. There is one archive item for each column of the matrix. Data are stored only if the input **RUN=on** is set. The parameter **subtype** allow write alarm type that write other alarm blocks (for example **L->H** for bool alarm, **HiHi** for numeric alarm). the value of this parameter is in range 0 to 7 and is not used in vector/matrix items. This parameter is usually not needed.

Note 1: The archive subsystem is limited for 255 values, but no more than 512 bytes in one archive item (e.g. 128 values of type Short, 64 values of type Long, 32 values of type Double). Vector (matrix's column) is truncated to this size and stored into archive and no error nor warning is indicated, if the input array is bigger.

Note 2: The string value is limited to 65535 byte (i.e. characters if only characters from english keyboard is used; UTF-8 encoding is used). String is truncated to this size and stored into archive and no error nor warning is indicated, if the input string is bigger. It is recommended to not overcome 4000 bytes, because some reading functions have limited buffer and could fail for long strings.

Inputs

u	Value to store into archive	Unknown
RUN	Enable execution	Bool

Parameters

type	Type of all trend buffers	⊕12 Byte (U8)
1	Bool	
2	Byte (U8)	
3	Short (I16)	
4	Long (I32)	
5	Word (U16)	
6	DWord (U32)	
7	Float (F32)	
8	Double (F64)	
9	Time	
10	Large (I64)	
11	Error	
12	String	
13	Reference	
arc	List of archives to write the events to	Word (U16)
id	Unique archive item ID	⊕1 Word (U16)
lvl	Alarm level	⊕1 Word (U16)
Desc	Event description string	⊕Value Description String
subtype	alarm subtype (for special ussage only)	

Output

iE	Error code	Error
-----------	------------	-------

10.3 Trends recording

ACD – Archive compression using Delta criterion

Block Symbol

Licence: STANDARD



Function Description

The ACD block is meant for storing compressed analog signals to archives using archive events.


The main idea is to store the input signal u only when it changes significantly. The interval between two samples is in the range (t_{min}, t_{max}) seconds (rounded to the nearest multiple of the sampling period). A constant input signal is stored every t_{max} seconds while rapidly changing signal is stored every t_{min} seconds.

When the execution of the block is started, the first input value is stored. This value will be referred to as u_0 in the latter. The rules for storing the following samples are given by the `delta` and `TR` input signals.

For `TR = off` the condition $|u - u_0| > \text{delta}$ is checked. If it holds and the last stored sample occurred more than t_{min} seconds ago, the value of input u is stored and $u_0 = u$ is set. If the condition is fulfilled sooner than t_{min} seconds after the last stored value, the error output `E` is set to 1 and the first value following the t_{min} interval is stored. At that time the output `E` is set back to 0 and the whole procedure is repeated.

For `TR = on` the input signal values are compared to a signal with compensated trend. The condition for storing the signal is the same as in the previous case.

The following figure shows the archiving process for both cases: a) `TR = off`, b) `TR = on`. The stored samples are marked by the symbol \times .

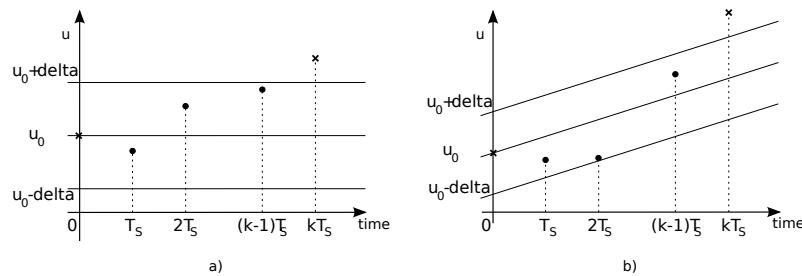

Inputs

<code>u</code>	Signal to compress and store	<code>Double (F64)</code>
<code>delta</code>	Threshold for storing the signal	$\downarrow 0.0 \uparrow 1e+10$ <code>Double (F64)</code>

Outputs

y	The last value stored in the archive	Double (F64)
E	Error flag – indicates that a significant change in the input signal occurred sooner than the tmin interval passes	Bool
	off ... No error on An error occurred	

Parameters

acls	Archive class determining the variable type to store	⊕8	Byte (U8)
	1 Bool 5 Word (U16)		
	2 Byte (U8) DWord (U32).... Large (I64)		
	3 Short (I16) Float (F32)		
	4 Long (I32) Double (F64)		
arc	List of archives to store the events. The format of the list is e.g. 1,3..5,8. The event will be stored in all listed archives (see the ARC block for details on archives numbering). Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.		Word (U16)
id	Identification code of the event in the archive. This identifier must be unique in the whole target device with the REXYGEN control system (i.e. in all archiving blocks). Disabled for id = 0.	⊕1	Word (U16)
tmin	The shortest interval between two samples of the u input signal stored in the archive [s]	↓0.001 ↑1000000.0 ⊕1.0	Double (F64)
tmax	The longest interval between two samples of the u input signal stored in the archive [s]	↓1.0 ↑1000000.0 ⊕1000.0	Double (F64)
TR	Trend evaluation flag	⊕on	Bool
	off ... The deviation of the input signal from the last stored value is evaluated		
	on The deviation of the input signal from the last value's trend is evaluated		
Desc	Extended description of the event which is displayed by the diagnostic tools of the REXYGEN system		String
		⊕Value Description	

TRND – Real-time trend recording

Block Symbol

Licence: STANDARD



Function Description

The TRND block is designed for storing of up to 4 input signals (`u1` to `u4`) in cyclic buffers in the memory of the target device. The main advantage of the TRND block is the synchronization with the real-time executive, which allows trending of even very fast signals (i.e. with very high sampling frequency). In contrary to asynchronous data storing in the higher level operator machine (host), there are no lost or multiply stored samples.

The number of stored signals is determined by the parameter `n`. In case the trend buffer of length `l` samples gets full, the oldest samples are overwritten. Data can be stored once in `pfac` executions of the block (decimation) and the data can be further processed according to the `ptype1` to `ptype4` parameters. The other decimation factor `afac` can be used for storing data in archives.

The type of trend buffers can be specified in order to conserve memory of the target device. The memory requirements of the trend buffers are defined by the formula $s \cdot n \cdot l$, where s is the size of the corresponding variable in bytes. The default type `Double` consumes 8 bytes per sample, thus for storing $n = 4$ trends of this type and length $l = 1000$, $8 \cdot 4 \cdot 1000 = 32000$ bytes are required. In case the input signals come from 16-bit A/D converter the `Word` type can be used and memory requirements drop to one quarter. Memory requirements and allowed ranges of individual types are summarized in table 1.1 on page 16 of this reference guide.

It can happen that the processed input value exceeds the representable limits when using different type of buffer than `Double`. In such a case the highest (lowest) representable number of the corresponding type is stored in the buffer and an error is binary encoded to the `iE` output according to the following table (the unused bits are omitted):

Error	Range underflow				Range overflow			
	<code>u4</code>	<code>u3</code>	<code>u2</code>	<code>u1</code>	<code>u4</code>	<code>u3</code>	<code>u2</code>	<code>u1</code>
Input	11	10	9	8	3	2	1	0
Bit number	2048	1024	512	256	8	4	2	1
Bit weight								

In case of simultaneous errors the resulting error code is given by the sum of the weights of individual errors. Note that underflow and overflow cannot happen simultaneously on a single input.

It is possible to read, display and export the stored data by the REXYGEN Diagnostics diagnostic program.

Inputs

u1..u4	Analog inputs to be processed and stored in the trend	Double (F64)
RUN	Enable execution. The data are processed and stored if and only if RUN = on .	Bool
R1	Input for clearing the trend contents. The buffers are cleared when R1 = on . This flag overpowers the RUN input.	Bool

Outputs

y1..y4	Analog outputs of the block set once in pfac executions of the block to the last values stored in the trend buffers	Double (F64)
iE	Error code, see the table above	Long (I32)

Parameters

n	Number of signals to process and store in the trend buffers	Long (I32)
	$\downarrow 1 \uparrow 4 \odot 4$	
l	Number of samples reserved in memory for each trend buffer	Long (I32)
	$\downarrow 0 \uparrow 268435000 \odot 1000$	
btype	Type of all n trend buffers	Long (I32)
	$\odot 8$	
	1 Bool 4 Long 7 Float	
	2 Byte 5 Word 8 Double	
	3 Short 6 DWord 10 Large	
ptype<i>i</i>	The way the signal ui , $i = 1\dots 4$, is processed. The last pfac samples are processed as selected and the result is stored in the i -th trend buffer.	Long (I32)
	$\odot 1$	
	1 No processing, just storing data	
	2 Minimum from the last pfac samples	
	3 Maximum from the last pfac samples	
	4 Sum of the last pfac samples	
	5 Simple average of the last pfac samples	
	6 Root mean square of the last pfac samples	
	7 Variance of the last pfac samples	
pfac	Multiple of the block execution period defining the period for storing the data in the trend buffers. Data are stored with the period of $pfac \cdot T_S$ unless RUN = off , where T_S is the block execution period in seconds.	Long (I32)
	$\downarrow 1 \uparrow 1000000 \odot 1$	
afac	Every afac -th sample stored in the trend buffer is also stored in the archives specified by the arc parameter. There are no data stored in the archives for afac = 0 . Data are stored with the period of $afac \cdot pfac \cdot T_S$, where T_S is the block execution period in seconds.	Long (I32)
	$\downarrow 0 \uparrow 1000000$	

arc	List of archives to store the trend data. The format of the list is e.g. 1,3..5,8. The data will be stored in all listed archives (see the ARC block for details on archives numbering). Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.	Word (U16)
id	Identification code of the trend block. This identifier must be unique in the whole target device with the REXYGEN system (i.e. in all archiving blocks). Disabled for id = 0.	Word (U16) ⊕1
Title	Title of the trend to be displayed in the diagnostic tools of the REXYGEN system, e.g. in the REXYGEN Diagnostics program	String ⊕Trend Title
timesrc	Source of timestamps. Each data sample in trend buffer is stored with a timestamp. For fast or short term trends where you are interested in sample-by-sample timing more than in absolute time, choose CORETIMER – REXYGEN internal technological time which is incremented by nominal period each base tick. For long running trends where you are interested mostly in absolute time shared with operating system (and possibly synchronized by NTP), choose RTC. Other values are intended for debug or special purposes.	Long (I32) ⊕1
	1 CORETIMER – technological time – at current tick	
	2 CORETIMER-PRECISE – technological time – at block execution	
	3 RTC – real time clock (wallclock) from operating system – at current tick	
	4 RTC-PRECISE – real time clock (wallclock) from operating system – at block execution	
	4 PFC – raw high precision time (PerFomanceCounter)	

TRNDV – Real-time trend recording with vector input

Block Symbol

Licence: STANDARD



Function Description

The TRND block is designed for storing input signals which arrive at the **uVec** input in vector form. On the contrary to the **TRND** block it allows storing more than 4 signals. The signals are stored in cyclic buffers in the memory of the target device. The main advantage of the TRNDV block is the synchronization with the real-time executive, which allows trending of even very fast signals (i.e. with very high sampling frequency). In contrary to asynchronous data storing in the higher level operator machine (host), there are no samples lost or multiply stored.

The number of stored signals is determined by the parameter **n**. In case the trend buffer of length 1 samples gets full, the oldest samples are overwritten. Data can be stored once in **pfac** executions of the block (decimation). The other decimation factor **afac** can be used for storing data in archives.

The type of trend buffers can be specified in order to conserve memory of the target device. The memory requirements of the trend buffers are defined by the formula $s \cdot n \cdot l$, where **s** is the size of the corresponding variable in bytes. The default type **Double** consumes 8 bytes per sample, thus for storing e.g. **n = 4** trends of this type and length **l = 1000**, $8 \cdot 4 \cdot 1000 = 32000$ bytes are required. In case the input signals come from 16-bit A/D converter the **Word** type can be used and memory requirements drop to one quarter. Memory requirements and allowed ranges of individual types are summarized in table 1.1 on page 16 of this reference guide.

It is possible to read, display and export the stored data by the REXYGEN Diagnostics diagnostic program.

Inputs

uVec	Vector signal to record	Reference
HLD	Input for freezing the cyclic buffers, no data is appended when Bool HLD = on	

Output

iE	Error code	Error
	i REXYGEN general error	

Parameters

n	Number of signals (trend buffers)	$\downarrow 1 \uparrow 64 \odot 8$	Long (I32)
l	Number of samples per trend buffer	$\downarrow 2 \uparrow 268435000 \odot 1000$	Long (I32)
btype	Type of all trend buffers	$\odot 8$	Long (I32)
	1 Bool 4 Long 7 Float		
	2 Byte 5 Word 8 Double		
	3 Short 6 DWord 10 Large		
pfac	Multiple of the block execution period defining the period for storing the data in the trend buffers. Data are stored with the period of $pfac \cdot T_S$ unless RUN = off , where T_S is the block execution period in seconds.	$\downarrow 1 \uparrow 1000000 \odot 1$	Long (I32)
afac	Every afac -th sample stored in the trend buffer is also stored in the archives specified by the arc parameter. There are no data stored in the archives for afac = 0 . Data are stored with the period of $afac \cdot pfac \cdot T_S$, where T_S is the block execution period in seconds.	$\downarrow 0 \uparrow 1000000$	Long (I32)
arc	List of archives to store the trend data. The format of the list is e.g. 1,3..5,8. The data will be stored in all listed archives (see the ARC block for details on archives numbering). Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.		Word (U16)
id	Identification code of the trend block. This identifier must be unique in the whole target device with the REXYGEN system (i.e. in all archiving blocks). Disabled for id = 0 .	$\odot 1$	Word (U16)
Title	Title of the trend to be displayed in the diagnostic tools of the REXYGEN system, e.g. in the REXYGEN Diagnostics program		String
		\odot Trend Title	

10.4 Archive management

AFLUSH – Forced archive flushing

Block Symbol

Licence: STANDARD



Function Description

The AFLUSH block is intended for immediate storing of archive data to permanent memory (hard drive, flash disk, etc.). It is useful when power loss can be anticipated, e.g. emergency shutdown of the system following some failure. It forces the archive subsystem to write all archive data to avoid data loss. The write operation is initiated by a rising edge (**off**→**on**) at the FLUSH input regardless of the **period** parameter of the **ARC** block.

Input

FLUSH Force archive flushing **Bool**

Parameter

arc List of archives to store the events. The format of the list is Word (U16) e.g. 1,3..5,8. The event will be stored in all listed archives (see the [ARC](#) block for details on archives numbering). Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case.

Chapter 11

STRING – Blocks for string operations

Contents

CNS – String constant	288
CONCAT – Concat string by pattern	289
FIND – Find a Substring	290
ITOS – Integer number to string conversion	291
LEN – String length	292
MID – Substring Extraction	293
PJROCT – Parse JSON string (real output)	294
PJSOCT – Parse JSON string (string output)	295
REGEXP – Regular expresion parser	296
REPLACE – Replace substring	299
RTOS – Real Number to String Conversion	300
SELSOCT – Selector switch for string signals	301
STOR – String to real number conversion	302

CNS – String constant

Block Symbol

Licence: STANDARD



Function Description

The CNS block is a simple string constant with maximal available size. A value of **scv** is always truncated to **nmax**.

Parameters

scv	String (constant) value	String
nmax	Allocated size of string [bytes]	↓0 ↑65520 Long (I32)


Output

sy	String output value	String
-----------	---------------------	---------------

CONCAT – Concat string by pattern

Block Symbol

Licence: STANDARD



Function Description

Concatenates up to 8 input strings **su1** to **su8** by pattern specified in **ptrn** parameter.

Inputs

su1..8	String input value	String
---------------	--------------------	---------------

Parameters

ptrn	Concatenation pattern	String
nmax	Allocated size of string [bytes]	Long (I32)

Output

sy	String output value	String
-----------	---------------------	---------------

FIND – Find a Substring

Block Symbol

Licence: STANDARD



Function Description

The FIND block searches for the string **su2** in the string **su1** and returns a one-based index into **su1** if a **su2** is found or zero otherwise. Both **su1** and **su2** are truncated to **nmax**.

Inputs

su1	String input value	String
su2	String input value	String

Parameter

nmax	Allocated size of string [bytes]	$\downarrow 0 \uparrow 65520$ Long (I32)
-------------	----------------------------------	--

Output

pos	Position of substring	Long (I32)
------------	-----------------------	------------

ITOS – Integer number to string conversion

Block Symbol

Licence: STANDARD



Function Description

The **ITOS** block is used for converting an integer into text. The **len** parameter specifies the minimum length of the output string. If the number has a smaller number of digits, zeroes or spaces will be added according to the **mode** parameter. The **radix** parameter specifies the numerical system in which the conversion is to be performed. The output string does not contain any identification of the numerical system used (e.g. the 0x prefix for the hexadecimal system).

Input

n	Integer input of the block	Long (I32)
----------	----------------------------	------------

Output

sy	String output value	String
-----------	---------------------	--------

Parameters

len	Minimum length of output string	↓0 ↑30 Long (I32)
mode	Output string format	⊕1 Long (I32)
	1 Align right, fill with spaces	
	2 Align right, fill with zeroes	
	3 Align left, fill with spaces	
radix	Radix	⊕10 Long (I32)
	2 Binary	
	8 Octal	
	10 Decimal	
	16 Hexadecimal	

LEN – String length

Block Symbol

Licence: STANDARD



Function Description

The LEN block returns the actual length of the string in **su** in UTF-8 characters.

Input

su	String input value	String
-----------	--------------------	--------

Parameter

nmax	Allocated size of string [bytes]	$\downarrow 0 \uparrow 65520$ Long (I32)
-------------	----------------------------------	--

Output

len	Length of input string	Long (I32)
------------	------------------------	------------

MID – Substring Extraction

Block Symbol

Licence: STANDARD



Function Description

The MID block extracts a substring **sy** from **su**. The parameters **l** and **p** specify position and length of the string being extracted in UTF-8 characters. The parameter **p** is one-based.

Inputs

su	String input value	String
l	Length of output string	Long (I32)
p	Position of output string (one-based)	Long (I32)

Parameter

nmax	Allocated size of string [bytes]	$\downarrow 0 \uparrow 65520$ Long (I32)
-------------	----------------------------------	--

Output

sy	String output value	String
-----------	---------------------	---------------

PJROCT – Parse JSON string (real output)

Block Symbol

Licence: STANDARD



Function Description

Parses input JSON string `jtxt` according to specified `name*` parameters when the input `RUN` is on. Output signals are `real` type.

Inputs

<code>jtxt</code>	JSON formated string	String
<code>RUN</code>	Enable execution	Bool

Parameters

<code>name1..8</code>	Name of JSON object	String
<code>nmax</code>	Allocated size of string [bytes]	$\downarrow 0 \uparrow 65520$ Long (I32)
<code>yerr</code>	Substitute value for an error case	Double (F64)


Outputs

<code>y1..8</code>	Block output signal	Double (F64)
<code>iE</code>	Error code	Error

PJSOCT – Parse JSON string (string output)

Block Symbol

Licence: STANDARD



Function Description

Parses input JSON string **jtxt** according to specified **name*** parameters when the input **RUN** is on. Output signals are **string** type.

Inputs

jtxt	JSON formated string	String
RUN	Enable execution	Bool

Parameters

name1..8	Name of JSON object	String
nmax	Allocated size of string [bytes]	$\downarrow 0 \uparrow 65520$ Long (I32)


Outputs

sy1..8	String output value	String
iE	Error code	Error

REGEXP – Regular expression parser

Block Symbol

Licence: **ADVANCED**



Function Description

This block implements a subset of Perl or C# or Unix command `grep` regular expression syntax.

Supported syntax is :

- (?i) ... Must be at the beginning of the regex. Makes match case-insensitive
- ^ ... Match beginning of a buffer
- \$... Match end of a buffer
- () ... Grouping and substring capturing
- \s ... Match whitespace
- \S ... Match non-whitespace
- \d ... Match decimal digit
- \n ... Match new line character
- \r ... Match line feed character
- \f ... Match form feed character
- \v ... Match vertical tab character
- \t ... Match horizontal tab character
- \b ... Match backspace character
- + ... Match one or more times (greedy)
- +? ... Match one or more times (non-greedy)
- * ... Match zero or more times (greedy)

- `*?` ... Match zero or more times (non-greedy)
- `?` ... Match zero or once (non-greedy)
- `x|y` ... Match x or y (alternation operator)
- `\meta` ... Match one of the meta characters: `^$().[]*+?|\\`
- `\xHH` ... Match byte with hex value 0xHH, e.g. `\x4a`
- `[...]` ... Match any character from set. Ranges like `[a-z]` are supported.
- `[^...]` ... Match any character except the ones in set. Ranges like `[a-z]` are supported.

Examples

- `[0-9]+` ... Find first integer in input string (and put it into `cap` output)
- `[-+]?[0-9]*\. [0-9]+([eE] [-+]?[0-9]+)?` ... Find first real number in input string (and put it into `cap` output)
- `^\s*(.*?)\s*$` ... Put trimmed input string into `cap1` output
- `num\s*:\s*([0-9]*\. [0-9]*)` ... Expect input string in JSON format; find integer parameter `num`, and put its value into `cap1`

Inputs

<code>text</code>	String to parse	<code>String</code>
<code>RUN</code>	Enable execution	<code>Bool</code>

Parameters

<code>expr</code>	Regular expression pattern	<code>String</code>
<code>nmax</code>	Allocated size of string	<code>↓0 ↑65534 Long (I32)</code>
<code>bufmax</code>	Parser internal buffer size (0 = autodetect)	<code>↓0 ↑10000000 Long (I32)</code>

Outputs

<code>MATCH</code>	Pattern match flag	<code>Bool</code>
<code>cap</code>	Whole matching string	<code>String</code>
<code>cap1</code>	Captured string (string matched to 1st bracket)	<code>String</code>
<code>cap2</code>	Captured string (string matched to 2nd bracket)	<code>String</code>
<code>cap3</code>	Captured string (string matched to 3rd bracket)	<code>String</code>
<code>cap4</code>	Captured string (string matched to 4th bracket)	<code>String</code>

<code>cap5</code>	Captured string (string matched to 5th bracket)	<code>String</code>
<code>cap6</code>	Captured string (string matched to 6th bracket)	<code>String</code>
<code>cap7</code>	Captured string (string matched to 7th bracket)	<code>String</code>
<code>cap8</code>	Captured string (string matched to 8th bracket)	<code>String</code>

REPLACE – Replace substring

Block Symbol

Licence: STANDARD



Function Description

The REPLACE block replaces a substring from **su1** by the string **su2** and puts the result in **sy**. The parameters **i** and **p** specify position and length of the string being replaced in UTF-8 characters. The parameter **p** is one-based.

Inputs

su1	String input value	String
su2	String input value	String
i	Length of origin text	Long (I32)
p	Position of origin text (one-based)	⊖0..00E+00 Long (I32)

Parameter

nmax	Allocated size of string [bytes]	↓0 ↑65520 Long (I32)
-------------	----------------------------------	----------------------

Output

sy	String output value	String
-----------	---------------------	--------

RTOS – Real Number to String Conversion

Block Symbol

Licence: STANDARD



Function Description

The RTOS converts a real number in **u** into a string value in **sy**. Precision and format are specified by the **prec** and **mode** parameters.

Input

u	Analog input of the block	Double (F64)
----------	---------------------------	--------------

Output

sy	String output value	String
-----------	---------------------	--------


Parameters

prec	Precision (number of digits)	$\downarrow 0 \uparrow 20$	$\odot 0.00E+00$	Long (I32)
mode	Output string format		$\odot 1$	Long (I32)
	1 Best fit			
	2 Normal			
	3 Exponential			

SELSOCT – Selector switch for string signals

Block Symbol

Licence: STANDARD



Function Description

The SELSOCT block selects one of the input strings and copy it to the output string **sy**. The selection of the active signal **u0...u15** is based on the **iSW** input or the binary inputs **SW1... SW3**. These two modes are distinguished by the **BINF** binary flag. The signal is selected according to the following table:

iSW	SW1	SW2	SW3	y
0	off	off	off	u0
1	on	off	off	u1
2	off	on	off	u2
3	on	on	off	u3
4	off	off	on	u4
5	on	off	on	u5
6	off	on	on	u6
7	on	on	on	u7

Inputs

su0..7	String input value	String
iSW	Active signal selector	Long (I32)
SW1..3	Binary signal selector	Bool

Parameters

BINF	Enable the binary selectors	Bool
nmax	Allocated size of string [bytes]	↓0 ↑65520 Long (I32)

Output

sy	The selected input signal	String
-----------	---------------------------	---------------

STOR – String to real number conversion

Block Symbol

Licence: STANDARD



Function Description

The STOR converts a string in **su** into a real number in **y**. An error is signaled in **E** if unsuccessful.

Input

su	String input value	String
-----------	--------------------	---------------

Parameter

yerr	Substitute value for an error case	Double (F64)
-------------	------------------------------------	---------------------

Outputs

y	Analog output of the block	Double (F64)
E	Error indicator	Bool

Chapter 12

PARAM – Blocks for parameter handling


Contents

GETPA – Block for remote array parameter acquirement	304
GETPR, GETPI, GETPB – Blocks for remote parameter acquirement .	306
GETPS – * Block for remote string parameter acquirement	308
PARA – Block with input-defined array parameter	309
PARE – Block with input-defined enumeration parameter	310
PARR, PARI, PARB – Blocks with input-defined parameter	311
PARS – * Block with input-defined string parameter	313
SETPA – Block for remote array parameter setting	314
SETPR, SETPI, SETPB – Blocks for remote parameter setting	316
SETPS – * Block for remote string parameter setting	318
SGSLP – Set, get, save and load parameters	319
SILO – Save input value, load output value	323
SILOS – Save input string, load output string	325

GETPA – Block for remote array parameter acquirement

Block Symbol

Licence: STANDARD



Function Description

The GETPA block is used for acquiring the array parameters of other blocks in the model remotely . The block operates in two modes, which are switched by the GETF parameter. For **GETF = off** the output **arrRef** is set to the value of the remote parameter at the start and every time when the remote parameter changes. If the **GETF** parameter is set to **on**, then the block works in single-shot read mode. In that case the remote parameter is read only when rising edge (**off**→**on**) occurs at the **GET** input.

The name of the remote parameter is determined by the string parameter **sc** (string connection), which has the form **<block_path:parameter_name>**. The path to the block whose parameter should be read can contain hierarchic levels separated by dots followed by the block name. The path can be either relative or absolute:

- Relative – starts at the level where the GETPA block is located. The string has to be prefixed with '.' in this case. Examples of relative paths: ".CNDR:yp", ".Lights.ATMT:touts".
- Absolute – complete sequence of hierarchic levels down to the block. For referring to blocks located in the driver task (see the **IOTASK** block for details on configuration) the '&' followed by the driver's name is used at the beginning of the absolute path. Examples of absolute paths: "task1.inputs.ATMT:touts", "&EfDrv.measurements.CNDR:yp".

The order and names of individual hierarchic levels are displayed in a tree structure in the REXYGEN Diagnostics program.

Input

GET	Input for initiating one-shot parameter read	Bool
------------	--	-------------

Outputs

arrRef	Array reference	Reference
E	Error flag	Bool


Parameters

sc	String connection to the parameter	String
GETF	Get parameter only when forced to off ... Remote parameter is continuously read on One-shot mode, the remote parameter is read only when forced to by the GET input (rising edge)	Bool
nmax	Maximum size of array	②256 Long (I32)

GETPR, GETPI, GETPB – Blocks for remote parameter acquisition

Block Symbols

Licence: STANDARD



Function Description

The **GETPR**, **GETPI** and **GETPB** blocks are used for acquiring the parameters of other blocks in the model remotely . The only difference among the three blocks is the type of parameter which they are acquiring. The **GETPR** block is used for obtaining real parameters, the **GETPI** block for integer parameters and the **GETPB** block for Boolean parameters.

The blocks operate in two modes, which are switched by the **GETF** parameter. For **GETF = off** the output **y** (or **k**, **Y**) is set to the value of the remote parameter at the start and every time when the remote parameter changes. If the **GETF** parameter is set to **on**, then the blocks work in single-shot read mode. In that case the remote parameter is read only when rising edge (**off**→**on**) occurs at the **GET** input.

The name of the remote parameter is determined by the string parameter **sc** (string connection), which has the form **<block_path:parameter_name>**. It is also possible to access individual items of array-type parameters (e.g. the **tout** parameter of the **ATMT** block). This can be achieved using the square brackets and item number, e.g. **.ATMT:touts[2]**. The items are numbered from zero, thus the string connection stated above refers to the third element of the array.

The path to the block whose parameter should be read can contain hierarchic levels separated by dots followed by the block name. The path can be either relative or absolute:

- Relative – starts at the level where the **GETPR** block (or **GETPI**, **GETPB**) is located. The string has to be prefixed with **'.'** in this case. Examples of relative paths: **".GAIN:k"**, **".Motor1.Position:ycn"**.
- Absolute – complete sequence of hierarchic levels down to the block. For referring to blocks located in the driver task (see the **IOTASK** block for details on configuration) the **'&'** followed by the driver's name is used at the beginning of the absolute path. Examples of absolute paths: **"task1.inputs.lin1:u2"**, **"&EfaDrv.measurements.DER1:n"**.

The order and names of individual hierarchic levels are displayed in a tree structure in the REXYGEN Diagnostics program.

Input

GET	Input for initiating one-shot parameter read (off → on)	Bool
------------	---	-------------

Outputs

y	Parameter value, output of the GETPR block	Double (F64)
k	Parameter value, output of the GETPI block	Long (I32)
Y	Parameter value, output of the GETPB block	Bool
E	Error flag	Bool
	off ... No error	
	on An error occurred	

Parameters

sc	String connection to the remote parameter respecting the above mentioned notation	String
GETF	Continuous or one-shot mode	Bool
	off ... Remote parameter is continuously read	
	on One-shot mode, the remote parameter is read only when forced to by the GET input (rising edge)	

GETPS – * Block for remote string parameter acquirement

Block Symbol

Licence: STANDARD



Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Input

GET	Input for initiating one-shot parameter read	Bool
-----	--	------

Parameters

sc	String connection to the parameter	String
GETF	Get parameter only when forced to off ... Remote parameter is continuously read on One-shot mode	Bool
nmax	Allocated size of string	Long (I32)


Outputs

sy	Parameter value	String
E	Error indicator off ... No error on An error occurred	Bool

PARA – Block with input-defined array parameter

Block Symbol

Licence: STANDARD



Function Description

The PARA block allows, additionally to the standard way of parameter setting, changing one of its parameters by the input signal. The input-parameter pair is **uRef** and **apar**.

The Boolean input **LOC** (LOCal) determines whether the value of the **apar** parameter is read from the input **uRef** or is input-independent (**LOC** = **on**). In the local mode **LOC** = **on** the parameter **apar** contains the last value of input **uRef** entering the block right before **LOC** was set to **on**.

The output value is equivalent to the value of the parameter (**yRef** = **apar**).

Inputs

uRef	Array reference	Reference
LOC	Activation of local mode	Bool
	off ... The parameter follows the input	
	on Local mode active	

Output

yRef	Array reference	Reference
-------------	-----------------	-----------

Parameters

SETS	Set array size flag. Use this flag to adjust the size of array when setting the parameter.	Bool
apar	Internal value of the parameter	Double (F64) ⊕[0.0 1.0 2.0 3.0 4.0 5.0]

PARE – Block with input-defined enumeration parameter

Block Symbol

Licence: STANDARD



Function Description

The block is similar to the the PARI block with the additional option to assign texts to numeric values. The corresponding text is set on the output **sy**. The block has two modes and the active mode is selected by the **LIST** parameter. If **LIST=off** a corresponding text for the input value is set on the output **sy**. If **LIST=on** the input number is considered as a bitfield, texts are defined for each bit and the output **sy** is composed of the texts that correspond to bits which are set. The behavior for undefined values is determined by the **SATF** parameter. If **SATF=off**, undefined values are set to output **iy** and the output **sy** is set to empty text. Undefined values are ignored if **SAT=on**. The **pupstr** parameter has the same format as in the CNA block: <number1>: <description1>|<number2>: <description2>|<number3>: <description3> ...

Inputs

ip	Parameter value	Long (I32)
LOC	Activation of local mode	Bool
	off ... The parameter follows the input	
	on Local mode active	

Parameters

ipar	Internal value of parameter	⊕1 Long (I32)
pupstr	Popup list definition	String
	⊕1: option A 2: option B 3: option C	
NUM	Number in string outut	Bool
LIST	Bitfield mode	Bool
SATF	Saturation flag	Bool


Outputs

iy	Integer output of the block	Long (I32)
sy	String output value	String

PARR, PARI, PARB – Blocks with input-defined parameter

Block Symbols

Licence: STANDARD



Function Description

The PARR, PARI and PARB blocks allow, additionally to the standard way of parameters setting, changing one of their parameters by the input signal. The input-parameter pairs are **p** and **par** for the PARR block, **ip** and **ipar** for the PARI block and finally **P** and **PAR** for the PARB block.

The Boolean input **LOC** (LOCal) determines whether the value of the **par** (or **ipar**, **PAR**) parameter is read from the input **p** (or **ip**, **P**) or is input-independent (**LOC = on**). In the local mode **LOC = on** the parameter **par** (or **ipar**, **PAR**) contains the last value of input **p** (or **ip**, **P**) entering the block right before **LOC** was set to **on**. Afterwards it is possible to modify the value manually.

The output value is equivalent to the value of the parameter **y = par**, (or **k = ipar**, **Y = PAR**). The output of the PARR and PARI blocks can be additionally constrained by the saturation limits **(lolim, hilim)**. The saturation is active only when **SATF = on**.

See also the **SHLD** block, which can be used for storing a numeric value, similarly as in the PARR block.

Inputs

p	Parameter value (the PARR block)	Double (F64)
ip	Parameter value (the PARI block)	Long (I32)
P	Parameter value (the PARB block)	Bool
LOC	Activation of local mode	Bool
	off ... The parameter follows the input	
	on Local mode active	

Output

y	Logical output of the PARR block	Double (F64)
k	Logical output of the PARI block	Long (I32)
Y	Logical output of the PARB block	Bool

Parameter

par	Initial value of the parameter (the PARR block)	⊕1.0	Double (F64)
ipar	Initial value of the parameter (the PARI block)	⊕1	Long (I32)
PAR	Initial value of the parameter (the PARB block)	⊕on	Bool

SATF	Activation of the saturation limits for the PARR and PARI blocks	Bool
	off ... Signal not limited	
	on Saturation limits active	
hilim	Upper limit of the output signal (the PARR and PARI blocks)	Double (F64) ⊕1.0
lolim	Lower limit of the output signal (the PARR and PARI blocks)	Double (F64) ⊖-1.0

PARS – * Block with input-defined string parameter

Block Symbol

Licence: STANDARD



Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

sp	Parameter value	String
LOC	Activation of local mode	Bool

Parameters

spar	Internal value of the parameter	String
nmax	Allocated size of string	Long (I32)


Output

sy	String output of the block	String
----	----------------------------	--------

SETPA – Block for remote array parameter setting

Block Symbol

Licence: STANDARD



Function Description

The SETPA block is used for setting the array parameters of other blocks in the model remotely. The block operates in two modes, which are switched by the **SETF** parameter. For **SETF = off** the remote parameter **cs** is set to the value of the input vector signal **arrRef** at the start and every time when the input signal changes. If the **SETF** parameter is set to **on**, then the block works in one-shot write mode. In that case the remote parameter is set only when rising edge (**off**→**on**) occurs at the **SET** input.

The name of the remote parameter is determined by the string parameter **sc** (string connection), which has the form **<block_path:parameter_name>**. The path to the block whose parameter should be read can contain hierarchic levels separated by dots followed by the block name. The path can be either relative or absolute:

- Relative – starts at the level where the GETPA block is located. The string has to be prefixed with '.' in this case. Examples of relative paths: ".CNDR:yp", ".Lights.ATMT:touts".
- Absolute – complete sequence of hierarchic levels down to the block. For referring to blocks located in the driver task (see the **IOTASK** block for details on configuration) the '&' followed by the driver's name is used at the beginning of the absolute path. Examples of absolute paths: "task1.inputs.ATMT:touts", "&EfDrv.measurements.CNDR:yp".

The order and names of individual hierarchic levels are displayed in a tree structure in the REXYGEN Diagnostics program.

Inputs

arrRef	Array reference	Reference
SET	Input for initiating one-shot parameter write	Bool

Output

E	Error flag	Bool
----------	------------	-------------

Parameters

sc	String connection to the parameter	String
SETF	Continuous or one-shot mode	Bool
	off ... Remote parameter is continuously updated	
	on One-shot mode, the remote parameter is updated only when forced to by the SET input (rising edge)	
SETS	Set array size flag. Use this flag to adjust the size of array when setting the parameter.	Bool

SETPR, SETPI, SETPB – Blocks for remote parameter setting

Block Symbols

Licence: STANDARD



Function Description

The SETPR, SETPI and SETPB blocks are used for setting the parameters of other blocks in the model remotely. The only difference among the three blocks is the type of parameter which they are setting. The SETPR block is used for setting real parameters, the SETPI block for integer parameters and the SETPB block for Boolean parameters.

The blocks operate in two modes, which are switched by the SETF parameter. For SETF = off the remote parameter **sc** is set to the value of the input signal **p** (or **ip**, **P**) at the start and every time when the input changes. If the SETF parameter is set to on, then the blocks work in one-shot write mode. In that case the remote parameter is set only when rising edge (off → on) occurs at the SET input. Successful modification of the remote parameter is indicated by zero error output **E = off** and the output **y** (or **k**, **Y**) is set to the value of the modified parameter. The error output is set to **E = on** in case of write error.

The name of the remote parameter is determined by the string parameter **sc** (string connection), which has the form <block_path:parameter_name>. It is also possible to access individual items of array-type parameters (e.g. the **tout** parameter of the **ATMT** block). This can be achieved using the square brackets and item number, e.g. **.ATMT:touts[2]**. The items are numbered from zero, thus the string connection stated above refers to the third element of the array.

The path to the block whose parameter should be set can contain hierarchic levels separated by dots followed by the block name. The path can be either relative or absolute:

- Relative – starts at the level where the SETPR block (or SETPI, SETPB) is located. The string has to be prefixed with '.' in this case. Examples of relative paths: ".GAIN:k", ".Motor1.Position:ycn".
- Absolute – complete sequence of hierarchic levels down to the block. For referring to blocks located in the driver task (see the **IOTASK** block for details on configuration) the '&' followed by the driver's name is used at the beginning of the absolute path. Examples of absolute paths: "task1.inputs.lin1:u2", "&EfaDrv.measurements.DER1:n".

The order and names of individual hierarchic levels are displayed in a tree structure in the REXYGEN Diagnostics program.

Inputs

p	Desired parameter value at the SETPR block input	Double (F64)
ip	Desired parameter value at the SETPI block input	Long (I32)
P	Desired parameter value at the SETPB block input	Bool
SET	Input for initiating one-shot parameter write (off→on)	Bool

Outputs

y	Parameter value (the SETPR block)	Double (F64)
k	Parameter value (the SETPI block)	Long (I32)
Y	Parameter value (the SETPB block)	Bool
E	Error flag	Bool
	off ... No error	
	on An error occurred	

Parameters

sc	String connection to the remote parameter respecting the above mentioned notation	String
SETF	Continuous or one-shot mode	Bool
	off ... Remote parameter is continuously updated	
	on One-shot mode, the remote parameter is updated only when forced to by the SET input (rising edge)	

SETPS – * Block for remote string parameter setting

Block Symbol

Licence: STANDARD



Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

sp	Desired parameter value	String
SET	Input for initiating one-shot parameter write	Bool

Parameters

sc	String connection to the parameter	String
SETF	Set parameter only when forced to	Bool
nmax	Allocated size of string	Long (I32)


Outputs

sy	Parameter value	String
E	Error indicator	Bool

SGSLP – Set, get, save and load parameters

Block Symbol

Licence: [ADVANCED](#)



Function Description

The **SGSLP** block is a special function block for manipulation with parameters of other function blocks in the REXYGEN system configuration. It works also in the Matlab-Simulink system but its scope is limited to the **.mdl** file it is included in.

The block can manage up to 16 parameter sets, which are numbered from 0 to 15. The number of parameter sets is given by the **nps** parameter and the active set is defined by the **ips** input. If the **ips** input remains unconnected, the active parameter set is **ips** = 0. Each set contains up to 16 different parameters defined by the string parameters **sc0** to **sc15**. Thus the **SGSLP** block can work with a maximum of 256 parameters of the REXYGEN system. An empty **sci** string means that no parameter is specified, otherwise one of the following syntaxes is used:

1. **<block>:<param>** – Specifies one function block named **block** and its parameter **param**. The same block and parameter are used for all **nps** parameter sets in this case.
2. **<block>:<param><sep>...<block>:<param>** – This syntax allows the parameters to differ among the parameter sets. In general, each **sci** string can contain up to 16 items in the form **<blok>:<param>** separated by comma or semi-colon. E.g. the third item of these is active for **ips** = 2. There should be exactly **nps** items in each non-empty **sci** string. If there is less items than **nps** none of the below described operations can be executed on the incomplete parameter set.

It is recommended not to use both syntaxes in one **SGSLP** block, all 16 **sci** strings should have the same form. The first syntax is for example used when producing **nps** types of goods, where many parameters must be changed for each type of production. The second syntax is usually used for saving user-defined parameters to disk (see the

SAVE operation below). In that case it is desirable to arrange automated switching of the `ips` input (e.g. using the `ATMT` block from the `LOGIC` library).

The `broot` parameter is suitable when all blocks whose parameters are to be controlled by the `SGSLP` block reside in the same subsystem or deeper in the hierarchy. It is inserted in front of each `<block>` substring in the `sci` parameters. The '.' character stands for the subsystem where the `SGSLP` block is located. No quotation marks are used to define the parameter, they are used here solely to highlight a single character. If the `broot` parameter is an empty string, all `<block>` items must contain full path. For example, to create a connection to the `CNR` block and its parameter `ycn` located in the same subsystem as the `SGSLP` block, `broot = .` and `sc0 = CNR:ycn` must be set. Or it is possible to leave the `broot` parameter empty and put the '.' character to the `sc0` string. See the `GETPR` or `SETPR` blocks description for more details about full paths in the `REXYGEN` system.

The `SGSLP` block executes one of the below described operations when a rising edge (`off → on`) occurs at the input of the same name. The operations are:

SET – Sets the parameters of the corresponding parameter set `ips` to the values of the input signals `ui`. In case the parameter is successfully set, the same value is also sent to the `yi` output.

GET – Gets the parameters of the corresponding parameter set `ips`. In case the parameter is successfully read, its value is sent to the `yi` output.

SAVE – Saves the parameters of the corresponding parameter set `ips` to a file on the target platform. The parameters of the procedure and the format of the resulting file are described below.

LOAD – Loads the parameters of the corresponding parameter set `ips` from a file on the target platform. This operation is executed also during the initialization of the block but only when $0 \leq \text{ips}0 \leq \text{nps} - 1$. The parameters of the procedure and the format of the file are described below.

The `LOAD` and `SAVE` operations work with a file on the target platform. The name of the file is given by the `fname` parameter and the following rules:

- If no extension is specified in the `fname` parameter, the `.rxs` (ReX Status file) extension is added.
- A backup file is created when overwriting the file. The file name is preserved, only the extension is modified by adding the '' character right after the '.' (e.g. when no extension is specified, the backup file has a `. rxs` extension).
- The path is relative to the folder where the archives of the `REXYGEN` system are stored. The file should be located on a media which is not erased by system restart (flash drive or hard drive, not RAM).

The **SAVE** operation stores the data in a text file. Two lines are added for each parameter sci , $i = 0, \dots, m$, where $m < 16$ defines the nonempty **scm** string with the highest number. The lines have the form:

```
"<block>:<param>", ..., "<block>:<param>"  
<value>, ..., <value>
```

There are **nps** individual items "**<block>:<param>**" which are separated by commas. The second line contains the same number of **<value>** items which contain the value of the parameter at the same position in the line above. Note that the format of the file remains the same even for sci containing only one **<block>:<param>** item (see the syntax no. 1 above). The "**<block>:<param>**" item is always listed **nps**-times in the file, which allows seamless switching of the sci parameters syntax without modifying the file.

Consider using the **SILO** block if working with only a few values.

Inputs

<i>ui</i>	<i>i</i> -th analog input signal, $i = 0, \dots, 15$	Double (F64)
<i>ips</i>	Parameter set index (numbered from zero)	Long (I32)
SET	Set the parameters of the <i>ips</i> parameter set according to the values of the <i>ui</i> inputs. The values can be found at the <i>yi</i> outputs after a successful operation.	Bool
GET	Get the parameters of the <i>ips</i> parameter set. The values can be found at the <i>yi</i> outputs after a successful operation.	Bool
SAVE	Save the <i>ips</i> parameter set to a file on the target device	Bool
LOAD	Load the <i>ips</i> parameter set from a file on the target device	Bool

Outputs

<i>yi</i>	<i>i</i> -th analog output signal, $i = 0, \dots, 15$	Double (F64)
E	Error flag	Bool
	off ... No error	
	on An error occurred (see iE)	

iE	Error or warning code of the last operation	Long (I32)
0	Operation successful	
1	Fatal error of the Matlab system (only in Simulink), the block is no longer executed	
2	Error opening the file for reading (LOAD operation)	
3	Error opening the file for writing (SAVE operation)	
4	Incorrect file format	
5	The ips parameter set not found in the file	
6	Parameter not found in the configuration, name mismatch (LOAD operation)	
7	Unexpected end of file	
8	Error writing to file (disk full?)	
9	Parameter syntax error (the ' : ' character not found)	
10	Only whitespace in the parameter name	
11	Error creating the backup file	
12	Error obtaining the parameter value by the GET operation (non-existing parameter?)	
13	Error setting the parameter value by the SET operation (non-existing parameter?)	
14	Timeout during obtaining/setting the parameter	
15	The specified parameter is read-only	
16	The ips parameter is out of range	


Parameters

nps	Number of parameter sets	$\downarrow 1 \uparrow 16 \odot 1$	Long (I32)
ips0	Index of parameter set to load and set during the block initialization. No set is read for $ips0 < 0$ or $ips0 \geq nps$	$\downarrow -1 \uparrow 15$	Long (I32)
iprec	Precision (number of digits) for storing the values of double type in a file	$\downarrow 2 \uparrow 15 \odot 12$	Long (I32)
icolw	Requested column width in the status file. Spaces are appended to the parameter value when necessary.	$\downarrow 0 \uparrow 22$	Long (I32)
fname	Name of the file the SAVE and LOAD operations work with	\odot status	String
broot	Root block in hierarchy, inserted at the beginning of all sci parameters, see the description above	$\odot .$	String
sci	Strings defining the connection of ui inputs and yi outputs to the parameters, $i = 0, \dots, 15$, see details above		String

SIL0 – Save input value, load output value

Block Symbol

Licence: STANDARD



Function Description

The **SIL0** block can be used to export or import a single value to/from a file. The value is saved when a rising edge (**off**→**on**) occurs at the **SAVE** input and the value is also set to the **y** output. The value is loaded at startup and when a rising edge (**off**→**on**) occurs at the **LOAD** input.

The outputs **E** and **lastErr** indicate an error during disk operation. The **E** indicator is reset on falling edge at the **SAVE** or **LOAD** input while the **lastErr** output holds the value until another disk operation is invoked. If the error occurs during the **LOAD** operation, a substitute value **yerr** is set to the **y** output.

Alternatively it is possible to write or read the value continuously if the corresponding flag (**CSF**, **CLF**) is set to **on**. The disk operation is then performed when the corresponding input is set to **on**. Beware, in that case the disk operation is executed in each cycle, which can cause excessive use of the storage medium. Thus it is necessary to use this feature with caution.

The **fname** parameter defines the location of the file on the target platform. The path is relative to the data folder of the **RexCore** runtime module.

Use the **SGSLP** function block for advanced and complex operations.

Inputs

u	Input signal	Double (F64)
SAVE	Save value to file	Bool
LOAD	Load value from file	Bool

Parameters

fname	Name of persistent storage file	String
CSF	Flag for continuous saving	Bool
CLF	Flag for continuous loading	Bool
yerr	Substitute value for an error case	Double (F64)

Outputs


y	Output signal	Double (F64)
E	Error flag	Bool

lastErr Result of last operation **Long (I32)**

Silos – Save input string, load output string

Block Symbol

Licence: STANDARD



Function Description

The **SILOS** block can be used to export or import a string to/from a file. The string is saved when a rising edge (**off**→**on**) occurs at the **SAVE** input and the string is also set to the **sy** output. The string is loaded at startup and when a rising edge (**off**→**on**) occurs at the **LOAD** input.

If a logical true (**on**) is brought to the **APPEND** input, the input string is added to the end of the file when it is saved. This mode is useful for logging events into text files. This input signal has no effect on loading from the file.

The **LL0** parameter is intended for choosing whether to load the entire file (**off**) or its last line only (**on**).

The outputs **E** and **lastErr** indicate an error during disk operation. The **E** indicator is reset on falling edge at the **SAVE** or **LOAD** input while the **lastErr** output holds the value until another disk operation is invoked.

Alternatively it is possible to write or read the string continuously if the corresponding flag (**CSF**, **CLF**) is set to **on**. The disk operation is then performed when the corresponding input is set to **on**. Beware, in that case the disk operation is executed in each cycle, which can cause excessive use of the storage medium. Thus it is necessary to use this feature with caution.

The **fname** parameter defines the location of the file on the target platform. The path is relative to the data folder of the **RexCore** runtime module.

Inputs

su	String input of the block	①0	String
SAVE	Save string to file		Bool
LOAD	Load string from file		Bool
APPEND	Append saved string to file		Bool

Outputs

sy	String output of the block	String
E	Error indicator	Bool
	off ... No error	
	on An error occurred	
lastErr	Result of last operation	Long (I32)

Parameters

fname	Name of persistent storage file	String
CSF	Continuous saving	Bool
CLF	Continuous loading	Bool
LLO	Last line only loading	Bool
nmax	Allocated size of string	↓0 ↑65520 Long (I32)

Chapter 13

MODEL – Dynamic systems simulation


Contents

CDELSSM – Continuous state space model of a linear system with time delay	328
CSSM – Continuous state space model of a linear system	331
DDELSSM – Discrete state space model of a linear system with time delay	333
DSSM – Discrete state space model of a linear system	335
EKF – Extended (nonlinear) Kalman filter	337
FOPDT – First order plus dead-time model	340
MDL – Process model	341
MDLI – Process model with input-defined parameters	342
MVD – Motorized valve drive	343
NSSM – Nonlinear State-Space Model	344
SOPDT – Second order plus dead-time model	347

CDELSSM – Continuous state space model of a linear system with time delay

Block Symbol

Licence: ADVANCED



Function Description

The CDELSSM block (Continuous State Space Model with time DELay) simulates behavior of a linear system with time delay *del*

$$\begin{aligned}\frac{dx(t)}{dt} &= A_c x(t) + B_c u(t - \text{del}), \quad x(0) = x_0 \\ y(t) &= C_c x(t) + D_c u(t),\end{aligned}$$

where $x(t) \in \mathbb{R}^n$ is the state vector, $x_0 \in \mathbb{R}^n$ is the initial value of the state vector, $u(t) \in \mathbb{R}^m$ is the input vector, $y(t) \in \mathbb{R}^p$ is the output vector. The matrix $A_c \in \mathbb{R}^{n \times n}$ is the system dynamics matrix, $B_c \in \mathbb{R}^{n \times m}$ is the input matrix, $C_c \in \mathbb{R}^{p \times n}$ is the output matrix and $D_c \in \mathbb{R}^{p \times m}$ is the direct transmission (feedthrough) matrix.

All matrices are specified in the same format as in Matlab, i.e. the whole matrix is placed in brackets, elements are entered by rows, elements of a row are separated by spaces (blanks), rows are separated by semicolons. The x_0 vector is a column, therefore the elements are separated by semicolons (each element is in a separate row).

The simulated system is first converted to the discrete (discretized) state space model

$$\begin{aligned}x((k+1)T) &= A_d x(kT) + B_{d1} u((k-d)T) + B_{d2} u((k-d+1)T), \quad x(0) = x_0 \\ y(kT) &= C_c x(kT) + D_c u(kT),\end{aligned}$$

where $k \in \{1, 2, \dots\}$ is the simulation step, T is the execution period of the block in seconds and d is a delay in simulation step such that $(d-1)T < \text{del} \leq d.T$. The period T is not entered in the block, it is determined automatically as a period of the task ([TASK](#), [QTASK](#) nebo [IOTASK](#)) containing the block.

If the input $u(t)$ is changed only in the moments of sampling and between two consecutive sampling instants is constant, i.e. $u(t) = u(kT)$ for $t \in [kT, (k+1)T]$, then the

matrices A_d , B_{d1} and B_{d2} are determined by

$$\begin{aligned} A_d &= e^{A_c T} \\ B_{d1} &= e^{A_c(T-\Delta)} \int_0^\Delta e^{A_c \tau} B_c d\tau \\ B_{d2} &= \int_0^{T-\Delta} e^{A_c \tau} B_c d\tau, \end{aligned}$$

where $\Delta = del - (d - 1)T$.

Computation of discrete matrices A_d , B_{d1} and B_{d2} is based on a method described in [5], which uses Padé approximations of matrix exponential and its integral and scaling technique.

During the real-time simulation, single simulation step of the above discrete state space model is computed in each execution time instant.

Inputs

R1	Reset signal. When R1 = on , the state vector x is set to its initial value x0 . The simulation continues on the falling edge of R1 (on → off).	Bool
HLD	Simulation output holds its value if HLD= on .	Bool
u1..u16	Simulated system inputs. First m simulation inputs are used where m is the number of columns of the matrix Bc .	Double (F64)

Outputs

iE	Block error code	Error
	0 O.K., the simulation runs correctly -213 ... incompatibility of the state space model matrices dimensions -510 ... the model is badly conditioned (some working matrix is singular or nearly singular) xxx ... error code xxx of REXYGEN , see appendix C for details	
y1..y16	Simulated system outputs. First p simulation outputs are used where p is the number of rows of the matrix Cc .	Double (F64)

Parameters

UD	Matrix Dc usage flag. If UD= off then the Dc matrix is not used for simulation (simulation behaves as if the Dc matrix is zero).	Bool
del	Model time delay [s].	$\downarrow 0.0 \oplus 0.0$ Double (F64)
is	Order of the Padé approximation of the matrix exponential for the computation of the discretized system matrices.	$\downarrow 0 \uparrow 4 \oplus 2.00E+00$ Long (I32)
eps	Required accuracy of the Padé approximation.	$\downarrow 0.0 \uparrow 1.0 \oplus 1e-15$ Double (F64)

Ac	Matrix ($n \times n$) of the continuous linear system dynamics.	Double (F64)
Bc	Input matrix ($n \times m$) of the continuous linear system.	Double (F64)
Cc	Output matrix ($p \times n$) of the continuous linear system.	Double (F64)
Dc	Direct transmission (feedthrough) matrix ($p \times m$) of the continuous linear system. The matrix is used only if the parameter UD=on . If UD=off , the dimensions of the Dc matrix are not checked.	Double (F64)
x0	Initial value of the state vector (of dimension n) of the continuous linear system.	Double (F64)

CSSM – Continuous state space model of a linear system

Block Symbol

Licence: **ADVANCED**



Function Description

The **CSSM** block (Continuous State Space Model) simulates behavior of a linear system

$$\begin{aligned}\frac{dx(t)}{dt} &= A_c x(t) + B_c u(t), \quad x(0) = x_0 \\ y(t) &= C_c x(t) + D_c u(t),\end{aligned}$$

where $x(t) \in \mathbb{R}^n$ is the state vector, $x_0 \in \mathbb{R}^n$ is the initial value of the state vector, $u(t) \in \mathbb{R}^m$ is the input vector, $y(t) \in \mathbb{R}^p$ is the output vector. The matrix $A_c \in \mathbb{R}^{n \times n}$ is the system dynamics matrix, $B_c \in \mathbb{R}^{n \times m}$ is the input matrix, $C_c \in \mathbb{R}^{p \times n}$ is the output matrix and $D_c \in \mathbb{R}^{p \times m}$ is the direct transmission (feedthrough) matrix.

All matrices are specified in the same format as in Matlab, i.e. the whole matrix is placed in brackets, elements are entered by rows, elements of a row are separated by spaces (blanks), rows are separated by semicolons. The x_0 vector is a column, therefore the elements are separated by semicolons (each element is in a separate row).

The simulated system is first converted to the discrete (discretized) state space model

$$\begin{aligned}x((k+1)T) &= A_d x(kT) + B_d u(kT), \quad x(0) = x_0 \\ y(kT) &= C_d x(kT) + D_d u(kT),\end{aligned}$$

where $k \in \{1, 2, \dots\}$ is the simulation step, T is the execution period of the block in seconds. The period T is not entered in the block, it is determined automatically as a period of the task (**TASK**, **QTASK** nebo **IOTASK**) containing the block.

If the input $u(t)$ is changed only in the moments of sampling and between two consecutive sampling instants is constant, i.e. $u(t) = u(kT)$ for $t \in [kT, (k+1)T]$, then the matrices A_d and B_d are determined by

$$\begin{aligned}A_d &= e^{A_c T} \\ B_d &= \int_0^T e^{A_c \tau} B_c d\tau\end{aligned}$$

Computation of discrete matrices A_d and B_d is based on a method described in [5], which uses Padé approximations of matrix exponential and its integral and scaling technique.

During the real-time simulation, single simulation step of the above discrete state space model is computed in each execution time instant.

Inputs

R1	Reset signal. When R1 = on , the state vector x is set to its initial value x0 . The simulation continues on the falling edge of R1 (on→off) .	Bool
HLD	Simulation output holds its value if HLD=on .	Bool
u1..u16	Simulated system inputs. First m simulation inputs are used where m is the number of columns of the matrix Bc .	Double (F64)

Outputs

iE	Block error code 0 O.K., the simulation runs correctly -213 .. incompatibility of the state space model matrices dimensions -510 .. the model is badly conditioned (some working matrix is singular or nearly singular) xxx ... error code xxx of REXYGEN, see appendix C for details	Error
y1..y16	Simulated system outputs. First p simulation outputs are used where p is the number of rows of the matrix Cc .	Double (F64)


Parameters

UD	Matrix Dc usage flag. If UD=off then the Dc matrix is not used for simulation (simulation behaves as if the Dc matrix is zero).	Bool
is	Order of the Padé approximation of the matrix exponential for the computation of the discretized system matrices. $\downarrow 0 \uparrow 4 \odot 2.00E+00$	Long (I32)
eps	Required accuracy of the Padé approximation. $\downarrow 0.0 \uparrow 1.0 \odot 1e-15$	Double (F64)
Ac	Matrix ($n \times n$) of the continuous linear system dynamics.	Double (F64)
Bc	Input matrix ($n \times m$) of the continuous linear system.	Double (F64)
Cc	Output matrix ($p \times n$) of the continuous linear system.	Double (F64)
Dc	Direct transmission (feedthrough) matrix ($p \times m$) of the continuous linear system. The matrix is used only if the parameter UD=on . If UD=off , the dimensions of the Dc matrix are not checked.	Double (F64)
x0	Initial value of the state vector (of dimension n) of the continuous linear system.	Double (F64)

DDELSSM – Discrete state space model of a linear system with time delay

Block Symbol

Licence: **ADVANCED**



Function Description

The DDELSSM block (Discrete State Space Model with time DELay) simulates behavior of a linear system with time delay *del*

$$\begin{aligned}x(k+1) &= A_d x(k) + B_d u(k-d), \quad x(0) = x_0 \\y(k) &= C_d x(k) + D_d u(k),\end{aligned}$$

where *k* is the simulation step, $x(k) \in \mathbb{R}^n$ is the state vector, $x_0 \in \mathbb{R}^n$ is the initial value of the state vector, $u(k) \in \mathbb{R}^m$ is the input vector, $y(k) \in \mathbb{R}^p$ is the output vector. The matrix $A_d \in \mathbb{R}^{n \times n}$ is the system dynamics matrix, $B_d \in \mathbb{R}^{n \times m}$ is the input matrix, $C_d \in \mathbb{R}^{p \times n}$ is the output matrix and $D_d \in \mathbb{R}^{p \times m}$ is the direct transmission (feedthrough) matrix. Number of steps of the delay *d* is the largest integer such that $d.T \leq del$, where *T* is the block execution period.

All matrices are specified in the same format as in Matlab, i.e. the whole matrix is placed in brackets, elements are entered by rows, elements of a row are separated by spaces (blanks), rows are separated by semicolons. The x_0 vector is a column, therefore the elements are separated by semicolons (each element is in a separate row).

During the real-time simulation, single simulation step of the above discrete state space model is computed in each execution time instant.

Inputs

R1	Reset signal. When R1 = on , the state vector x is set to its initial value x_0 . The simulation continues on the falling edge of R1 (on → off).	Bool
HLD	Simulation output holds its value if HLD= on .	Bool
u1..u16	Simulated system inputs. First <i>m</i> simulation inputs are used where <i>m</i> is the number of columns of the matrix Bd.	Double (F64) $\odot 0.0$

Outputs

iE	Block error code	Error
	0 O.K., the simulation runs correctly	
	-213 ... incompatibility of the state space model matrices dimensions	
	xxx ... error code xxx of REXYGEN, see appendix C for details	
y1..y16	Simulated system outputs. First p simulation outputs are used where p is the number of rows of the matrix Cd .	Double (F64)

Parameters

UD	Matrix Dd usage flag. If UD=off then the Dd matrix is not used for simulation (simulation behaves as if the Dd matrix is zero).	Bool
del	Model time delay [s].	$\downarrow 0.0 \odot 0.0$ Double (F64)
Ad	Matrix $(n \times n)$ of the discrete linear system dynamics.	Double (F64)
Bd	Input matrix $(n \times m)$ of the discrete linear system.	Double (F64)
Cd	Output matrix $(p \times n)$ of the discrete linear system.	Double (F64)
Dd	Direct transmission (feedthrough) matrix $(p \times m)$ of the discrete linear system. The matrix is used only if the parameter UD=on . If UD=off , the dimensions of the Dd matrix are not checked.	Double (F64)
x0	Initial value of the state vector (of dimension n) of the discrete linear system.	Double (F64)

DSSM – Discrete state space model of a linear system

Block Symbol

Licence: [ADVANCED](#)



Function Description

The **DSSM** block (Discrete State Space Model) simulates behavior of a linear system

$$\begin{aligned} x(k+1) &= A_d x(k) + B_d u(k), \quad x(0) = x_0 \\ y(k) &= C_d x(k) + D_d u(k), \end{aligned}$$

where k is the simulation step, $x(k) \in \mathbb{R}^n$ is the state vector, $x_0 \in \mathbb{R}^n$ is the initial value of the state vector, $u(k) \in \mathbb{R}^m$ is the input vector, $y(k) \in \mathbb{R}^p$ is the output vector. The matrix $A_d \in \mathbb{R}^{n \times n}$ is the system dynamics matrix, $B_d \in \mathbb{R}^{n \times m}$ is the input matrix, $C_d \in \mathbb{R}^{p \times n}$ is the output matrix and $D_d \in \mathbb{R}^{p \times m}$ is the direct transmission (feedthrough) matrix.

All matrices are specified in the same format as in Matlab, i.e. the whole matrix is placed in brackets, elements are entered by rows, elements of a row are separated by spaces (blanks), rows are separated by semicolons. The x_0 vector is a column, therefore the elements are separated by semicolons (each element is in a separate row).

During the real-time simulation, single simulation step of the above discrete state space model is computed in each execution time instant.

Inputs

R1	Reset signal. When R1 = on , the state vector x is set to its initial value x0. The simulation continues on the falling edge of R1 (on → off).	Bool
HLD	Simulation output holds its value if HLD= on .	Bool
u1..u16	Simulated system inputs. First m simulation inputs are used where m is the number of columns of the matrix Bd.	Double (F64) ⊕0.0

Outputs

<code>iE</code>	Block error code	<code>Error</code>
	0 O.K., the simulation runs correctly	
	-213 ... incompatibility of the state space model matrices dimensions	
	xxx ... error code <code>xxx</code> of REXYGEN, see appendix C for details	
<code>y1..y16</code>	Simulated system outputs. First p simulation outputs are used where p is the number of rows of the matrix <code>Cd</code> .	<code>Double (F64)</code>


Parameters

<code>UD</code>	Matrix <code>Dd</code> usage flag. If <code>UD=off</code> then the <code>Dd</code> matrix is not used for simulation (simulation behaves as if the <code>Dd</code> matrix is zero).	<code>Bool</code>
<code>Ad</code>	Matrix ($n \times n$) of the discrete linear system dynamics.	<code>Double (F64)</code>
<code>Bd</code>	Input matrix ($n \times m$) of the discrete linear system.	<code>Double (F64)</code>
<code>Cd</code>	Output matrix ($p \times n$) of the discrete linear system.	<code>Double (F64)</code>
<code>Dd</code>	Direct transmission (feedthrough) matrix ($p \times m$) of the discrete linear system. The matrix is used only if the parameter <code>UD=on</code> . If <code>UD=off</code> , the dimensions of the <code>Dd</code> matrix are not checked.	<code>Double (F64)</code>
<code>x0</code>	Initial value of the state vector (of dimension n) of the discrete linear system.	<code>Double (F64)</code>

EKF – Extended (nonlinear) Kalman filter

Block Symbol

Licence: MODEL



Function Description

The block implements a nonlinear state estimator known as Extended Kalman filter. The goal is to provide estimates of unmeasurable state quantities of a nonlinear dynamic system described by a state space model $\dot{x} = f(x, u) + w(t)$, $y = h(x, u) + v(t)$ for a continuous-time case and $x(k+1) = f(x(k), u(k)) + w(k)$, $y(k) = h(x(k), u(k)) + v(k)$ for the case of a discrete-time system. The variables w, v are the process and observation noises which are both assumed to be zero mean multivariate Gaussian processes with covariance Q and R specified in the block parameters. The Extended Kalman filter is the nonlinear version of the Kalman filter which linearizes the state and output equations about the current working point. It is a predictor-corrector type algorithm which switches between open-loop prediction using the state equation and correction of the estimates by directly measured output quantities. The measurements can be supplied to the filter non-equidistantly in an arbitrary execution period of the block.

The prediction step is run in each execution period and solves the state equation by numerical integration, starting from an initial value x_0 and initial covariance P_0 . Various numerical methods, chosen by the user specified parameter *solver*, are available to perform the integration of the vector state differential equation. A special choice of *solver* = 1 signalizes the discrete-time system case for which the numerical integration reduces to simple evaluation of the recursive formula given by the first-order difference equation in $x(k+1) = f(x(k), u(k))$. Apart from the state vector, also its covariance matrix P is propagated in time, capturing the uncertainty of the estimates in the form of their (co)variances. Please refer to the documentation of the [NSSM](#) block for more details about the available numerical integration algorithms.

The filtering correction step takes place whenever the input of the block is set to $nz > 0$. This signalizes that new vector of measurements is available at the z input and it is used to correct the state and its covariance estimates from the prediction step. Multiple right sides of the output equation can be implemented in the cooperating [REXLANG](#) block. This may be useful e.g. for systems equipped with various sensors providing their data asynchronously to each other (and with respect to the block execution times) with different sampling periods. For the setting $nz = 0$, the user algorithm signalizes no out-

put data available in the current execution period, forcing the filter to extrapolate the state estimates by performing the prediction step only.

The Extended Kalman filter is generally not an optimal filter in the sense of minimization of the mean-squared error of the obtained state estimates. However, it provides modest performance for sufficiently smooth nonlinear systems and is considered to be a de facto standard solution for nonlinear estimation. A special case is obtained by setting linear state and output equations in the cooperating REXLANG block. This case leads to standard linear Kalman filter which is stochastically optimal for the formulated state estimation problem.

Inputs

<code>funcRef</code>	Cooperating REXLANG block reference	Reference
<code>u</code>	Input vector of the model	Reference
<code>z</code>	Output (mesurement) vector of the model	Reference
<code>nz</code>	Index of the actual output vector set	↓1 Long (I32)
<code>Qk</code>	State noise covariance matrix	Reference
<code>Rk</code>	Output noise covariance matrix	Reference
<code>RST</code>	Block reset	Bool
<code>HLD</code>	Hold	Bool
<code>x0</code>	Initial state vector	Reference
<code>P0</code>	Initial covariance matrix	Reference

Parameters

<code>nmax</code>	Allocated size of output matrix (total number of items) ↓5 ↑10000 ⊙20	Long (I32)
<code>solver</code>	Numeric integration method 1 Discrete equation 2 Euler (1st order) 3 2nd order Adams-Bashforth 4 3rd order Adams-Bashforth 5 4th order Adams-Bashforth 6 5th order Adams-Bashforth 7 4th order Runge-Kutha 8 Implicit Euler 9 Implicit Euler(more iteration) 10 2nd order Adams-Moulton implicit 11 2nd order Adams-Moulton implicit (more iterations) 12 3rd order Adams-Moulton implicit 13 3nd order Adams-Moulton implicit (more iterations) 14 2nd order RadauIIA implicit 15 2nd order RadauIIA implicit (more iterations) 16 3rd order RadauIIA implicit 17 3rd order RadauIIA implicit (more iterations)	⊖2 Long (I32)

Outputs

x	Model state vector	Reference
P	Model state covariance matrix	Reference
trP	Trace of model state covariance matrix	Reference
cmd	Cooperating REXLANG block requested function	Long (I32)
f	Vector reference set by cooperating REXLANG block	Reference
df	Matrix reference set by cooperating REXLANG block	Reference
err	Error code (0 is OK, see SystemLog for details)	Long (I32)

FOPDT – First order plus dead-time model

Block Symbol

Licence: STANDARD



Function Description

The FOPDT block is a discrete simulator of a first order continuous-time system with time delay, which can be described by the transfer function below:

$$P(s) = \frac{k_0}{(\tau \cdot s + 1)} \cdot e^{-\text{del} \cdot s}$$

The exact discretization at the sampling instants is used for discretization of the $P(s)$ transfer function. The sampling period used for discretization is equivalent to the execution period of the FOPDT block.

Input

u	Analog input of the block	⊕0.0 Double (F64)
---	---------------------------	-------------------

Output

y	Analog output of the block	Double (F64)
---	----------------------------	--------------

Parameters

k0	Static gain	⊕1.0 Double (F64)
del	Dead time [s]	⊕0.0 Double (F64)
tau	Time constant	⊕1.0 Double (F64)
nmax	Size of delay buffer (number of samples) for the time delay del. Used for internal memory allocation.	Long (I32) ↓10 ↑10000000 ⊕1.00E+03

MDL – Process model

Block Symbol

Licence: STANDARD



Function Description

The MDL block is a discrete simulator of continuous-time system with transfer function

$$F(s) = \frac{K_0 e^{-Ds}}{(\tau_1 s + 1)(\tau_2 s + 1)},$$

where $K_0 > 0$ is the static gain `k0`, $D \geq 0$ is the time-delay `del` and $\tau_1, \tau_2 > 0$ are the system time-constants `tau1` and `tau2`.

Input

<code>u</code>	Analog input of the block	<code>⊖0.0 Double (F64)</code>
----------------	---------------------------	--------------------------------

Output

<code>y</code>	Analog output of the block	<code>Double (F64)</code>
----------------	----------------------------	---------------------------

Parameters

<code>k0</code>	Static gain	<code>⊖1.0 Double (F64)</code>
<code>del</code>	Dead time [s]	<code>⊖0.0 Double (F64)</code>
<code>tau1</code>	The first time constant	<code>⊖1.0 Double (F64)</code>
<code>tau2</code>	The second time constant	<code>⊖2.0 Double (F64)</code>
<code>nmax</code>	Size of delay buffer (number of samples) for the time delay <code>del</code> . Used for internal memory allocation.	<code>Long (I32)</code>

`↓10 ↑10000000 ⊖1.00E+03`

MDLI – Process model with input-defined parameters

Block Symbol

Licence: STANDARD



Function Description

The MDLI block is a discrete simulator of continuous-time system with transfer function

$$F(s) = \frac{K_0 e^{-Ds}}{(\tau_1 s + 1)(\tau_2 s + 1)},$$

where $K_0 > 0$ is the static gain **k0**, $D \geq 0$ is the time-delay **del** and $\tau_1, \tau_2 > 0$ are the system time-constants **tau1** and **tau2**. In contrary to the **MDL** block the system is time variant. The system parameters are determined by the input signals.

Inputs

u	Analog input of the block	$\odot 0.0$	Double (F64)
k0	Static gain	$\odot 0.0$	Double (F64)
del	Dead time [s]	$\odot 0.0$	Double (F64)
tau1	The first time constant	$\odot 0.0$	Double (F64)
tau2	The second time constant	$\odot 0.0$	Double (F64)

Output

y	Analog output of the block	Double (F64)
----------	----------------------------	--------------

Parameters

nmax	Size of delay buffer (number of samples) for the time delay del . Used for internal memory allocation.	Long (I32) $\downarrow 10 \uparrow 10000000 \odot 1.00E+03$
-------------	--	--

MVD – Motorized valve drive

Block Symbol

Licence: STANDARD



Function Description

The MVD block simulates a servo valve. The UP (DN) input is a binary command for opening (closing) the valve at a constant speed $1/tv$, where tv is a parameter of the block. The opening (closing) continues for $UP = \text{on}$ ($DN = \text{on}$) until the full open $y = hilim$ (full closed $y = lolim$) position is reached. The full open (full closed) position is signalized by the end switch HS (LS). The initial position at start-up is $y = y0$. If $UP = DN = \text{off}$, then the position of the valve remains unchanged (neither opening nor closing).

Inputs

UP	Open	Bool
DN	Close	Bool

Outputs

y	Valve position	Double (F64)
HS	Upper end switch	Bool
LS	Lower end switch	Bool


Parameters

y0	Initial valve position	⊕0.0	Double (F64)
tv	Time required for transition between $y = 0$ and $y = 1$ [s]	⊕10.0	Double (F64)
hilim	Upper limit position (open)	⊕1.0	Double (F64)
lolim	Lower limit position (closed)	⊕0.0	Double (F64)

NSSM – Nonlinear State-Space Model

Block Symbol

Licence: [MODEL](#)

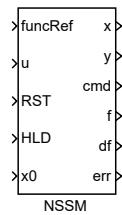

Function Description

The block provides a solution to a nonlinear continuous-time state-space model in the form of $\frac{dx}{dt} = f(x, u)$, $y = h(x, u)$ or its discrete-time counterpart defined as $x(k+1) = f(x(k), u(k))$, $y(k) = h(x(k), u(k))$. The equation is discretized into a form $x(t) = F(x(t - T), u(t))$, where T is sampling period of the **NSSM** block. The method used for discretization (i.e. a method to numerically solve the vector differential equation) depends on the **solver** parameter. Various methods for numerical integration are implemented including one step methods (like Runge-Kutta, Euler), multistep methods (Adams-Basforth), and also implicit methods (Adams-Moulton). It is possible to choose different method order for each kind to find a suitable precision vs computational time trade-off. The block does not support variable step algorithms (the time-step for the solver is always the same as the execution period of the task where the block is inserted).

The non-linear-vector function $f(x, u)$ must be implemented in the **REXLANG** block that is connected to the **NSSM** block in a special way. The input **funcRef** of the **NSSM** block must be connected to the output **y0** of the **REXLANG** block and the output **y0** can not be used internally in the code/script of the **REXLANG** block. The outputs **x**, **f** and **df** of the **NSSM** block must be connected to the inputs of the **REXLANG** block. These inputs must be processed in the **REXLANG** code as an input array. The main function of the **REXLANG** block must set the value of $f(x, u)$ into the **f** vector (e.g. into the input array, where **f** is connected) and the matrix $df(x, u)/dx$ into the **af** matrix.

The **NSSM** block calls the main-function of the **REXLANG** block when needed for numerical integration of the differential equation system (for example the Runge-Kutta method performs 4 calls in each execution period with different x-vector values). The **REXLANG** block should be disabled in the schematics of the algorithm to prevent its execution **REXYGEN** system itself. If the **REXLANG** must be executed by **REXYGEN** (e.g. for compute output function $y = h(x, u)$), it is recommended to connect the output **cmd** of the **NSSM** block into input of the **REXLANG** block to distinguish between calling by the **NSSM** block (**cmd** = 0) and calling by **REXYGEN** system (**cmd** = -1).

Notes:

- computation of the $df(x, u)/dx$ is necessary for implicit methods only (explicit methods do not use it).
- size of the vector **x** (and also **f**, **df**) is defined by the size of the vector **x0**. The size should be changed by reset only (the **RST** input).
- solver=1: discrete** signalizes a discrete-time state space model with the functions **f** and **h** designating the right side of the corresponding difference equation. This mode does not require numerical integration and the algorithm reduces to the execution of the code in the connected REXLANG block; the mode is used mainly for symmetry with the **EKF** block.
- for **NSSM** connecting the output **cmd** is necessary, because **cmd>0** indicate number of measurement and REXLANG must return $f = h(x, u)$, $df = dh(x, u)/dx$.

Inputs

funcRef	Cooperating REXLANG block reference	Reference
u	Input vector of the model	Reference
RST	Block reset	Bool
HLD	Hold	Bool
x0	Initial state vector	Reference

Parameters

nmax	Allocated size of output matrix (total number of items)	Long (I32)
		$\downarrow 5 \uparrow 10000 \odot 20$
solver	Numeric integration method	⊕2 Long (I32)
1	Discrete equation	
2	Euler (1st order)	
3	2nd order Adams-Bashforth	
4	3rd order Adams-Bashforth	
5	4th order Adams-Bashforth	
6	5th order Adams-Bashforth	
7	4th order Runge-Kutta	
8	Implicit Euler	
9	Implicit Euler(more iteration)	
10	2nd order Adams-Moulton implicit	
11	2nd order Adams-Moulton implicit (more iterations)	
12	3rd order Adams-Moulton implicit	
13	3rd order Adams-Moulton implicit (more iterations)	
14	2nd order RadauIIA implicit	
15	2nd order RadauIIA implicit (more iterations)	
16	3rd order RadauIIA implicit	
17	3rd order RadauIIA implicit (more iterations)	

Outputs

<code>x</code>	Model state vector	Reference
<code>y</code>	Model output vector	Reference
<code>cmd</code>	Cooperating REXLANG block requested function	Long (I32)
<code>f</code>	Vector reference set by cooperating REXLANG block	Reference
<code>df</code>	Matrix reference set by cooperating REXLANG block	Reference
<code>err</code>	Error code (0 is OK, see SystemLog for details)	Long (I32)

SOPDT – Second order plus dead-time model

Block Symbol

Licence: STANDARD



Function Description

The SOPDT block is a discrete simulator of a second order continuous-time system with time delay, which can be described by one of the transfer functions below. The type of the model is selected by the `itf` parameter.

$$\begin{aligned}
 \text{itf} = 1 : \quad P(s) &= \frac{pb1 \cdot s + pb0}{s^2 + pa1 \cdot s + pa0} \cdot e^{-del \cdot s} \\
 \text{itf} = 2 : \quad P(s) &= \frac{k0 (\tau \cdot s + 1)}{(\tau_1 \cdot s + 1)(\tau_2 \cdot s + 1)} \cdot e^{-del \cdot s} \\
 \text{itf} = 3 : \quad P(s) &= \frac{k0 \cdot \omega^2 \cdot (\tau/\omega \cdot s + 1)}{(s^2 + 2 \cdot \xi \cdot \omega \cdot s + \omega^2)} \cdot e^{-del \cdot s} \\
 \text{itf} = 4 : \quad P(s) &= \frac{k0 (\tau \cdot s + 1)}{(\tau_1 \cdot s + 1) s} \cdot e^{-del \cdot s}
 \end{aligned}$$

For simulation of first order plus dead time systems (FOPDT) use the [LLC](#) block with parameter `a` set to zero.

The exact discretization at the sampling instants is used for discretization of the $P(s)$ transfer function. The sampling period used for discretization is equivalent to the execution period of the SOPDT block.

Input

`u` Analog input of the block `⊖0.0 Double (F64)`

Output

`y` Analog output of the block `Double (F64)`

Parameters

<code>itf</code>	Transfer function form	<code>⊖1.00E+00 Long (I32)</code>
1	A general form	
2	A form with real poles	
3	A form with complex poles	
4	A form with integrator	

<code>k0</code>	Static gain	$\odot 1.0$	Double (F64)
<code>tau</code>	Numerator time constant	$\odot 0.0$	Double (F64)
<code>tau1</code>	The first time constant	$\odot 1.0$	Double (F64)
<code>tau2</code>	The second time constant	$\odot 1.0$	Double (F64)
<code>om</code>	Natural frequency	$\odot 1.0$	Double (F64)
<code>xi</code>	Relative damping coefficient	$\odot 1.0$	Double (F64)
<code>p_b0</code>	Numerator coefficient: s^0	$\odot 1.0$	Double (F64)
<code>p_b1</code>	Numerator coefficient: s^1	$\odot 1.0$	Double (F64)
<code>p_a0</code>	Denominator coefficient: s^0	$\odot 1.0$	Double (F64)
<code>p_a1</code>	Denominator coefficient: s^1	$\odot 1.0$	Double (F64)
<code>del</code>	Dead time [s]	$\odot 0.0$	Double (F64)
<code>nmax</code>	Size of delay buffer (number of samples) for the time delay <code>del</code> . Used for internal memory allocation.		Long (I32)

$\downarrow 10 \uparrow 10000000 \odot 1.00E+03$

Chapter 14

MATRIX – Blocks for matrix and vector operations

Contents

CNA – Array (vector/matrix) constant	352
MB_DASUM – Sum of the absolute values	353
MB_DAXPY – Performs $y := a*x + y$ for vectors x,y	354
MB_DCOPY – Copies vector x to vector y	356
MB_DDOT – Dot product of two vectors	358
MB_DGEMM – Performs $C := \alpha * \text{op}(A) * \text{op}(B) + \beta * C$, where $\text{op}(X) = X$ or $\text{op}(X) = X^T$	360
MB_DGEMV – Performs $y := \alpha * A * x + \beta * y$ or $y := \alpha * A^T * x$ + $\beta * y$	362
MB_DGER – Performs $A := \alpha * x * y^T + A$	364
MB_DNRM2 – Euclidean norm of a vector	366
MB_DR0T – Plain rotation of a vector	367
MB_DSCAL – Scales a vector by a constant	369
MB_DSWAP – Interchanges two vectors	370
MB_DTRMM – Performs $B := \alpha * \text{op}(A) * B$ or $B := \alpha * B * \text{op}(A)$, where $\text{op}(X) = X$ or $\text{op}(X) = X^T$ for triangular matrix A	372
MB_DTRMV – Performs $x := A * x$ or $x := A^T * x$ for triangular matrix A	374
MB_DTRSV – Solves one of the system of equations $A * x = b$ or $A^T * x = b$ for triangular matrix A	377
ML_DGEBAK – Backward transformation to ML_DGEBAK of left or right eigenvectors	380
ML_DGEBAK – Balancing of a general real matrix	382
ML_DGEBRD – Reduces a general real matrix to bidiagonal form by an orthogonal transformation	384

ML_DGECON – Estimates the reciprocal of the condition number of a general real matrix	386
ML_DGEEES – Computes the eigenvalues, the Schur form, and, optionally, the matrix of Schur vectors	388
ML_DGEEV – Computes the eigenvalues and, optionally, the left and/or right eigenvectors	390
ML_DGEHRD – Reduces a real general matrix A to upper Hessenberg form	392
ML_DGELQF – Computes an LQ factorization of a real M-by-N matrix A	394
ML_DGELSD – Computes the minimum-norm solution to a real linear least squares problem	396
ML_DGEQRF – Computes an QR factorization of a real M-by-N matrix A	398
ML_DGESDD – Computes the singular value decomposition (SVD) of a real M-by-N matrix A	400
ML_DLACPY – Copies all or part of one matrix to another matrix .	402
ML_DLANGE – Computes one of the matrix norms of a general matrix	404
ML_DLASET – Initializes the off-diagonal elements and the diagonal elements of a matrix to given values	406
ML_DTRSYL – Solves the real Sylvester matrix equation for quasi-triangular matrices A and B	408
MX_AT – Get Matrix/Vector element	410
MX_ATSET – Set Matrix/Vector element	411
MX_CNADD – Add scalar to each Matrix/Vector element	412
MX_CNMUL – Multiply a Matrix/Vector by a scalar	413
MX_CTODPA – Discretizes continuous model given by (A,B) to (Ad,Bd) using Pade approximations	414
MX_DIM – Matrix/Vector dimensions	416
MX_DIMSET – Set Matrix/Vector dimensions	417
MX_DSAGET – Set subarray of A into B	419
MX_DSAREF – Set reference to subarray of A into B	421
MX_DSASET – Set A into subarray of B	423
MX_DTRNSP – General matrix transposition: B := alpha*A^T . .	425
MX_DTRNSQ – Square matrix in-place transposition: A := alpha*A^T	427
MX_FILL – Fill real matrix or vector	428
MX_MAT – Matrix data storage block	429
MX RAND – Randomly generated matrix or vector	430
MX_REFCOPY – Copies input references of matrices A and B to their output references	432
MX_SLFS – Save or load a Matrix/Vector into file or string . .	433
MX_VEC – Vector data storage block	435

MX_WRITE – Write a Matrix/Vector to the console/system log . . .	436
RTOV – Vector multiplexer	438
SWVMR – Vector/matrix/reference signal switch	439
VTOR – Vector demultiplexer	440

CNA – Array (vector/matrix) constant

Block Symbol

Licence: STANDARD



Function Description

The block **CNA** allocates memory for **nmax** elements of the type **etype** of the vector/matrix referenced by the output **vec** and initializes all elements to data stored in the parameter **acn**.

If the string parameter **filename** is not empty then it loads initialization data from the **filename** file on the host computer in CSV format. Column separator can be comma or semicolon or space (but the same in the whole file), decimal separator have to be dot, row separator is new line. Empty lines are skipped.

If the parameter **TRN = on** then the output reference **vec** contains transposed data.

Note: In case of **etype = Large (I64)**, values loaded from parameter **acn** are converted to double-precision float due to implementation reasons, so you can loose precision for very large values. If this could be a problem, use external file for initialization which does not have this issue.

Parameters

filename	CSV data file	String
TRN	Transpose loaded matrix	Bool
nmax	Allocated size of output matrix (total number of items) ↓2 ↑10000000 ⊕1.00E+02	Long (I32)
etype	Type of elements 1 Bool 2 Byte (U8) 3 Short (I16) 4 Long (I32) 5 Word (U16) 6 DWord (U32) 7 Float (F32) 8 Double (F64) -- 10 Large (I64)	⊕8.00E+00 Long (I32)
acn	Initial array value	⊖[0 1 2 3] Double (F64)


Output

vec	Reference to vector/matrix data	Reference
------------	---------------------------------	------------------

MB_DASUM – Sum of the absolute values

Block Symbol

Licence: STANDARD



Function Description

The output reference `yX` is always set to the input reference `uX`. If `HLD = on` then nothing is computed otherwise the BLAS function `DASUM` is called internally:

```
value = DASUM(N, uX, INCX);
```

where the values `N` and `INCX` are set in the following way:

- If the input `n > 0` then `N` is set to `n` else `N` is set to the current number of the vector or matrix elements `CNT` referenced by `uX`.
- If the input `incx > 0` then `INCX` is set to `incx` else `INCX` is set to 1.

The error flag `E` is set to `on` if:

- the reference `uX` is not defined (i.e. input `uX` is not connected),
- `n < 0` or `incx < 0`,
- $(N - 1) * INCX + 1 > CNT$.

See BLAS documentation [6] for more details.

Inputs

			Reference
<code>uX</code>	Input reference to vector x		
<code>n</code>	Number of processed vector elements	<code>0.00E+00</code>	Long (I32)
<code>incx</code>	Index increment of vector x	<code>0.00E+00</code>	Long (I32)
<code>HLD</code>	Hold		Bool


Outputs

			Reference
<code>yX</code>	Output reference to vector x		
<code>value</code>	Return value of the function		Double (F64)
<code>E</code>	Error flag		Bool

MB_DAXPY – Performs $y := a*x + y$ for vectors x,y

Block Symbol

Licence: STANDARD



Function Description

The output references yX and yY are always set to the corresponding input references uX and uY . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function $DAXPY$ is called internally:

```
DAXPY(N, a, uX, INCX, uY, INCY);
```

where the values N , $INCX$ and $INCY$ are set in the following way:

- If the input $n > 0$ then N is set to n else N is set to the current number of the vector or matrix elements $CNTY$ referenced by uY .
- If the input $incx \neq 0$ then $INCX$ is set to $incx$ else $INCX$ is set to 1.
- If the input $incy \neq 0$ then $INCY$ is set to $incy$ else $INCY$ is set to 1.

The error flag E is set to **on** if:

- the reference uX or uY is not defined (i.e. input uX or uY is not connected),
- $n < 0$,
- $(N - 1) * |INCX| + 1 > CNTX$, where $CNTX$ is a number of the vector or matrix elements referenced by uX ,
- $(N - 1) * |INCY| + 1 > CNTY$.

See BLAS documentation [6] for more details.

Inputs

uX	Input reference to vector x	Reference
uY	Input reference to vector y	Reference
a	Scalar coefficient a	Double (F64)
n	Number of processed vector elements	$\odot 0.00E+00$ Long (I32)

incx	Index increment of vector x	Long (I32)
incy	Index increment of vector y	Long (I32)
HLD	Hold	Bool


Outputs

yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
E	Error indicator	Bool

MB_DCOPY – Copies vector x to vector y

Block Symbol

Licence: STANDARD



Function Description

The output references yX and yY are always set to the corresponding input references uX and uY . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function `DCOPY` is called internally:

```
DCOPY(N, uX, INCX, uY, INCY);
```

where the values N , $INCX$ and $INCY$ are set in the following way:

- If the input $n > 0$ then N is set to n else N is set to the current number of the vector or matrix elements `CNTX` referenced by uX .
- If the input $incx \neq 0$ then $INCX$ is set to $incx$ else $INCX$ is set to 1.
- If the input $incy \neq 0$ then $INCY$ is set to $incy$ else $INCY$ is set to 1.

The error flag E is set to `on` if:

- the reference uX or uY is not defined (i.e. input uX or uY is not connected),
- $n < 0$,
- $(N - 1) * |INCX| + 1 > CNTX$,
- $(N - 1) * |INCY| + 1 > CNTY$, where `CNTY` is a number of the vector or matrix elements referenced by uY .

See BLAS documentation [6] for more details.

Inputs

		Reference
<code>uX</code>	Input reference to vector x	Reference
<code>uY</code>	Input reference to vector y	Reference
<code>n</code>	Number of processed vector elements	Long (I32)
<code>incx</code>	Index increment of vector x	Long (I32)
<code>incy</code>	Index increment of vector y	Long (I32)
<code>HLD</code>	Hold	Bool


Outputs

yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
E	Error indicator	Bool

MB_DDQT – Dot product of two vectors

Block Symbol

Licence: STANDARD



Function Description

The output references yX and yY are always set to the corresponding input references uX and uY . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function DDOT is called internally:

`DDOT(N, uX, INCX, uY, INCY);`

where the values N , $INCX$ and $INCY$ are set in the following way:

- If the input $n > 0$ then N is set to n else N is set to the current number of the vector or matrix elements $CNTX$ referenced by uX .
- If the input $incx \neq 0$ then $INCX$ is set to $incx$ else $INCX$ is set to 1.
- If the input $incy \neq 0$ then $INCY$ is set to $incy$ else $INCY$ is set to 1.

The error flag E is set to **on** if:

- the reference uX or uY is not defined (i.e. input uX or uY is not connected),
- $n < 0$,
- $(N - 1) * |INCX| + 1 > CNTX$,
- $(N - 1) * |INCY| + 1 > CNTY$, where $CNTY$ is a number of the vector or matrix elements referenced by uY .

See BLAS documentation [6] for more details.

Inputs

		Reference
uX	Input reference to vector x	
uY	Input reference to vector y	
n	Number of processed vector elements	Long (I32)
incx	Index increment of vector x	Long (I32)
incy	Index increment of vector y	Long (I32)
HLD	Hold	Bool


Outputs

yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
value	Return value of the function	Double (F64)
E	Error indicator	Bool

MB_DGEMM – Performs $C := \text{alpha} * \text{op}(A) * \text{op}(B) + \text{beta} * C$, where $\text{op}(X) = X$ or $\text{op}(X) = X^T$

Block Symbol

Licence: STANDARD



Function Description

The output references yA , yB and yC are always set to the corresponding input references uA , uB and uC . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function DGEMM is called internally:

`DGEMM(sTRANSA, sTRANSB, M, N, KA, alpha, uA, LDA, uB, LDB, beta, uC, LDC);`
where parameters of DGEMM are set in the following way:

- Integer inputs `transa` and `transb` are mapped to strings `sTRANSA` and `sTRANSB`:
 $\{0, 1\} \rightarrow "N"$, $\{2\} \rightarrow "T"$ and $\{3\} \rightarrow "C"$.
- M is number of rows of the matrix referenced by uC .
- N is number of columns of the matrix referenced by uC .
- If the input `transa` is equal to 0 or 1 then KA is number of columns else KA is number rows of the matrix referenced by uA .
- LDA , LDB and LDC are leading dimensions of matrices referenced by uA , uB and uC .

The error flag `E` is set to `on` if:

- the reference uA or uB or uC is not defined (i.e. input uA or uB or uC is not connected),
- `transa` or `transb` is less than 0 or greater than 3
- $KA \neq KB$; if the input `transb` is equal to 0 or 1 then KB is number of rows else KB is number of columns of the matrix referenced by uB (i.e. matrices $\text{op}(A)$ and $\text{op}(B)$ have to be multipliable).
- the call of the function DGEMM returns error using the function XERBLA, see the system log.

See BLAS documentation [6] for more details.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference
uC	Input reference to matrix C	Reference
transa	Transposition of matrix A	$\downarrow 0 \uparrow 3 \odot 0.00E+00$ Long (I32)
transb	Transposition of matrix B	$\downarrow 0 \uparrow 3 \odot 0.00E+00$ Long (I32)
alpha	Scalar coefficient alpha	Double (F64)
beta	Scalar coefficient beta	$\odot 0.0$ Double (F64)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference
yC	Output reference to matrix C	Reference
E	Error indicator	Bool

MB_DGEMV – Performs $y := \text{alpha}^*A^*x + \text{beta}^*y$ or $y := \text{alpha}^*A^T*x + \text{beta}^*y$

Block Symbol

Licence: STANDARD



Function Description

The output references yA , yX and yY are always set to the corresponding input references uA , uX and uY . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function DGEMV is called internally:

```
DGEMV(sTRANS, M, N, alpha, uA, LDA, uX, INCX, beta, uY, INCY);
```

where parameters of DGEMV are set in the following way:

- Integer input **trans** is mapped to the string **sTRANS**: $\{0, 1\} \rightarrow "N"$, $\{2\} \rightarrow "T"$ and $\{3\} \rightarrow "C"$.
- **M** is number of rows of the matrix referenced by **uA**.
- **N** is number of columns of the matrix referenced by **uA**.
- **LDA** is the leading dimension of matrix referenced by **uA**.
- If the input **incx** $\neq 0$ then **INCX** is set to **incx** else **INCX** is set to 1.
- If the input **incy** $\neq 0$ then **INCY** is set to **incy** else **INCY** is set to 1.

The error flag **E** is set to **on** if:

- the reference **uA** or **uX** or **uY** is not defined (i.e. input **uA** or **uX** or **uY** is not connected),
- **trans** is less than 0 or greater than 3
- the call of the function DGEMV returns error using the function XERBLA, see the system log.

See BLAS documentation [6] for more details.

Inputs

uA	Input reference to matrix A	Reference
uX	Input reference to vector x	Reference
uY	Input reference to vector y	Reference
trans	Transposition of the input matrix	$\downarrow 0 \uparrow 3$ $\odot 0.00E+00$ Long (I32)
incx	Index increment of vector x	$\odot 0.00E+00$ Long (I32)
incy	Index increment of vector y	$\odot 0.00E+00$ Long (I32)
alpha	Scalar coefficient alpha	$\odot 0.0$ Double (F64)
beta	Scalar coefficient beta	Double (F64)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
E	Error indicator	Bool

MB_DGER – Performs $A := \text{alpha} * x * y^T + A$

Block Symbol

Licence: STANDARD



Function Description

The output references yX , yY and yA are always set to the corresponding input references uX , uY and uA . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function DGER is called internally:

`DGER(M, N, alpha, uX, INCX, uY, INCY, uA, LDA);`

where parameters of DGER are set in the following way:

- M is number of rows of the matrix referenced by uA .
- N is number of columns of the matrix referenced by uA .
- If the input $\text{incx} \neq 0$ then INCX is set to incx else INCX is set to 1.
- If the input $\text{incy} \neq 0$ then INCY is set to incy else INCY is set to 1.
- LDA is the leading dimension of matrix referenced by uA .

The error flag E is set to **on** if:

- the reference uX or uY or uA is not defined (i.e. input uX or uY or uA is not connected),
- the call of the function DGER returns error using the function XERBLA, see the system log.

See BLAS documentation [6] for more details.

Inputs

			Reference
uX	Input reference to vector x		Reference
uY	Input reference to vector y		Reference
uA	Input reference to matrix A		Reference
incx	Index increment of vector x	$\odot 0.00E+00$	Long (I32)
incy	Index increment of vector y	$\odot 0.00E+00$	Long (I32)
alpha	Scalar coefficient alpha	$\odot 0.0$	Double (F64)
HLD	Hold		Bool


Outputs

yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
yA	Output reference to matrix A	Reference
E	Error indicator	Bool

MB_DNRM2 – Euclidean norm of a vector

Block Symbol

Licence: STANDARD



Function Description

The output reference `yX` is always set to the input reference `uX`. If `HLD = on` then nothing is computed otherwise the BLAS function `DNRM2` is called internally:

```
value = DNRM2(N, uX, INCX);
```

where the values `N` and `INCX` are set in the following way:

- If the input `n > 0` then `N` is set to `n` else `N` is set to the current number of the vector or matrix elements `CNT` referenced by `uX`.
- If the input `incx > 0` then `INCX` is set to `incx` else `INCX` is set to 1.

The error flag `E` is set to `on` if:

- the reference `uX` is not defined (i.e. input `uX` is not connected),
- `n < 0` or `incx < 0`,
- $(N - 1) * |INCX| + 1 > CNT$.

See BLAS documentation [6] for more details.

Use the block [ML_DLANGE](#) for computation of various norms of a matrix.

Inputs

			Reference
<code>uX</code>	Input reference to vector x		
<code>n</code>	Number of processed vector elements	$\odot 0.00E+00$	Long (I32)
<code>incx</code>	Index increment of vector x	$\odot 0.00E+00$	Long (I32)
<code>HLD</code>	Hold		Bool


Outputs

			Reference
<code>yX</code>	Output reference to vector x		
<code>value</code>	Return value of the function		Double (F64)
<code>E</code>	Error indicator		Bool

MB_DR0T – Plain rotation of a vector

Block Symbol

Licence: STANDARD



Function Description

The output references yX and yY are always set to the corresponding input references uX and uY . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function DR0T is called internally:

$\text{DR0T}(N, uX, INCX, uY, INCY, c, s);$

where parameters of DR0T are set in the following way:

- If the input $n > 0$ then N is set to n else N is set to the current number of the vector or matrix elements $CNTX$ referenced by uX .
- If the input $incx \neq 0$ then $INCX$ is set to $incx$ else $INCX$ is set to 1.
- If the input $incy \neq 0$ then $INCY$ is set to $incy$ else $INCY$ is set to 1.

The error flag E is set to on if:

- the reference uX or uY is not defined (i.e. input uX or uY is not connected),
- $n < 0$,
- $(N - 1) * |INCX| + 1 > CNTX$,
- $(N - 1) * |INCY| + 1 > CNTY$, where $CNTY$ is a number of the vector or matrix elements referenced by uY .

See BLAS documentation [6] for more details.

Inputs

uX	Input reference to vector x	Reference
uY	Input reference to vector y	Reference
n	Number of processed vector elements	$\odot 0.00E+00$ Long (I32)
$incx$	Index increment of vector x	$\odot 0.00E+00$ Long (I32)

incy	Index increment of vector y	⊕0.00E+00	Long (I32)
c	Scalar coefficient c	⊕0.0	Double (F64)
s	Scalar coefficient s	⊕0.0	Double (F64)
HLD	Hold		Bool

Outputs

yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
E	Error indicator	Bool

MB_DSCAL – Scales a vector by a constant

Block Symbol

Licence: STANDARD



Function Description

The output references yX is always set to the corresponding input reference uX . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function `DSCAL` is called internally:

`DSCAL(N, a, uX, INCX);`

where parameters of `DSCAL` are set in the following way:

- If the input $n > 0$ then N is set to n else N is set to the current number of the vector or matrix elements `CNT` referenced by uX .
- If the input $\text{incx} \neq 0$ then INCX is set to incx else INCX is set to 1.

The error flag E is set to `on` if:

- the reference uX is not defined (i.e. input uX is not connected),
- $n < 0$ or $\text{incx} < 0$,
- $(N - 1) * \text{INCX} + 1 > \text{CNT}$.

See BLAS documentation [6] for more details.

Inputs

uX	Input reference to vector x	Reference
a	Scalar coefficient a	$\odot 0.0$ Double (F64)
n	Number of processed vector elements	$\odot 0.00E+00$ Long (I32)
incx	Index increment of vector x	$\odot 0.00E+00$ Long (I32)
HLD	Hold	Bool


Outputs

yX	Output reference to vector x	Reference
E	Error indicator	Bool

MB_DSWAP – Interchanges two vectors

Block Symbol

Licence: STANDARD



Function Description

The output references yX and yY are always set to the corresponding input references uX and uY . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function $DSWAP$ is called internally:

```
DSWAP(N, uX, INCX, uY, INCY);
```

where the values N , $INCX$ and $INCY$ are set in the following way:

- If the input $n > 0$ then N is set to n else N is set to the current number of the vector or matrix elements $CNTX$ referenced by uX .
- If the input $incx \neq 0$ then $INCX$ is set to $incx$ else $INCX$ is set to 1.
- If the input $incy \neq 0$ then $INCY$ is set to $incy$ else $INCY$ is set to 1.

The error flag E is set to on if:

- the reference uX or uY is not defined (i.e. input uX or uY is not connected),
- $n < 0$,
- $(N - 1) * |INCX| + 1 > CNTX$,
- $(N - 1) * |INCY| + 1 > CNTY$, where $CNTY$ is a number of the vector or matrix elements referenced by uY .

See BLAS documentation [6] for more details.

Inputs

			Reference
uX	Input reference to vector x		Reference
uY	Input reference to vector y		Reference
n	Number of processed vector elements	$\odot 0.00E+00$	Long (I32)
$incx$	Index increment of vector x	$\odot 0.00E+00$	Long (I32)
$incy$	Index increment of vector y	$\odot 0.00E+00$	Long (I32)
HLD	Hold		Bool

Outputs

yX	Output reference to vector x	Reference
yY	Output reference to vector y	Reference
E	Error indicator	Bool

MB_DTRMM – Performs $B := \text{alpha} * \text{op}(A) * B$ or $B := \text{alpha} * B * \text{op}(A)$, where $\text{op}(X) = X$ or $\text{op}(X) = X^T$ for triangular matrix A

Block Symbol

Licence: STANDARD



Function Description

The output references yA and yB are always set to the corresponding input references uA and uB . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function **DTRMM** is called internally:

DTRMM(sRSIDE, sLUPLO, sTRANSA, sNDIAG, M, N, alpha, uA, LDA, uB, LDB);

where parameters of **DTRMM** are set in the following way:

- If **RSIDE** = **on** then the string **sRSIDE** is set to "R" else it is set to "L".
- If **LUPLO** = **on** then the string **sLUPLO** is set to "L" else it is set to "U".
- Integer input **transa** is mapped to the string **sTRANSA**: {0, 1} → "N", {2} → "T" and {3} → "C".
- If **NDIAG** = **on** then the string **sNDIAG** is set to "N" else it is set to "U".
- **M** is number of rows of the matrix referenced by uB .
- **N** is number of columns of the matrix referenced by uB .
- **LDA** and **LDB** are leading dimensions of matrices referenced by uA and uB .

The error flag **E** is set to **on** if:

- the reference uA or uB is not defined (i.e. input uA or uB is not connected),
- **transa** is less than 0 or greater than 3,
- matrix referenced by uA is not square or is not compatible with the matrix referenced by uB ,
- the call of the function **DTRMM** returns error using the function **XERBLA**, see the system log.

See BLAS documentation [6] for more details.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference
RSIDE	Operation is applied from right side	Bool
LUPLO	Matrix A is a lower triangular matrix	Bool
transa	Transposition of matrix A	$\downarrow 0 \uparrow 3 \odot 0.00E+00$ Long (I32)
NDIAG	Matrix A is not assumed to be unit triangular	Bool
alpha	Scalar coefficient alpha	$\odot 0.0$ Double (F64)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference
E	Error indicator	Bool

MB_DTRMV – Performs $x := A^*x$ or $x := A^T*x$ for triangular matrix A

Block Symbol

Licence: STANDARD



Function Description

The output references yA and yX are always set to the corresponding input references uA and uX . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function DTRMV is called internally:

`DTRMV(sLUPLO, sTRANS, sNDIAG, N, uA, LDA, uX, INCX);`

where parameters of DTRMV are set in the following way:

- If $\text{LUPLO} = \text{on}$ then the string `sLUPLO` is set to "L" else it is set to "U".
- Integer input `trans` is mapped to the string `sTRANS`: $\{0, 1\} \rightarrow \text{"N"}$, $\{2\} \rightarrow \text{"T"}$ and $\{3\} \rightarrow \text{"C"}$.
- If $\text{NDIAG} = \text{on}$ then the string `sNDIAG` is set to "N" else it is set to "U".
- N is number of rows and columns of the square matrix referenced by uA .
- LDA is the leading dimension of matrix referenced by uA .
- If the input `incx` $\neq 0$ then `INCX` is set to `incx` else `INCX` is set to 1.

The error flag `E` is set to `on` if:

- the reference uA or uX is not defined (i.e. input uA or uX is not connected),
- `trans` is less than 0 or greater than 3,
- matrix referenced by uA is not square,
- $(N - 1) * |\text{INCX}| + 1 > \text{CNTX}$, where CNTX is a number of the vector or matrix elements referenced by uX .
- the call of the function DTRMV returns error using the function `XERBLA`, see the system log.

See BLAS documentation [6] for more details.

Inputs

uA	Input reference to matrix A	Reference
uX	Input reference to vector x	Reference
LUPLO	Matrix A is a lower triangular matrix	Bool
trans	Transposition of the input matrix	$\downarrow 0 \uparrow 3 \odot 0.00E+00$ Long (I32)
NDIAG	Matrix A is not assumed to be unit triangular	Bool
incx	Index increment of vector x	$\odot 0.00E+00$ Long (I32)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yX	Output reference to vector x	Reference
E	Error indicator	Bool

MB_DTRSV – Solves one of the system of equations $A^*x = b$ or $A^T*x = b$ for triangular matrix A

Block Symbol

Licence: STANDARD



Function Description

The output references yA and yX are always set to the corresponding input references uA and uX . If $HLD = \text{on}$ then nothing is computed otherwise the BLAS function `DTRSV` is called internally:

```
DTRSV(sLUPLO, sTRANS, sNDIAG, N, uA, LDA, uX, INCX);
```

where parameters of `DTRSV` are set in the following way:

- If `LUPLO = on` then the string `sLUPLO` is set to "L" else it is set to "U".
- Integer input `trans` is mapped to the string `sTRANS`: {0, 1} → "N", {2} → "T" and {3} → "C".
- If `NDIAG = on` then the string `sNDIAG` is set to "N" else it is set to "U".
- `N` is number of rows and columns of the square matrix referenced by `uA`.
- `LDA` is the leading dimension of matrix referenced by `uA`.
- If the input `incx` ≠ 0 then `INCX` is set to `incx` else `INCX` is set to 1.

The error flag `E` is set to `on` if:

- the reference `uA` or `uX` is not defined (i.e. input `uA` or `uX` is not connected),
- `trans` is less than 0 or greater than 3,
- matrix referenced by `uA` is not square,
- $(N - 1) * |INCX| + 1 > CNTX$, where `CNTX` is a number of the vector or matrix elements referenced by `uX`.
- the call of the function `DTRMV` returns error using the function `XERBLA`, see the system log.

See BLAS documentation [6] for more details.

Inputs

uA	Input reference to matrix A	Reference
uX	Input reference to vector x	Reference
LUPLO	Matrix A is a lower triangular matrix	Bool
trans	Transposition of the input matrix	↓0 ↑3 Long (I32)
NDIAG	Matrix A is not assumed to be unit triangular	Bool
incx	Index increment of vector x	⊖0.00E+00 Long (I32)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yX	Output reference to vector x	Reference
E	Error indicator	Bool

ML_DGEBAK – Backward transformation to ML_DGEBAL of left or right eigenvectors

Block Symbol

Licence: [MATRIX](#)



Function Description

The output references `ySCALE` and `yV` are always set to the corresponding input references `uSCALE` and `uV`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGEBAK` is called internally:

```
DGEBAK(sJOB, sRSIDE, N, ilo, ihi, uSCALE, M, uV, LDV, info);
```

where parameters of `DGEBAK` are set in the following way:

- Integer input `job` is mapped to the string `sJOB`: $\{0, 1\} \rightarrow "N"$, $\{2\} \rightarrow "P"$, $\{3\} \rightarrow "S"$ and $\{4\} \rightarrow "B"$.
- If `RSIDE = on` then the string `sRSIDE` is set to "R" else it is set to "L".
- `N` is number of elements of the vector referenced by `uSCALE`.
- If the input `ihi` $\neq 0$ then `IHI` is set to `ihi` else `IHI` is set to `N - 1`.
- `M` is number of columns of the matrix referenced by `uV`.
- `LDV` is the leading dimension of the matrix referenced by `uV`.
- `info` is return code from the function `DGEBAK`.

The error flag `E` is set to `on` if:

- the reference `uSCALE` or `uV` is not defined (i.e. input `uSCALE` or `uV` is not connected),
- the call of the function `DGEBAK` returns error using the function `XERBLA`, see the return code `info` and system log.

Emphasize that the indices `ilo` and `ihi` start from zero unlike FORTRAN version where they start from one. See LAPACK documentation [7] for more details.

Inputs

uSCALE	Input reference to vector SCALE	Reference
uV	Reference to matrix of right or left eigenvectors to be transformed	Reference
job	Type of backward transformation required $\downarrow 0 \uparrow 4 \odot 0.00E+00$	Long (I32)
RSIDE	Operation is applied from right side	Bool
ilo	Zero based low row and column index of working submatrix $\odot 0.00E+00$	Long (I32)
ihi	Zero based high row and column index of working submatrix $\odot 0.00E+00$	Long (I32)
HLD	Hold	Bool


Outputs

ySCALE	Output reference to vector SCALE	Reference
yV	Reference to matrix of transformed right or left eigenvectors	Reference
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i=th argument had an illegal value	Long (I32)

ML_DGEBAL – Balancing of a general real matrix

Block Symbol

Licence: [MATRIX](#)

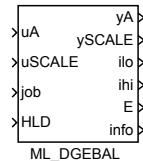

Function Description

The output references **yA** and **ySCALE** are always set to the corresponding input references **uA** and **uSCALE**. If **HLD** = **on** then nothing is computed otherwise the LAPACK function **DGEBAL** is called internally:

```
DGEBAL(sJOB, N, uA, LDA, ilo, ihi, uSCALE, info);
```

where parameters of **DGEBAL** are set in the following way:

- Integer input **job** is mapped to the string **sJOB**: {0, 1} → "N", {2} → "P", {3} → "S" and {4} → "B".
- **N** is number of columns of the square matrix referenced by **uA**.
- **LDA** is the leading dimension of the matrix referenced by **uA**.
- **ilo** and **ihi** are returned low and high row and column indices of the balanced submatrix of the matrix referenced by **uA**.
- **info** is return code from the function **DGEBAL**.

The error flag **E** is set to **on** if:

- the reference **uA** or **uSCALE** is not defined (i.e. input **uA** or **uSCALE** is not connected),
- matrix referenced by **uA** is not square,
- number of elements of the vector referenced by **uSCALE** is less than **N**.
- the call of the function **DGEBAL** returns error using the function **XERBLA**, see the return code **info** and system log.

Emphasize that the indices **ilo** and **ihi** start from zero unlike FORTRAN version where they start from one. See LAPACK documentation [7] for more details.

Inputs

uA	Input reference to matrix A	Reference
ySCALE	Input reference to vector SCALE	Reference
job	Specifies the operations to be performed on matrix A $\downarrow 0 \uparrow 4 \odot 0.00E+00$	Long (I32)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
ySCALE	Output reference to vector SCALE	Reference
ilo	Zero based low row and column index of working submatrix	Long (I32)
ihi	Zero based high row and column index of working submatrix	Long (I32)
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i-th argument had an illegal value	Long (I32)

ML_DGEBRD – Reduces a general real matrix to bidiagonal form by an orthogonal transformation

Block Symbol

Licence: **MATRIX**

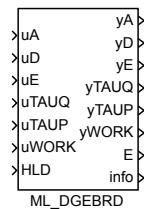

Function Description

The output references `yA`, `yD`, `yE`, `yTAUQ`, `yTAUP` and `yWORK` are always set to the corresponding input references `uA`, `uD`, `uE`, `uTAUQ`, `uTAUP` and `uWORK`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGEBRD` is called internally:

```
DGEBRD(M, N, uA, LDA, uD, uE, uTAUQ, uTAUP, uWORK, info);
```

where parameters of `DGEBRD` are set in the following way:

- `M` is number of rows of the matrix referenced by `uA`.
- `N` is number of columns of the matrix referenced by `uA`.
- `LDA` is the leading dimension of the matrix referenced by `uA`.
- `info` is return code from the function `DGEBRD`.

The error flag `E` is set to `on` if:

- the reference `uA` or `uD` or `uE` or `uTAUQ` or `uTAUP` or `uWORK` is not defined (i.e. input `uA` or `uD` or `uE` or `uTAUQ` or `uTAUP` or `uWORK` is not connected),
- number of elements of any vector referenced by `uD`, `uTAUQ` and `uTAUP` is less than `MINMN`, where `MINMN` is minimum from `M` and `N`,
- number of elements of the vector referenced by `uE` is less than `MINMN - 1`,
- the call of the function `DGEBRD` returns error using the function `XERBLA`, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

uA	Input reference to matrix A	Reference
uD	Diagonal elements of the bidiagonal matrix B	Reference
uE	Off-diagonal elements of the bidiagonal matrix B	Reference
uTAUQ	Reference to a vector of scalar factors of the elementary reflectors which represent the orthogonal matrix Q	Reference
uTAUP	Reference to a vector of scalar factors of the elementary reflectors which represent the orthogonal matrix P	Reference
uWORK	Input reference to working vector WORK	Reference
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yD	Output reference to D	Reference
yE	Output reference to E	Reference
yTAUQ	Output reference to TAUQ	Reference
yTAUP	Output reference to TAUP	Reference
yWORK	Output reference to working vector WORK	Reference
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i-th argument had an illegal value	Long (I32)

ML_DGECON – Estimates the reciprocal of the condition number of a general real matrix

Block Symbol

Licence: [MATRIX](#)

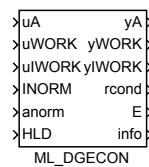

Function Description

The output references `yA`, `yWORK` and `yIWORK` are always set to the corresponding input references `uA`, `uWORK` and `uIWORK`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGECON` is called internally:

```
DGECON(sINORM, N, uA, LDA, anorm, rcond, uWORK, uIWORK, info);
```

where parameters of `DGECON` are set in the following way:

- If `INORM = on` then the string `sINORM` is set to "I" else it is set to "1".
- `N` is number of columns of the matrix referenced by `uA`.
- `LDA` is the leading dimension of the matrix referenced by `uA`.
- `rcond` is returned reciprocal value of the condition number of the matrix referenced by `uA`.
- `info` is return code from the function `DGECON`.

The error flag `E` is set to `on` if:

- the reference `uA` or `uWORK` or `uIWORK` is not defined (i.e. input `uA` or `uWORK` or `uIWORK` is not connected),
- the matrix referenced by `uA` is not square,
- number of elements of the vector referenced by `uWORK` is less than `4 * N`,
- number of elements of the integer vector referenced by `uIWORK` is less than `N`,
- the call of the function `DGECON` returns error using the function `XERBLA`, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uWORK</code>	Input reference to working vector WORK	Reference
<code>uIWORK</code>	Input reference to integer working vector WORK	Reference
<code>INORM</code>	Use Infinity-norm	Bool
<code>anorm</code>	Norm of the original matrix A	Double (F64)
<code>HLD</code>	Hold	Bool

Outputs

<code>yA</code>	Output reference to matrix A	Reference
<code>yWORK</code>	Output reference to working vector WORK	Reference
<code>yIWORK</code>	Output reference to integer working vector WORK	Reference
<code>rcond</code>	The reciprocal of the condition number of the matrix A	Double (F64)
<code>E</code>	Error indicator	Bool
<code>info</code>	LAPACK function result info. If <code>info = -i</code> , the <code>i</code> -th argument had an illegal value	Long (I32)

ML_DGEES – Computes the eigenvalues, the Schur form, and, optionally, the matrix of Schur vectors

Block Symbol

Licence: **MATRIX**

>uA	yA>
>uWR	yWR>
>uWI	yWI>
>uVS	yVS>
>uWORK	yWORK>
>uBWORK	yBWORK>
>JOBVS	sdim>
>SORT	E>
>HLD	info>
ML_DGEES	

Function Description

The output references yA, yWR, yWI, yVS, yWORK and yBWORK are always set to the corresponding input references uA, uWR, uWI, uVS, uWORK and uBWORK. If HLD = on then nothing is computed otherwise the LAPACK function DGEES is called internally:

```
DGEES(sJOBVS, sSORT, SELECT, N, uA, LDA, sdim, uWR, uWI, uVS, LDVS, uWORK,
      LWORK, uBWORK, info);
```

where parameters of DGEES are set in the following way:

- If JOBVS = on then the string sJOBVS is set to "V" else it is set to "N".
- If SORT = on then the string sSORT is set to "S" else it is set to "N".
- SELECT is the reference to Boolean eigenvalues sorting function which in this function block returns always true (i.e. on).
- N is number of columns of the matrix referenced by uA.
- LDA is the leading dimension of the matrix referenced by uA.
- sdim is returned number of eigenvalues for which the function SELECT is true.
- LDVS is the leading dimension of the matrix referenced by uVS.
- LWORK is number of elements in the vector referenced by uWORK.
- info is return code from the function DGEES.

The error flag E is set to on if:

- the reference uA or uWR or uWI or uVS or uWORK or uBWORK is not defined (i.e. input uA or uWR or uWI or uVS or uWORK or uBWORK is not connected),

- the matrix referenced by `uA` is not square,
- number of elements of any vector referenced by `uWR`, `uWI` and `uBWORK` is less than `N`,
- number of columns of the matrix referenced by `uVS` is not equal to `N`,
- the call of the function `DGEES` returns error using the function `XERBLA`, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uWR</code>	Input reference to vector of real parts of eigenvalues	Reference
<code>uWI</code>	Input reference to vector of imaginary parts of eigenvalues	Reference
<code>uVS</code>	Input reference to orthogonal matrix of Schur vectors	Reference
<code>uWORK</code>	Input reference to working vector WORK	Reference
<code>uBWORK</code>	Input reference to Boolean working vector WORK	Reference
<code>JOBVS</code>	If true then Schur vectors are computed	Bool
<code>SORT</code>	If true then eigenvalues are sorted	Bool
<code>HLD</code>	Hold	Bool

Outputs

<code>yA</code>	Output reference to matrix A	Reference
<code>yWR</code>	Output reference to vector of real parts of eigenvalues	Reference
<code>yWI</code>	Output reference to vector of imaginary parts of eigenvalues	Reference
<code>yVS</code>	Output reference to VS	Reference
<code>yWORK</code>	Output reference to working vector WORK	Reference
<code>yBWORK</code>	Output reference to Boolean working vector WORK	Reference
<code>sdim</code>	If SORT then number of eigenvalues for which SELECT is true else 0	Long (I32)
<code>E</code>	Error indicator	Bool
<code>info</code>	LAPACK function result info. If <code>info = -i</code> , the <code>i</code> -th argument had an illegal value	Long (I32)

ML_DGEEV – Computes the eigenvalues and, optionally, the left and/or right eigenvectors

Block Symbol

Licence: [MATRIX](#)



Function Description

The output references yA , yWR , yWI , yVL , yVR and $yWORK$ are always set to the corresponding input references uA , uWR , uWI , uVL , uVR and $uWORK$. If $HLD = \text{on}$ then nothing is computed otherwise the LAPACK function DGEEV is called internally:

```
DGEEV(sJOBVL, sJOBVR, N, uA, LDA, uWR, uWI, uVL, LDVL, uVR, LDVR,
      uWORK, LWORK, info);
```

where parameters of DGEEV are set in the following way:

- If $JOBVL = \text{on}$ then the string $sJOBVL$ is set to "V" else it is set to "N".
- If $JOBVR = \text{on}$ then the string $sJOBVR$ is set to "V" else it is set to "N".
- N is number of columns of the matrix referenced by uA .
- LDA , $LDVL$ and $LDVR$ are leading dimensions of the matrices referenced by uA , uVL and uVR .
- $LWORK$ is number of elements of the vector referenced by $uWORK$.
- info is return code from the function DGEEV.

The error flag E is set to on if:

- the reference uA or uWR or uWI or uVL or uVR or $uWORK$ is not defined (i.e. input uA or uWR or uWI or uVL or uVR or $uWORK$ is not connected),
- the matrix referenced by uA is not square,
- number of elements of vectors referenced by uWR or uWI is less than N ,
- number of columns of matrices referenced by uVL or uVR is not equal to N ,

- the call of the function DGEEV returns error using the function XERBLA, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uWR</code>	Input reference to vector of real parts of eigenvalues	Reference
<code>uWI</code>	Input reference to vector of imaginary parts of eigenvalues	Reference
<code>uVL</code>	Input reference to matrix of left eigenvectors	Reference
<code>uVR</code>	Input reference to matrix of right eigenvectors	Reference
<code>uWORK</code>	Input reference to working vector WORK	Reference
<code>JOBVL</code>	If true then left eigenvectors are computed	Bool
<code>JOBVR</code>	If true then right eigenvectors are computed	Bool
<code>HLD</code>	Hold	Bool


Outputs

<code>yA</code>	Output reference to matrix A	Reference
<code>yWR</code>	Output reference to vector of real parts of eigenvalues	Reference
<code>yWI</code>	Output reference to vector of imaginary parts of eigenvalues	Reference
<code>yVL</code>	Output reference to VL	Reference
<code>yVR</code>	Output reference to VR	Reference
<code>yWORK</code>	Output reference to working vector WORK	Reference
<code>E</code>	Error indicator	Bool
<code>info</code>	LAPACK function result info. If <code>info = -i</code> , the <code>i</code> =th argument had an illegal value	Long (I32)

ML_DGEHRD – Reduces a real general matrix A to upper Hessenberg form

Block Symbol

Licence: **MATRIX**

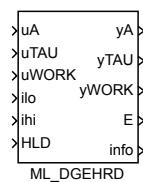

Function Description

The output references `yA`, `yTAU` and `yWORK` are always set to the corresponding input references `uA`, `uTAU` and `uWORK`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGEHRD` is called internally:

```
DGEHRD(N, ilo, ihi, uA, LDA, uTAU, uWORK, LWORK, info);
```

where parameters of `DGEHRD` are set in the following way:

- `N` is number of columns of the square matrix referenced by `uA`.
- If the input `ihi ≠ 0` then `IHI` is set to `ihi` else `IHI` is set to `N – 1`.
- `LDA` is the leading dimension of the matrix referenced by `uA`.
- `LWORK` is number of elements of the vector referenced by `uWORK`.
- `info` is return code from the function `DGEHRD`.

The error flag `E` is set to `on` if:

- the reference `uA` or `uTAU` or `uWORK` is not defined (i.e. input `uA` or `uTAU` or `uWORK` is not connected),
- matrix referenced by `uA` is not square,
- number of elements of the vector referenced by `uTAU` is less than `N – 1`.
- the call of the function `DGEHRD` returns error using the function `XERBLA`, see the return code `info` and system log.

Emphasize that the indices `ilo` and `ihi` start from zero unlike FORTRAN version where they start from one. See LAPACK documentation [7] for more details.

Inputs

uA	Input reference to matrix A	Reference
uTAU	Input reference to vector of scalar factors of the elementary reflectors	Reference
uWORK	Input reference to working vector WORK	Reference
ilo	Zero based low row and column index of working submatrix $\odot 0.00E+00$	Long (I32)
ihi	Zero based high row and column index of working submatrix $\odot 0.00E+00$	Long (I32)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yTAU	Output reference to vector of scalar factors of the elementary reflectors	Reference
yWORK	Output reference to working vector WORK	Reference
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i=th argument had an illegal value	Long (I32)

ML_DGELQF – Computes an LQ factorization of a real M-by-N matrix A

Block Symbol

Licence: [MATRIX](#)

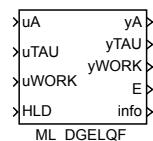

Function Description

The output references yA , $yTAU$ and $yWORK$ are always set to the corresponding input references uA , $uTAU$ and $uWORK$. If $HLD = \text{on}$ then nothing is computed otherwise the LAPACK function `DGELQF` is called internally:

```
DGELQF(M, N, uA, LDA, uTAU, uWORK, LWORK, info);
```

where parameters of `DGELQF` are set in the following way:

- M is number of rows of the matrix referenced by uA .
- N is number of columns of the matrix referenced by uA .
- LDA is the leading dimension of the matrix referenced by uA .
- $LWORK$ is number of elements of the vector referenced by $uWORK$.
- $info$ is return code from the function `DGELQF`.

The error flag E is set to `on` if:

- the reference uA or $uTAU$ or $uWORK$ is not defined (i.e. input uA or $uTAU$ or $uWORK$ is not connected),
- number of elements of the vector referenced by $uTAU$ is less than the minimum of number of rows and number of columns of the matrix referenced by uA .
- the call of the function `DGELQF` returns error using the function `XERBLA`, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

uA	Input reference to matrix A	Reference
----	-----------------------------	-----------

uTAU	Input reference to vector of scalar factors of the elementary reflectors	Reference
uWORK	Input reference to working vector WORK	Reference
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yTAU	Output reference to vector of scalar factors of the elementary reflectors	Reference
yWORK	Output reference to working vector WORK	Reference
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i=th argument had an illegal value	Long (I32)

ML_DGELSD – Computes the minimum-norm solution to a real linear least squares problem

Block Symbol

Licence: [MATRIX](#)

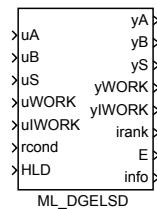

Function Description

The output references `yA`, `yB`, `yS`, `yWORK` and `yIWORK` are always set to the corresponding input references `uA`, `uB`, `uS`, `uWORK` and `uIWORK`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGELSD` is called internally:

```
DGELSD(M, N, NRHS, uA, LDA, uB, LDB, uS, rcond, irank, uWORK,
       LWORK, uIWORK, info);
```

where parameters of `DGELSD` are set in the following way:

- `M` is number of rows of the matrix referenced by `uA`.
- `N` is number of columns of the matrix referenced by `uA`.
- `NRHS` is number of columns of the matrix referenced by `uB`.
- `LDA` and `LDB` are leading dimensions of the matrices referenced by `uA` and `uB`.
- `irank` is returned effective rank of the matrix referenced by `uA`.
- `LWORK` is number of elements in the vector referenced by `uWORK`.
- `info` is return code from the function `DGELSD`.

The error flag `E` is set to `on` if:

- the reference `uA` or `uB` or `uS` or `uWORK` or `uIWORK` is not defined (i.e. input `uA` or `uB` or `uS` or `uWORK` or `uIWORK` is not connected),
- the number of rows of the matrix referenced by `uB` is not equal to `M`,
- number of elements of any vector referenced by `uS` is less than the minimum of `M` and `N`,

- number of elements of the integer vector referenced by `uIWORK` is not sufficient (see details in the LAPACK documentation of the function `DGELSD`),
- the call of the function `DGELSD` returns error using the function `XERBLA`, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uB</code>	Input reference to matrix B	Reference
<code>uS</code>	Input reference to vector of singular values	Reference
<code>uWORK</code>	Input reference to working vector WORK	Reference
<code>uIWORK</code>	Input reference to integer working vector WORK	Reference
<code>rcond</code>	Used to determine the effective rank of A	⌚0.0 Double (F64)
<code>HLD</code>	Hold	Bool


Outputs

<code>yA</code>	Output reference to matrix A	Reference
<code>yB</code>	Output reference to matrix B	Reference
<code>yS</code>	Output reference to vector of singular values	Reference
<code>yWORK</code>	Output reference to working vector WORK	Reference
<code>yIWORK</code>	Output reference to integer working vector WORK	Reference
<code>irank</code>	Effective rank of A	Long (I32)
<code>E</code>	Error indicator	Bool
<code>info</code>	LAPACK function result info. If <code>info = -i</code> , the <code>i</code> =th argument had an illegal value	Long (I32)

ML_DGEQRF – Computes an QR factorization of a real M-by-N matrix A

Block Symbol

Licence: [MATRIX](#)

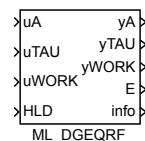

Function Description

The output references `yA`, `yTAU` and `yWORK` are always set to the corresponding input references `uA`, `uTAU` and `uWORK`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGEQRF` is called internally:

```
DGEQRF(M, N, uA, LDA, uTAU, uWORK, LWORK, info);
```

where parameters of `DGEQRF` are set in the following way:

- `M` is number of rows of the matrix referenced by `uA`.
- `N` is number of columns of the matrix referenced by `uA`.
- `LDA` is the leading dimension of the matrix referenced by `uA`.
- `LWORK` is number of elements of the vector referenced by `uWORK`.
- `info` is return code from the function `DGEQRF`.

The error flag `E` is set to `on` if:

- the reference `uA` or `uTAU` or `uWORK` is not defined (i.e. input `uA` or `uTAU` or `uWORK` is not connected),
- number of elements of the vector referenced by `uTAU` is less than the minimum of number of rows and number of columns of the matrix referenced by `uA`.
- the call of the function `DGEQRF` returns error using the function `XERBLA`, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

uA	Input reference to matrix A	Reference
----	-----------------------------	-----------

uTAU	Input reference to vector of scalar factors of the elementary reflectors	Reference
uWORK	Input reference to working vector WORK	Reference
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yTAU	Output reference to vector of scalar factors of the elementary reflectors	Reference
yWORK	Output reference to working vector WORK	Reference
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i=th argument had an illegal value	Long (I32)

ML_DGESDD – Computes the singular value decomposition (SVD) of a real M-by-N matrix A

Block Symbol

Licence: [MATRIX](#)

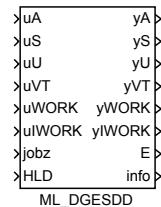

Function Description

The output references `yA`, `yS`, `yU`, `yVT`, `yWORK` and `yIWORK` are always set to the corresponding input references `uA`, `uS`, `uU`, `uVT`, `uWORK` and `uIWORK`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DGESDD` is called internally:

```
DGESDD(sJOBZ, M, N, uA, LDA, uS, uU, LDU, uVT, LDVT, uWORK, LWORK,
       uIWORK, info);
```

where parameters of `DGESDD` are set in the following way:

- Integer input `jobz` is mapped to the string `sJOBZ`: $\{0, 1\} \rightarrow "A"$, $\{2\} \rightarrow "S"$, $\{3\} \rightarrow "O"$ and $\{4\} \rightarrow "N"$.
- `M` is number of rows of the matrix referenced by `uA`.
- `N` is number of columns of the matrix referenced by `uA`.
- `LDA`, `LDU` and `LDVT` are leading dimensions of the matrices referenced by `uA`, `uU` and `uVT`.
- `LWORK` is number of elements of the vector referenced by `uWORK`.
- `info` is return code from the function `DGESDD`.

The error flag `E` is set to `on` if:

- the reference `uA` or `uS` or `uU` or `uVT` or `uWORK` or `uIWORK` is not defined (i.e. input `uA` or `uS` or `uU` or `uVT` or `uWORK` or `uIWORK` is not connected),
- number of elements of the vector referenced by `uS` is less than `MINMN`, the minimum of number of rows and number of columns of the matrix referenced by `uA`,
- number of elements of the integer vector referenced by `uIWORK` is less than $8 * \text{MINMN}$,

- the call of the function DGESDD returns error using the function XERBLA, see the return code `info` and system log.

See LAPACK documentation [7] for more details.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uS</code>	Input reference to vector of singular values	Reference
<code>uU</code>	Input reference to matrix containing left singular vectors of A	Reference
<code>uVT</code>	Input reference to matrix containing right singular vectors of A	Reference
<code>uWORK</code>	Input reference to working vector WORK	Reference
<code>uIWORK</code>	Input reference to integer working vector WORK	Reference
<code>jobz</code>	Specifies options for computing	$\odot 0.00E+00$ Long (I32)
<code>HLD</code>	Hold	Bool


Outputs

<code>yA</code>	Output reference to matrix A	Reference
<code>yS</code>	Output reference to vector of singular values	Reference
<code>yU</code>	Output reference to matrix containing left singular vectors of A	Reference
<code>yVT</code>	Output reference to matrix containing right singular vectors of A	Reference
<code>yWORK</code>	Output reference to working vector WORK	Reference
<code>yIWORK</code>	Output reference to integer working vector WORK	Reference
<code>E</code>	Error indicator	Bool
<code>info</code>	LAPACK function result info. If <code>info = -i</code> , the <code>i</code> =th argument had an illegal value	Long (I32)

ML_DLACPY – Copies all or part of one matrix to another matrix

Block Symbol

Licence: STANDARD



Function Description

The output references y_A and y_B are always set to the corresponding input references u_A and u_B . If $HLD = \text{on}$ then nothing is computed otherwise the LAPACK function `DLACPY` is called internally:

```
DLACPY(sUPLO, M, N, uA, LDA, uB, LDA);
```

where parameters of `DLACPY` are set in the following way:

- Integer input `uplo` is mapped to the string `sUPLO`: $\{0, 1\} \rightarrow "A"$, $\{2\} \rightarrow "U"$ and $\{3\} \rightarrow "L"$.
- M is number of rows of the matrix referenced by u_A .
- N is number of columns of the matrix referenced by u_A .
- LDA is the leading dimension of the matrix referenced by u_A .

The number of rows of the matrix referenced by u_B is set to M and the leading dimension of the matrix referenced by u_B is set to LDA

The error flag E is set to `on` if:

- the reference u_A or u_B is not defined (i.e. input u_A or u_B is not connected),
- the allocated number of elements of the matrix referenced by u_A is different from the allocated number of elements of the matrix referenced by u_B .

See LAPACK documentation [7] for more details.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uB</code>	Input reference to matrix B	Reference
<code>uplo</code>	Part of the matrix to be copied 0 All 1 All 2 Upper 3 Lower	$\odot 0.00E+00$ Long (I32)
<code>HLD</code>	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference
E	Error indicator	Bool

ML_DLANGE – Computes one of the matrix norms of a general matrix

Block Symbol

Licence: STANDARD



Function Description

The output references yA and $yWORK$ are always set to the corresponding input references uA and $uWORK$. If $HLD = \text{on}$ then nothing is computed otherwise the LAPACK function $DLANGE$ is called internally:

```
value = DLANGE(sNORM, M, N, uA, LDA, uWORK);
```

where parameters of $DLACPY$ are set in the following way:

- Integer input norm is mapped to the string $sNORM$: $\{0, 1\} \rightarrow "F"$ (Frobenius norm), $\{2\} \rightarrow "M"$ ($\max(\text{abs}(A(i, j)))$), $\{3\} \rightarrow "1"$ (one norm) and $\{4\} \rightarrow "\infty"$ (infinity norm).
- M is number of rows of the matrix referenced by uA .
- N is number of columns of the matrix referenced by uA .
- LDA is the leading dimension of the matrix referenced by uA .
- $uWORK$ is the working vector of dimension $LWORK \geq M$. $uWORK$ is used only for infinity norm, otherwise it is not referenced.

The error flag E is set to on if:

- the reference uA is not defined (i.e. input uA is not connected),
- the reference $uWORK$ is not defined for $\text{norm} = 4$ (i.e. input $uWORK$ is not connected).

See LAPACK documentation [7] for more details.

Use the block [MB_DNRM2](#) for computation of Frobenius norm of a vector.

Inputs

			Reference
uA	Input reference to matrix A		Reference
$uWORK$	Input reference to working vector WORK		Reference
norm	The selected matrix norm	$\downarrow 0 \uparrow 4 \odot 0.00E+00$	Long (I32)
HLD	Hold		Bool


Outputs

yA	Output reference to matrix A	Reference
yWORK	Output reference to working vector WORK	Reference
value	Return value of the function	Double (F64)
E	Error indicator	Bool

ML_DLASET – Initializes the off-diagonal elements and the diagonal elements of a matrix to given values

Block Symbol

Licence: STANDARD



Function Description

The output reference `yA` is always set to the corresponding input references `uA`. If `HLD = on` then nothing is computed otherwise the LAPACK function `DLASET` is called internally:

`DLASET(sUPLO, M, N, alpha, beta, uA, LDA);`

where parameters of `DLACPY` are set in the following way:

- Integer input `uplo` is mapped to the string `sUPLO`: $\{0, 1\} \rightarrow "A"$, $\{2\} \rightarrow "U"$ and $\{3\} \rightarrow "L"$.
- `M` is number of rows of the matrix referenced by `uA`.
- `N` is number of columns of the matrix referenced by `uA`.
- `LDA` is the leading dimension of the matrix referenced by `uA`.

The error flag `E` is set to `on` if:

- the reference `uA` is not defined (i.e. input `uA` is not connected),

See LAPACK documentation [7] for more details.

Inputs

			Reference
<code>uA</code>	Input reference to matrix A		
<code>uplo</code>	Part of the matrix to be set 0 All 1 All 2 Upper 3 Lower	$\odot 0.00E+00$	Long (I32)
<code>alpha</code>	Scalar coefficient alpha	$\odot 0.0$	Double (F64)
<code>beta</code>	Scalar coefficient beta	$\odot 0.0$	Double (F64)
<code>HLD</code>	Hold		Bool


Outputs

yA	Output reference to matrix A	Reference
E	Error indicator	Bool

ML_DTRSYL – Solves the real Sylvester matrix equation for quasi-triangular matrices A and B

Block Symbol

Licence: [MATRIX](#)



Function Description

The output references yA , yB and yC are always set to the corresponding input references uA , uB and uC . If $HLD = \text{on}$ then nothing is computed otherwise the LAPACK function $DTRSYL$ is called internally:

```
DTRSYL(sTRANA, sTRANB, M, N, uA, LDA, uB, LDB, uC, LDC, scale, info);
```

where parameters of $DTRSYL$ are set in the following way:

- Integer inputs trana and tranb are mapped to strings $sTRANA$ and $sTRANB$: $\{0, 1\} \rightarrow "N"$, $\{2\} \rightarrow "T"$ and $\{3\} \rightarrow "C"$.
- M is number of rows of the matrix referenced by uA .
- N is number of columns of the matrix referenced by uB .
- LDA , LDB and LDC are leading dimensions of matrices referenced by uA , uB and uC .
- scale is returned scaling factor to avoid overflow.
- info is return code from the function $DTRSYL$.

The error flag E is set to **on** if:

- the reference uA or uB or uC is not defined (i.e. input uA or uB or uC is not connected),
- trana or tranb is less than 0 or greater than 3
- number of columns of the matrix referenced by uA is not equal to M
- number of rows of the matrix referenced by uB is not equal to N
- number of rows of the matrix referenced by uC is not equal to N or number of columns of this matrix is not equal to M ,

- the call of the function DTRSYL returns error using the function XERBLA, see the system log.

See LAPACK documentation [7] for more details.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference
uC	Input reference to matrix C	Reference
trana	Transposition of matrix A	$\downarrow 0 \uparrow 3 \odot 0.00E+00$ Long (I32)
tranb	Transposition of matrix B	$\downarrow 0 \uparrow 3 \odot 0.00E+00$ Long (I32)
isgn	Sign in the equation (1 or -1)	$\downarrow -1 \uparrow 1 \odot 0.00E+00$ Long (I32)
HLD	Hold	Bool

Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference
yC	Output reference to matrix C	Reference
scale	Scale	Double (F64)
E	Error indicator	Bool
info	LAPACK function result info. If info = -i, the i-th argument had an illegal value	Long (I32)

MX_AT – Get Matrix/Vector element

Block Symbol

Licence: STANDARD



Function Description

The function block MX_AT returns the value (output **value**) of the matrix element at the **i**-th row and **j**-th column or the **i**-th vector element.

The output reference **yMV** is always set to the corresponding input reference **uMV** to the connected matrix/vector.

The error flag **E** is set to **on** if:

- the reference **uMV** is not defined (i.e. input **uMV** is not connected),
 - the zero based row index $i < 0$ or $i \geq m$, where **m** is the number of rows,
 - the zero based column index $j < 0$ or $j \geq n$, where **n** is the number of columns.
- Note that **j** must be 0 for a vector.

Inputs

uMV	Input reference to a matrix or vector	Reference
i	Row index of the element	$\downarrow 0 \odot 0.00E+00$ Long (I32)
j	Column index of the element	$\downarrow 0 \odot 0.00E+00$ Long (I32)


Outputs

yMV	Output reference to a matrix or vector	Reference
value	Value of element at position (i,j)	Long (I32)
E	Error indicator	Bool

MX_ATSET – Set Matrix/Vector element

Block Symbol

Licence: STANDARD



Function Description

The function block MX_ATSET sets the value (input **value**) to the matrix element at the **i**-th row and **j**-th column or to the **i**-th vector element.

The output reference **yMV** is always set to the corresponding input reference **uMV** to the connected matrix/vector.

The error flag **E** is set to **on** if:

- the reference **uMV** is not defined (i.e. input **uMV** is not connected),
- the zero based row index $i < 0$ or $i \geq m$, where **m** is the number of rows,
- the zero based column index $j < 0$ or $j \geq n$, where **n** is the number of columns.
Note that **j** must be 0 for a vector.

Inputs

uMV	Input reference to a matrix or vector	Reference
i	Row index of the element	$\downarrow 0 \odot 0.00E+00$ Long (I32)
j	Column index of the element	$\downarrow 0 \odot 0.00E+00$ Long (I32)
value	Value which should be set to the element at position (i,j)	Long (I32)


Outputs

yMV	Output reference to a matrix or vector	Reference
E	Error indicator	Bool

MX_CNADD – Add scalar to each Matrix/Vector element

Block Symbol

Licence: STANDARD



Function Description

The function block MX_CNADD adds the value of the input **alpha** to each matrix/vector element referenced by **uAX** and the result is stored to the matrix/vector referenced by **uBY**. If **HLD** = **on** then nothing is computed.

The output references **yAX** and **yBY** are always set to the corresponding input references **uAX** and **uBY**. The dimensions of the matrix/vector referenced by **uBY** are set to the dimensions of the matrix/vector referenced by **uAX** if they are different.

The error flag **E** is set to **on** if:

- the reference **uAX** of **uBY** is not defined (i.e. input **uAX** or **uBY** is not connected),
- the count of allocated elements of the matrix/vector referenced by **uAX** is different from the count of allocated elements of the matrix/vector referenced by **uBY**.

Inputs

uAX	Input reference to the matrix A or vector X	Reference
uBY	Input reference to the matrix B or vector Y	Reference
alpha	Scalar coefficient alpha	Double (F64)
HLD	Hold	Bool


Outputs

yAX	Output reference to the matrix A or vector X	Reference
yBY	Output reference to the matrix B or vector Y	Reference
E	Error indicator	Bool

MX_CNMUL – Multiply a Matrix/Vector by a scalar

Block Symbol

Licence: STANDARD



Function Description

The function block MX_CNMUL multiplies each matrix/vector element referenced by **uAX** by the value of the input **alpha** and the result is stored to the matrix/vector referenced by **uBY**. If **HLD = on** then nothing is computed.

The output references **yAX** and **yBY** are always set to the corresponding input references **uAX** and **uBY**. The dimensions of the matrix/vector referenced by **uBY** are set to the dimensions of the matrix/vector referenced by **uAX** if they are different.

The error flag **E** is set to **on** if:

- the reference **uAX** or **uBY** is not defined (i.e. input **uAX** or **uBY** is not connected),
- the count of allocated elements of the matrix/vector referenced by **uAX** is different from the count of allocated elements of the matrix/vector referenced by **uBY**.

Inputs

uAX	Input reference to the matrix A or vector X	Reference
uBY	Input reference to the matrix B or vector Y	Reference
alpha	Scalar coefficient alpha	Double (F64)
HLD	Hold	Bool


Outputs

yAX	Output reference to the matrix A or vector X	Reference
yBY	Output reference to the matrix B or vector Y	Reference
E	Error indicator	Bool

MX_CTDOPA – Discretizes continuous model given by (A,B) to (Ad,Bd) using Pade approximations

Block Symbol

Licence: STANDARD



Function Description

This function block discretizes a continuous state space model using Padé approximations of matrix exponential and its integral and scaling technique ([5]). The used technique is similar to method 3 Scaling and squaring described in [8].

The output references y_A , y_B , y_{Ad} , y_{Bd} , y_P , y_Q and y_R are always set to the corresponding input references u_A , u_B , u_{Ad} , u_{Bd} , u_P , u_Q and u_R . If $HLD = \text{on}$ then nothing is computed otherwise the function `mCtoD` is called internally:

`mCtoD(nRes, uAd, uBd, uA, uB, N, M, is, Ts, eps, uP, uQ, uR);`

where parameters of `mCtoD` are set in the following way:

- `nRes` is return code from the function `mCtoD`.
- `N` is number of rows of the square system matrix referenced by `uA`.
- `M` is number of columns of the input matrix referenced by `uB`.
- `Ts` is sampling period for the discretization, which is equal to sampling period of the task containing this function block.

The error flag `E` is set to `on` if:

- the reference `uA` or `uB` or `uAd` or `uBd` or `uP` or `uQ` or `uR` is not defined (i.e. input `uA` or `uB` or `uAd` or `uBd` or `uP` or `uQ` or `uR` is not connected),
- number of columns of the matrix referenced by `uA` is not equal to `N`,
- number of rows of the matrix referenced by `uB` is not equal to `N`,
- number of elements of any matrix referenced by `uAd`, `uP`, `uQ` or `uR` is less than `N * N`,
- number of elements of the matrix referenced by `uBd` is less than `N * M`,

- the return code `nRes` of the function `mCtoD` is not equal to zero.

Inputs

<code>uA</code>	Input reference to matrix A	Reference
<code>uB</code>	Input reference to matrix B	Reference
<code>uAd</code>	Input reference to discretized matrix A	Reference
<code>uBd</code>	Input reference to discretized matrix B	Reference
<code>uP</code>	Input reference to a helper matrix	Reference
<code>uQ</code>	Input reference to a helper matrix	Reference
<code>uR</code>	Input reference to a helper matrix	Reference
<code>HLD</code>	Hold	Bool

Parameters

<code>is</code>	Pade approximation order	$\downarrow 0 \uparrow 4 \odot 2.00E+00$	Long (I32)
<code>eps</code>	Approximation accuracy	$\downarrow 1e-20 \uparrow 0.001 \odot 1e-15$	Double (F64)


Outputs

<code>yA</code>	Output reference to matrix A	Reference
<code>yB</code>	Output reference to matrix B	Reference
<code>yAd</code>	Output reference to discretized matrix A	Reference
<code>yBd</code>	Output reference to discretized matrix B	Reference
<code>yP</code>	Output reference to a helper matrix	Reference
<code>yQ</code>	Output reference to a helper matrix	Reference
<code>yR</code>	Output reference to a helper matrix	Reference
<code>E</code>	Error indicator	Bool

MX_DIM – Matrix/Vector dimensions

Block Symbol

Licence: STANDARD



Function Description

The function block **MX_DIM** sets its outputs to the dimensions of the matrix or vector referenced by **uMV**.

The output reference **yMV** is always set to the corresponding input reference **uMV**. The error flag **E** is set to **on** if the reference **uMV** is not defined (i.e. input **uMV** is not connected).

Input

uMV	Input reference to a matrix or vector	Reference
------------	---------------------------------------	-----------


Outputs

yMV	Output reference to a matrix or vector	Reference
m	Number of matrix rows	Long (I32)
n	Number of matrix columns	Long (I32)
ld	Leading dimension (\geq number of rows)	Long (I32)
cnt	Count of used matrix/vector elements	Long (I32)

MX_DIMSET – Set Matrix/Vector dimensions

Block Symbol

Licence: STANDARD



Function Description

The function block MX_DIMSET sets number rows **m** of the vector or number of rows **m**, number of columns **n** and the leading dimension **ld** of the matrix referenced by **uMV**. If any of the inputs **m**, **n**, **ld** is not connected, its original value is retained.

The output **cnt** contains the actual number of occupied elements of the matrix/vector and is determined by the formula

$$\text{cnt} = \text{ld} * (\text{n} - 1) + \text{m} \leq \text{amax} ,$$

where the output **amax** is the allocated count of matrix/vector elements. If this inequality is fulfilled the output **cnt** is set to the matrix/vector structure and can be retrieved by the MX_DIM block, otherwise the value of **cnt** shows the minimum necessary number of elements of the matrix/vector.

The output reference **yMV** is always set to the corresponding input reference **uMV**. The error flag **E** is set to **on** if:

- the reference **uMV** is not defined (i.e. input **uMV** is not connected),
- the number of rows **m** < 1 or **m** > **ld**,
- the number of columns **n** < 1,
- the required number of elements **cnt** > **amax**.

Inputs

uMV	Input reference to a matrix or vector	Reference
m	Number of matrix rows	Long (I32)
ld	Leading dimension (>= number of rows)	Long (I32)

Outputs


yMV	Output reference to a matrix or vector	Reference
cnt	Count of used matrix/vector elements	Long (I32)
amax	Number of allocated matrix/vector elements	Long (I32)

E	Error indicator	Bool
---	-----------------	------

MX_DSAGET – Set subarray of A into B

Block Symbol

Licence: STANDARD



Function Description

Generally, the function block MX_DSAGET copies the subarray (submatrix) of matrix referenced by **uA** into the matrix referenced by **uB**.

The output references **yA** and **yB** are always set to the corresponding input references **uA** and **uB**. If **HLD = on** then nothing is copied otherwise the submatrix of matrix referenced by **uA** starting the row with zero based index **I** and the column with zero based index **J** containing **M** rows and **N** columns is copied (with respect to the value of the input **uplo**) to the matrix referenced by **uB**. The mentioned variables have the following meanings:

- If the input **i** ≤ 0 then **I** is set to 0 else if **i** $\geq MA$ then **I** is set to **MA** – 1 else **I** is set to **i**, where **MA** is the number of rows of the matrix referenced by **uA**.
- If the input **j** ≤ 0 then **J** is set to 0 else if **j** $\geq NA$ then **J** is set to **NA** – 1 else **J** is set to **j**, where **NA** is the number of columns of the matrix referenced by **uA**.
- Number of copied rows **M** is set in two stages. First, **M** is set to minimum of **MA** – **I** and number of rows of the matrix referenced by **uB**. Second, if **m** > 0 then **M** is set to the minimum of **m** and **M**.
- Number of copied columns **N** is set in two stages. First, **N** is set to minimum of **NA** – **J** and number of columns of the matrix referenced by **uB**. Second, if **n** > 0 then **N** is set to the minimum of **n** and **N**.

The error flag **E** is set to **on** if:

- the reference **uA** or **uB** is not defined (i.e. input **uA** or **uB** is not connected),
- **uplo** is less than 0 or greater than 3,
- the number of elements of the matrix referenced by **uB** is less than **M * N**.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference
uplo	Part of the matrix to be copied 0 All 2 Upper 1 All 3 Lower	⊖0.00E+00 Long (I32)
i	Index of the subarray first row	⊖0.00E+00 Long (I32)
j	Index of the subarray first column	⊖0.00E+00 Long (I32)
m	Number of matrix rows	⊖0.00E+00 Long (I32)
n	Number of matrix columns	⊖0.00E+00 Long (I32)
HLD	Hold	Bool

Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference
E	Error indicator	Bool

MX_DSAREF – Set reference to subarray of A into B

Block Symbol

Licence: STANDARD



Function Description

The function block MX_DSAREF creates a reference y_B to the subarray (submatrix) of matrix referenced by u_A . This operation is very fast because no matrix element is copied.

The output reference y_B is always set to the corresponding input reference u_A , the output reference y_B is created inside each instance of this function block. If $HLD = \text{on}$ then no other operation is performed otherwise the reference to the matrix y_B is created with the following properties:

- Number of rows of the submatrix is set to $M - i$, where M is number of rows of the matrix referenced by u_A .
- Number of columns of the submatrix is set to $N - j$, where N is number of columns of the matrix referenced by u_A .
- The first element in position $(0, 0)$ of the submatrix is the element of the matrix referenced by u_A in position (i, j) , all indices are zero based.
- The matrix referenced by y_B has the same leading dimension as the matrix referenced by u_A .

The error flag E is set to **on** if:

- the reference u_A is not defined (i.e. input u_A is not connected),
- $0 > i \geq M$,
- $0 > j \geq N$.

Inputs

			Reference
u_A	Input reference to matrix A		
i	Index of the subarray first row	$\odot 0.00E+00$	Long (I32)
j	Index of the subarray first column	$\odot 0.00E+00$	Long (I32)
HLD	Hold		Bool

Parameter

<code>ay</code>	Output reference of the subarray	$\odot[0 \ 0]$	Double (F64)
-----------------	----------------------------------	----------------	--------------


Outputs

<code>yA</code>	Output reference to matrix A	<code>Reference</code>
<code>yB</code>	Output reference to matrix B	<code>Reference</code>
<code>E</code>	Error indicator	<code>Bool</code>

MX_DSASET – Set A into subarray of B

Block Symbol

Licence: STANDARD



Function Description

Generally, the function block MX_DSASET copies the matrix referenced by uA into the subarray (submatrix) of the matrix referenced by uB .

The output references yA and yB are always set to the corresponding input references uA and uB . If $HLD = \text{on}$ then nothing is copied otherwise the matrix referenced by uA is copied (with respect to the value of the input $uplo$) to the submatrix of the matrix referenced by uB to the row with zero based index I and the column with zero based index J containing M rows and N columns. The mentioned variables have the following meanings:

- If the input $i \leq 0$ then I is set to 0 else if $i \geq MB$ then I is set to $MB - 1$ else I is set to i , where MB is the number of rows of the matrix referenced by uB .
- If the input $j \leq 0$ then J is set to 0 else if $j \geq NB$ then J is set to $NB - 1$ else J is set to j , where NB is the number of columns of the matrix referenced by uB .
- Number of copied rows M is set in two stages. First, M is set to minimum of $MB - I$ and number of rows of the matrix referenced by uA . Second, if $m > 0$ then M is set to the minimum of m and M .
- Number of copied columns N is set in two stages. First, N is set to minimum of $NB - J$ and number of columns of the matrix referenced by uA . Second, if $n > 0$ then N is set to the minimum of n and N .

The error flag E is set to **on** if:

- the reference uA or uB is not defined (i.e. input uA or uB is not connected),
- $uplo$ is less than 0 or greater than 3,
- the number of elements of the matrix referenced by uB is less than $M * N$.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference
uplo	Part of the matrix to be copied 0 All 2 Upper 1 All 3 Lower	⊖0.00E+00 Long (I32)
i	Index of the subarray first row	⊖0.00E+00 Long (I32)
j	Index of the subarray first column	⊖0.00E+00 Long (I32)
m	Number of matrix rows	⊖0.00E+00 Long (I32)
n	Number of matrix columns	⊖0.00E+00 Long (I32)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference
E	Error indicator	Bool

MX_DTRNSP – General matrix transposition: $B := \text{alpha}^* A^T$

Block Symbol

Licence: STANDARD



Function Description

The function block MX_DTRNSP stores the scalar multiple of the general (i.e. rectangular) matrix referenced by uA into the matrix referenced by uB.

The output references yA and yB are always set to the corresponding input references uA and uB. If HLD = on then nothing else is done otherwise the BLAS-like function X_DTRNSP is called internally:

```
X_DTRNSP(M, N, ALPHA, uA, LDA, uB, LDB);
```

where parameters of X_DTRNSP are set in the following way:

- M is number of rows of the matrix referenced by uA.
- N is number of columns of the matrix referenced by uA.
- If the input alpha is equal to 0 then ALPHA is set to 1 else ALPHA is set to alpha.
- LDA and LDB are leading dimensions of matrices referenced by uA and uB.

The error flag E is set to on if:

- the reference uA or uB is not defined (i.e. input uA or uB is not connected),
- the call of the function X_DTRNSP returns error using the function XERBLA, see the system log.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference
alpha	Scalar coefficient alpha	⊖0.0 Double (F64)
HLD	Hold	Bool

Outputs

yA	Output reference to matrix A	Reference
----	------------------------------	-----------


426 CHAPTER 14. MATRIX – BLOCKS FOR MATRIX AND VECTOR OPERATIONS

yB	Output reference to matrix B	Reference
E	Error indicator	Bool

MX_DTRNSQ – Square matrix in-place transposition: $A := \text{alpha}^* A^T$

Block Symbol

Licence: STANDARD



Function Description

The function block MX_DTRNSQ transpose the scalar multiple of the square matrix referenced by uA in-place.

The output reference yA is always set to the corresponding input references uA . If $HLD = \text{on}$ then nothing else is done otherwise the BLAS-like function X_DTRNSQ is called internally:

`X_DTRNSQ(N, ALPHA, uA, LDA);`

where parameters of X_DTRNSQ are set in the following way:

- N is number of rows and columns of the matrix referenced by uA .
- If the input alpha is equal to 0 then ALPHA is set to 1 else ALPHA is set to alpha .
- LDA is the leading dimension of the matrix referenced by uA .

The error flag E is set to **on** if:

- the reference uA is not defined (i.e. input uA is not connected),
- the matrix referenced by uA is not square,
- the call of the function X_DTRNSQ returns error using the function XERBLA, see the system log.

Inputs

uA	Input reference to matrix A	Reference
alpha	Scalar coefficient alpha	⊖ 0.0 Double (F64)
HLD	Hold	Bool


Outputs

yA	Output reference to matrix A	Reference
E	Error indicator	Bool

MX_FILL – Fill real matrix or vector

Block Symbol

Licence: STANDARD



Function Description

The function block **MX_FILL** fills elements of the matrix or vector referenced by **uMV** according to the input **mode**.

The output reference **yMV** is always set to the corresponding input references **uMV**. If **HLD = on** then nothing else is done.

The error flag **E** is set to **on** if:

- the reference **uMV** is not defined (i.e. input **uMV** is not connected),
- $0 > \text{mode} > 4$.

Inputs

uMV	Input reference to a matrix or vector	Reference
value	Fill value of matrix/vector	$\odot 0.0$ Double (F64)
mode	Fill mode	$\odot 0.00E+00$ Long (I32)
	0,1 ... Value – All elements are set to value	
	2 Ones – All elements are set to 1	
	3 Diagonal value – Diagonal is set to value , the other elements to 0	
	4 Diagonal ones – Initializes identity matrix (eye)	
HLD	Hold	Bool

Outputs

yMV	Output reference to a matrix or vector	Reference
E	Error indicator	Bool

MX_MAT – Matrix data storage block

Block Symbol

Licence: STANDARD



Function Description

The function block MX_MAT allocates memory (during the block initialization) for $m * n$ elements of the type determined by the parameter **etype** of the matrix referenced by the output **yMat**. Also matrix leading dimension can be set by the parameter **ld**. If $ld < m$ then the leading dimension is set to m .

Note that the present version of the MATRIX function block set supports only matrices with the **etype** equal to 8: Double.

Parameters

m	Number of matrix rows	$\downarrow 1 \uparrow 10000000000 \odot 1.00E+01$	Long (I32)
n	Number of matrix columns	$\downarrow 1 \uparrow 10000000000 \odot 1.00E+01$	Long (I32)
ld	Leading dimension (\geq number of rows)	$\downarrow 0 \uparrow 10000000000 \odot 0.00E+00$	Long (I32)
etype	Type of elements	$\odot 8.00E+00$	Long (I32)
	1 Bool	6 DWord (U32)	
	2 Byte (U8)	7 Float (F32)	
	3 Short (I16)	8 Double (F64)	
	4 Long (I32)	--	
	5 Word (U16)	10 Large (I64)	


Output

yMat	Output reference to a matrix	Reference
-------------	------------------------------	-----------

MX_RAND – Randomly generated matrix or vector

Block Symbol

Licence: STANDARD



Function Description

The function block MX_RAND generates random elements of the matrix or vector referenced by uMV.

The output reference yMV is always set to the corresponding input references uMV. If HLD = on then nothing is generated otherwise pseudo-random values of the matrix or vector elements referenced by uMV are generated using these rules:

- If the parameter BIP is on then the generated elements are inside the interval [–scale; scale] else they are inside the interval [0; scale].
- Elements are internally generated using the standard C language function `rand()` which generates pseudo-random numbers in the range from 0 to `RAND_MAX`. Note, that the value of `RAND_MAX` can be platform dependent (and it should be at least 32767).
- The rising edge on the input SET causes that the standard C language function `srand(nseed)` (initializes the pseudo-random generator with the value of nseed) is called before the generation of random elements. The same sequences of pseudo-random numbers are generated after calls of `srand(nseed)` for the same values of nseed.

The error flag E is set to on if the reference uMV is not defined (i.e. input uMV is not connected).

Inputs

			Reference
uMV	Input reference to a matrix or vector		
nseed	Random number seed	⊕0.00E+00	Long (I32)
SET	Set initial value of random number generator to nseed on rising edge		Bool
HLD	Hold		Bool

Parameters

BIP	Bipolar random values flag	Bool
-----	----------------------------	------

scale Random values multiplication factor **⊕1.0 Double (F64)**

Outputs

yMV	Output reference to a matrix or vector	Reference
E	Error indicator	Bool

MX_REFCOPY – Copies input references of matrices A and B to their output references

Block Symbol

Licence: STANDARD



Function Description

The function block **MX_REFCOPY** is an administrative block of the **MATRIX** blockset. It does nothing else than copying the input references **uA** and **uB** to the corresponding output references **yA** and **yB**.

But suitable insertion of this block to the function block scheme can substantially influence (change) the execution order of blocks which can be very advantageous especially in combination with such blocks as e.g. **MX_DSAREF**.

Inputs

uA	Input reference to matrix A	Reference
uB	Input reference to matrix B	Reference

Outputs

yA	Output reference to matrix A	Reference
yB	Output reference to matrix B	Reference

MX_SLFS – Save or load a Matrix/Vector into file or string

Block Symbol

Licence: **STANDARD**



Function Description

The block allows to convert a matrix or vector into text form and vice versa. The matrix is supplied as a reference to the **uMV** input. The **yMV** output refers to the same matrix as the **uMV** input, and is intended to chain matrix blocks in the correct order, as is common with all MATRIX blocks. The text can be either in the input **uStr** (or output **yStr** for the opposite direction of conversion) or in the file. If the text is in a file, its name is the string connected to the **uStr** input. The usual REXYGEN system file name rules applies, ie it is relative to datadir and **..**/ is not allowed to leave the directory. If the **uStr** input is unattached (or empty string), the path name of the file is used with the full path (that is, including the task name and all subsystems) with the **.dat** extension.

The format of a matrix in a text file or in text input and output is determined by the **format** parameter. Supported English and Czech CSV (i.e., columns separated by comma or semicolon), JSON format (created by Google and often used in web applications) and the format used by MATLAB (for entering a matrix in MATLAB scripts).

Conversion from text to matrix/vector or vice versa can be performed at each step of the algorithm or is triggered by the **LOAD** and **SAVE** inputs. The exact method is determined by the **mode** parameter and is explained in detail in the description of this parameter. If an error occurs, it is signaled to the **iE** output and in the log. After a fatal error, the conversion from/to the matrix stops. Error reset for **mode = 1 .. 4** is done by setting **LOAD = SAVE = off**, resetting fatal error cannot be performed for **mode = 5 .. 8** (must switch to **mode = 1 .. 4** and then back).

The **nmax** parameter is used to alocate the output string. If **nmax > 0**, it is allocated specified number of chars during initialization. If this amount is insufficient, the block reports an error. If **nmax = 0**, the block increases the length of the output string as needed. If user don't specify the **nmax** parameter it can lead to full RAM memory in extreme situations and unpredictable behaviour of entire system.

Inputs

uMV	Input reference to a matrix or vector	Reference
uStr	Input string (to convert into matrix) or filename	String
LOAD	Trigger to move data to matrix/vector	Bool
SAVE	Trigger to move data from matrix/vector	Bool

Parameters

mode	Triggering mode	$\odot 2$ Long (I32)
	1 level-triggered file	
	2 edge-triggered file	
	3 level-triggered string	
	4 edge-triggered string	
	5 continuous string to matrix	
	6 continuous matrix to string	
	7 continuous file to matrix	
	8 continuous matrix to file	
format	String/file format	$\odot 1$ Long (I32)
	1 CSV	
	2 CSVsemicolon)	
	3 JSON	
	4 MATLAB	
prec	Number of digits for single value	$\downarrow 0 \uparrow 20 \odot 6$ Long (I32)
TRN	Transposition flag	Bool
nmax	Allocated size of string	$\downarrow 0$ Long (I32)

Outputs

yMV	Output reference to a matrix or vector	Reference
yStr	String representation of the matrix/vector	String
iE	Error code	Error

MX_VEC – Vector data storage block

Block Symbol

Licence: STANDARD



Function Description

The function block MX_VEC allocates memory (during the block initialization) for **n** elements of the type determined by the parameter **etype** of the vector referenced by the output **yVec**.

Note that the present version of the MATRIX function block set supports only vectors with the **etype** equal to 8: Double.

Parameters

n	Number of vector elements	$\downarrow 1 \uparrow 1000000000$	$\odot 1.00E+01$	Long (I32)
etype	Type of elements		$\odot 8.00E+00$	Long (I32)
1	Bool	6	DWord (U32)	
2	Byte (U8)	7	Float (F32)	
3	Short (I16)	8	Double (F64)	
4	Long (I32)	--		
5	Word (U16)	10	Large (I64)	


Output

yVec	Output reference to a vector	Reference
-------------	------------------------------	-----------

MX_WRITE – Write a Matrix/Vector to the console/system log

Block Symbol

Licence: STANDARD



Function Description

This function block can write a vector or matrix to the console or the system log. The severity of the console/system log output is set by the parameter `mode` in combination with settings of system log from REXYGEN Studio, menu **Target/Configure System Log**. Written data can be viewed in REXYGEN Studio, after opening the system log window by the command **Target>Show System Log**. The function block is very useful for debugging purposes of matrix/vector algorithms.

The output references `yMV` is always set to the input reference `uMV`. If `RUN = off` then nothing else is done otherwise matrix or vector is written to the system log if the configured target logging level for function blocks contains the configured `mode`. Format of each matrix/vector element is determined by parameters `mchars` and `mdec`.

The error flag `E` is set to **on** if:

- the reference `uMV` is not defined (i.e. input `uMV` is not connected),
- $3 > \text{mchars} > 25$,
- $0 > \text{mdec} > \text{mchars} - 2$.

Inputs

<code>uMV</code>	Input reference to a matrix or vector	Reference
<code>RUN</code>	Enable execution	Bool

Parameters

<code>Symbol</code>	Matrix/vector symbolic name for console or log output	$\odot A$	String
<code>mchars</code>	Number of characters per single element	$\downarrow 3 \uparrow 25 \odot 8.00E+00$	Long (I32)
<code>mdec</code>	Number of decimal digits per single element	$\downarrow 0 \uparrow 23 \odot 4.00E+00$	Long (I32)
<code>mode</code>	Severity mode of writing	$\odot 3.00E+00$	Long (I32)
	1 None		
	2 Verbose		
	3 Information		
	4 Warning		
	5 Error		


Outputs

yMV	Output reference to a matrix or vector	Reference
E	Error indicator	Bool

RTOV – Vector multiplexer

Block Symbol

Licence: STANDARD



Function Description

The RTOV block can be used to create vector signals in the REXYGEN system. It combines the scalar input signals into one vector output signal.

It is also possible to chain the RTOV blocks to create signals with more than 8 items.

The **nmax** parameter defines the maximal number of items in the vector (in other words, the size of memory allocated for the signal). The **offset** parameter defines the position of the first input signal **u1** in the resulting signal. Only the first **n** input signals are combined into the resulting **yVec** vector signal.

Inputs

		Reference
uVec	Vector signal	
u1	Analog input of the block	Double (F64)
u2	Analog input of the block	Double (F64)
u3	Analog input of the block	Double (F64)
u4	Analog input of the block	Double (F64)
u5	Analog input of the block	Double (F64)
u6	Analog input of the block	Double (F64)
u7	Analog input of the block	Double (F64)
u8	Analog input of the block	Double (F64)

Parameters

nmax	Allocated size of vector	$\downarrow 0 \odot 8$	Long (I32)
offset	Index of the first input in vector	$\downarrow 0$	Long (I32)
n	Number of valid inputs	$\downarrow 0 \uparrow 8 \odot 8$	Long (I32)


Output

yVec	Vector signal	Reference
-------------	---------------	-----------

SWVMR – Vector/matrix/reference signal switch

Block Symbol

Licence: STANDARD



Function Description

The **SWVMR** allows switching of vector or matrix signals. It also allow switching of motion axes in motion control algorithms (see the [RM_Axis](#) block).

Use the [SSW](#) block or its alternatives [SWR](#) and [SELU](#) for switching simple signals.

Inputs

uRef0	Vector signal	Reference
uRef1	Vector signal	Reference
uRef2	Vector signal	Reference
uRef3	Vector signal	Reference
uRef4	Vector signal	Reference
uRef5	Vector signal	Reference
uRef6	Vector signal	Reference
uRef7	Vector signal	Reference
iSW	Active signal selector	⊖ 0.00E+00 Long (I32)


Output

yRef	Vector signal	Reference
------	---------------	-----------

VTOR – Vector demultiplexer

Block Symbol

Licence: STANDARD



Function Description

The VTOR block splits the input vector signal into individual signals. The user defines the starting item and the number of items to feed to the output signals using the `offset` and `N` parameter respectively.

Input

<code>uVec</code>	Vector signal	Reference
-------------------	---------------	-----------

Parameters

<code>n</code>	Number of valid outputs	$\downarrow 0 \uparrow 8 \odot 8$	Long (I32)
<code>offset</code>	Index of the first output	$\downarrow 0$	Long (I32)

Outputs

<code>y1</code>	Analog output of the block	Double (F64)
<code>y2</code>	Analog output of the block	Double (F64)
<code>y3</code>	Analog output of the block	Double (F64)
<code>y4</code>	Analog output of the block	Double (F64)
<code>y5</code>	Analog output of the block	Double (F64)
<code>y6</code>	Analog output of the block	Double (F64)
<code>y7</code>	Analog output of the block	Double (F64)
<code>y8</code>	Analog output of the block	Double (F64)

Chapter 15

SPEC – Special blocks


Contents

EPC – External program call	442
HTTP – HTTP GET or POST request (obsolete)	445
HTTP2 – Block for generating HTTP GET or POST requests	447
SMTP – Send e-mail message via SMTP	449
RDC – Remote data connection	451
REXLANG – User programmable block	456

EPC – External program call

Block Symbol

Licence: ADVANCED

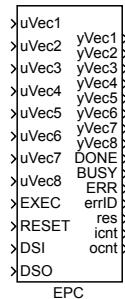

Function Description

The EPC block executes an external program upon a rising edge ($\text{off} \rightarrow \text{on}$) occurring at the **EXEC** input. The name and options of the program are defined by the **cmd** parameter. The format is the same as if the program was executed from the command line of the operating system.

It is possible to pass data from the REXYGEN system to the external program via files. The formatting of the files is defined by the **format** parameter. All the currently supported formats are textual and simple, which allows straightforward processing of the data in arbitrary program. Use e.g.

```
values=load('-ASCII', 'epc_inputVec1');
```

for loading the data in MATLAB or

```
values=read('epc_inputVec1', -1, 32);
```

in SCILAB. The filename and number of columns must be adjusted for the given project. Data exchange in the opposite direction is naturally also supported, the REXYGEN system can read the files in the same format.

The block works in two modes. In *basic mode*, the rising edge on the **EXEC** input triggers reading the data on inputs and storing them in the **ifns** file. The values of the i-th input vector **uVec<i>** are stored in the i-th file from the **ifns** list. In *sampling mode*, the data from the input vectors are stored in each period of the control algorithm. In both cases the values from one time instant form one line in the file.

Analogically, the data from output files are copied to the outputs of the block (one line from the i-th file in the **ofns** list to the i-th output vector **yVec<i>**).

The inputs working in the *sampling mode* are defined by the **s1** list (comma-separated numbers). The outputs work always in the *sampling mode* – the last values are kept when the end of file is reached. The copying of data to input files can be blocked by the **DSI** input, the same holds for output data and the **DSO** input.

Use the **RTOV** block to combine individual signals into a vector one for the **uVec** input.

The **RTOV** blocks can be chained, therefore it is possible to create a vector of arbitrary dimension. Similarly, use the **VTOR** block to demultiplex a vector signal to individual signals.

Inputs

<code>uVec1..uVec8</code>	Input vector signal	Reference
<code>EXEC</code>	External program is called on rising edge	<code>Bool</code>
<code>RESET</code>	Block reset (deletes the input and output files and terminates the external program)	<code>Bool</code>
<code>DSI</code>	Disable inputs sampling	<code>Bool</code>
<code>DSO</code>	Disable outputs sampling	<code>Bool</code>

Outputs

<code>yVec1..yVec8</code>	Output vector signal	Reference
<code>DONE</code>	External program finished	<code>Bool</code>
<code>BUSY</code>	External program running	<code>Bool</code>
<code>ERR</code>	Error flag	<code>Bool</code>
<code>errID</code>	Error code i REXYGEN general error	<code>Error</code>
<code>res</code>	External program return code	<code>Long (I32)</code>
<code>icnt</code>	Current input sample	<code>Long (I32)</code>
<code>ocnt</code>	Current output sample	<code>Long (I32)</code>

Parameters

<code>cmd</code>	Operating system command to execute	<code>String</code>
<code>ifns</code>	Input filenames (separated by semicolon) <code>④epc_uVec1;epc_uVec2</code>	<code>String</code>
<code>ofns</code>	Output filenames (separated by semicolon) <code>④epc_yVec1;epc_yVec2</code>	<code>String</code>
<code>sl</code>	List of inputs working in the <i>sampling mode</i> . The format of the list is e.g. 1,3..5,8. Third-party programs (Simulink, OPC clients etc.) work with an integer number, which is a binary mask, i.e. 157 (binary 10011101) in the mentioned case. ↓0 ↑255 ④85	<code>Long (I32)</code>
<code>ifm</code>	Maximum number of input samples <code>④10000</code>	<code>Long (I32)</code>
<code>format</code>	Format of input and output files 1 Space-delimited values 2 CSV (decimal point and commas) 3 CSV (decimal comma and semicolons)	<code>④1 Long (I32)</code>
<code>nmax</code>	Maximum output vectors length <code>↓2 ↑1000000 ④100</code>	<code>Long (I32)</code>


Notes

- The called external program has the same priority as the calling task. This priority is high, in some cases higher than operating-system-kernel tasks. On Linux based systems, it is possible to lower the priority by using the `chrt` command:
`chrt -o 0 extprg.sh`,
where `extprg.sh` is the original external program.
- The size of signals is limited by parameter `nmax`. Bigger parameter means bigger memory consumption, so choose this parameter as small as possible.
- The filenames must respect the naming conventions of the target platform operating system. It is recommended to use only alphanumeric characters and an underscore to avoid problems. Also respect the capitalization, e.g. Linux is case-sensitive.
- The block also creates copies of the `ifns` and `ofns` files for implementation reasons. The names of these files are extended by the underscore character.
- The `ifns` and `ofns` paths are relative to the folder where the archives of the REXYGEN system are stored. It is recommended to define a symbolic link to a RAM-drive inside this folder for improved performance. On the other hand, for long series of data it is better to store the data on a permanent storage medium because the data can be appended e.g. after a power-failure recovery.
- The `OSCALL` block can be used for execution of some operating system functions.

HTTP – HTTP GET or POST request (obsolete)

Block Symbol

Licence: [ADVANCED](#)

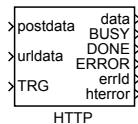

Function Description

The **HTTP** block performs a single HTTP GET or POST request. Target address (URL) is defined by **url** parameter and **urldata** input. A final URL is formed in the way so that **urldata** input is simply added to **url** parameter.

HTTP request is started by the **TRG** parameter. Then the **BUSY** output is set until a request is finished, which is signaled by the **DONE** output. In case of an error, the **ERROR** output is set. The **errId** output carries last error identified by REXYGEN system error code. The **hterror** carries a HTTP status code. All data sent back by server to client is stored in the **data** output.

The block may be run in blocking or non-blocking mode which is specified by the **BLOCKING** parameter. In blocking mode, execution of a task is suspended until a request is finished. In non-blocking mode, the block performs only single operation depending on available data and execution of a task is not blocked. It is advised to always run **HTTP** block in non-blocking mode. It is however necessary to mention that on various operating systems some operations can not be performed in the non-blocking mode, so be careful and do not use this block in quick tasks or in tasks with short execution period. The non-blocking operation is best supported on GNU/Linux operating system. The maximal duration of a request performed by the **HTTP** block is specified by the **timeout** parameter.

The block supports user authentication using basic HTTP authentication method. User name and password may be specified by **user** and **password** parameters. The block also supports secure HTTP (HTTPS). It is also possible to let the block verify server's certificate by setting the **VERIFY** parameter. SSL certificate of a server or server's trusted certificate authority must be stored in the **certificate** parameter in a PEM format. The block does not support any certificate storage.

Parameters **postmime** and **acceptmime** specify MIME encoding of data being sent to server or expected encoding of a HTTP response.

Parameters **nmax**, **postmax**, and **datamax** specify maximum sizes of buffers allocated by the block. The **nmax** parameter is maximal size of any string parameter. The **postmax** parameter specifies a maximal size of **postdata**. The **datamax** parameter specifies a maximal size of **data**.

Inputs

<code>postdata</code>	Data to put in HTTP POST request	<code>String</code>
<code>urldata</code>	Data to append to URL address	<code>String</code>
<code>TRG</code>	Trigger of the selected action	<code>Bool</code>

Parameters

<code>url</code>	URL address to send the HTTP request to	<code>String</code>
<code>method</code>	HTTP request type 1 GET 2 POST	<code>Long (I32)</code>
<code>user</code>	User name	<code>String</code>
<code>password</code>	Password	<code>String</code>
<code>certificate</code>	Authentication certificate	<code>String</code>
<code>VERIFY</code>	Enable server verification (valid certificate)	<code>Bool</code>
<code>postmime</code>	MIME encoding for POST request	<code>application/json</code>
<code>acceptmime</code>	MIME encoding of HTTP response	<code>application/json</code>
<code>timeout</code>	Timeout interval	<code>Double (F64)</code>
<code>BLOCKING</code>	Wait for the operation to finish	<code>Bool</code>
<code>nmax</code>	Allocated size of string	<code>Long (I32)</code>
<code>postmax</code>	Allocated memory for POST request data	<code>Long (I32)</code>
<code>datamax</code>	Allocated memory for HTTP response	<code>Long (I32)</code>


Outputs

<code>data</code>	Response data	<code>String</code>
<code>BUSY</code>	Sending HTTP request	<code>Bool</code>
<code>DONE</code>	HTTP request processed	<code>Bool</code>
<code>ERROR</code>	Error indicator	<code>Bool</code>
<code>errId</code>	Error code	<code>Error</code>
<code>hterror</code>	HTTP response	<code>Long (I32)</code>

HTTP2 – Block for generating HTTP GET or POST requests

Block Symbol

Licence: [ADVANCED](#)

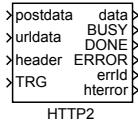

Function Description

The HTTP block performs a single HTTP GET or POST request. Target address (URL) is defined by `url` parameter and `urldata` input. A final URL is formed in the way so that `urldata` input is appended to the `url` parameter. The `header` input can be used for declaration of additional header fields.

A HTTP request is started by the `TRG` input. Then the `BUSY` output is set until the request is finished, which is signaled by a pulse at the `DONE` output. In case of an error, the pulse is generated at the `ERROR` output. The `errId` output carries information about the last error identified by REXYGEN system error code. The `hterror` carries a HTTP status code. All data received from server is published via the `data` output. All error outputs are reset when a new HTTP request is triggered by the `TRG` input.

The block may be run in blocking or non-blocking mode which is specified by the `BLOCKING` parameter. In blocking mode, execution of a task is suspended until the request is finished. In non-blocking mode, the block performs only single operation depending on available data and execution of a task is not blocked. It is advised to always run HTTP block in non-blocking mode. It is however necessary to mention that on various operating systems some operations cannot be performed in the non-blocking mode, so be careful and do not use this block in quick tasks ([QTASK](#)) or in tasks with short execution period. The non-blocking operation is best supported on GNU/Linux operating system. The maximal duration of a request performed by the HTTP block is specified by the `timeout` parameter.

The block supports user authentication using basic HTTP authentication method. User name and password may be specified by `user` and `password` parameters. The block also supports secure HTTP (HTTPS). It is also possible to let the block verify server's certificate by setting the `VERIFY` parameter. SSL certificate of a server or server's trusted certificate authority must be stored in the `certificate` parameter in a PEM format. The block does not support any certificate storage.

Parameters `postmime` and `acceptmime` specify MIME encoding of data being sent to server and expected encoding of the HTTP response.

Parameters `nmax`, `postmax`, and `datamax` specify maximum sizes of buffers allocated by the block. The `nmax` parameter is maximal size of any string parameter. The `postmax` parameter specifies a maximal size of `postdata`. The `datamax` parameter specifies a

maximal size of `data`.

Inputs

<code>postdata</code>	Data to put in HTTP POST request	<code>String</code>
<code>urldata</code>	Data to append to URL address	<code>String</code>
<code>header</code>	Additional header fields	<code>String</code>
<code>TRG</code>	Trigger of the selected action	<code>Bool</code>

Parameters

<code>url</code>	URL address to send the HTTP request to	<code>String</code>
<code>method</code>	HTTP request type 1 GET 2 POST	<code>Long (I32)</code>
<code>user</code>	User name	<code>String</code>
<code>password</code>	Password	<code>String</code>
<code>certificate</code>	Authentication certificate	<code>String</code>
<code>VERIFY</code>	Enable server verification (valid certificate)	<code>Bool</code>
<code>postmime</code>	MIME encoding for POST request	<code>application/json</code>
<code>acceptmime</code>	MIME encoding for GET request	<code>application/json</code>
<code>timeout</code>	Timeout interval	<code>Double (F64)</code>
<code>BLOCKING</code>	Wait for the operation to finish	<code>Bool</code>
<code>nmax</code>	Allocated size of string	<code>↓0 ↑65520 Long (I32)</code>
<code>postmax</code>	Allocated memory for POST request data	<code>↓128 ↑65520 Long (I32)</code>
<code>datamax</code>	Allocated memory for HTTP response	<code>Long (I32)</code>
		<code>↓128 ↑100000000 Long (I32)</code>


Outputs

<code>data</code>	Response data	<code>String</code>
<code>BUSY</code>	Sending HTTP request	<code>Bool</code>
<code>DONE</code>	HTTP request processed	<code>Bool</code>
<code>ERROR</code>	Error indicator	<code>Bool</code>
<code>errId</code>	Error code	<code>Error</code>
<code>hterror</code>	HTTP response	<code>Long (I32)</code>

SMTP – Send e-mail message via SMTP

Block Symbol

Licence: **ADVANCED**



Function Description

The **SMTP** block sends a single e-mail message via standard SMTP protocol. The block acts as a simple e-mail client. It does not implement a mail server.

The contents of a message is defined by the inputs **subj** and **body**. Parameters **from** and **to** specify sender and receiver of a message. A message is sent when the **TRG** parameter is set. Then the **BUSY** output is set until the request is finished, which is signaled by the **DONE** output. In case of an error, the **ERROR** output is set. The **errId** output carries the last error identified by REXYGEN system error code. The **domain** parameter must always be set to identify the target device. The default value should work in most cases. There can be multiple recipients of the message. In such a case, the individual e-mail addresses must be comma-separated and no space character may be present.

The block may be run in non-blocking or blocking mode, which is specified by the **BLOCKING** parameter.

- In the *blocking mode*, the execution of a task is suspended until the sending of e-mail is completed. This mode is typically used in tasks with long execution period, $T_S \geq 10s$. If the e-mail is not successfully sent until **timeout** expires, an error is indicated and the execution of the task is resumed.
- In the *non-blocking mode*, the SMTP block performs only a single operation in each execution of the block and the execution of a task is not suspended. This mode is typically used in tasks with short execution period, $T_S \leq 0.1s$. In this mode, the **timeout** parameter should be set to at least $50 \cdot T_S$, where T_S is the execution period in seconds.

It is recommended to run the **SMTP** block in the non-blocking mode. It is however necessary to mention that on various operating systems some operations may not be performed in the non-blocking mode, so be careful and do not use this block in quick tasks (see **QTASK**) or in tasks with extremely short execution period (few milliseconds). The non-blocking mode is best supported on GNU/Linux operating system.

The block supports user authentication using standard SMTP authentication method. User name and password may be specified by the **user** and **password** parameters. The block also supports secure connection. The encryption method is selected by the **tls** parameter. It is also possible to let the block verify server's certificate by setting the

VERIFY parameter. SSL certificate of a server or server's trusted certificate authority must be stored in the **certificate** parameter in a PEM format. The block does not support any certificate storage.

The length of the whole message (subject, body and headers) is limited to a maximum of 1024 characters.

Inputs

subj	Subject of the e-mail message	String
body	Body of the e-mail message	String
TRG	Trigger of the selected action	Bool

Parameters

server	SMTP server address	String
to	E-mail of the recipient	String
from	E-mail of the sender	String
tls	Encryption method	⊕1 Long (I32)
	1 None	
	2 StartTLS	
	3 TLS	
user	User name	String
password	Password	String
domain	Domain name or identification of the target device	String
auth	Authentication method	⊕1 Long (I32)
	1 Login	
	2 Plain	
certificate	Authentication certificate	String
VERIFY	Enable server verification (valid certificate)	Bool
timeout	Timeout interval	Double (F64)
BLOCKING	Wait for the operation to finish	Bool


Outputs

BUSY	Sending e-mail	Bool
DONE	E-mail has been sent	Bool
ERROR	Error indicator	Bool
errId	Error code	Error

RDC – Remote data connection

Block Symbol

Licence: **ADVANCED**



Function Description

The RDC block is a special input-output block. The values are transferred between two blocks on different computers, eventually two different Simulinks on the same computer or Simulink and the REXYGEN system on the same computer. In order to communicate, the two RDC blocks must have the same **id** number. The communication is based on UDP/IP protocol. This protocol is used as commonly as the more known TCP/IP, i.e. it works over all LAN networks and the Internet. The algorithm performs the following operations in each step:

- If **HLD** = **on**, the block execution is terminated.
- If the **period** parameter is a positive number, the difference between the system timer and the time of the last packet sending is evaluated. The block execution is stopped if the difference does not exceed the **period** parameter. If the **period** parameter is zero or negative, the time difference is not checked.
- A data packet is created. The packet includes block number, the so-called **invoke** number (serial number of the packet) and the values **u0** to **u15**. All values are stored in the commonly used so-called network byte order, therefore the application is computer and/or processor independent.
- The packet is sent to the specified IP address and port.
- The **invoke** number is increased by 1.
- It is checked whether any incoming packets have been received.
- If so, the packet validity is checked (size, **id** number, **invoke** number).

- If the data is valid, all outputs y_0 to y_{15} are set to the values contained in the packet received.
- The **fresh** output is updated. In case of error, the error code is displayed by the **err** output.

There are 16 values transmitted in each direction periodically between two blocks with the same **id** number. The **u(i)** input of the first block is transmitted the **y(i)** output of the other block. Unlike the TCP/IP protocol, the UDP/IP protocol does not have any mechanism for dealing with lost or duplicate packets, so it must be handled by the algorithm itself. The **invoke** number is used for this purpose. This state variable is increased by 1 each time a packet is sent. The block stores also the **invoke** number of the last received packet. It is possible to distinguish between various events by comparing these two invoke numbers. The packets with invoke numbers lower than the invoke number of the last received packet are denied unless the difference is greater than 10. This solves the situation when one of the RDC blocks is restarted and its **invoke** number is reset.

All RDC blocks in the same application must have the same **local port** number and the number of RDC blocks is limited to 64 for implementation reasons. If there are two applications using the RDC block running on the same machine, then each of them must use a different **local port** number.

Inputs

HLD	Input for disabling the execution of the block. No packets are received nor transmitted when HLD = on .	Bool
u0..u15	Values which are sent/written to the output values y_0 to y_{15} of the paired block	Double (F64)

Outputs

iE	Displays the code of the last error. The error codes are listed below:	Long (I32)
	0 No error	

Persistent errors originating in the initialization phase (< 0). Cannot be fixed automatically.

- 1 Maximum number of blocks exceeded (> 64)
- 2 Local ports mismatch; the lport parameter must be the same for all RDC blocks within one application
- 3 Error opening socket (the UDP/IP protocol is not available)
- 4 Error assigning local port (port already occupied by another service or application)
- 5 Error setting the so-called non-blocking socket mode (the RDC block requires this mode)
- 10 ... Error initializing the socket library
- 11 ... Error initializing the socket library
- 12 ... Error initializing the socket library

Temporary errors originating in any cycle of the code (> 0). Can be fixed automatically.

- 1 Initialization successful, yet no data packet has been received
- 2 Packet consistency error (incorrect length – transmission error or conflicting service/application is running)
- 4 Error receiving packet (socket library error)
- 8 Error sending packet (socket library error)

fresh	Elapsed time (in seconds) since the last received packet. Can be used for detection of an error in the paired block.	Double (F64)
y0..y15	Values transmitted from the input ports u0 to u15 of the paired RDC block – data from the last packet received	Double (F64)

Parameters

target	Name or IP address running the paired RDC block. Broadcast address is allowed.	String
rport	Remote port – address of the UDP/IP protocol service, it is recommended to keep the default value unless necessary (service/application conflict)	Word (U16)
lport	Local port – similar meaning as the rport parameter; remote port applies to the receiving machine, local port applies to the machine sending the packet	Word (U16)
id	Block ID – this number is contained within the data packet in order to reach the proper target block (all blocks on the target receive the packet but only the one with the corresponding id decomposes it and uses the data contained to update its outputs)	Long (I32)


↓1 ↑32767 ⊕1

period The shortest time interval between transmitting/receiving packets (in seconds). The packets are transmitted/received during each execution of the block for $\text{period} \leq 0$ while the positive values of this parameter are extremely useful when sending data out of the Simulink continuous models based on a **Variable step** solver.


Double (F64)

Example

The following example explains the function of the **RDC** block. The constants 3 and 5 are sent from **Computer1** to **Computer2**, where they appear at the y_0 and y_1 outputs of the **RDC2** block. The constants are then summed and multiplied and sent back to **Computer1** via the u_{11} and u_{12} outputs of the **RDC2** block. The displays connected to the y_{11} and y_{12} outputs of the **RDC1** block show the results of mathematical operations $3 + 5$ and $(3 + 5) * 5$. The signal from the **SG** generator running on **Computer2** is transmitted to the y_0 output of the **RDC1** block, where it can be easily displayed. Note that **Display** and **Scope** are Matlab/Simulink blocks – to view the data in the REXYGEN system, the REXYGEN Diagnostics diagnostic program and the **TRND** block must be used.

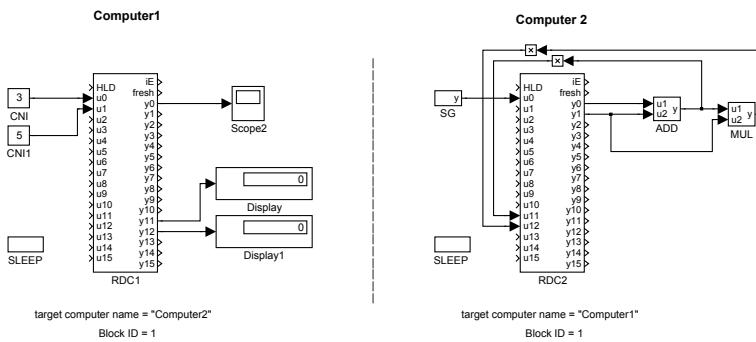

The simplicity of the example is intentional. The goal is to demonstrate the functionality of the block, not the complexity of the system. In reality, the **RDC** block is used in more complex tasks, e.g. for remote tuning of the PID controller as shown below. The PID control algorithm is running on **Computer1** while the tuning algorithm is executed by **Computer2**. See the **PIDU**, **PIDMA** and **SSW** blocks for more details.

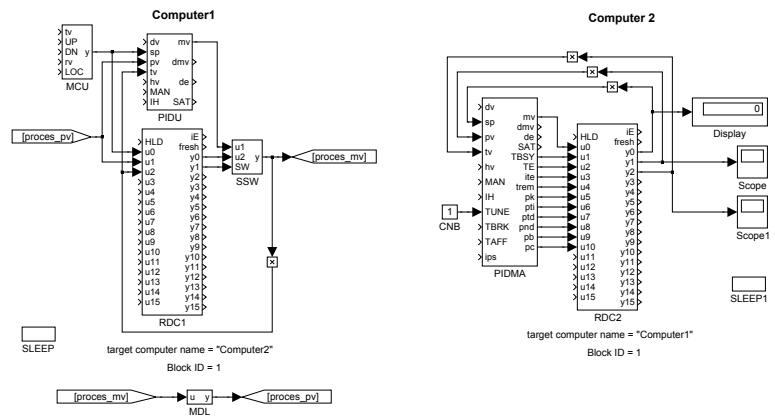


OPC server of the RDC block

There is also an OPC server embedded in the RDC block. Detailed description will be available soon.

REXLANG – User programmable block

Block Symbol

Licence: [REXLANG](#)



Function Description

The standard function blocks of the REXYGEN system cover the most typical needs in control applications. But there still exist situations where it is necessary (or more convenient) to implement an user-defined function. The REXLANG block covers this case. It implements an user-defined algorithm written in a scripting language very similar to the C language (or Java).

Scripting language

As mentioned, the scripting language is similar to the C language. Nevertheless, there are some differences and limitations:

- **Double**, **long** and **string** data types are supported (it is possible to use **int**, **short**, **bool** as well, but these are internally converted to **long**. The **float** type can be used but it is converted internally to **double**. The **typedef** type is not defined.
- Pointers and structures are not implemented. However, it is possible to define arrays and use the indexes (the **[]** operator). Block inputs, outputs and parameters can not be arrays.
- The **','** operator is not implemented.
- The preprocessor supports the following commands: **#include**, **#define**, **#ifdef .. [#else ..] #endif**, **#ifndef .. [#else ..] #endif** (i.e. **#pragma** and **#if .. [#else ..] #endif** are not supported).
- The standard ANSI C libraries are not implemented, however the majority of mathematic functions from **math.h** and some other functions are implemented (see the text below).


```

input_signal = 3;           //not allowed, inputs are read-only
sum = output_signal + 1;    //not allowed, outputs are write-only
if (input_signal>1) output_signal = 3 + input_signal; //correct

```

Available functions

The following functions are available in the scripting language:

- **Mathematic functions** (see ANSI C, `math.h`):

`atan`, `sin`, `cos`, `exp`, `log`, `sqrt`, `tan`, `asin`, `acos`, `fabs`, `fmod`, `sinh`, `cosh`, `tanh`, `pow`, `atan2`, `ceil`, `floor` and `abs` Please note that the `abs` function works with integer numbers. All the other functions work with variables of type `double`.

- **Vector functions** (not part of ANSI C)

`double max([n,]val1,...,valn)`

Returns the maximum value. The first parameter defining the number of items is optional.

`double max(n,vec)`

Returns the value of maximal item in the `vec` vector.

`double min([n,]val1,...,valn)`

Returns the minimum value. The first parameter defining the number of items is optional.

`double min(n,vec)`

Returns the value of minimal item in the `vec` vector.

`double poly([n,]x,an,...,a1,a0)`

Evaluates the polynomial $y = an*x^n + \dots + a1*x + a0$. The first parameter defining the number of items is optional.

`double poly(n,x,vec)`

Evaluates the polynomial $y = vec[n] * x^n + \dots + vec[1] * x + vec[0]$.

`double scal(n,vec1,vec2)`

Evaluates the scalar product $y = vec1[0] * vec2[0] + \dots + vec1[n-1] * vec2[n-1]$.

`double scal(n,vec1,vec2,skip1,skip2)`

Evaluates the scalar product $y = vec1[0] * vec2[0] + vec1[skip1] * vec2[skip2] + \dots + vec1[(n-1)*skip1] * vec2[(n-1)*skip2]$. This is well suited for multiplication of matrices, which are stored as vectors (line by line or column by column).

`double conv(n,vec1,vec2)`

Evaluates the convolatory product $y = vec1[0] * vec2[n-1] + vec1[1] * vec2[n-1] + \dots + vec1[n-1] * vec2[0]$.

`double sum(n,vec)`

Sums the items in a vector, i.e. $y = vec[0] + vec[1] + \dots + vec[n-1]$.

```
double sum([n,]val1,...,valn)
    Sums the items, i.e.  $y = val_1 + val_2 + \dots + val_n$ . The first parameter defining the number of items is optional.

[]array([n,]an-1,...,a1,a0)
    Returns an array/vector with the given values. The first parameter defining the number of items is optional. The type of the returned value is chosen automatically to fit the type of parameters (all must be of the same type).

[]subarray(idx,vec)
    Returns a subarray/subvector of the vec array, starting at the idx index. The type of the returned value is chosen automatically according to the vec array.

copyarray(count,vecSource,idxSource,vecTarget,idxTarget)
    Copies count items of the vecSource array, starting at idxSource index, to the vecTarget array, starting at idxTarget index. Both arrays must be of the same type.

void fillarray(vector, value, count)
    Copies value to count items of the vector array (always starting from index 0).
```

- **String functions** (ANSI C contains analogous functions in the **string.h** file)

```
string strsub(str,idx,len)
    Returns a substring of length len starting at index idx.

long strlen(str)
    Returns string length (number of characters).

long strfind(str,substr)
    Returns the position of first occurrence of substr in str.

long strrfind(str,substr)
    Returns the position of last occurrence of substr in str.

strreplace(str,pattern,substr)
    Find all occurrences of pattern in str and replace it with substr (in-place replacement, so new string is stored into str).

strupr(str)
    Converts a string to uppercase.

strlwr(str)
    Converts a string to lowercase.

long str2long(str [, default])
    Converts string to integer number. The first non-numerical character is considered the end of the input string and the remaining characters are ignored. If conversion failed, 2nd parameter is returned (or 0 if parameter is not set).

double str2double(str [, default])
    Converts string to a decimal number. The first non-numerical character is considered the end of the input string and the remaining characters are
```

ignored. If conversion failed, 2nd parameter is returned (or 0 if parameter is not set).

string long2str(num [, radix])

Converts an integer number **num** to text. The optional parameter **radix** specifies the numerical system in which the conversion is to be performed (typically 10 or 16). If **radix** is not specified, default value is **radix** = 10. The output string does not contain any identification of the numerical system used (e.g. the 0x prefix for the hexadecimal system).

string double2str(num)

Converts a decimal number **num** to text.

strcpy(dest,src)

Function copies the **src** string to the **dest** string. Implemented for compatibility with ANSI C. The construction **dest=src** yields the same result.

strcat(dest,src)

Function appends a copy of the **src** string to the **dest** string. Implemented for compatibility with ANSI C. The construction **dest=dest+src** yields the same result.

strcmp(str1,str2)

Function compares strings **str1** and **str2**. Implemented for compatibility with ANSI C. The construction **str1==str2** yields the same result.

float2buf(buf,x[,endian])

Function for converting real number **x** into 4 elements of array **buf**. Each element represents an octet (byte) of number in single precision representation according to IEEE 754 (known as float). The function is useful for filling communication buffers. Optional 3rd parameter has the following meaning: 0 (default) = processor native endian, 1 = little endian, 2 = big endian.

double2buf(buf,x[,endian])

Similar function to **float2buf**, but stores 8 elements in double precision format.

double buf2float(buf[,endian])

Inverse function to **float2buf**

double buf2double(buf[,endian])

Inverse function to **double2buf**

long RegExp(str,regexp,capture[])

Compares the **str** string with regular expression **regexp**. When the string matches the pattern, the **capture** array contains individual sections of the regular expression. **capture[0]** is always the complete regular expression. The function return the number of captured strings or a negative value in case of an error. The regular expression may contain the following:

(?i) ... Must be at the beginning of the regular expression. Makes the matching case-insensitive.

^ ... Match beginning of a string

\$... Match end of a string

```

() ... Grouping and substring capturing
\s ... Match whitespace
\S ... Match non-whitespace
\d ... Match decimal digit
\n ... Match new line character
\r ... Match line feed character
\f ... Match vertical tab character
\v ... Match horizontal tab character
\t ... Match horizontal tab character
\b ... Match backspace character
+ ... Match one or more times (greedy)
+? ... Match one or more times (non-greedy)
* ... Match zero or more times (greedy)
*? ... Match zero or more times (non-greedy)
? ... Match zero or once (non-greedy)
x|y ... Match x or y (alternation operator)
\meta ... Match one of the meta characters: ^$().[]*+?|\\
\xHH ... Match byte with hex value 0xHH, e.g. \x4a.
[...] ... Match any character from the set. Ranges like [a-z] are
supported.
[^...] ... Match any character but the ones from the set.

long ParseJson(json, cnt, names[], values[])

```

The `json` string is supposed to contain text in JSON format. The `names` array contain property names of the requested objects (subitems are accessed via `.`, index of the array via `[]` - e.g. `"cars[1].model"`). The `values` array then contains values of the requested objects. The `cnt` parameter defines the number of requested objects (length of both the `names` and `values` arrays). The function returns the number of values, negative numbers indicate errors.

Note: String variable is declared just like in ANSI C, i.e. `char <variable name>[<maximum number of characters>];`. For passing the strings to functions use `char <variable name>[]` or `string <variable name>`.

- **System functions** (not part of ANSI C)

```
Archive(arc, type, id, lvl_cnt, value)
```

Stores a value into the archive subsystem. `arc` is a bit mask of archives to write the events to (e.g. for writing to archives 3,5 set `arc=20` -> (BIN)10100 = (DEC)20). The archives are numbered from 1 and the maximum number of archives is limited to 15 (archive no. 0 is an internal system log). `type`

```

1 ... Bool
2 ... Byte (U8)
3 ... Short (I16)
4 ... Long (I32)
5 ... Word (U16)
6 ... DWord (U32)
7 ... Float (F32)
8 ... Double (F64)
9 ... Time
10 ... Large (I64)
11 ... Error
12 ... String
17 ... Bool Group
18 ... Byte Group (U8)
19 ... Short Group (I16)
20 ... Long Group (I32)
21 ... Word Group (U16)
22 ... DWord Group (U32)
23 ... Float Group (F32)
24 ... Double Group (F64)
25 ... Time Group
26 ... Large Group (I64)
27 ... Error Group

```

id is a unique archive item ID. **lvl_cnt** is Alarm level in case of alarms or number of elements in case of Group **type**. **value** is a value to be written or an array reference in case of Group **type**.

Trace(id, val)

Displays the **id** value and the **val** value. The function is intended for debugging. The **id** is a user-defined constant (from 0 to 9999) for easy identification of the displayed message. The **val** can be of any data type including text string. The output can be found in the system log of REXY-GEN.

In order to view these debugging messages in System log it is necessary to enable them. Go to the menu

Target→*Diagnostic messages* and tick the *Information* checkbox in the *Function block messages* box. Logging has to be also enabled for the particular block by ticking the *Enable logging* checkbox in the *Runtime* tab of the block parameters dialog. By default, this is enabled after placing a new block from library. Only then are the messages displayed in the *System log*.

`TraceError(id, val) TraceWarning(id, val) TraceVerbose(id, val)`

These commands are similar to the `Trace` command, only the output is routed to the corresponding logging group (Error, Warning, Verbose). Messages with the *Error* level are always written to the log. To view the *Warning* and *Verbose* messages, enable the corresponding message group. Go to the menu

Target→*Diagnostic messages* and tick the corresponding checkbox in the *Function block messages* box.

`Suspend(sec)`

The script is suspended if its execution within the given sampling period takes more seconds than specified by the `sec` parameter. At the next start of the block the script continues from the point where it was suspended. Use `Suspend(0)` to suspend the code immediately.

`double GetPeriod()`

Returns the sampling period of the block in seconds.

`double CurrentTime()`

Returns the current time (in internal format). Intended for use with the `ElapsedTime()` function.

`double ElapsedTime(new_time, old_time)`

Returns the elapsed time in seconds (decimal number), i.e. the difference between the two time values `new_time` and `old_time`. The `CurrentTime()` function is typically used in place of the `new_time` parameter.

`double Random()`

Returns a pseudo-random number from the $\langle 0, 1 \rangle$ interval. The pseudo-random number generator is initialized prior to calling the `init()` function so the sequence is always the same.

`long QGet(var)`

Returns the quality of the `var` variable (see the `QFC`, `QFD`, `VIN`, `VOUT` blocks). The function is intended for use with the inputs, outputs and parameters. It always returns 0 for internal variables.

`void QSet(var, value)`

Sets the quality of the `var` variable (see the `QFC`, `QFD`, `VIN`, `VOUT` blocks). The function is intended for use with the inputs, outputs and parameters. It has no meaning for internal variables.

`long QPropag([n,]val1,...,valn)`

Returns the quality resulting from merging of qualities of `val1, ..., valn`. The basic rule for merging is that the resulting quality correspond with the worst quality of `val1, ..., valn`. To obtain the same behavior as in other blocks of the REXYGEN system, use this function to set the quality of output, use all the signals influencing the output as parameters.

`double LoadValue(fileid, idx)`

Reads a value from a file. A binary file with `double` values or a text file with values on individual lines is supposed. The `idx` index (binary file)

or line number (text file) starts at 0. The file is identified by `fileid`. At present the following values are supported:

- 0 ... file on a disk identified by the `p0` parameter
- 1 ... file on disk identified by name of the REXLANG block and extension `.dat`
- 2 ... file on a disk identified by the `srcname` parameter, but the extension is changed to `.dat`
- 3 ... `rexlang.dat` file in the current directory
- 4-7 ... same like 0-3, but format is text file. Each line contains one number. The index `idx` is the line number and starts at zero. Value `idx=-1` means next line (e.g. sequential writing).

`void SaveValue(fileid, idx, value)`

Stores the `value` to a file. The meaning of parameters is the same as in the `LoadValue` function.

`void GetSystemTime(time)`

Returns the system time. The time is usually returned as UTC but this can be altered by the operating system settings. The `time` parameter must be an array of at least 8 items of type `long`. The function fills the array with the following values in the given order: year, month, day (in the month), day of week, hours, minutes, seconds, milliseconds. On some platforms the milliseconds value has a limited precision or is not available at all (the function returns 0 ms).

`void Sleep(seconds)`

Stop execution of the block's algorithm (and whole task) for defined time. Use this block with extreme caution and only if there is no other possibility to achieve the desired behaviour of your algorithm. The sleep interval should not exceed 900 milliseconds. The shortest interval is about 0.01s, the precise value depends on the target platform.

`long GetExtInt(ITEMID)`

Returns the value of input/output/parameter of arbitrary block in REXY-GEN algorithm. Such an external data item is referenced by the `ITEMID` parameter. The structure of the string parameter `ITEMID` is the same as in e.g. the `sc` parameter of the `GETPI` function block. If the value cannot be obtained (e.g. invalid or non-existing `ITEMID`, data type conflict, etc.), the REXLANG block issues an error and must be reset.

`long GetExtLong(ITEMID)`

See `GetExtInt(ITEMID)`.

`double GetExtReal(ITEMID)`

Similar to `GetExtInt(ITEMID)` but for decimal numbers.

`double GetExtDouble(ITEMID)`

See `GetExtReal(ITEMID)`.

`string GetExtString(ITEMID)`

Similar to `GetExtInt(ITEMID)` but for strings.

```

void SetExt(ItemID, value)
    Sets the input/output/parameter of arbitrary block in REXYGEN algorithm to value. Such an external data item is referenced by the ItemID parameter. The structure of the string parameter ItemID is the same as in e.g. the sc parameter of the SETPI function block. The type of the external data item (long/double/string) must correspond with the type of the value parameter. If the value cannot be set (e.g. invalid or non-existing ItemID, data type conflict, etc.), the REXLANG block issues an error and must be reset.

int BrowseExt(ItemID, first_subitem_index, max_count, subitems, kinds)
    Function browses task address space. If ItemID is a block identifier (block_path), subitems string array will contain names of all inputs, outputs, parameters and internal states. Function returns number of subitems or negative error code. kinds values: executive = 0, module = 1, driver = 2, archive = 3, level = 4, task = 5, quicktask = 6, subsystem = 7, block = 8, input = 9, output = 10, internal state = 11, parameter or state array = 12, special = 13.

long CallExt(ItemID)
    Run (one step) arbitrary block in REXYGEN algorithm. Such an external block is referenced by the ItemID parameter. The structure of the string parameter ItemID is the same as in e.g. the sc parameter of the GETPI function block. The function returns result code of the calling block (see REXYGEN error codes). It is strongly recommended to call halted blocks only (set checkbox Halt on the property page Runtime in the parameters dialog of the block) and the block (or subsystem) should be in same task as the REXLANG block.

long GetInArrRows(input)
    Returns the number of rows of the array that is attached to the input with index input of the REXLANG block.

long GetInArrCols(input)
    Returns the number of columns of the array that is attached to the input with index input of the REXLANG block.

double GetInArrDouble(input, row, col)
    Returns the member of the array that is attached to the input with index input of the REXLANG block.

Void SetInArrValue(input, row, col, value)
    Sets the member of the array that is attached to the input with index input of the REXLANG block.

Void SetInArrDim(input, row, col)
    Sets the dimension of the array that is attached to the input with index input of the REXLANG block.

long memrd32(hMem, offset)
    Reading physical memory. Get the handle by Open(72, "/dev/mem", <physical address>, <area size>).

```

```
long memwr32(hMem, offset, value)
```

Writing to physical memory. Get the handle by `OpenMemory("/dev/mem", <physical address>, <area size>).`

- **Communication functions** (not part of ANSI C)

This set of functions is intended for communication over TCP/IP, UDP/IP, serial line (RS-232 or RS-485), SPI bus and I2C bus. Only a brief list of available functions is given below, see the example projects of the REXYGEN system for more details.

```
long OpenFile(string filename)
```

Function for opening a file. Identification number (the so-called handle) of the file is returned. If a negative value is returned, the opening was not successful.

```
long OpenCom(string comname, long baudrate, long parity)
```

Function for opening a serial line. Identification number (the so-called handle) of serial port is returned. If a negative value is returned, the opening was not successful. Parity setting: 0=none, 1=odd, 2=even.

```
long OpenUDP(string localname, long lclPort, string remotename, long remPort)
```

Function for opening a UDP socket. Identification number (the so-called handle) of the socket is returned. If a negative value is returned, the opening was not successful.

```
long OpenTCPSvr(string localname, long lclPort)
```

Function for opening a TCP socket (server, listening). Identification number (the so-called handle) of the socket is returned. If a negative value is returned, the opening was not successful.

```
long OpenTCPcli(string remotename, long remPort)
```

Function for opening a TCP socket (client). Identification number (the so-called handle) of the socket is returned. If a negative value is returned, the opening was not successful.

```
long OpenI2C(string devicename)
```

Function for opening the I2C bus. Identification number (the so-called handle) of the bus is returned. If a negative value is returned, the opening was not successful.

```
long OpenSPI(string devicename)
```

Function for opening the SPI bus. Identification number (the so-called handle) of the bus is returned. If a negative value is returned, the opening was not successful.

```
long OpenMemory(string devicename, long baseaddr, long size)
```

Function for mapping physical memory. Identification number (the so-called handle) of the memory address is returned. If a negative value is returned, the opening was not successful.

```
long OpenDevice(string filename)
```

Same as `OpenFile()`, but `Write()` or `Read()` are not-blocking (e.g. if data are not readable/writeable, function return immediately with return code -1).

```

long OpenSHM(string devicename, long deviceid, long size, long flags)
    Function for mapping shared memory ( linux only, call shmget() ).

void Close(long handle)
    Closes the socket, serial line, file or any device opened by the Open...
functions.

void SetOptions(long handle, long params[])
    Sets the parameters of a socket or serial line. The array size must be at
least:
    - 22 for serial line,
    - 2 for file (1st item is mode: 1=seek begin, 2=seek current, 3=seek end,
        4=set file end, 2nd item is offset for seek),
    - 3 for SPI (1st item is SPI mode, 2nd item is bits per word, 3rd item
        is max speed in Hz),
    - 5 for I2C (1st item is slave address, 2nd item is 10-bit address flag,
        3rd item is Packet Error Checking flag, 4th item is nuber of retries,
        5th item is timeout)

void GetOptions(long handle, long params[])
    Reads parameters of a socket or serial line to the params array. The array
size must be big enough, at least 2 for files, 2 for a socket and 22 for serial
line (see SetOptions).

long Accept(long hListen)
    Accepts the connection to listening socket hListen invoked by the client.
    A communication socket handle or an error is returned.

long Read(long handle, long buffer[], long count)
    Receives data from a serial line or socket. The count parameter defines
the maximum number of bytes to read. The count of bytes read or an error
code is returned. Each byte of incoming data is put to the buffer array
of type long in the corresponding order.

    It is also possible to use the form
    long Read(long handle, string data[], long count) (i.e. a string is
used instead of a data array; one byte in the input file corresponds to one
character; not applicable to binary files).

    The error codes are:
    -1      it is necessary to wait for the operation to finish (the function
            is "non-blocking")
    -309    reading failed; the operating system error code appears in
            the log (when function block logging is enabled)
    -307    file/socket is not open

long Write(long handle, long buffer[], long count)
    Sends the data to a serial line or socket. The count parameter defines
the number of bytes to send. The count of bytes or en error code sent is
returned. Each byte of outgoing data is read from the buffer array of type
long in the corresponding order.

```

It is also possible to use the form

`long Write(long handle, string data)` (i.e. a string is used instead of a data array; one byte in the output file corresponds to one character; not applicable to binary files).

The error codes are:

- 1 it is necessary to wait for the operation to finish (the function is "non-blocking")
- 310 write failed; the operating system error code appears in the log (when function block logging is enabled)
- 307 file/socket is not open

`long ReadLine(long handle, string data)`

Read one line from (text) file, serial line or socket; read characters are in the variable `data` up to allocated size of the string; the function return real size (number of bytes) of line or error code.

`long DeleteFile(string filename)`

Delete file. Return 0 if success; negative value is error code.

`long RenameFile(string filename, string newfilename)`

Rename file. Return 0 if success; negative value is error code.

`bool ExistFile(string filename)`

Return true if file or device exist (is it possible to open it for reading).

`long I2C(long handle, long addr, long bufW[], long cntW, long bufR[], long cntR)`

Communication over the I2C bus. Works only in Linux operating system on devices with the I2C bus (e.g. Raspberry Pi). Sends and receives data to/from the slave device with address `addr`. The parameter `handle` is returned by the `OpenI2C` function, whose parameter defines the device name (according to the operating system). The parameter `bufW` is a buffer (an array) for the data which is sent out, `cntW` is the number of bytes to send out, `bufR` is a buffer (an array) for the data which comes in and `cntR` is the number of bytes to receive. The function returns 0 or an error code.

`long SPI(long handle, 0, long bufW[], long cntW, long bufR[], long cntR)`

Execution of one transaction over the SPI bus. Works only in Linux operating system on devices with the SPI bus (e.g. Raspberry Pi). The parameter `handle` is returned by the `OpenSPI` function, whose parameter defines the device name (according to the operating system). The second parameter is always 0 (reserved for internal use). The parameter `bufW` is a buffer (an array) for the data which is sent out, `cntW` is the number of bytes to send out, `bufR` is a buffer (an array) for the data which comes in and `cntR` is the number of bytes to receive. Note that SPI communication is full-duplex, therefore the resulting length of the SPI transaction is given by maximum of the `cntW` and `cntR` parameters, not their sum. The function returns 0 or an error code.

`long Seek(long handle, long mode[], long offset)`

Set position for Read/Write command. Parameter `mode` means: 1=offset from begin of the file, 2= offset from current position, 3=offset from end

of the file.

```
long Recv(long handle, long buffer[], long count)
```

Obsolete function. Use Read instead.

```
long Send(long handle, long buffer[], long count)
```

Obsolete function. Use Write instead.

```
long crc16(data,length,init,poly,flags,offset)
```

Compute 16-bit cyclic redundant code that is used as checksum/hash in many communication protocols. **data** byte array (represented by long array) or string to compute hash **length** number of bytes in input array/text (could be -1 for whole string) **init** so called initial vector **poly** so called control polynom **flags** 1...revert bit order (in input bytes as so as in result crc), 2...result crc is xored with 0xFFFF, 4...if **data** is long array, all 4 bytes in long are procesed (LSB first), 8... same like 4, but MSB first **offset** index of the first processed byte in data array (usually 0) Notice: there is same function for 32-bit CRC `long crc32(data,length,init,poly,flags,offset)`, and for 8-bit CRC `long crc8(data,length,init,poly,flags,offset)`. Initial vector, control polynom, flags for many protocols could be found on <https://crccalc.com/> Examples: MODBUS: `crc16("123456789",-1,0xFFFF,0x8005,1,0);` DECT-X: `crc16("123456789",-1,0,0x0589,0,0));`

Remarks

- The data type of inputs **u0..u15**, outputs **y0..y15** and parameters **p0..p15** is determined during compilation of the source code according to the **input**, **output** and **parameter** definitions.
- All error codes < -99 require restarting of the **REXLANG** function block by input **RESET**. Of course it is necessary to remove the cause of the error first.
- WARNING! – The inputs and outputs of the block cannot be accessed within the **init()** function (the values of inputs are 0, outputs are not set).
- It is possible to include path in the **srcname** parameter. Otherwise the file is expected directly in the project directory or in the directories specified by the **-I** command line option of the **REXYGEN Compiler** compiler.
- All parameters of the vector functions are of type **double** (or array of type **double**). The only exception is the **n** parameter of type **long**. Note that the functions with one vector parameter exist in three variants:

```
double function(val1,...,valn)
```

Vector is defined as a sequence of values of type **double**.

```
double function(n, val1, ..., valn)
```

Vector is defined as in the first case, only the first parameter defines the number of values – the size of the vector. This variant is compatible with the C compiler. The `n` parameter must be a number, not the so-called `const` variable and it must correspond with the number of the following elements defining the vector.

```
double function(n, vec)
```

The `n` parameter is an arbitrary expression of type `long` and defines the number of elements the function takes into account.

- The optional parameter `n` of the vector functions must be specified if the compatibility with C/C++ compiler is required. In such a case all the nonstandard functions must be implemented as well and the functions with variable number of parameters need to know the parameter count.
- In all case it is important to keep in mind that the vectors start at index 0 and that the array limits are not checked (just like in the C language). E.g. if `double vec[10], x;` is defined, the elements have indexes 0 to 9. The expression `x=vec[10];` is neither a syntax nor runtime error, the value is not defined. More importantly, it is possible to write `vec[11]=x;`, which poses a threat, because some other variable might be overwritten and the program works unexpectedly or even crashes.
- Only the `parser error` and line number are reported during compilation. This means a syntax error. If everything seems fine, the problem can be caused by identifier/keyword/function name conflict.
- All jumps are translated as relative, i.e. the corresponding code is restricted to 32767 instructions (in portable format for various platforms).
- All valid variables and temporary results are stored in the stack, namely:
 - Global variables and local `static` variables (permanently at the beginning of the stack)
 - Return addresses of functions
 - Parameters of functions
 - Local function variables
 - Return value of function
 - Temporary results of operations (i.e. the expression `a=b+c;` is evaluated in the following manner: `b` is stored in the stack, `c` is stored in the stack (it follows after `b`), the sum is evaluated, both values are removed from the stack and the result is stored in the stack)

Each simple variable (`long` or `double`) thus counts as one item in the stack. For arrays, only the size is important, not the type.

- The arrays are passed to the functions as a reference. This means that the parameter counts as one item in the stack and that the function works directly with the referenced array, not its local copy.
- If the stack size is not sufficient (less than space required for global variables plus 10), the stack size is automatically set to twice the size of the space required for the global variables plus 100 (for computations, function parameters and local variables in the case that only a few global variables are present).
- If basic debug level is selected, several checks are performed during the execution of the script, namely initialization of the values which are read and array index limits. Also a couple of uninitialized values are inserted in front of and at the back of each declared array. The **NOP** instructions with line number of the source file are added to the ***.ill** file.
- If full debug is selected, additional check is engaged – the attempts to access invalid data range are monitored (e.g. stack overflow).
- The term instruction in the context of this block refers to an instruction of a processor-independent mnemocode. The mnemocode is stored in the ***.ill** file.
- The **Open()** function set serial line always 19200Bd, no parity, 8 bit per character, 1 stopbit, binary mode, no timeout. Optional 2nd (bitrate) and 3th (parity) parametrs can be used in the **Open()** function.
- Accessing text file is significantly slower than binary file. A advantage of the text file is possibility view/edit data in file without special editor.
- This block does not call the **parchange()** function. It is necessary to call it in **init()** function (if it is required).
- The block's inputs are available in the **init()** function, but all are equal to zero. It is possible (but not common) to set block's outputs.
- The **Open()** function also allows opening of a regular file. Same codes like in the **LoadValue()** function are used.

Debugging the code

Use the **Trace** command mentioned above.

Inputs

HLD	Hold – the block code is not executed if the input is set to on	Bool
RESET	Rising edge resets the block. The block gets initialized again (all global variables are cleared and the Init() function is called).	Bool
u0..u15	Input signals which are accessible from the script	Unknown

Outputs

iE	Runtime error code. For error codes $iE < -99$ the algorithm is stopped until it is reinitialized by the RESET input or by restarting the executive)	Error
	0 No error occurred, the whole main() function was executed (also the init() function).	
	-1 The execution was suspended using the Suspend() command, i.e. the execution will resume as soon as the REXLANG block is executed again	
	< -1 ... Error code of the REXYGEN system, see Appendix C	
	> 0 ... User-defined return values, algorithm execution without any change	
y0..y15	Output signals which can be set from within the script	Unknown

Parameters

srcname	Source file name	srcfile.c	String
srctype	Coding of source file	①	Long (I32)
	1: C-like Text file respecting the C-like syntax described above		
	2: STL Text file respecting the IEC61131-3 standard. The standard is implemented with the same limitations as the C-like script (i.e. no structures, only INT, REAL and STRING data types, function blocks are global variables VAR_INPUT, outputs are global variables VAR_OUTPUT, parameters are global variables VAR_PARAMETER, standard functions according to specification, system and communication functions are the same as in C-like).		
	3: RLB REXLANG binary file which results from compilation of C-like or STL scripts. Use this option if you do not wish to share the source code of your block.		
	4: ILL Text file with mnemocodes, which can be compared to assembler. This choice is currently not supported.		
stack	Stack size defined as number of variables. Default and recommended value is 0, which enables automatic estimation of the necessary stack size.		Long (I32)
debug	Debug level – checking is safer but slows down the execution of the algorithm. Option No check can crash REXYGENapplication on target platform if code is incorrect.	③	Long (I32)
	1 No check		
	2 Basic check		
	3 Full check		
strs	Total size of buffer for strings. Enter the maximum number of characters to allocate memory for. The default value 0 means that the buffer size is determined automatically.		Long (I32)
p0..p15	Parameters which are accessible from the script		Unknown

Example C-like

The following example shows a simple code to sum two input signals and also sum two user-defined parameters.

```
double input(0) input_u0;
double input(2) input_u2;

double parameter(0) param_p0;
double parameter(1) param_p1;

double output(0) output_y0;
double output(1) output_y1;

double my_value;

long init(void)
{
    my_value = 3.14;
    return 0;
}

long main(void)
{
    output_y0 = input_u0 + input_u2;
    output_y1 = param_p0 + param_p1 + my_value;
    return 0;
}

long exit(void)
{
    return 0;
}
```

Example STL

And here is the same example in Structured Text.

```
VAR_INPUT
    input_u0:REAL;
    input_u1:REAL;
    input_u2:REAL;
END_VAR

VAR_OUTPUT
    output_y0:REAL;
```

```
    output_y1:REAL;
END_VAR

VAR_PARAMETER
    param_p0:REAL;
    param_p1:REAL;
END_VAR

VAR
    my_value: REAL;
END_VAR

FUNCTION init : INT;
    my_value := 3.14;
    init := 0;
END_FUNCTION

FUNCTION main : INT;
    output_y0 := input_u0 + input_u2;
    output_y1 := param_p0 + param_p1 + my_value;
    main := 0;
END_FUNCTION

FUNCTION exit : INT;
    exit := 0;
END_FUNCTION
```

Chapter 16

LANG – Special blocks


Contents

PYTHON – User programmable block in Python	476
--	-----

PYTHON – User programmable block in Python

Block Symbol

Licence: [REXLANG](#)

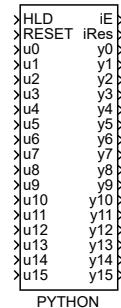

Function Description

The standard function blocks of the REXYGEN system cover the most typical needs in control applications. But there still exist situations where it is necessary (or more convenient) to implement an user-defined function. The [REXLANG](#) block covers this case for application where real-time behavior is strictly demanded. In the rest of the cases the [PYTHON](#) block can be used.

The [PYTHON](#) block implements an user-defined algorithm written in a Python scripting language and in comparison to the [REXLANG](#) block it provides a better user experience in the stage of development of the algorithm and can extend the feature set of REXYGEN system through various 3rd party libraries that are available in the Python environment.

Warning: the [PYTHON](#) block is intended for prototyping and experiments so please consider using the block in your application very carefully. It is an experimental block and always will be. There are many corner cases that may lead to unexpected behavior or even block the runtime. Packages may be poorly written or provide incorrect finalization and reinitialization which may even lead to a crash. Only a very limited support is provided for this block.

Scripting language

The scripting language is a standard Python v.3 language (see [9]). Every block references a script written in a *.py source file. The file can optionally contain functions with a reserved name that are then executed by REXYGEN. The `main()` function is executed periodically during runtime. Alongside the `main()` function the `init()` function is executed once at startup and after reset of the block, the `exit()` function is executed once when the control algorithm is stopped and before reset of the block and the `parchange()` function is executed on parameters change in REXYGEN.

Scripts on the target device

Standard python interpreter can load modules/scripts from various locations on the target device. The **PYTHON** block can reference any python script available for the standard interpreter and in addition the block can access scripts located in a directory **/rex/scripts/python**. User scripts can be directly uploaded to this directory or if the parameter **embedded** is set to **on** the script referenced by the block gets embedded in the REXYGEN configuration during compilation process and will be temporarily stored in the directory **/rex/scripts/python/embedded** during initialization of the block once the configuration is downloaded and executed on the target device.

Data exchange API

For the purpose of data exchange between a Python interpreter and REXYGEN system a module **PyRexExt** was developed as a native extension to the interpreter. The module contains an object **REX** that handles the data exchange operations. Use the following snippet at the start of the script to setup the data exchange API.

```
from PyRexExt import REX
```

I/O objects

REX.u0 - REX.u15	- objects representing block <i>inputs</i> in Python environment
REX.p0 - REX.p15	- objects representing block <i>parameters</i> in Python environment
REX.y0 - REX.y15	- objects representing block <i>outputs</i> in Python environment

Access to values

All I/O objects contain a property **v**. Reading of the property **v** performs a conversion from REXYGEN data types to Python data types. The value then can be stored in variables and used in the block algorithm. A REXYGEN array type converts into a list of values in case of one-dimensional array or into a list of lists in case of multidimensional array.

Example of reading a value of the block input:

```
x = REX.u0.v
```

Writing to the property **v**, on the other hand, performs a conversion from Python data types to REXYGEN data types and exports the value to the corresponding block output/parameter.

Example of writing a value to the block output:

```
REX.y0.v = 5
```

Arrays

Input and output objects have a readonly property **size**. It is a tuple with number of rows and columns. Arrays can be manipulated through property **v** but direct conversions between REXYGEN arrays and Python lists are not very memory efficient. However, input and output objects support indexing operator [] that restricts the conversion overhead only on the specified item.

Example of reading a value of the block input for one-dimensional array:

```
x = REX.u0[0]
```

Example of writing a value to the block output for multidimensional array:

```
REX.u0[1, 3] = 5
```

External items

The object **REX** contains a method **Item** that returns a handle to an external REXYGEN item based on a connection string specified in a parameter of the method.

Example of creating a handle to an external item and setting its value:

```
cns = REX.Item("myproject_task.CNS:scv")
cns.v = "abc"
```

Tracing

The object **REX** contains methods **Trace**, **TraceError**, **TraceWarning**, **TraceVerbose** and **TraceInfo** can be used to write messages into REXYGEN system log. Every message has a stacktrace attached.

Example of logging a message:

```
REX.Trace("abc")
```

Additional features

REX.RexDataPath – **RexDataPath** is a string constant that contains a path to a data folder of the **REX** system on the given platform. That can come handy for writing a platform independent code that requires access to the file system using absolute paths.

Inputs

HLD	Hold – the block code is not executed if the input is set to on	Bool
RESET	Rising edge resets the block. The block gets initialized again (all global variables are cleared and the init() function is called).	Bool
u0..u15	Input signals which are accessible from the script.	Unknown

Outputs

iE	Runtime error code.	Error
0 ..	No error occurred, the whole <code>main()</code> function was executed (also the <code>init()</code> function).	
xxx ..	Error code of the REXYGEN system, see Appendix C	
iRes	Execution result code.	Long (I32)
y0..y15	Output signals which can be set from within the script.	Unknown

Parameters

srcname	Source file name	program.py	String
embedded	Embedding of the script	on	Bool
p0..p15	Parameters which are accessible from the script.		Unknown

Data types definition

For data exchange between REXYGEN system and Python environment the data types of block inputs signals u0..u15, outputs signals y0..y15 and parameters p0..p15 must be explicitly specified. For that purpose a configuration file must be created for every python script with the same name plus a suffix .cfg (e.g. `program.py.cfg`). If the file is missing during the compilation process it is created with all signal types set to `double`. It is not expected this file to be edited directly. User should use a build-in editor specific to the PYTHON block instead. Available types for inputs outputs and parameters are `boolean`, `uint8`, `int16`, `uint16`, `int32`, `uint32`, `int64`, `float`, `double`, `string` and in addition the inputs and outputs support `array`, `numpy` and `image` data types.

For types `numpy` and `image` the `numpy` python package must be installed on the target device. Inputs of the type `numpy` expect the connected signal to be of the type `array` that gets converted in the runtime to a native `numpy` representation. Inputs of the type `image` expects the connected signal to be of the type `image` data type from the `RexVision` module that also gets converted in the runtime to a native `numpy` representation and can therefore be directly used with the `OpenCV` Python package.

Outputs of the type `numpy` expect to be set in the script from a `numpy` array object that gets converted to a regular `array`. Outputs of the type `image` expect to be set in the script from a `numpy` array object that gets converted to `image` data type defined in the `RexVision` module.

Example data types definition

The following example shows a shortened JSON file describing the data types of the program inputs and outputs.

```
{  
    "types": {  
        "in": [  
            {  
                "idx": 0,  
                "type": "double"  
            },  
            . . .  
            {  
                "idx": 15,  
                "type": "double"  
            }  
        ],  
        "param": [  
            {  
                "idx": 0,  
                "type": "double"  
            },  
            . . .  
            {  
                "idx": 15,  
                "type": "double"  
            }  
        ],  
        "out": [  
            {  
                "idx": 0,  
                "type": "double"  
            },  
            . . .  
            {  
                "idx": 15,  
                "type": "double"  
            }  
        ]  
    }  
}
```

Example Python script

The following example shows a simple code to sum two input signals and also sum two user-defined parameters.

```
from PyRexExt import REX

def main():
    REX.y0.v = REX.u0.v + REX.u1.v
    REX.y1.v = REX.p0.v + REX.p1.v
    return
```

Installation - Debian

The Python environment should be correctly installed and configured just by installing the `PythonBlk_T` debian package. To install the package with optional `numpy` and `OpenCV` packages execute these commands from the terminal.

```
sudo apt install rex-pythonblk
sudo apt install python3-numpy python3-opencv
```

Installation - Windows

To install the correct version of Python the recommended way is to download and install the 64-bit version from [official repository](https://www.python.org/ftp/python/3.7.3/) (<https://www.python.org/ftp/python/3.7.3/>). During the installation make sure to enable installation of the `pip` program and adding of the python binaries to the system variable `PATH`.

To install `numpy` and `OpenCV` as optional dependencies execute following commands from the command line.

```
pip install numpy
pip install opencv-python
```

Limitations

Due to the limitations of the standard Python interpreter implementation it is not recommended to use multiple `PYTHON` block instances at the different levels of executive. Doing so can lead to an unpredictable behavior and instability of the `RexCore` program.

Chapter 17

MQTT – Communication via MQTT protocol


Contents

MqttPublish – Publish MQTT message	484
MqttSubscribe – Subscribe to MQTT topic	486

MqttPublish – Publish MQTT message

Block Symbol

Licence: [MQTT](#)



Function Description

This function block depends on the MQTT driver. Please read the [MQTTDrv](#) manual [10] before use.

The **MqttPublish** block publishes messages to an MQTT broker through the connection established by the [MQTTDrv](#) driver.

The first parameter is the **topic** the block will publish the messages to. MQTT delivers Application Messages according to the Quality of Service (QoS) levels. Use the **QoS** parameter to set a different Quality of Service level. See the MQTT specification [11] for more details.

If the **RETAIN** parameter is set a RETAIN flag will be set on the outgoing PUBLISH Control Packet. See the MQTT specification [11] for more details.

The **defBuffSize** parameter can be used to optimize the memory usage of the block. It states the amount of the statically allocated memory for the inner buffer for the outgoing messages. If the value is unnecessarily large the memory is being wasted. On the other hand if the value of the parameter is too small it leads to frequent dynamic memory allocations which can be time consuming.

The message to be published is constructed from the **value** input signal. The **value** input signal is expected to be a string. If it is not a string it will be converted automatically. To request a message to be published in the current period set the **RUN** flag to **on**. The **BUSY** flag is **on** if the block has a pending request and waits for a response from a broker. When the response is received in the current cycle the **DONE** flag is set to **on**.

Inputs

value	Input signal	String
RUN	Enable execution	Bool

Parameters

topic	MQTT topic	String
--------------	------------	---------------

QoS	Quality of Service	$\odot 1$	Long (I32)
1	QoS0 (At most once)		
2	QoS1 (At least once)		
3	QoS2 (Exactly once)		
RETAIN	Retain last message	$\odot \text{on}$	Bool
defBuffSize	Default buffer size	$\downarrow 1 \odot 2048$	Long (I32)


Outputs

BUSY	Busy flag	Bool
DONE	Indicator of finished transaction	Bool
errId	Error code	Error

MqttSubscribe – Subscribe to MQTT topic

Block Symbol

Licence: [MQTT](#)



Function Description

This function block depends on the MQTT driver. Please read the [MQTTDrv](#) manual [10] before use.

The **MqttSubscribe** block subscribes to a topic on an MQTT broker and receives Publish messages on that topic through the connection established by the [MQTTDrv](#) driver.

The first parameter is the **topic** the block will subscribe to. MQTT protocol delivers Application Messages according to the Quality of Service (QoS) levels. Use the **QoS** parameter to set a different Quality of Service level. See the MQTT specification [11] for more details.

By setting the **type** parameter of the block it can be specified the expected data type of the incoming message. The block converts the incoming message to the specified type and sets the **value** output signal in case of success or it sets the **errId** to the resulting error code.

The **mode** parameter has two available options: **Last value** and **Buffered values**. If **Last value** mode is used the block will always output only the last message received even if multiple messages were received in the last period. If the **mode** is set to **Buffered values** than the block buffers the incoming messages and outputs one by one in consecutive ticks of the task.

The **defBuffSize** parameter can be used to optimize the memory usage of the block. It states the amount of the statically allocated memory in the inner buffer for the incoming messages. If the value is unnecessarily large the memory is being wasted. On the other hand if the value of the parameter is too small it leads to frequent dynamic memory allocations which can be time consuming.

A Subscribe action is performed upon a rising edge (**off**→**on**) and an Unsubscribe action is performed upon a falling edge (**on**→**off**) at the **RUN** input.

The **nDRDY** output specifies how many messages were received and are available in the inner buffer. If the **mode** of the block is set to **Last value** the **nDRDY** output can only have value 0 or 1.

The **RETAIN** output flag is set if the received Publish packet had the **RETAIN** flag set. See the MQTT specification [11] for more details.

Note that subscribing to topics containing wildcards is not supported.

Input

RUN	Enable execution	Bool
-----	------------------	------

Parameters

topic	MQTT topic	String
QoS	Quality of Service	⊕1 Long (I32)
	1 QoS0 (At most once)	
	2 QoS1 (At least once)	
	3 QoS2 (Exactly once)	
type	Expected type of incoming data	⊕1 Long (I32)
	1 string	
	2 double	
	3 long	
	4 bool	
	5 byte vector/blob	
mode	Incoming messages buffering mode	⊕1 Long (I32)
	1 Last value	
	2 Buffered values	
defBuffSize	Default buffer size	↓1 ⊕2048 Long (I32)

Outputs

value	Output signal	Unknown
nDRDY	Number of received messages	↓0 ↑10 Long (I32)
errId	Error code	Error

Chapter 18

MC_SINGLE – Motion control - single axis blocks

Contents

RM_Axis – Motion control axis	492
MC_AccelerationProfile, MCP_AccelerationProfile – Acceleration profile	497
MC_Halt, MCP_Halt – Stopping a movement (interruptible)	501
MC_HaltSuperimposed, MCP_HaltSuperimposed – Stopping a movement (superimposed and interruptible)	502
MC_Home, MCP_Home – Homing	503
MC_MoveAbsolute, MCP_MoveAbsolute – Move to position (absolute coordinate)	505
MC_MoveAdditive, MCP_MoveAdditive – Move to position (relative to previous motion)	509
MC_MoveRelative, MCP_MoveRelative – Move to position (relative to execution point)	512
MC_MoveSuperimposed, MCP_MoveSuperimposed – Superimposed move	515
MC_MoveContinuousAbsolute, MCP_MoveContinuousAbsolute – Move to position (absolute coordinate)	518
MC_MoveContinuousRelative, MCP_MoveContinuousRelative – Move to position (relative to previous motion)	521
MC_MoveVelocity, MCP_MoveVelocity – Move with constant velocity	525
MC_PositionProfile, MCP_PositionProfile – Position profile	529
MC_Power – Axis activation (power on/off)	533
MC_ReadActualPosition – Read actual position	534
MC_ReadAxisError – Read axis error	535
MC_ReadBoolParameter – Read axis parameter (bool)	536
MC_ReadParameter – Read axis parameter	537

MC_ReadStatus – Read axis status	539
MC_Reset – Reset axis errors	541
MC_SetOverride, MCP_SetOverride – Set override factors	542
MC_Stop, MCP_Stop – Stopping a movement	544
MC_TorqueControl, MCP_TorqueControl – Torque/force control	546
MC_VelocityProfile, MCP_VelocityProfile – Velocity profile	549
MC_WriteBoolParameter – Write axis parameter (bool)	553
MC_WriteParameter – Write axis parameter	554
RM_AxisOut – Axis output	555
RM_AxisSpline – Commanded values interpolation	556
RM_Track – Tracking and inching	557

This library includes functional blocks for single axis motion control as it is defined in the **PLCopen** specification. It is recommended to study the **PLCopen** specification prior to using the blocks from this library. The knowledge of **PLCopen** is necessary for advanced use of the blocks included in this library.

PLCopen defines all blocks with the **MC_** prefix. This notation is kept within this library. Nevertheless, there are also function blocks, which are not described by **PLCopen** or are described as *vendor specific*. These blocks can be recognized by the **RM_** prefix. Note that **PLCopen** (and also IEC 61131-3 which is the base for **PLCopen**) does not use block parameters, all the parameters are specified by input signals. In the **REXYGEN**, block parameters are used to simplify usage of the blocks. To keep compatibility with **PLCopen** and improve usability of the blocks, almost all of them are implemented twice: with prefix **MC_** without parameters (parameters are inputs) and with prefix **MCP_** with parameters. Some blocks require additional *vendor specific* parameters. In such a case even the **MC_-**prefixed blocks contain parameters.

PLCopen specifies that all inputs/parameters are sampled at rising-edge of the **Execute** input. In **REXYGEN** block parameters are usually changed very rare. Therefore the parameters of the activated block have not be changed until block is finished (e.g. while output **Busy** is on).

The **REXYGEN** system does not allow input-output signals and all signals must have different name. For these reasons the **Axis** input-output signal, which is used in all blocks, is divided into input **uAxis** and output **yAxis**. The block algorithm copies the input **uAxis** to the output **yAxis**. The **yAxis** output is not necessary for the function of motion control blocks, but "chaining" the axis references makes it possible to order the blocks and define priorities. Other reference signals are either defined as input-only or use this mechanism as well.

PLCopen defines the outputs **Busy**, **Active**, **CommandAborted** as optional in almost all blocks. In **REXYGEN**, some of them are never set, but the outputs are defined to simplify future extensions and/or changes in the implementation.

Units used for position and distance of axis are implementation specific. It can be meters, millimeters, encoder ticks, angular degrees (for rotational axis) or any others,

but all blocks connected to one axis must use the same position units. Time is always defined in seconds. Velocity unit is thus "position units per second" and acceleration unit is "position units per square second".


The REXYGEN system uses more threads for execution of the function blocks. In standard function blocks the synchronization is provided by the system and the user does not need to care about it. But using the **Reference** references could violate the synchronization mechanisms. However, there is no problem if all referenced blocks are located in the same task and therefore e.g. the **RM_Axis** block must be in the same task as all other blocks connected to this axis.

Some inputs/parameters are of enumeration type (for example **BufferMode** or **Direction**). It is possible to choose any of the defined values for this type in the MCP_ version of the blocks, although not all of them are valid for all blocks (for example the block **MC_MoveVelocity** does not support **Direction = shortest_way**). Valid values for each block are listed in this manual.

RM_Axis – Motion control axis

Block Symbol

Licence: MOTION CONTROL

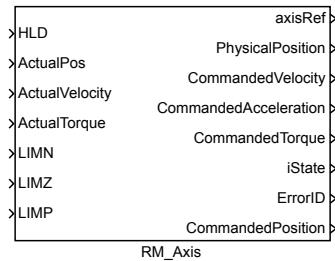

Function Description

The **RM_AXIS** block is a cornerstone of the motion control solution within the REXYGEN system. This base block keeps all status values and implements basic algorithm for one motion control axis (one motor), which includes limits checking, emergency stop, etc. The block is used for both real and virtual axes. The real axis must have a position feedback controller, which is out of this block's scope. The key status values are commanded position, velocity, acceleration and torque, as well as state of the axis, axis error code and a reference to the block, which controls the axis.

This block (like all blocks in the motion control library) does not implement a feedback controller which would keep the actual position as near to the commanded position as possible. Such a controller must be provided by using other blocks (e.g. **PIDU**) or external (hardware) controller. The feedback signals are used for lag checking, homing and could be used in special motion control blocks.


The parameters of this block correspond with the requirements of the PLCopen standard for an axis. If improper parameters are set, the **errorID** output is set to -700 (invalid parameter) and all motion blocks fail with the -720 error code (general failure).

Note that the default values for position, velocity and acceleration limits are intentionally set to 0, which makes them invalid. Limits must always be set by the user according to the real axis and the axis actuator.


Example

Following example illustrates basic principle of use of motion control blocks. It presents the minimal configuration which is needed for operation of a physical or virtual axis. The axis is represented by **RM_Axis** block. The limitations imposed on the motion trajectory in form of maximum velocity, acceleration, jerk and position have to be set in parameters of the **RM_Axis** block. The inputs can be connected to supply the values of actual position, speed and torque (feedback for slip monitoring) or logical limit switch signals for homing procedure. The **axisRef** output signal needs to be connected to any motion control block

related to the corresponding axis. The axis has to be activated by enabling the MC_Power block. The state of the axis changes from Disabled to Standstill (see the following state transition diagram) and any discrete, continuous or synchronized motion can be started by executing a proper functional block (e.g. MC_MoveAbsolute). The trajectory of motion in form of desired position, velocity and acceleration is generated in output signals of the RM_Axis block. The reference values are provided to an actuator control loop which is implemented locally in REXYGEN system in the same or different task or they are transmitted via a serial communication interface to end device which controls the motor motion (servo amplifier, frequency inverter etc.). In case of any error, the axis performs an emergency stop and indicates the error ID. The error has to be confirmed by executing the MC_Reset block prior to any subsequent motion command. The following state diagram demonstrates the state transitions of an axis.

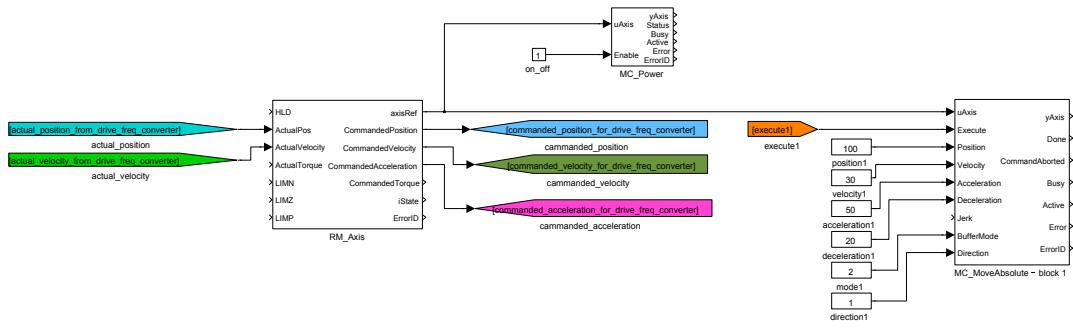

Axis state transition diagram

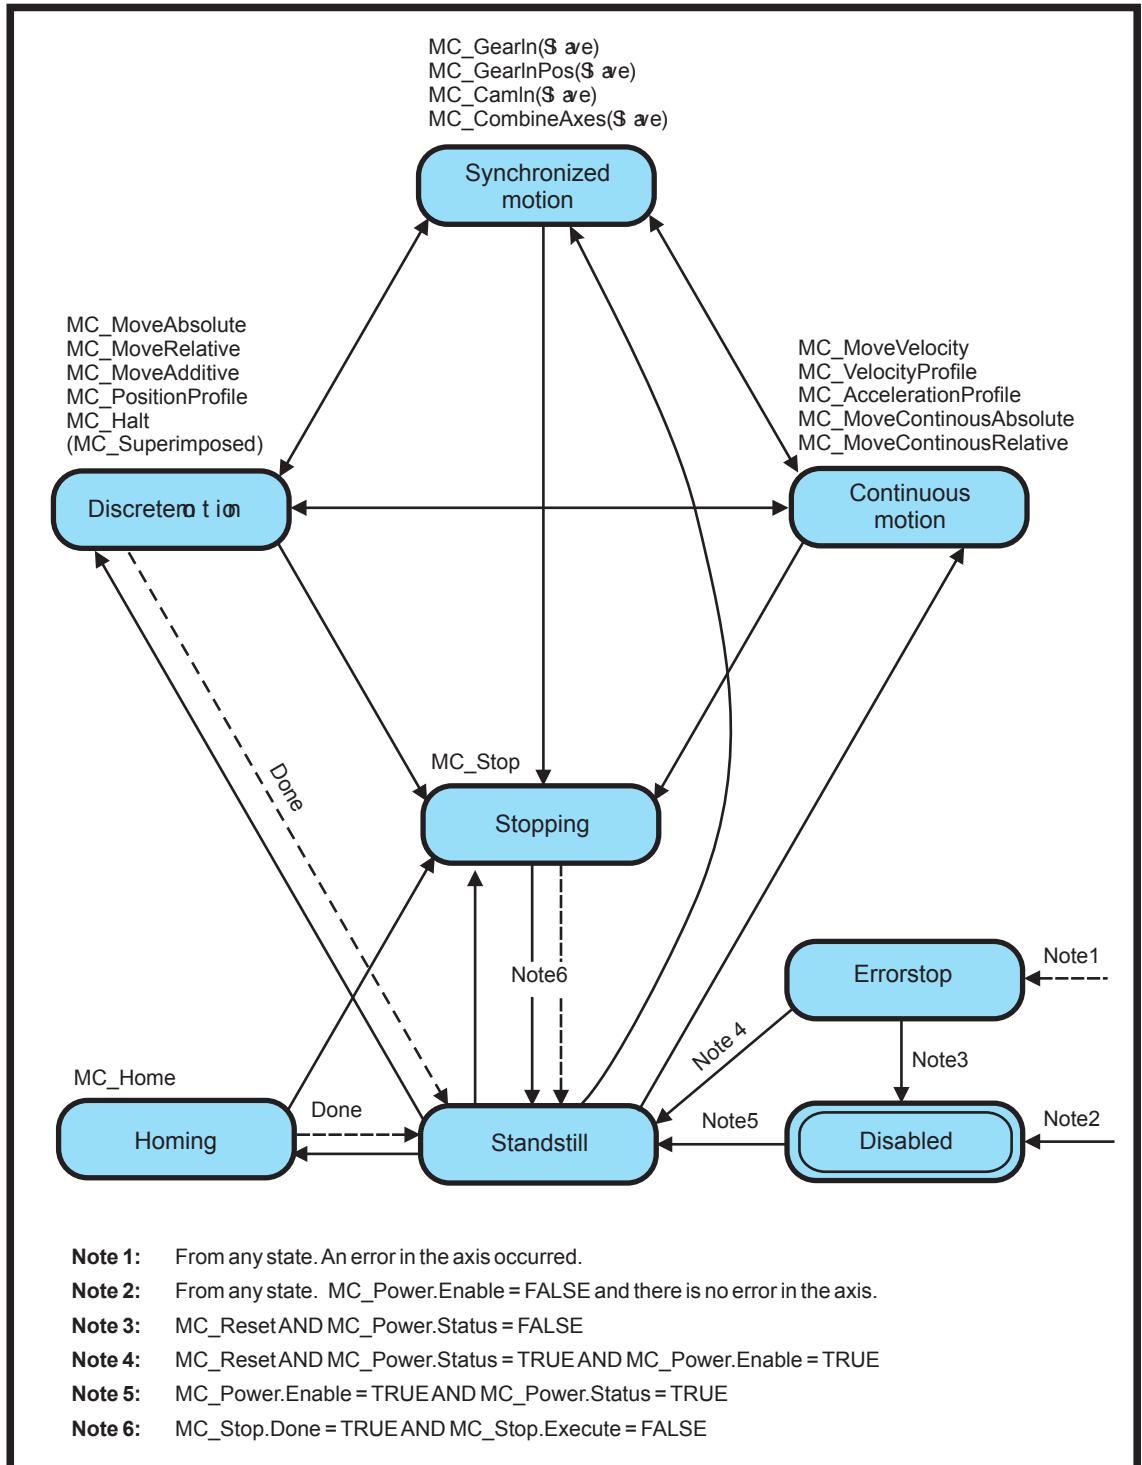


Motion blending

According to PLCopen specification, number of motion control blocks allow to specify **BufferMode** parameter, which determines a behaviour of the axis in case that a motion command is interrupted by another one before the first motion is finished. This transition from one motion to another (called "Blending") can be handled in various ways. The following table presents a brief explanation of functionality of each blending mode and the resulting shapes of generated trajectories are illustrated in the figure. For detailed description see full PLCopen specification.

Aborting	The new motion is executed immediately
Buffered	the new motion is executed immediately after finishing the previous one, there is no blending
Blending low	the new motion is executed immediately after finishing the previous one, but the axis will not stop between the movements, the first motion ends with the lower limit for maximum velocity of both blocks at the first end-position
Blending high	the new motion is executed immediately after finishing the previous one, but the axis will not stop between the movements, the first motion ends with the higher limit for maximum velocity of both blocks at the first end-position
Blending previous	the new motion is executed immediately after finishing the previous one, but the axis will not stop between the movements, the first motion ends with the limit for maximum velocity of first block at the first end-position
Blending next	the new motion is executed immediately after finishing the previous one, but the axis will not stop between the movements, the first motion ends with the limit for maximum velocity of second block at the first end-position

Illustration of blending modes

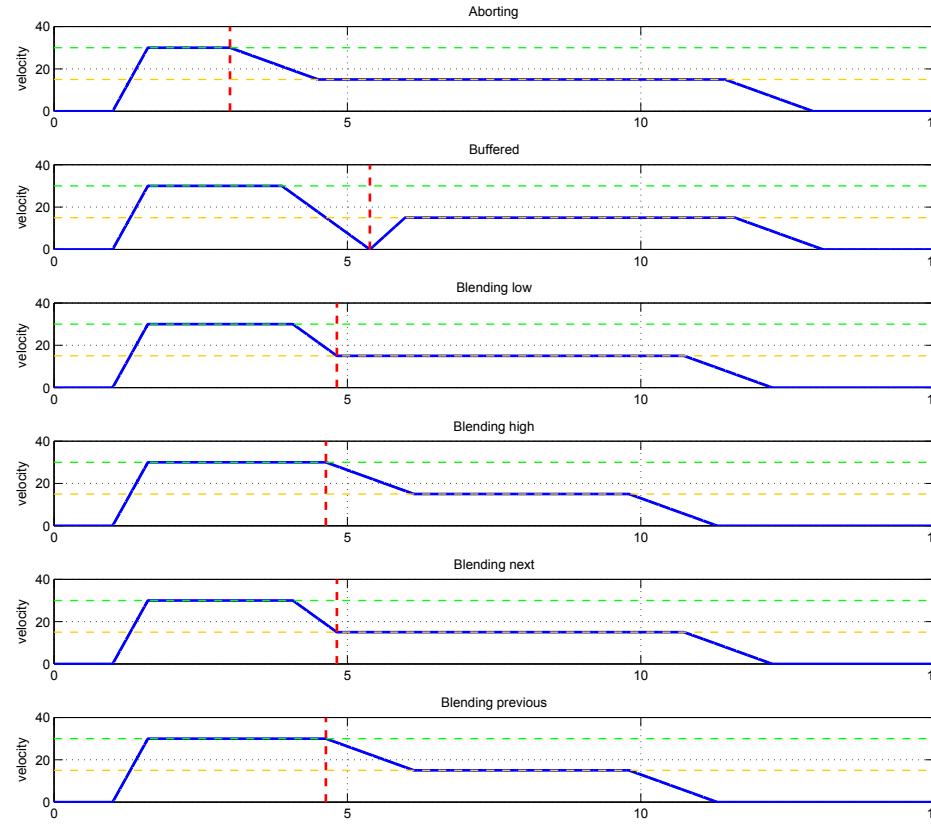


—	Commanded velocity
- - -	Active block 1 =false/Active block 2 = true
- - -	Value of the maximum velocity $v_1=30$ (block 1)
- - -	Value of the maximum velocity $v_2=15$ (block 2)

MC_AccelerationProfile, MCP_AccelerationProfile – Acceleration profile

Block Symbols

Licence: MOTION CONTROL

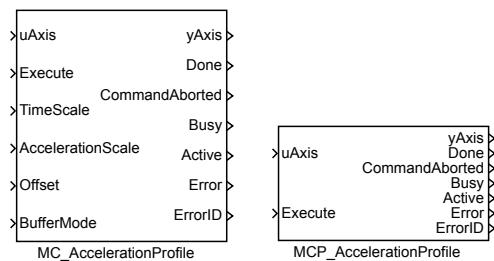

Function Description

The MC_AccelerationProfile and MCP_AccelerationProfile blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_PositionProfile block commands a time-position locked motion profile. Block implements two possibilities for definition of time-acceleration function:

1. sequence of values: the user defines a sequence of time-acceleration pairs. In each time interval, the values of velocity are interpolated. Times sequence is in array **times**, position sequence is in array **values**. Time sequence must be increasing and must start with zero or zero must be between the first and last point. Execution always starts from zero time, so if the sequence start with negative time, part of the profile is not executed (could be used for debugging or time shift). For [MC_VelocityProfile](#) and [MC_AccelerationProfile](#) interpolation is linear, but for [MC_PositionProfile](#), 3rd order polynomial is used in order to avoid steps in velocity.

2. spline: time sequence is the same as in previous case. Each interval is interpolated by 5th order polynomial $p(x) = a_5x^5 + a_4x^4 + a_3x^3 + a_2x^2 + a_1x + a_0$ where beginning of the time-interval is for $x = 0$, end of time-interval is for $x = 1$ and factors a_i are put in array **values** in ascending order (e.g. array **values** contains 6 values for each interval). This method allows smaller number of intervals and there is special editor for synthesis of the interpolating spline function.

For both case, the time sequence could be equally spaced and then array **times** includes only the first (usually zero) and last point.

Note 1: input **TimePosition** is missing, because all path data are in parameters of the block.

Note 2: parameter **values** must be set as vector in all cases, e.g. text string must not include semicolon.

Note 3: incorrect parameter `cSeg` (higher then real size of arrays `times` and/or `values`) leads to unpredictable result and in some cases crashes whole runtime execution (The problem is platform dependent and currently it is known only for SIMULINK - crash of whole MATLAB).

Note 4: in the spline mode, polynomial is always 5th order and always in position (also for sibling block `MC_PositionProfile` and `MC_VelocityProfile`) and it couldn't be changed. As the special editor exists, this is not important limitation.

Note 5: The block does not include ramp-in mode. If start position and/or velocity of profile is different from actual (commanded) position of axis, block fails with error -707 (step). It is recommended to use `BufferMode=BlendingNext` to eliminate the problem with start velocity.

Inputs

<code>uAxis</code>	Axis reference (only <code>RM_Axis.axisRef=uAxis</code> or <code>yAxis=uAxis</code> connections are allowed)	Reference
<code>Execute</code>	The block is activated on rising edge	Bool
<code>TimeScale</code>	Overall scale factor in time	Double (F64)
<code>AccelerationScale</code>	Overall scale factor in value	Double (F64)
<code>Offset</code>	Overall profile offset in value	Double (F64)
<code>BufferMode</code>	Buffering mode	Long (I32)
	1 Aborting (start immediately)	
	2 Buffered (start after finish of previous motion)	
	3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
	6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	


Outputs

<code>yAxis</code>	Axis reference (only <code>RM_Axis.axisRef=yAxis</code> or <code>uAxis=yAxis</code> connections are allowed)	Reference
<code>Done</code>	Algorithm finished	Bool
<code>CommandAborted</code>	Algorithm was aborted	Bool
<code>Busy</code>	Algorithm not finished yet	Bool
<code>Active</code>	The block is controlling the axis	Bool
<code>Error</code>	Error occurred	Bool
<code>ErrorID</code>	Result of the last operation i REXYGEN general error	Error

Parameters

alg	Algorithm for interpolation 1 Sequence of time/value pairs 2 Sequence of equidistant values 3 Spline 4 Equidistant spline	$\odot 2$ Long (I32)
cSeg	Number of profile segments	$\odot 3$ Long (I32)
times	Times when segments are switched	$\odot [0 \text{ } 30]$ Double (F64)
values	Values or interpolating polynomial coefficients (a0, a1, a2, ...) $\odot [0 \text{ } 100 \text{ } 100 \text{ } 50]$	Double (F64)


Example

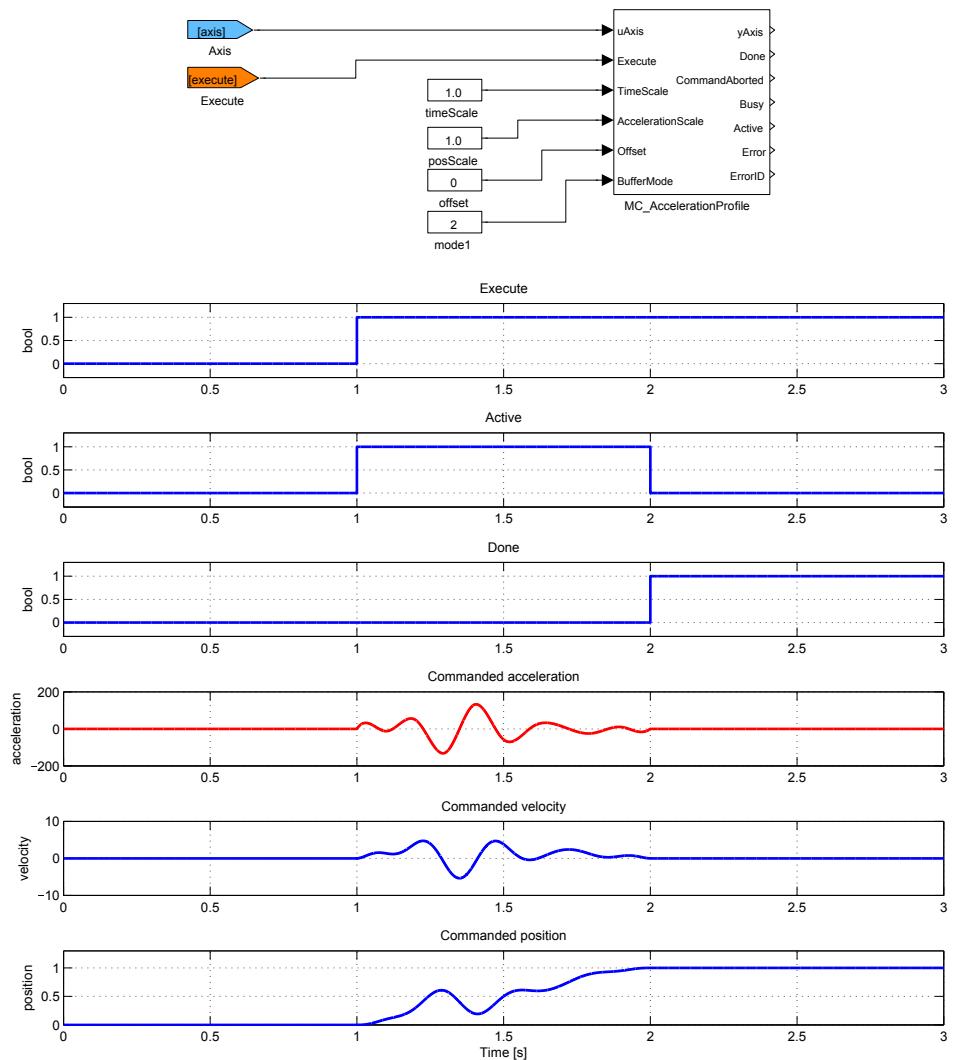

MC_Halt, MCP_Halt – Stopping a movement (interruptible)

Block Symbols

Licence: MOTION CONTROL

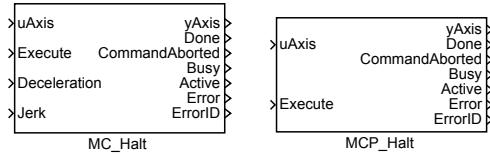

Function Description

The MC_Halt and MCP_Halt blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_Halt block commands a controlled motion stop and transfers the axis to the state DiscreteMotion. After the axis has reached zero velocity, the Done output is set to true immediately and the axis state is changed to Standstill.

Note 1: Block MC_Halt is intended for temporary stop of an axis under normal working conditions. Any next motion command which cancels the MC_Halt can be executed in nonbuffered mode (opposite to [MC_Stop](#), which cannot be interrupted). The new command can start even before the stopping sequence was finished.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)


Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_HaltSuperimposed, MCP_HaltSuperimposed – Stopping a movement (superimposed and interruptible)

Block Symbols

Licence: MOTION CONTROL

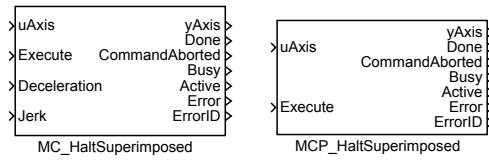

Function Description

The MC_HaltSuperimposed and MCP_HaltSuperimposed blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

Block MC_HaltSuperimposed commands a halt to all superimposed motions of the axis. The underlying motion is not interrupted.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)


Outputs

yAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_Home, MCP_Home – Homing

Block Symbols

Licence: MOTION CONTROL

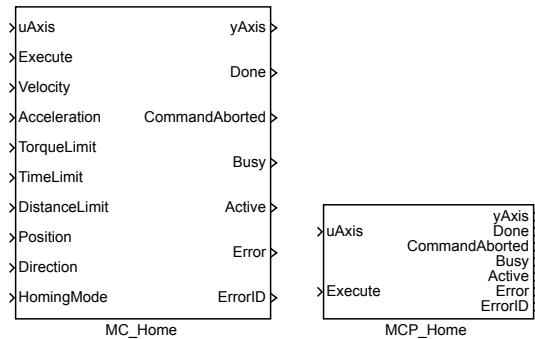

Function Description

The MC_Home and MCP_Home blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_Home block commands the axis to perform the "search home" sequence. The details of this sequence are described in PLCopen and can be set by parameters of the block. The "Position" input is used to set the absolute position when reference signal is detected. This Function Block completes at "StandStill".

Note 1: Parameter/input BufferMode is not supported. Mode is always **Aborting**. It is not limitation, because homing is typically done once in initialization sequence before some regular movement is proceeded.

Note 2: Homing procedure requires some of **RM_Axis** block input connected. Depending on homing mode, **ActualPos**, **ActualTorque**, **LimP**, **LimZ**, **LimN** can be required. It is expected that only one method is used. Therefore, there are no separate inputs for zero switch and encoder reference pulse (both must be connected to **LimZ**).

Note 3: **HomingMode=4(Direct)** only sets the actual position. Therefore, the **MC_SetPosition** block is not implemented. **HomingMode=5(Absolute)** only switches the axis from state **Homing** to state **StandStill**.

Note 4: Motion trajectory for homing procedure is implemented in simpler way than for regular motion commands - acceleration and deceleration is same (only one parameter) and jerk is not used. For extremely precise homing (position set), it is recommended to run homing procedure twice. First, homing procedure is run with "high" velocity to move near zero switch, then small movement (out of zero switch) follows and finally second homing procedure with "small" velocity is performed.

Note 5: **HomingMode=6(Block)** detect home-position when the actual torque reach value in parameter **TorqueLimit** or position lag reach value in parameter **MaxPositionLag**

in attached RM_Axis block (only if the parameter has positive value).

Inputs

uAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
TorqueLimit	Maximal allowed torque/force	Double (F64)
TimeLimit	Maximal allowed time for the whole algorithm [s]	Double (F64)
DistanceLimit	Maximal allowed distance for the whole algorithm [unit]	Double (F64)
Position	Requested target position (absolute) [unit]	Double (F64)
Direction	Direction of movement (cyclic axis or special case only)	Long (I32)
	1 Positive	
	2 Shortest	
	3 Negative	
	4 Current	
HomingMode	Homing mode algorithm	Long (I32)
	1 Absolute switch	
	2 Limit switch	
	3 Reference pulse	
	4 Direct (user reference)	
	5 Absolute encoder	
	6 Block	


Outputs

yAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
	i REXYGEN general error	

MC_MoveAbsolute, MCP_MoveAbsolute – Move to position (absolute coordinate)

Block Symbols

Licence: MOTION CONTROL

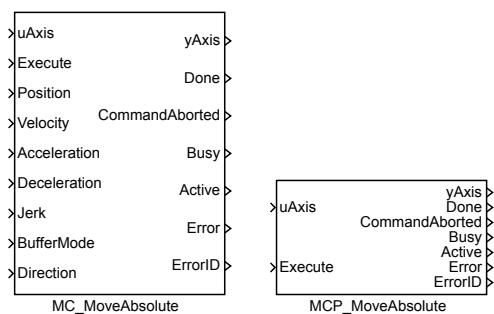

Function Description

The MC_MoveAbsolute and MCP_MoveAbsolute blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_MoveAbsolute block moves an axis to specified position as fast as possible. If no further action is pending, final velocity is zero (axis moves to position and stops) otherwise it depends on blending mode. For blending purposes, start and stop velocity of this block is maximum velocity with direction respecting current and final position. If start velocity of next pending block is in opposite direction, then blending velocity is always zero.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input Jerk is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

The MC_MoveRelative block act almost same as MC_MoveAbsolute. The only difference is the final position is computed adding input Distance to current (when rising edge on input Execute occurred) position.

The MC_MoveAdditive block act almost same as MC_MoveRelative. The only difference is the final position is computed adding input Distance to final position of the previous block.

The MC_MoveSuperimposed block acts almost the same as the MC_MoveRelative

block. The only difference is the current move is not aborted and superimposed move is executed immediately and added to current move. Original move act like superimposed move is not run.

The following table describes all inputs, parameters and outputs which are used in some of the blocks in the described block suite.

Inputs


uAxis	AAxis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Position	Requested target position (absolute) [unit]	Double (F64)
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
BufferMode	Buffering mode	Long (I32)
	1 Aborting (start immediately) 2 Buffered (start after finish of previous motion) 3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands) 4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands) 5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity) 6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	
Direction	Direction of movement (cyclic axis or special case only)	Long (I32)
	1 Positive 2 Shortest 3 Negative 4 Current	

Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool

ErrorID	Result of the last operation	Error
i	REXYGEN general error	


Example

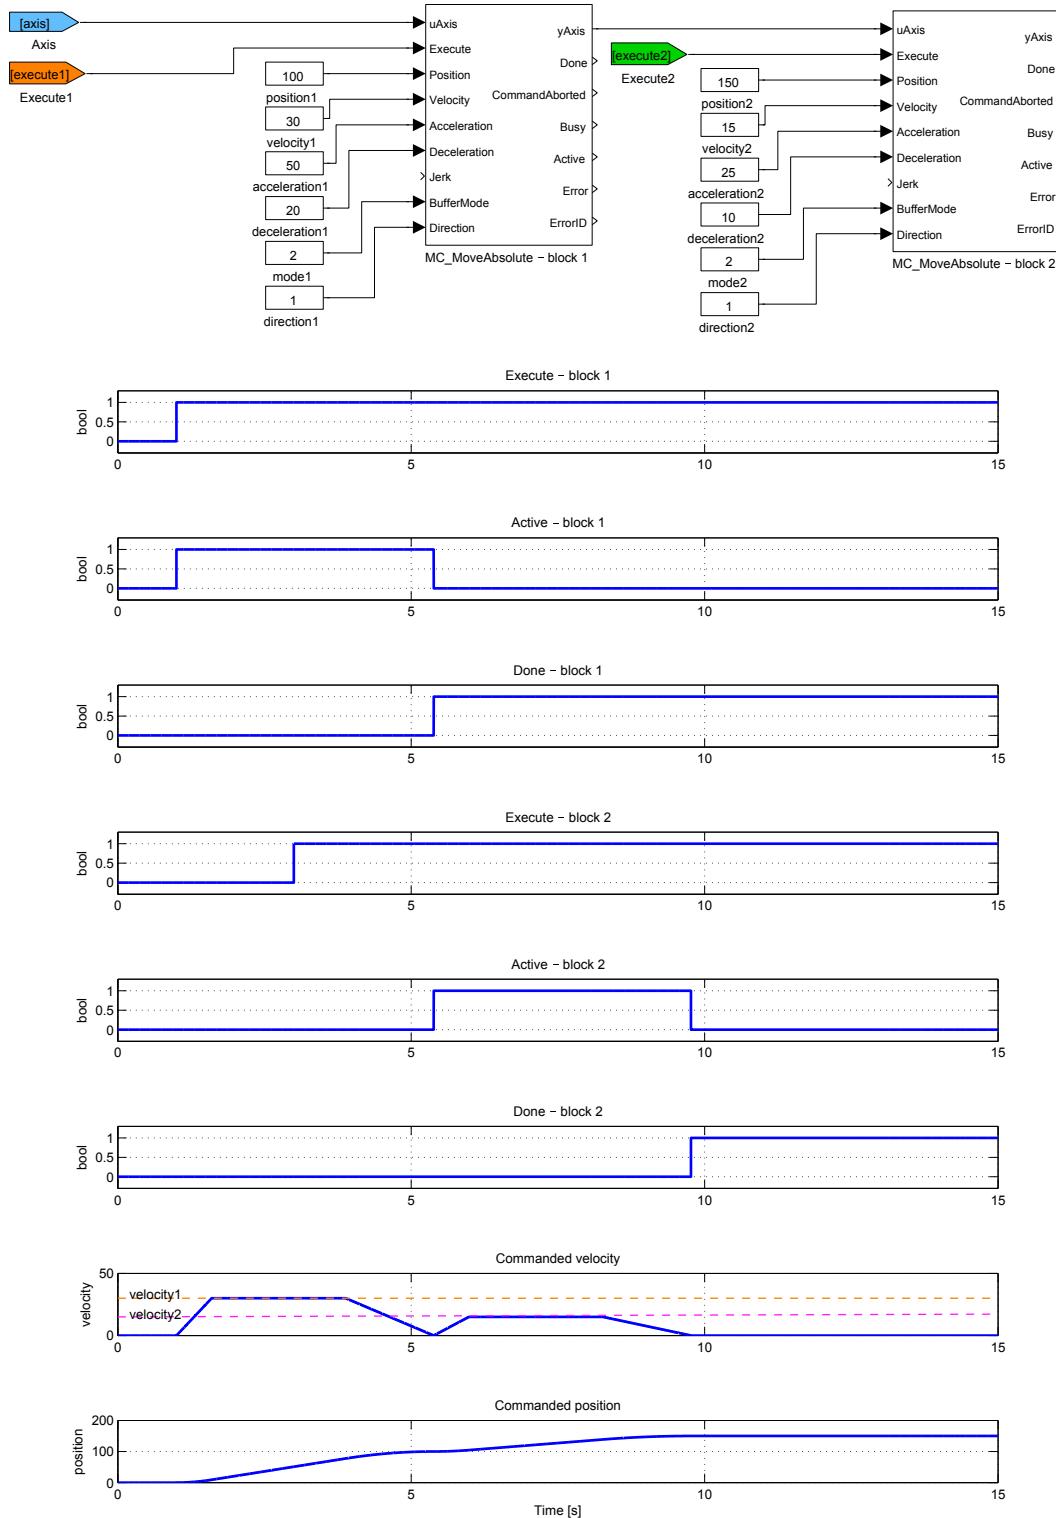

MC_MoveAdditive, MCP_MoveAdditive – Move to position (relative to previous motion)

Block Symbols

Licence: MOTION CONTROL

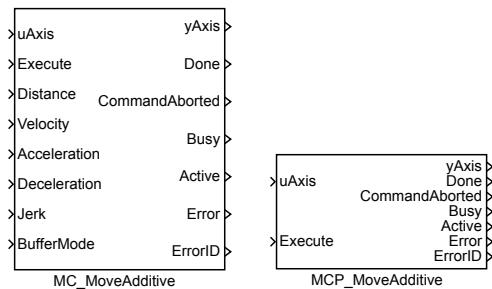

Function Description

The MC_MoveAdditive and MCP_MoveAdditive blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_version of the block.

The MC_MoveAdditive block moves an axis to specified position as fast as possible. The final position is determined by adding the value of Distance parameter to final position of previous motion block which was controlling the axis. If no further action is pending, final velocity is zero (axis moves to position and stops) otherwise it depends on blending mode. For blending purposes, start and stop velocity of this block is maximum velocity with direction respecting current and final position. If start velocity of next pending block is in opposite direction, then blending velocity is always zero.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input Jerk is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

Inputs


uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Distance	Requested target distance (relative to start point) [unit]	Double (F64)

Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
BufferMode	Buffering mode	Long (I32)
	1 Aborting (start immediately)	
	2 Buffered (start after finish of previous motion)	
	3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
	6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	

Outputs

yAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

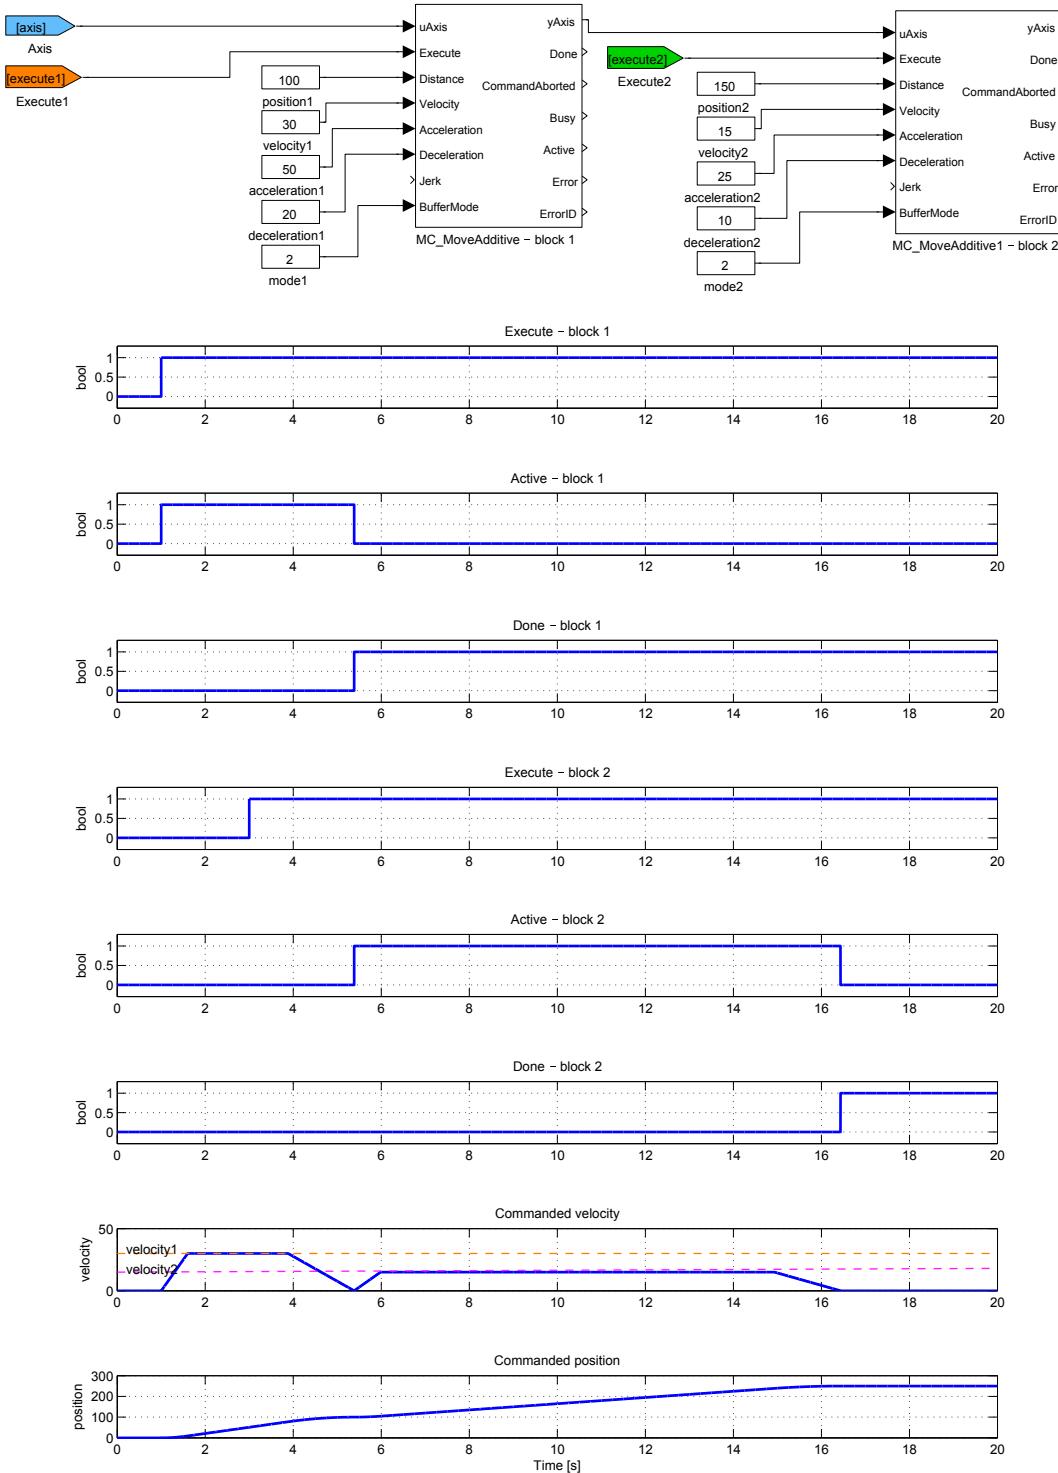

MC_MoveRelative, MCP_MoveRelative – Move to position (relative to execution point)

Block Symbols

Licence: MOTION CONTROL

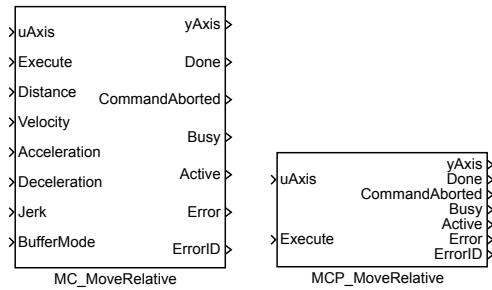

Function Description

The MC_MoveRelative and MCP_MoveRelative blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_version of the block.

The MC_MoveRelative block moves an axis to specified position as fast as possible. The final position is determined by adding the value of Distance parameter to the actual position at the moment of triggering the Execute input. If no further action is pending, final velocity is zero (axis moves to position and stops) otherwise it depends on blending mode. For blending purposes, start and stop velocity of this block is maximum velocity with direction respecting current and final position. If start velocity of next pending block is in opposite direction, then blending velocity is always zero.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input Jerk is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

Inputs


uAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Distance	Requested target distance (relative to execution point) [unit]	Double (F64)

Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [[unit/s ²]]	Double (F64)
Deceleration	Maximal allowed deceleration [[unit/s ²]]	Double (F64)
Jerk	Maximal allowed jerk [[unit/s ³]]	Double (F64)
BufferMode	Buffering mode	Long (I32)
	1 Aborting (start immediately)	
	2 Buffered (start after finish of previous motion)	
	3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
	6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	

Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

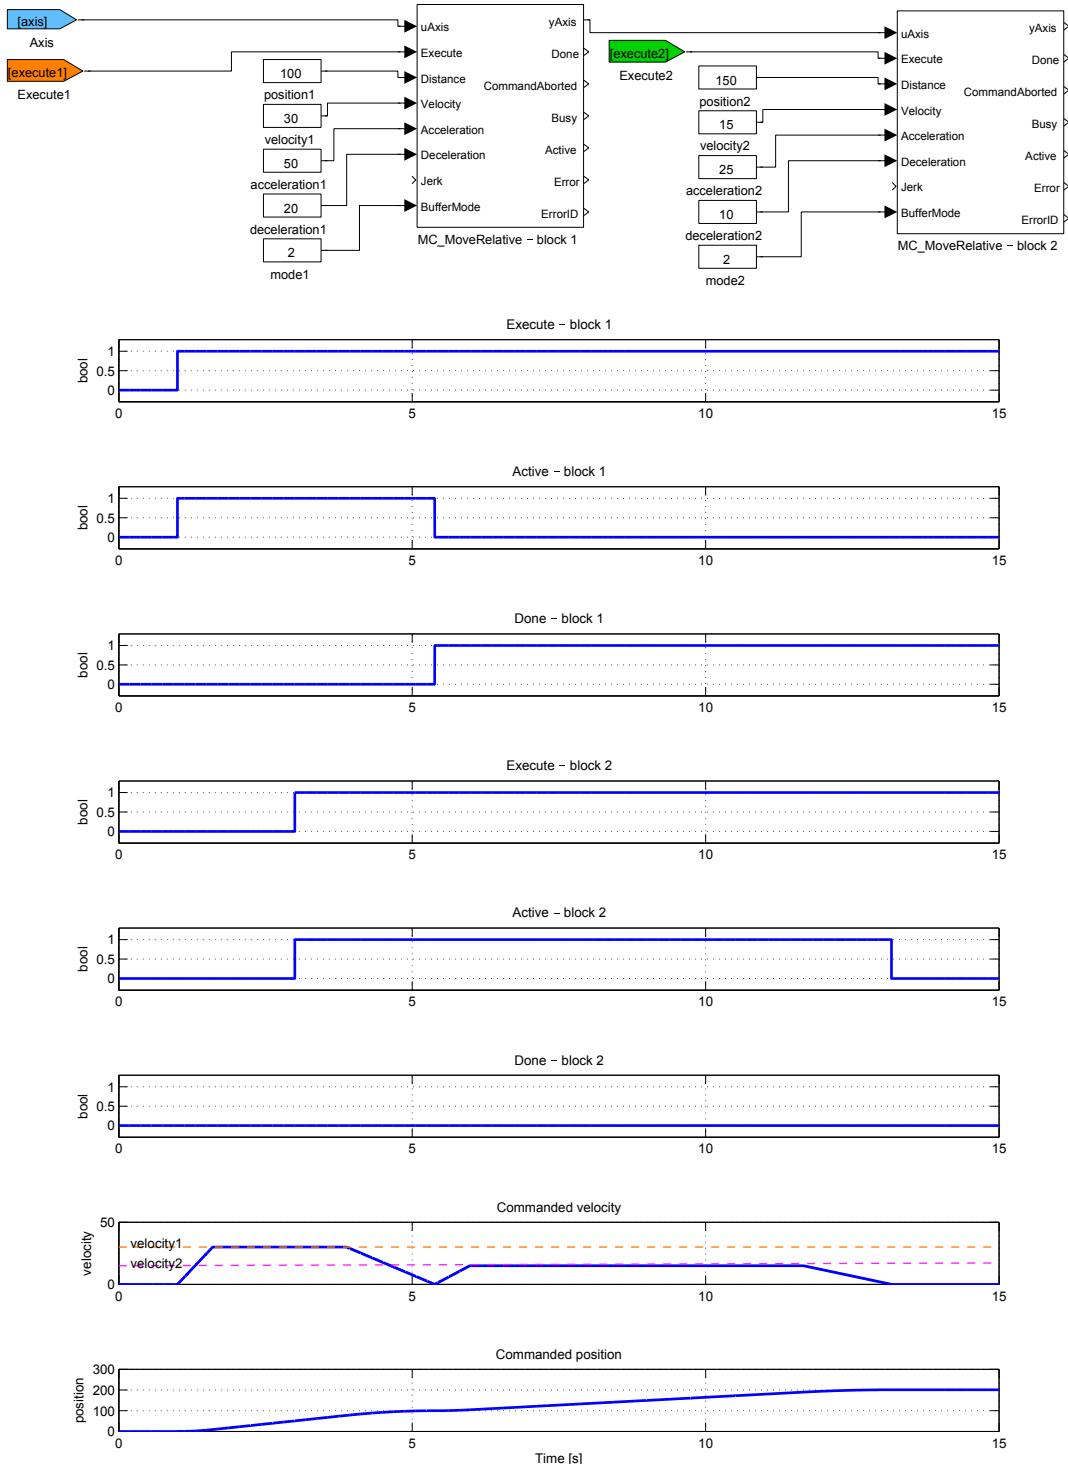

MC_MoveSuperimposed, MCP_MoveSuperimposed – Superimposed move

Block Symbols

Licence: MOTION CONTROL

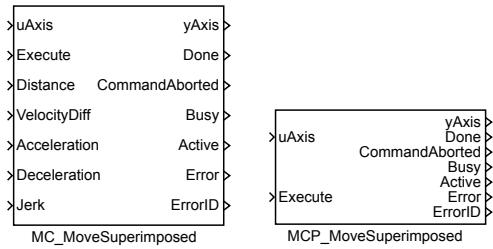

Function Description

The MC_MoveSuperimposed and MCP_MoveSuperimposed blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_MoveSuperimposed block moves an axis to specified position as fast as possible (with respect to set limitations). Final position is specified by input parameter **Distance**. In case that the axis is already in motion at the moment of execution of the MC_MoveSuperimposed block, the generated values of position, velocity and acceleration are added to the values provided by the previous motion block. If there is no previous motion, the block behaves in the same way as the [MC_MoveRelative](#) command.

Note: There is no **BufferMode** parameter which is irrelevant in the superimposed mode. If there is already an superimposed motion running at the moment of execution, the new block is started immediately (analogous to aborting mode).



Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Execute	The block is activated on rising edge	Bool
Distance	Requested target distance (relative to execution point) [unit]	Double (F64)
VelocityDiff	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)

Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

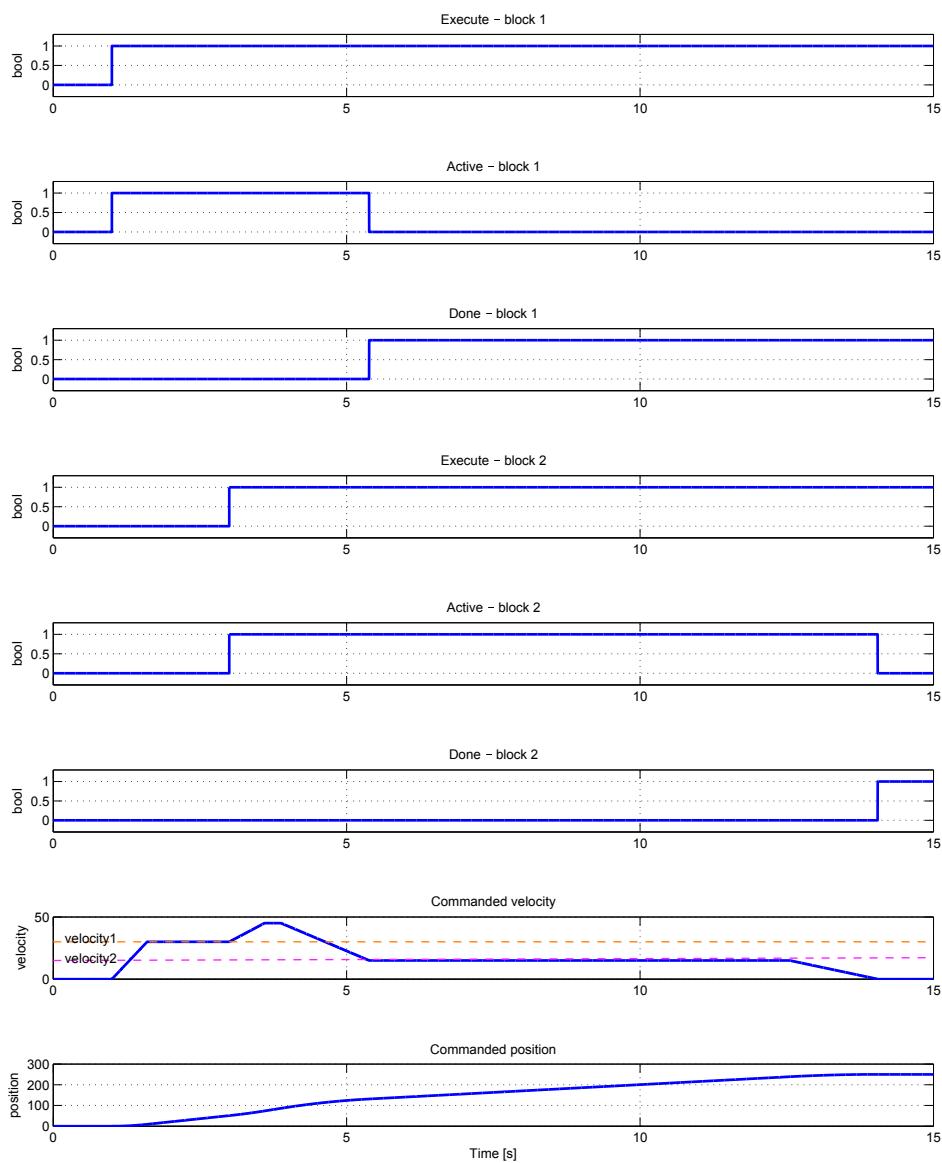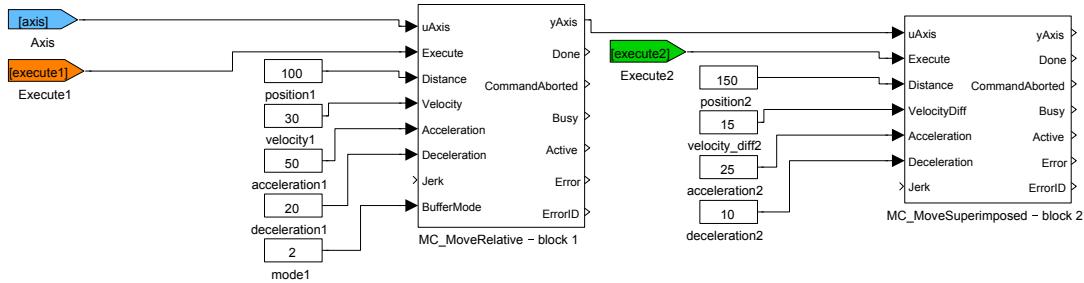

MC_MoveContinuousAbsolute, MCP_MoveContinuousAbsolute – Move to position (absolute coordinate)

Block Symbols

Licence: MOTION CONTROL

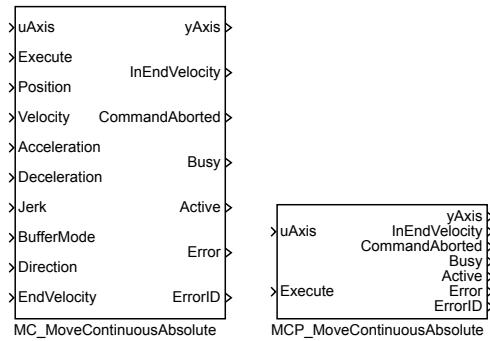

Function Description

The MC_MoveContinuousAbsolute and MCP_MoveContinuousAbsolute blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_MoveContinuousAbsolute block moves an axis to specified position as fast as possible. If no further action is pending, final velocity is specified by parameter EndVelocity. For blending purposes, start and stop velocity of this block is maximum velocity with direction respecting current and final position. If start velocity of next pending block is in opposite direction, then blending velocity is always zero.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input Jerk is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

Note 1: If the EndVelocity is set to zero value, the block behaves in the same way as [MC_MoveAbsolute](#).

Note 2: If next motion command is executed before the final position is reached, the block behaves in the same way as [MC_MoveAbsolute](#).


Inputs

uAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Position	Requested target position (absolute) [unit]	Double (F64)
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
BufferMode	Buffering mode	Long (I32)
	1 Aborting (start immediately)	
	2 Buffered (start after finish of previous motion)	
	3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
	6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	
Direction	Direction of movement (cyclic axis or special case only)	Long (I32)
	1 Positive	
	2 Shortest	
	3 Negative	
	4 Current	
EndVelocity	End velocity	Double (F64)

Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
InEndVelocity	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
	i REXYGEN general error	


Example

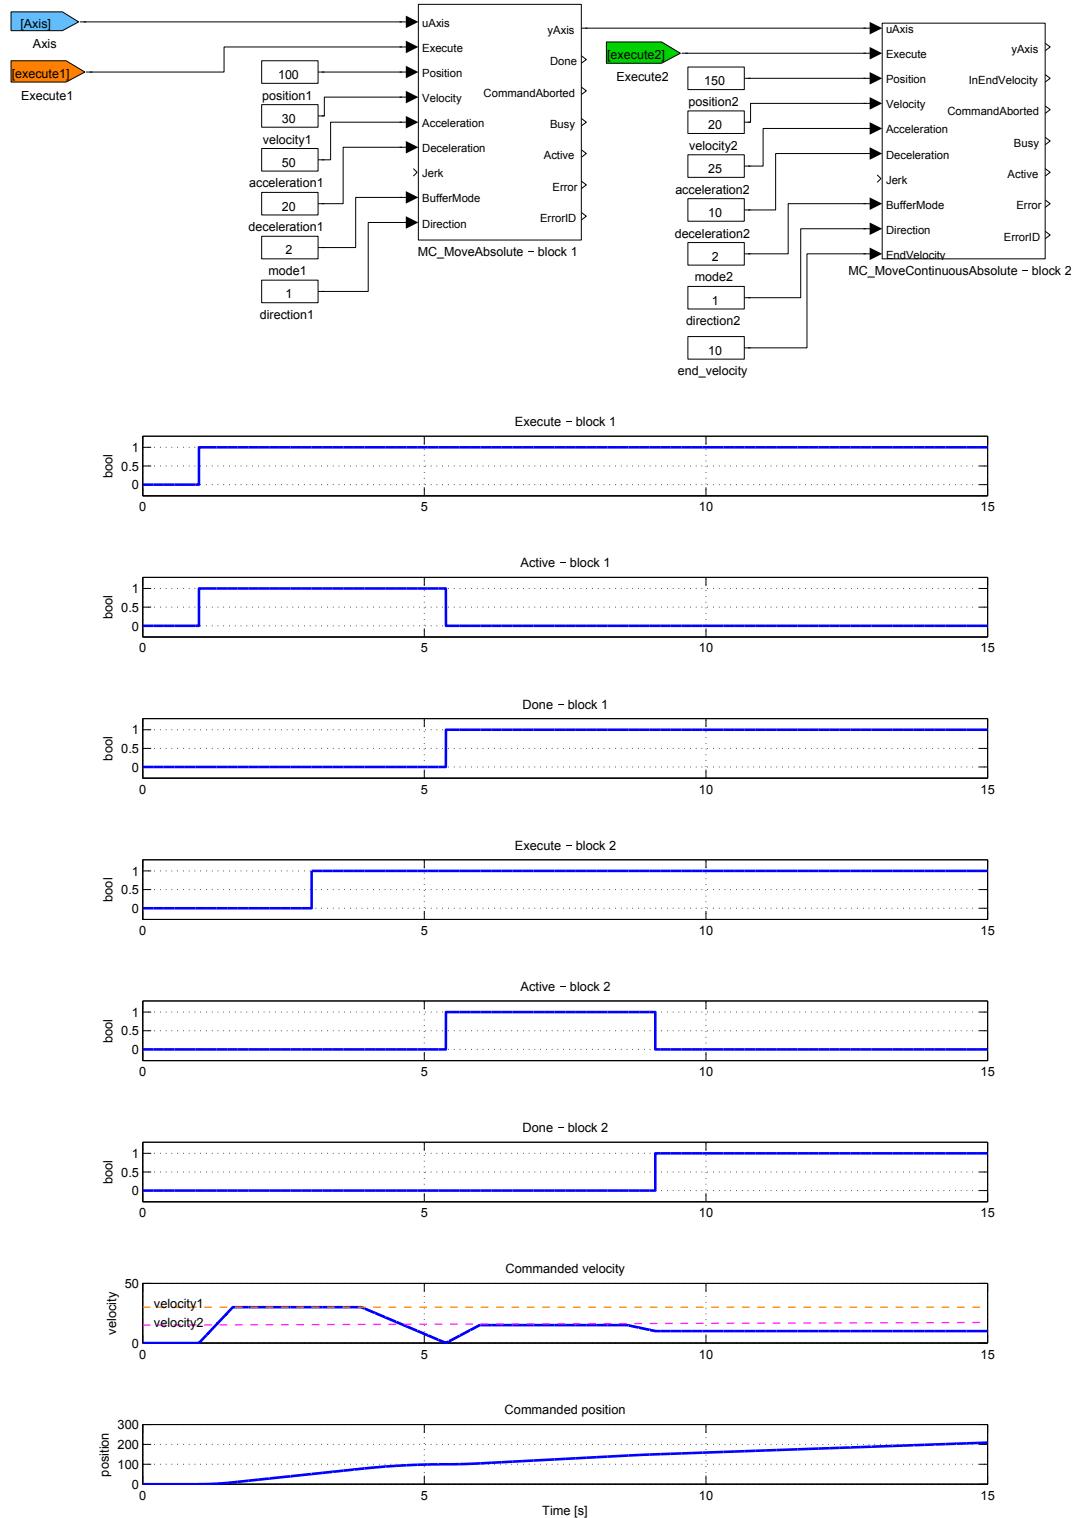

MC_MoveContinuousRelative, MCP_MoveContinuousRelative – Move to position (relative to previous motion)

Block Symbols

Licence: MOTION CONTROL

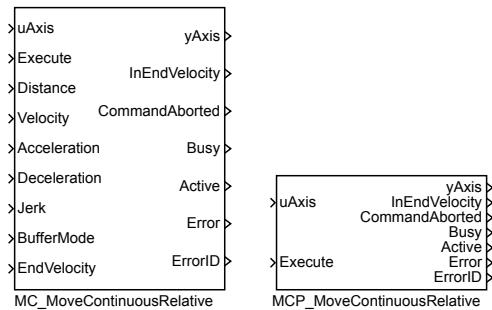

Function Description

The MC_MoveContinuousRelative and MCP_MoveContinuousRelative blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_MoveContinuousRelative block moves an axis to specified position as fast as possible. The final position is determined by adding the value of **Distance** parameter to the actual position at the moment of triggering the **Execute** input. If no further action is pending, final velocity is specified by parameter **EndVelocity**. For blending purposes, start and stop velocity of this block is maximum velocity with direction respecting current and final position. If start velocity of next pending block is in opposite direction, then blending velocity is always zero.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input **Jerk** is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

Note 1: If the **EndVelocity** is set to zero value, the block behaves in the same way as [MC_MoveRelative](#).

Note 2: If next motion command is executed before the final position is reached, the block behaves in the same way as [MC_MoveRelative](#).

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input **Jerk**

is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input **Jerk** is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

If next pending block is executed too late in order to reach requested velocity the generated output depends on jerk setting. If no limit for jerk is used (block input **Jerk** is zero or unconnected) block uses maximum acceleration or deceleration to reach the desired velocity as near as possible. If jerk is limited it is not possible to say what is the nearest velocity because also acceleration is important. For this reason, the axis is stopped and moved backward and blending velocity is always reached. Although this seems to be correct solution, it might look confusing in a real situation. Therefore, it is recommended to reorganize execution order of the motion blocks and avoid this situation.

Inputs


uAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Distance	Requested target distance (relative to execution point) [unit]	Double (F64)
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)

BufferMode	Buffering mode	Long (I32)
1	Aborting (start immediately)	
2	Buffered (start after finish of previous motion)	
3	Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
4	Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
5	Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
6	Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	
EndVelocity	End velocity	Long (I32)

Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
InEndVelocity	PLCopen Done (algorithm finished)	Bool
CommandAborted	PLCopen CommandAborted (algorithm was aborted)	Bool
Busy	PLCopen Busy (algorithm not finished yet)	Bool
Active	PLCopen Active (the block is controlling the axis)	Bool
Error	PLCopen Error (error occurred)	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

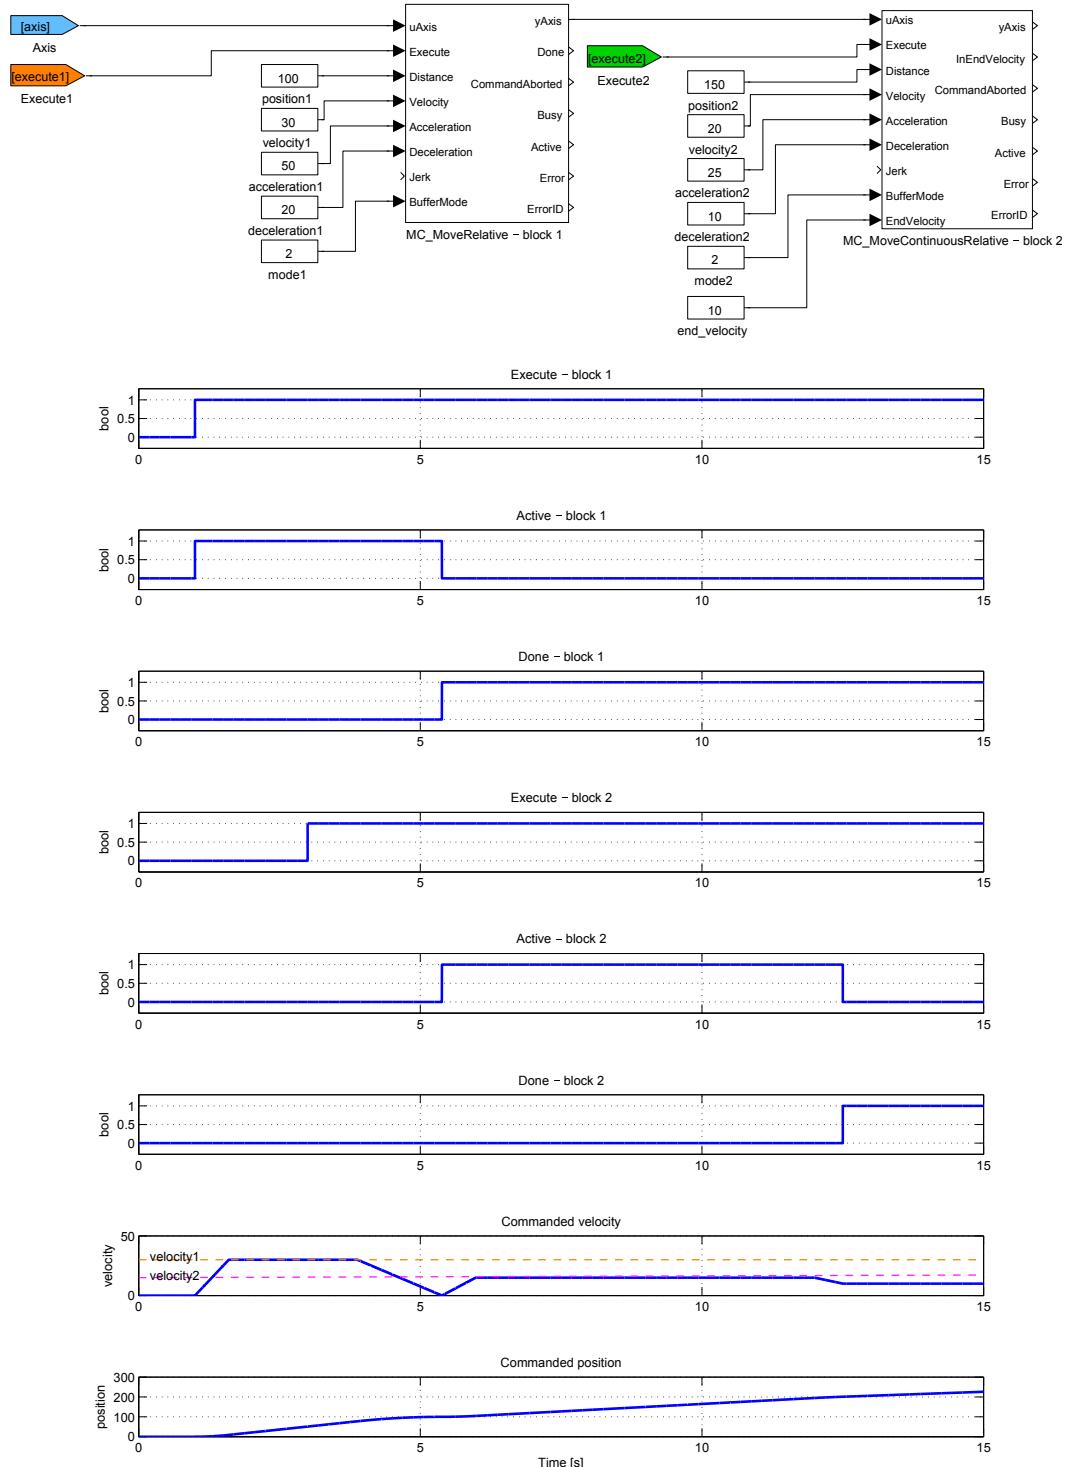

MC_MoveVelocity, MCP_MoveVelocity – Move with constant velocity

Block Symbols

Licence: MOTION CONTROL

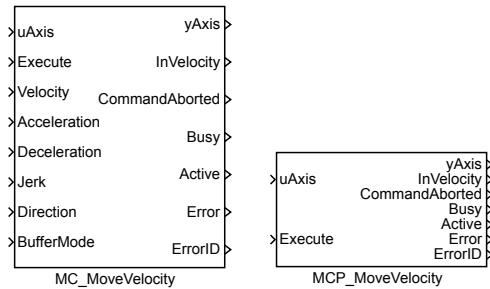

Function Description

The MC_MoveVelocity and MCP_MoveVelocity blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_version of the block.

The MC_MoveVelocity block changes axis velocity to specified value as fast as possible and keeps the specified velocity until the command is aborted by another block or event.

Note: parameter **Direction** enumerate also **shortest_way** although for this block it is not valid value.

Inputs


uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Execute	The block is activated on rising edge	Bool
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration unit/s ²	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
Direction	Direction of movement (cyclic axis or special case only)	Long (I32)
	1 Positive	
	2 Shortest	
	3 Negative	
	4 Current	


BufferMode	Buffering mode	Long (I32)
1	Aborting (start immediately)	
2	Buffered (start after finish of previous motion)	
3	Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
4	Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
5	Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
6	Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	

Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
InVelocity	Requested velocity reached	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

Example

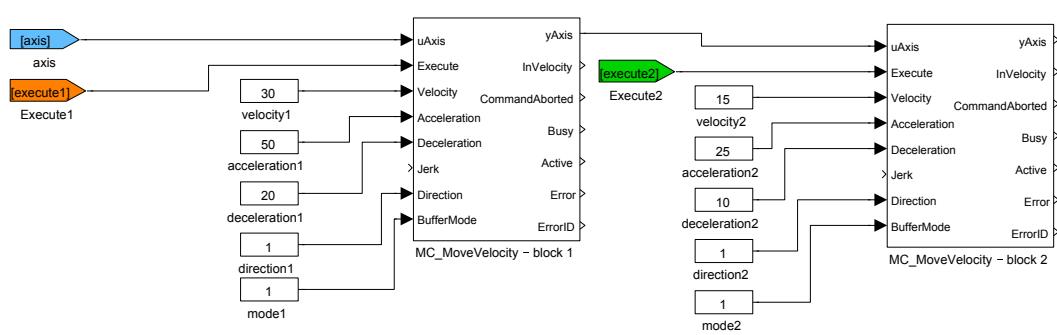


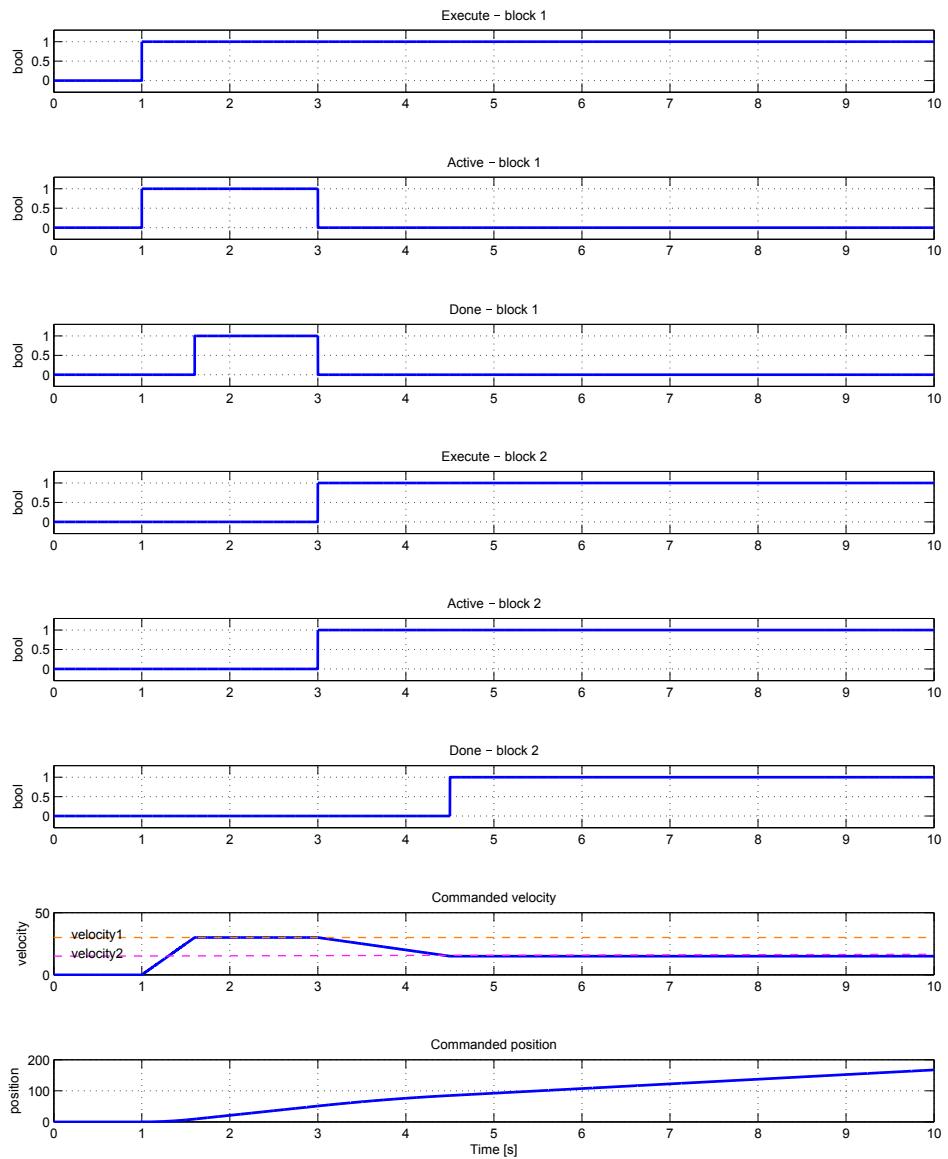

MC_PositionProfile, MCP_PositionProfile – Position profile

Block Symbols

Licence: MOTION CONTROL

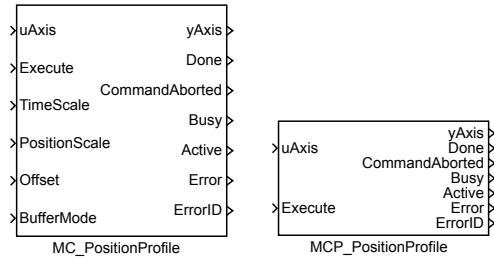

Function Description

The MC_PositionProfile and MCP_PositionProfile blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_PositionProfile block commands a time-position locked motion profile. Block implements two possibilities for definition of time-position function:

1. sequence of values: the user defines a sequence of time-position pairs. In each time interval, the values of position are interpolated. Times sequence is in array **times**, position sequence is in array **values**. Time sequence must be increasing and must start with zero or zero must be between the first and last point. Execution always starts from zero time, so if the sequence start with negative time, part of the profile is not executed (could be used for debugging or time shift). For [MC_VelocityProfile](#) and [MC_AccelerationProfile](#) interpolation is linear, but for MC_PositionProfile, 3rd order polynomial is used in order to avoid steps in velocity.

2. spline: time sequence is the same as in previous case. Each interval is interpolate byd 5th order polynomial $p(x) = a_5x^5 + a_4x^4 + a_3x^3 + a_2x^2 + a_1x + a_0$ where beginning of the time-interval is for $x = 0$, end of time-interval is for $x = 1$ and factors a_i are put in array **values** in ascending order (e.g. array **values** contains 6 values for each interval). This method allows smaller number of intervals and there is special editor for synthesis of the interpolating spline function.

For both case, the time sequence could be equally spaced and then array **times** includes only the first (usually zero) and last point.

Note 1: input **TimePosition** is missing, because all path data are in parameters of the block.

Note 2: parameter **values** must be set as vector in all cases, e.g. text string must not include semicolon.

Note 3: incorrect parameter `cSeg` (higher then real size of arrays `times` and/or `values`) leads to unpredictable result and in some cases crashes whole runtime execution (The problem is platform dependent and currently it is known only for SIMULINK - crash of whole MATLAB).

Note 4: in the spline mode, polynomial is always 5th order and always in position (also for sibling block `MC_VelocityProfile` and `MC_AccelerationProfile`) and it couldn't be changed. As the special editor exists, this is not important limitation.

Note 5: The block does not include ramp-in mode. If start position and/or velocity of profile is different from actual (commanded) position of axis, block fails with error -707 (step). It is recommended to use `BufferMode=BlendingNext` to eliminate the problem with start velocity.

Inputs

<code>uAxis</code>	Axis reference (only <code>RM_Axis.axisRef-uAxis</code> or <code>yAxis-uAxis</code> connections are allowed)	Reference
<code>Execute</code>	The block is activated on rising edge	Bool
<code>TimeScale</code>	Overall scale factor in time	Double (F64)
<code>PositionScale</code>	Overall scale factor in value	Double (F64)
<code>Offset</code>	Overall profile offset in value	Double (F64)
<code>BufferMode</code>	Buffering mode	Long (I32)
	1 Aborting (start immediately)	
	2 Buffered (start after finish of previous motion)	
	3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
	5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
	6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	


Outputs

<code>yAxis</code>	Axis reference (only <code>RM_Axis.axisRef-yAxis</code> or <code>uAxis-yAxis</code> connections are allowed)	Reference
<code>Done</code>	Algorithm finished	Bool
<code>CommandAborted</code>	Algorithm was aborted	Bool
<code>Busy</code>	Algorithm not finished yet	Bool
<code>Active</code>	The block is controlling the axis	Bool
<code>Error</code>	Error occurred	Bool
<code>ErrorID</code>	Result of the last operation i REXYGEN general error	Error

Parameters

alg	Algorithm for interpolation 1 Sequence of time/value pairs 2 Sequence of equidistant values 3 Spline 4 Equidistant spline	$\odot 2$ Long (I32)
cSeg	Number of profile segments	$\odot 3$ Long (I32)
times	Times when segments are switched	$\odot [0 \text{ } 30]$ Double (F64)
values	Values or interpolating polynomial coefficients (a0, a1, a2, ...) $\odot [0 \text{ } 100 \text{ } 100 \text{ } 50]$	Double (F64)


Example

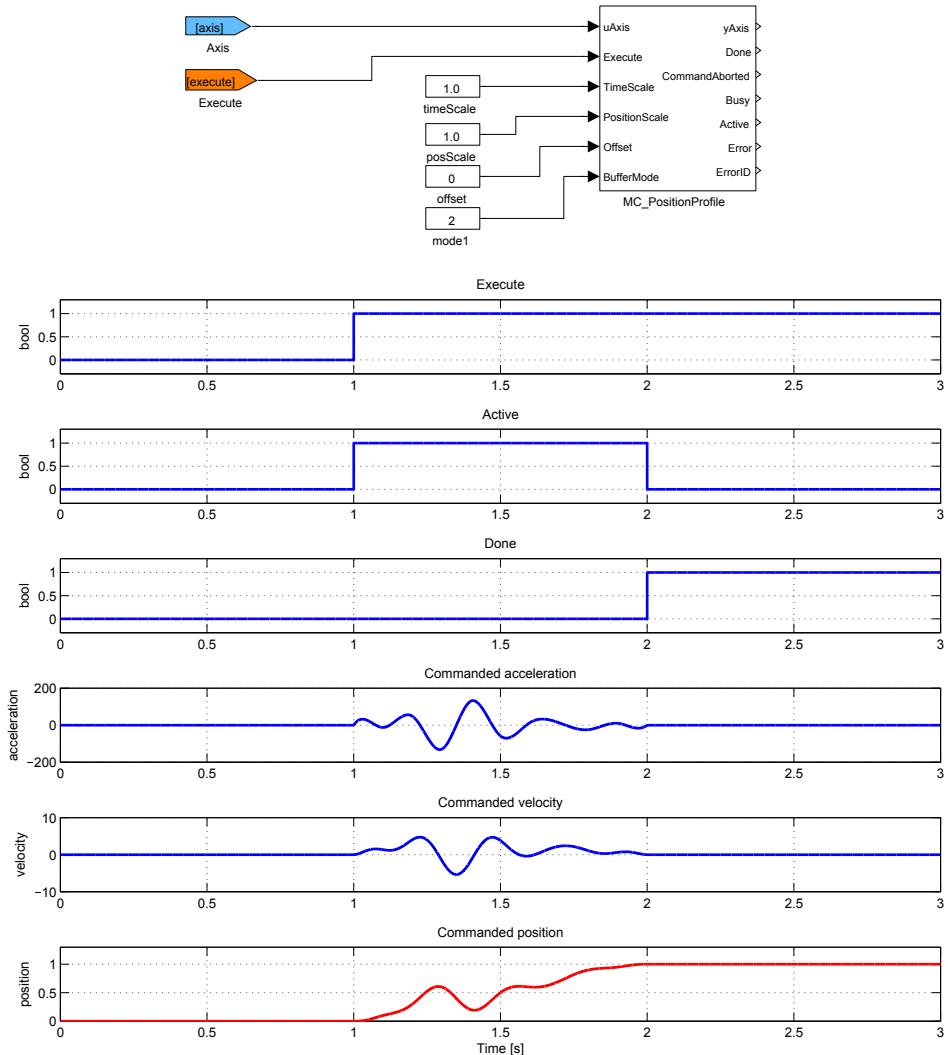

MC_Power – Axis activation (power on/off)

Block Symbol

Licence: MOTION CONTROL

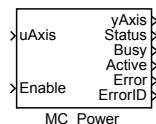

Function Description

The **MC_Power** block must be used with all axes. It is the only way to switch an axis from disable state to standstill (e.g. operation) state. The **Enable** input must be set (non zero value) for whole time the axis is active. The **Status** output can be used for switch on and switch off of the motor driver (logical signal for enabling the power stage of the drive).

The block does not implement optional parameters/inputs **Enable_Positive**, **Enable_Negative**. The same functionality can be implemented by throwing the limit switches (inputs **limP** and **limN** of block **RM_Axis**).

If the associated axis is turned off (by setting the **Enable** input to zero) while a motion is processed (commanded velocity is not zero), error stopping sequence is activated and the status is switched to off-disabled when the motion stops (commanded velocity reaches zero value).

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Enable	Block function is enabled	Bool


Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Status	Effective state of the power stage	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_ReadActualPosition – Read actual position

Block Symbol

Licence: MOTION CONTROL

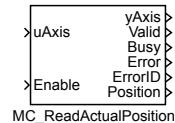

Function Description

The block **MC_ReadActualPosition** displays actual value of position of a connected axis on the output **Position**. The output is valid only while the block is enabled by the logical input signal **Enable**.

The block displays logical position value which is entered into all of the motion blocks as position input. In case that no absolute position encoder is used or the internal position is set in other way (e.g. via **MC_Home** block), the **CommandedPosition** output of the corresponding **RM_Axis** may display different value.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Enable	Block function is enabled	Bool


Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
Position	Actual absolute position	Double (F64)

MC_ReadAxisError – Read axis error

Block Symbol

Licence: MOTION CONTROL

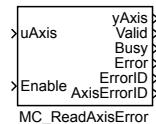

Function Description

The block MC_ReadAxisError displays actual error code of a connected axis on the output **AxisErrorID**. In case of no error, the output is set to zero. The error value is valid only while the block is enabled by the logical input signal **Enable**. This block is implemented for sake of compatibility with PLCopen specification as it displays duplicit information about an error which is also accessible on the **ErrorID** output of the [RM_Axis](#) block.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Enable	Block function is enabled	Bool


Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
AxisErrorID	Result of the last operation read from axis i REXYGEN general error	Error

MC_ReadBoolParameter – Read axis parameter (bool)

Block Symbol

Licence: MOTION CONTROL

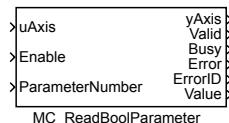

Function Description

The block **MC_ReadBoolParameter** displays actual value of various signals related to the connected axis on its **Value** output. The user chooses from a set of accessible logical variables by setting the **ParameterNumber** input. The output value is valid only while the block is activated by the logical **Enable** input.

The block displays the parameters and outputs of **RM_Axis** block and is implemented for sake of compatibility with the **PLCOpen** specification.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Enable	Block function is enabled	Bool
ParameterNumber	Parameter ID 4 Enable sw positive limit 5 Enable sw negative limit 6 Enable position lag monitoring	Long (I32)


Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
Value	Parameter value	Bool

MC_ReadParameter – Read axis parameter

Block Symbol

Licence: MOTION CONTROL

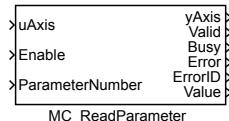

Function Description

The block **MC_ReadParameter** displays actual value of various system variables of the connected axis on its **Value** output. The user chooses from a set of accessible variables by setting the **ParameterNumber** input. The output value is valid only while the block is activated by the logical **Enable** input.

The block displays the parameters and outputs of **RM_Axis** block and is implemented for sake of compatibility with the **PLCOpen** specification.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Enable	Block function is enabled	Bool
ParameterNumber	Parameter ID	Long (I32)
1	Commanded position	
2	Positive sw limit switch	
3	Negative sw limit switch	
7	Maximal position lag	
8	Maximal velocity (system)	
9	Maximal velocity (appl)	
10	Actual velocity	
11	Commanded velocity	
12	Maximal acceleration (system)	
13	Maximal acceleration (appl.)	
14	Maximal deceleration (system)	
15	Maximal deceleration (appl.)	
16	Maximal jerk	
1000 ..	Actual position	
1001 ..	Maximal torque/force	
1003 ..	Actual torque/force	
1004 ..	Commanded torque/force	


Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
Value	Parameter value	Double (F64)

MC_ReadStatus – Read axis status

Block Symbol

Licence: MOTION CONTROL

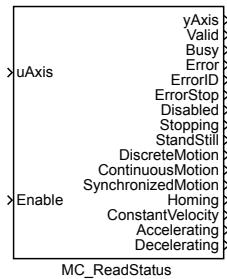

Function Description

The block MC_ReadStatus indicates the state of the connected axis on its logical output signals. The values of the states are valid only while the Enable input is set to nonzero value. This state is indicated by Valid output.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Enable	Block function is enabled	Bool

Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
ErrorStop	Axis is in the ErrorStop state	Bool
Disabled	Axis is in the Disabled state	Bool
Stopping	Axis is in the Stopping state	Bool
StandStill	Axis is in the StandStill state	Bool
DiscreteMotion	Axis is in the DiscreteMotion state	Bool
ContinuousMotion	Axis is in the ContinuousMotion state	Bool
SynchronizedMotion	Axis is in the SynchronizedMotion state	Bool
Homing	Axis is in the Homing state	Bool


540 CHAPTER 18. MC_SINGLE – MOTION CONTROL - SINGLE AXIS BLOCKS

ConstantVelocity	Axis is moving with constant velocity	Bool
Accelerating	Axis is accelerating	Bool
Decelerating	Axis is decelerating	Bool

MC_Reset – Reset axis errors

Block Symbol

Licence: MOTION CONTROL



Function Description

The MC_Reset block makes the transition from the state ErrorStop to StandStill by resetting all internal axis-related errors.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Execute	The block is activated on rising edge	Bool


Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_SetOverride, MCP_SetOverride – Set override factors

Block Symbols

Licence: MOTION CONTROL

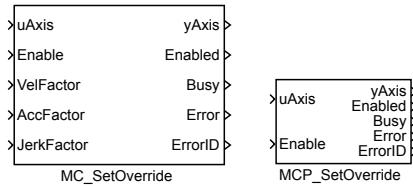

Function Description

The MC_SetOverride and MCP_SetOverride blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_SetOverride block sets the values of override for the whole axis, and all functions that are working on that axis. The override parameters act as a factor that is multiplied to the commanded velocity, acceleration, deceleration and jerk of the move function block.

This block is level-sensitive (not edge-sensitive like other motion control blocks). So factors are update in each step while input **Enable** is not zero. It leads to reacalculation of movement's path if a block like **MC_MoveAbsolute** commands the axis. This recalculation needs lot of CPU time and also numerical problem could appear. For this reasons, a deadband (parameter **diff**) is established. The movement's path recalculation is proceeded only if one of the factors is changed more then the deadband.

Note: all factor must be positive. Factor greater then 1.0 are possible, but often lead to overshooting of axis limits and failure of movement (with **errorID=-700** - invalid parameter; if factor is set before start of block) or error stop of axis (with **errorID=-701** - out of range; if factor is changed within movement and actual value overshoot limit).

Inputs

uAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Enable	Block function is enabled	Bool
VelFactor	Velocity multiplication factor	Double (F64)
AccFactor	Acceleration/deceleration multiplication factor	Double (F64)
JerkFactor	Jerk multiplication factor	Double (F64)

Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Enabled	Block function is enabled	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Parameter

diff	Deadband (difference for recalculation)	$\downarrow 0.0 \uparrow 1.0 \odot 0.1$	Double (F64)
-------------	---	---	--------------

MC_Stop, MCP_Stop – Stopping a movement

Block Symbols

Licence: MOTION CONTROL

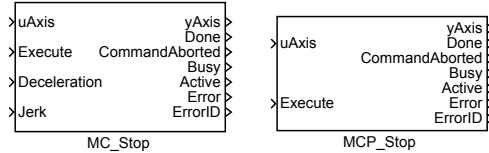

Function Description

The MC_Stop and MCP_Stop blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_Stop block commands a controlled motion stop and transfers the axis to the state **Stopping**. It aborts any ongoing Function Block execution. While the axis is in state **Stopping**, no other FB can perform any motion on the same axis. After the axis has reached velocity zero, the **Done** output is set to **true** immediately. The axis remains in the state **Stopping** as long as **Execute** is still **true** or velocity zero is not yet reached. As soon as **Done=true** and **Execute=false** the axis goes to state **StandStill**.

Note 1: parameter/input **BufferMode** is not supported. Mode is always **Aborting**.

Note 2: Failing stop-command could be dangerous. This block does not generate invalid-parameter-error but tries to stop the axis anyway (e.g. uses parameteres from **RM_Axis** or generates error-stop-sequence).

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Execute	The block is activated on rising edge	Bool
Deceleration	Maximal allowed deceleration [unit/s²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s³]	Double (F64)

Outputs


yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool

ErrorID	Result of the last operation	Error
i	REXYGEN general error	

MC_TorqueControl, MCP_TorqueControl – Torque/force control

Block Symbols

Licence: MOTION CONTROL

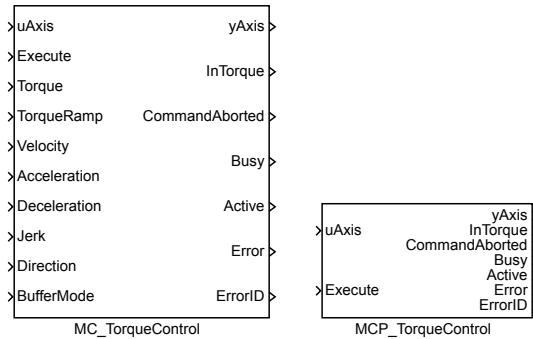

Function Description

The MC_TorqueControl and MCP_TorqueControl blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_version of the block.

The MCP_TorqueControl block generates constant slope torque/force ramp until maximum requested value has been reached. Similar profile is generated for velocity. The motion trajectory is limited by maximum velocity, acceleration / deceleration, and jerk, or by the value of the torque, depending on the mechanical circumstances.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
Torque	Maximal allowed torque/force	Double (F64)
TorqueRamp	Maximal allowed torque/force ramp	Double (F64)
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
Direction	Direction of movement (cyclic axis or special case only)	Long (I32)
	1 Positive	
	2 Shortest	
	3 Negative	
	4 Current	

BufferMode	Buffering mode	Long (I32)
1	Aborting (start immediately)	
2	Buffered (start after finish of previous motion)	
3	Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
4	Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
5	Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
6	Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	


Outputs

yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
InTorque	Requested torque/force is reached	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

Parameter

kma	Torque/force to acceleration ratio	Double (F64)
------------	------------------------------------	--------------


Example

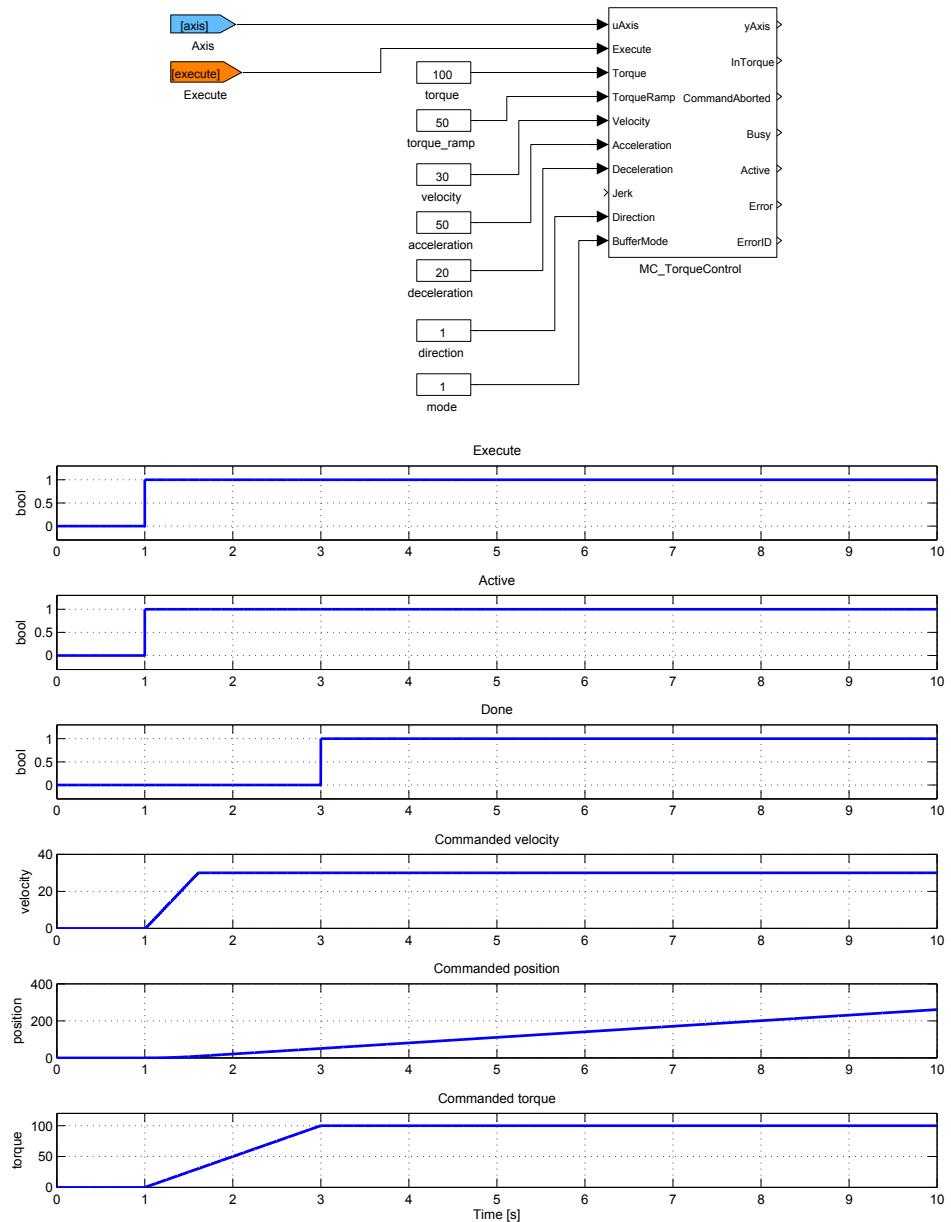

MC_VelocityProfile, MCP_VelocityProfile – Velocity profile

Block Symbols

Licence: MOTION CONTROL

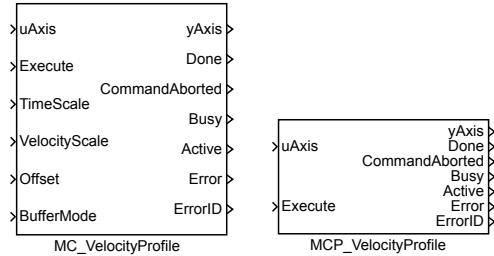

Function Description

The **MC_PositionProfile** block commands a time-position locked motion profile. Block implements two possibilities for definition of time-velocity function:

1. sequence of values: the user defines a sequence of time-velocity pairs. In each time interval, the values of velocity are interpolated. Times sequence is in array **times**, position sequence is in array **values**. Time sequence must be increasing and must start with zero or zero must be between the first and last point. Execution always starts from zero time, so if the sequence start with negative time, part of the profile is not executed (could be used for debugging or time shift). For **MC_VelocityProfile** and **MC_AccelerationProfile** interpolation is linear, but for **MC_PositionProfile**, 3rd order polynomial is used in order to avoid steps in velocity.

2. spline: time sequence is the same as in previous case. Each interval is interpolated by 5th order polynomial $p(x) = a_5x^5 + a_4x^4 + a_3x^3 + a_2x^2 + a_1x + a_0$ where beginning of the time-interval is for $x = 0$, end of time-interval is for $x = 1$ and factors a_i are put in array **values** in ascending order (e.g. array **values** contains 6 values for each interval). This method allows smaller number of intervals and there is special editor for synthesis of the interpolating spline function.

For both case, the time sequence could be equally spaced and then array **times** includes only the first (usually zero) and last point.

Note 1: input **TimePosition** is missing, because all path data are in parameters of the block.

Note 2: parameter **values** must be set as vector in all cases, e.g. text string must not include semicolon.

Note 3: incorrect parameter **cSeg** (higher then real size of arrays **times** and/or **values**) leads to unpredictable result and in some cases crashes whole runtime execution (The problem is platform dependent and currently it is known only for SIMULINK - crash of whole MATLAB).

Note 4: in the spline mode, polynomial is always 5th order and always in position (also for sibling block **MC_PositionProfile** and **MC_AccelerationProfile**) and it couldn't be changed. As the special editor exists, this is not important limitation.

Note 5: The block does not include ramp-in mode. If start position and/or velocity of profile is different from actual (commanded) position of axis, block fails with error -707 (step). It is recommended to use **BufferMode=BlendingNext** to eliminate the problem with start velocity.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
TimeScale	Overall scale factor in time	Double (F64)
VelocityScale	Overall scale factor in value	Double (F64)
Offset	Overall profile offset in value	Double (F64)
BufferMode	Buffering mode <ul style="list-style-type: none"> 1 Aborting (start immediately) 2 Buffered (start after finish of previous motion) 3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands) 4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands) 5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity) 6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block) 	Long (I32)


Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation <ul style="list-style-type: none"> i REXYGEN general error 	Error

Parameters

alg	Algorithm for interpolation	$\odot 1$	Long (I32)
	1 Sequence of time/value pairs		
	2 Sequence of equidistant values		
	3 Spline		
	4 Equidistant spline		
cSeg	Number of profile segments	$\odot 3$	Long (I32)
times	Times when segments are switched	$\odot [0 \ 15 \ 25 \ 30]$	Double (F64)
values	Values or interpolating polynomial coefficients (a0, a1, a2, ...)		Double (F64)
		$\odot [0 \ 100 \ 100 \ 50]$	


Example

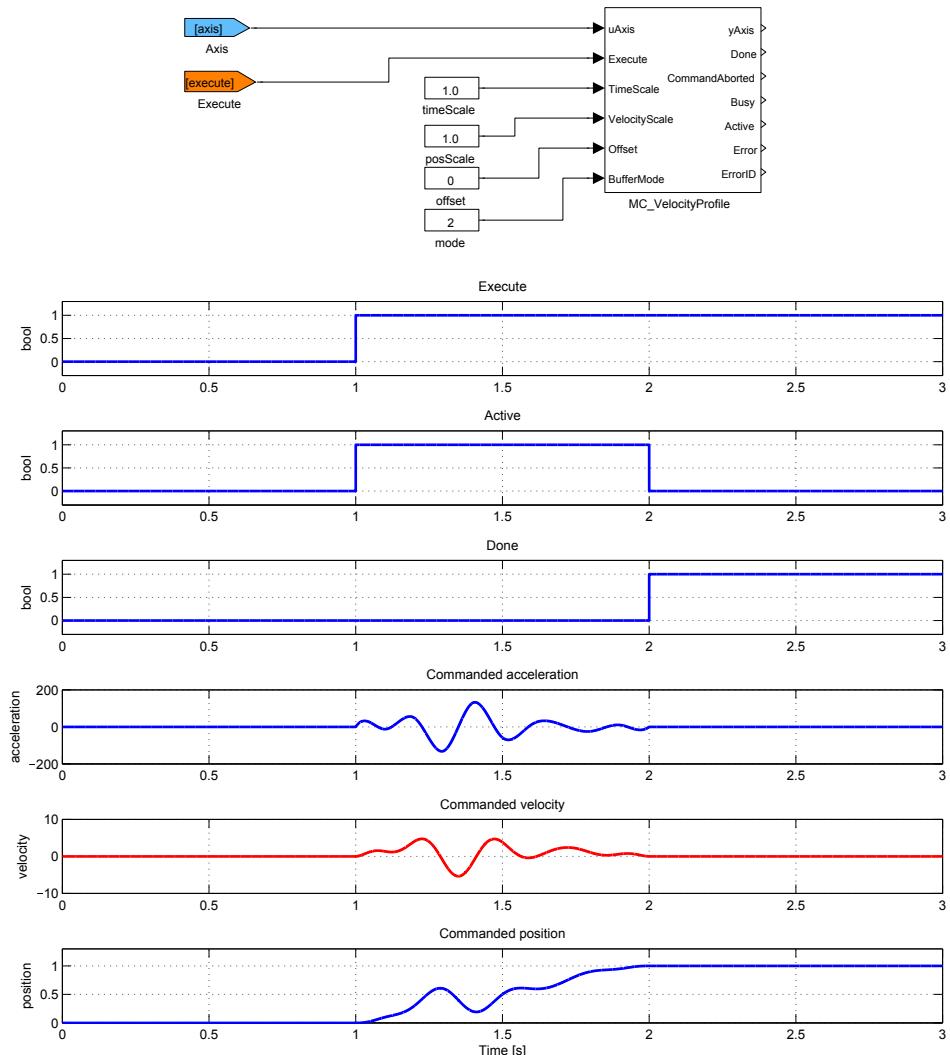

MC_WriteBoolParameter – Write axis parameter (bool)

Block Symbol

Licence: MOTION CONTROL

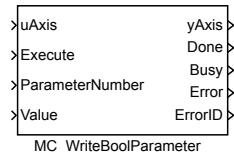

Function Description

The block **MC_WriteBoolParameter** writes desired value of various system parameters entered on its **Value** input to the connected axis. The user chooses from a set of accessible logical variables by setting the **ParameterNumber** input.

The block is implemented for sake of compatibility with the PLCopen specification as the parameters can be written by the **SETPB** block.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Execute	The block is activated on rising edge	Bool
ParameterNumber	Parameter ID	Long (I32)
	4 Enable sw positive limit	
	5 Enable sw negative limit	
	6 Enable position lag monitoring	
Value	Parameter value	Bool


Outputs

yAxis	Axis reference (only RM_Axis.axisRef=uAxis or yAxis=uAxis Reference connections are allowed)	
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_WriteParameter – Write axis parameter

Block Symbol

Licence: MOTION CONTROL

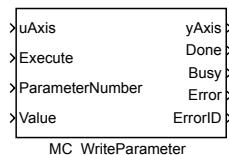

Function Description

The block **MC_WriteParameter** writes desired value of various system parameters entered on its **Value** input to the connected axis. The user chooses from a set of accessible variables by setting the **ParameterNumber** input.

The block is implemented for sake of compatibility with the PLCOpen specification as the parameters can be written by the SETPR block.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
ParameterNumber	Parameter ID 2 Positive sw limit switch 3 Negative sw limit switch 7 Maximal position lag 8 Maximal velocity (system) 9 Maximal velocity (appl) 13 Maximal acceleration (appl.) 15 Maximal deceleration (appl.) 16 Maximal jerk 1001 .. Maximal torque/force	Long (I32)
Value	Parameter value	Double (F64)


Outputs

yAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

RM_AxisOut – Axis output

Block Symbol

Licence: MOTION CONTROL

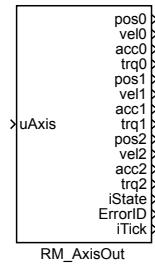

Function Description

The **RM_AxisOut** block allows an access to important states of block **RM_Axis**. Same outputs are also available directly on **RM_Axis** (some of them), but this direct output is one step delayed. Blocks are ordered for execution by flow of a signal, so **RM_Axis** is first then all motion blocks (that actualize **RM_Axis** state), then **RM_AxisOut** (should be last) and finally waiting for next period.

Note 1: Control system REXYGEN orders blocks primary by flow of signal, secondarily by name of block (ascendent in alphabetical order), so name like "zzz" is good choice. For checking the order, you can use REXYGEN Diagnostics tool where the blocks are sorted by execution order.

Note 2: almost all blocks do not work with torque so commanded torque is 0. Commanded acceleration and torque should be used as feed-forward value for position/velocity controller so this value does not make any problem.

Inputs

uAxis axis reference that must be connected to **axisRef** of the **RM_Axis Reference** block (direct or indirect throw output **yAxis** of some other block)

RM_AxisSpline – Commanded values interpolation

Block Symbol

Licence: MOTION CONTROL



Function Description

There are lot of motion control blocks which implement complicated algorithms so they require bigger sampling period (typical update rate is from 10 to 200ms). On the other side, the motor driver usually requires small sampling period for smooth/waveless movement. The **RM_AxisSpline** block solves this problem of multirate execution of motion planning and motion control levels. The block can run in different task than other motion control blocks with highest sampling period possible. It interpolates commanded position, velocity and torque and generates smooth curve which is more suited for motor driver controllers.

There are two possibilites of connection to **RM_Axis** block: connect all necessary values (outputs of the block **RM_AxisOut**) as input of interpolating block or use only axis reference and read the state directly. This block uses axis reference. For correct synchronization between two tasks, the block **RM_Axis** must be executed first followed by all axis related motion control blocks and finally by block **RM_AxisOut** at the end.

Note 1:For interpolation of position signal, 3rd order polynomial $p(t)$ is used, where $p_s(0) = pos0, p_s(t_S) = pos1, \frac{dp_s(t)}{dt} \Big|_{t=0} = vel0, \frac{dp_s(t)}{dt} \Big|_{t=t_S} = vel1$. To interpolate velocity, also an 3rd order polynomial $p_v(t)$ is used, where $p_v(0) = vel0, p_v(t_S) = vel1, \frac{dp_v(t)}{dt} \Big|_{t=0} = acc0, \frac{dp_v(t)}{dt} \Big|_{t=t_S} = acc1$. Torque is interpolated by linear function.


Note 2:Because the time of execution of motion blocks is varying in time, the block uses one or two step prediction for interpolation depending on actual conditions and timing of the motion blocks in slower tasks. The use of predicted values is signalized by states **RUN0**, **RUN1**, **RUN2**.

Note 3: Control system REXYGEN orders the blocks primarily by flow of signal, secondarily by name of block (ascendent in alphabetical order), so name like "zzz" is good choice for the block **RM_AxisOut**. For checking the order, you can use REXYGEN Diagnostics tool where the blocks are sorted by execution order.

RM_Track – Tracking and inching

Block Symbol

Licence: MOTION CONTROL

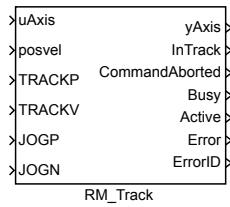

Function Description

The RM_Track block includes few useful functions.

If the input TRACK is active (not zero), the block tries to track requested position (input pos) with respect to the limits for velocity, acceleration/deceleration and jerk. The block expects that requested position is changed in each step and therefore recalculates the path in each step. This is difference to [MC_MoveAbsolute](#) block, which does not allow to change target position while the movement is not finished. This mode is useful if position is generated out of the motion control subsystem, even thought the [MC_PositionProfile](#) block is better if whole path is known.

If the input JOGP is active (not zero), the block works like the [MC_MoveVelocity](#) block (e.g. moves axis with velocity given by parameter pv in positive direction with respect to maximum acceleration and jerk). When input JOGP is released (switched to zero), the block activates stopping sequence and releases the axis when the sequence is finished. This mode is useful for jogging (e.g. setting of position of axis by an operator using up/down buttons).

Input JOGN works like JOGP, but direction is negative.

Note 1: This block hasn't parameter BufferMode. Mode is always aborting.

Note 2: If more functions are selected, only the first one is activated. Order is TRACK, JOGP, JOGN. Simultaneous activation of more than one function is not recommended.

Inputs

uAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis Reference connections are allowed)	
posvel	Requested target position or velocity [unit]	Double (F64)
TRACKP	Position tracking mode	Bool
TRACKV	Velocity tracking mode	Bool
JOGP	Moving positive direction mode	Bool
JOGN	Moving negative direction mode	Bool

Parameters

pv	Maximal allowed velocity [unit/s]	Double (F64)
pa	Maximal allowed acceleration [unit/s ²]	Double (F64)
pd	Maximal allowed deceleration [unit/s ²]	Double (F64)
pj	Maximal allowed jerk [unit/s ³]	Double (F64)
iLen	Length of buffer for estimation	⊕10 Long (I32)

Outputs

yAxis	Axis reference (only RM_Axis.axisRef–uAxis or yAxis–uAxis connections are allowed)	Reference
InTrack	Requested position is reached	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

Chapter 19

MC_MULTI – Motion control - multi axis blocks

Contents


MC_CamIn, MCP_CamIn – Engage the cam	560
MC_CamOut – Disengage the cam	564
MCP_CamTableSelect – Cam definition	566
MC_CombineAxes, MCP_CombineAxes – Combine the motion of 2 axes into a third axis	568
MC_GearIn, MCP_GearIn – Engange the master/slave velocity ratio	571
MC_GearInPos, MCP_GearInPos – Engage the master/slave velocity ratio in defined position	574
MC_GearOut – Disengange the master/slave velocity ratio	579
MC_PhasingAbsolute, MCP_PhasingAbsolute – Phase shift in synchronized motion (absolute coordinates)	581
MC_PhasingRelative, MCP_PhasingRelative – Phase shift in synchronized motion (relative coordinates)	584

This block set is the second part of motion control blocks library according to the PLCopen standard for multi axis control. General vendor specific rules are the same as described in chapter 18 (the MC_SINGLE library, blocks for single axis motion control).

MC_CamIn, MCP_CamIn – Engage the cam

Block Symbols

Licence: MOTION CONTROL

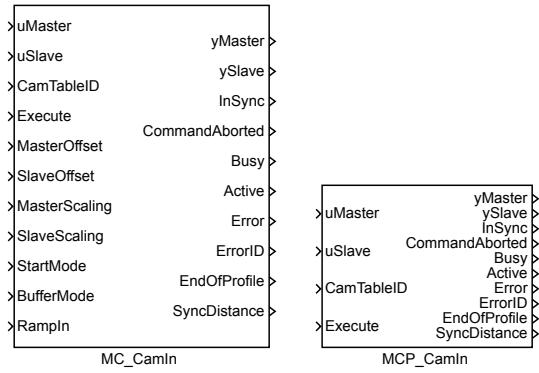

Function Description

The MC_CamIn and MCP_CamIn blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_CamIn block switches on a mode in which the slave axis is commanded to position which corresponds to the position of master axis transformed with a function defined by the [MCP_CamTableSelect](#) block (connected to CamTableID input). Denoting the transformation as $Cam(x)$, master axis position $PosM$ and slave axis position $PosS$, we obtain (for absolute relationship, without phasing): $PosS = Cam((PosM - MasterOffset)/MasterScaling) * SlaveScaling + SlaveOffset$. This form of synchronized motion of the slave axis is called electronic cam.

The cam mode is switched off by executing other motion block on slave axis with mode **aborting** or by executing a [MC_CamOut](#) block. The cam mode is also finished when the master axis leaves a non-periodic cam profile. This situation is indicated by the **EndOfProfile** output.

In case of a difference between real position and/or velocity of slave axis and cam-profile slave axis position and velocity, some transient trajectory must be generated to cancel this offset. This mode is called ramp-in. The ramp-in function is added to the cam profile to eliminate the difference in start position. The **RampIn** parameter is an average velocity of the ramp-in function. Ramp-in path is not generated for **RampIn=0** and error -707 (position or velocity step) is invoked if some difference is detected. Recommended value for the **RampIn** parameter is 0.1 to 0.5 of maximal slave axis velocity. The parameter has to be lowered if maximal velocity or acceleration error is detected.

Inputs


uMaster	Master axis reference	Reference
uSlave	Slave axis reference	Reference
CamTableID	Cam table reference <small>(connect to MCP_CamTableSelect.CamTableID)</small>	Reference
Execute	The block is activated on rising edge	Bool
MasterOffset	Offset in cam table on master side [unit]	Double (F64)
SlaveOffset	Offset in cam table on slave side [unit]	Double (F64)
MasterScaling	Overall scaling factor in cam table on master side	Double (F64)
SlaveScaling	Overall scaling factor in cam table on slave side	Double (F64)
StartMode	Select relative or absolute cam table 1 Master relative 2 Slave relative 3 Both relative 4 Both absolute	Long (I32)
BufferMode	Buffering mode 1 Aborting (start immediately) 2 Buffered (start after finish of previous motion) 3 Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands) 4 Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands) 5 Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity) 6 Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	Long (I32)
RampIn	RampIn factor (0 = RampIn mode not used); average additive velocity (absolute value) during ramp-in process	Double (F64)

Outputs

yMaster	Master axis reference	Reference
ySlave	Slave axis reference	Reference
InSync	Slave axis reached the cam profile	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
EndOfFile	Indicate end of cam profile (not periodic cam only)	Bool

SyncDistance Position deviation of the slave axis from synchronized position **Double** (F64)


Example

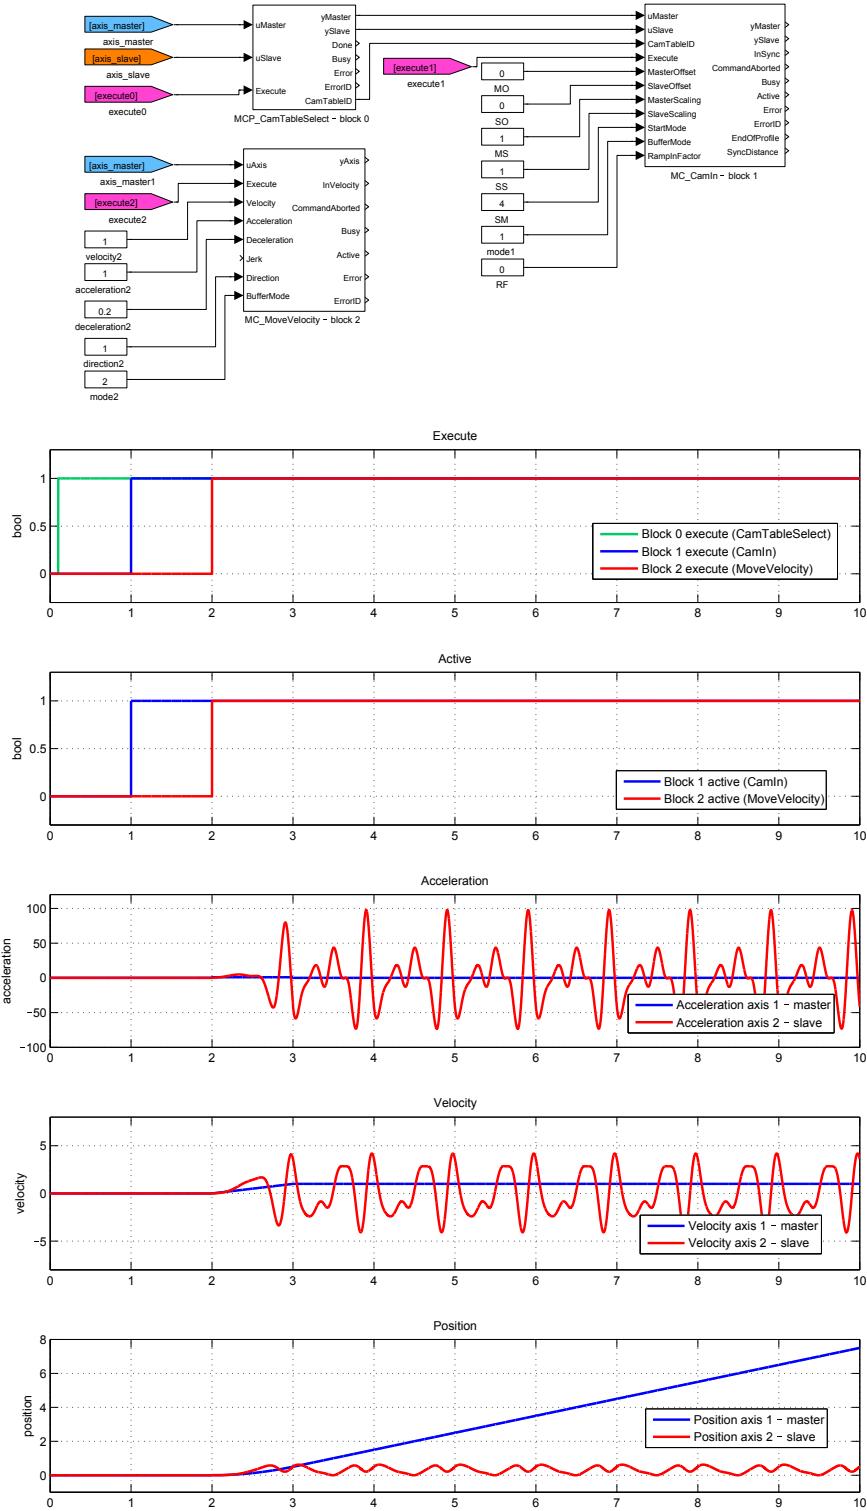

MC_CamOut – Disengage the cam

Block Symbol

Licence: MOTION CONTROL



Function Description

The MC_CamOut block switches off the cam mode on slave axis. If cam mode is not active, the block does nothing (no error is activated).


Inputs

uSlave	Slave axis reference	Reference
Execute	The block is activated on rising edge	Bool

Outputs

ySlave	Slave axis reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

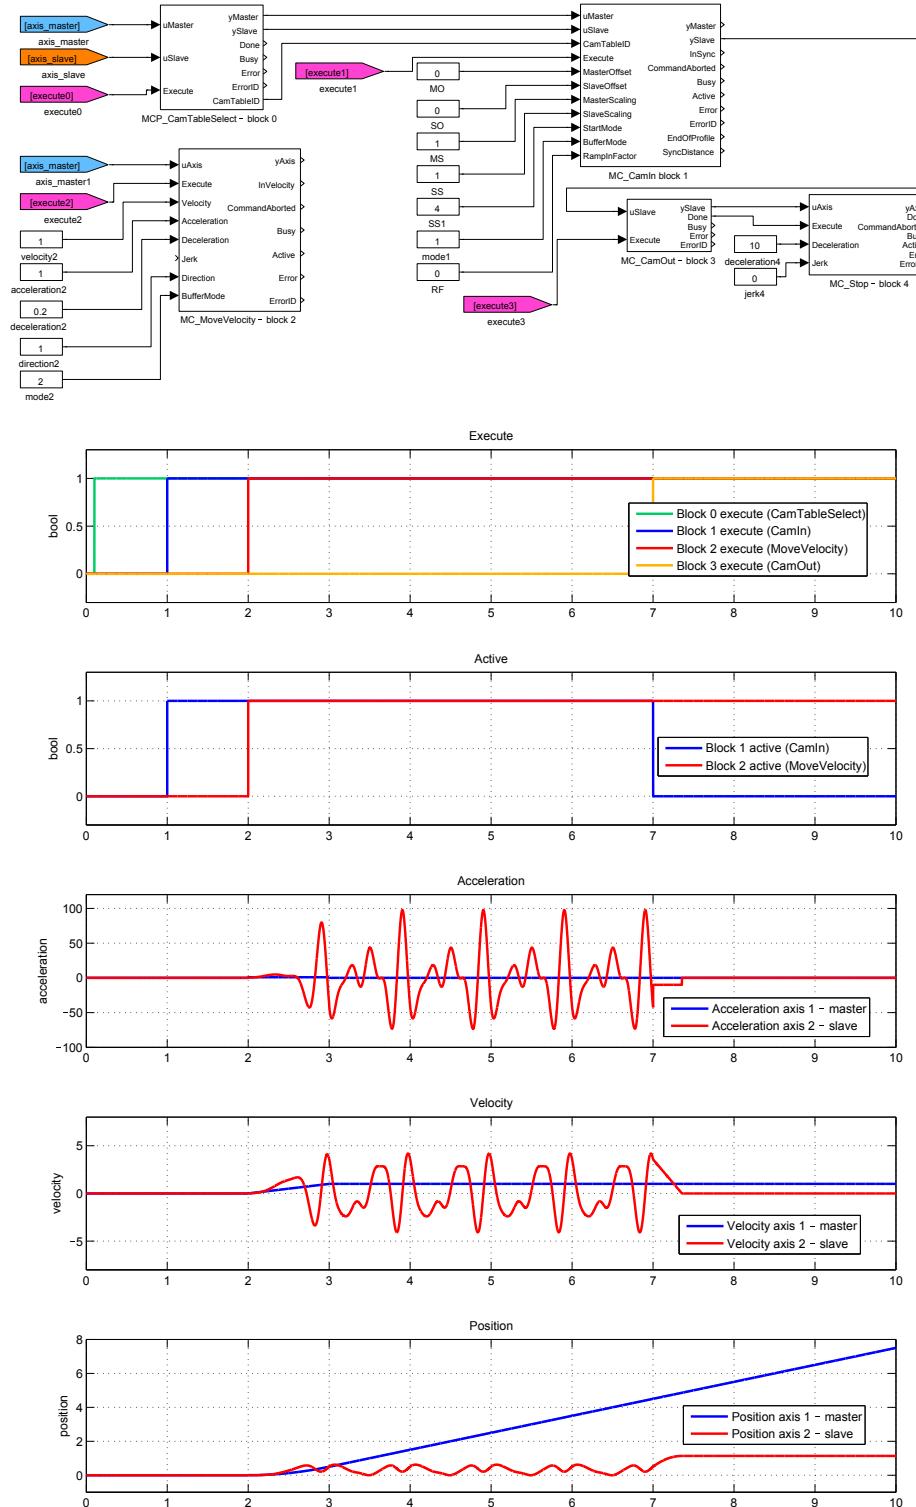

MCP_CamTableSelect – Cam definition

Block Symbol

Licence: MOTION CONTROL

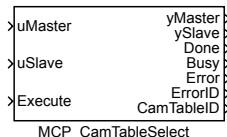

Function Description

The MCP_CamTableSelect block defines a cam profile. The definition is similar to MC_PositionProfile block, but the time axis is replaced by master position axis. There are also two possible ways for cam profile definition:

1. sequence of values: given sequence of master-slave position pairs. In each master position interval, value of slave position is interpolated by 3rd-order polynomial (simple linear interpolation would lead to steps in velocity at interval border). Master position sequence is in array/parameter **mvalues**, slave position sequence is in array/parameter **svalues**. Master position sequence must be increasing.

2. spline: master position sequence is the same as in previous case. Each interval is interpolated by 5th-order polynomial $p(x) = a_5x^5 + a_4x^4 + a_3x^3 + a_2x^2 + a_1x + a_0$ where beginning of time-interval is defined for $x = 0$, end of time-interval holds for $x = 1$ and factors a_i are put in array/parameter **svalues** in ascending order (e.g. array/parameter **svalues** contain 6 values for each interval). This method allows to reduce the number of intervals and there is special graphical editor available for interpolating curve synthesis.

For both cases the master position sequence can be equidistantly spaced in time and then the time array includes only first and last point.

Note 1: input **CamTable** which is defined in PLCOpen specification is missing, because all path data are set in the parameters of the block.

Note 2: parameter **svalues** must be set as a vector in all cases, e.g. text string must not include a semicolon.

Note 3: incorrect parameter value **cSeg** (higher than real size of arrays **times** and/or **values**) can lead to unpredictable results and in some cases to crash of the whole runtime execution (The problem is platform dependent and currently it is observed only for SIMULINK version).

Inputs

uMaster	Master axis reference	Reference
uSlave	Slave axis reference	Reference
Execute	The block is activated on rising edge	Bool

Outputs

yMaster	Master axis reference	Reference
ySlave	Slave axis reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
CamTableID	Cam table reference (connect to MC_CamIn.CamTableID)	Reference


Parameters

alg	Algorithm for interpolation 1 Sequence of time/value pairs 2 Sequence of equidistant values 3 Spline 4 Equidistant spline	⊖2 Long (I32)
cSeg	Number of profile segments	⊖3 Long (I32)
Periodic	Indicate periodic cam profile	⊖on Bool
camname	Filename of special editor data file (filename is generated by system if parameter is empty)	String
mvalues	Master positions where segments are switched	⊖[0 30] Double (F64)
svalues	Slave positions or interpolating polynomial coefficients (a0, a1, a2, ...)	⊖[0 100 100 0] Double (F64)

MC_CombineAxes, MCP_CombineAxes – Combine the motion of 2 axes into a third axis

Block Symbols

Licence: MOTION CONTROL

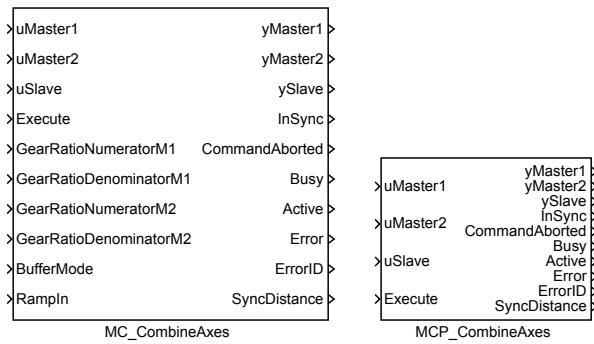

Function Description

The **MC_CombineAxes** block combines a motion of two master axes into a slave axis command. The slave axis indicates synchronized motion state. Following relationship holds:

$$\text{SlavePosition} = \text{Master1Position} \cdot \frac{\text{GearRatioNumeratorM1}}{\text{GearRatioDenominatorM1}} + \text{Master2Position} \cdot \frac{\text{GearRatioNumeratorM2}}{\text{GearRatioDenominatorM2}}$$

Negative number can be set in **GearRatio...** parameter to obtain the resulting slave movement in form of difference of master axes positions.

Inputs


uMaster1	First master axis reference	Reference
uMaster2	Second master axis reference	Reference
uSlave	Slave axis reference	Reference
Execute	The block is activated on rising edge	Bool
GearRatioNumeratorM1	Numerator for the gear factor for master axis 1	Long (I32)
GearRatioDenominatorM1	Denominator for the gear factor for master axis 1	Long (I32)
GearRatioNumeratorM2	Numerator for the gear factor for master axis 2	Long (I32)
GearRatioDenominatorM2	Denominator for the gear factor for master axis 2	Long (I32)

BufferMode	Buffering mode	Long (I32)
1	Aborting (start immediately)	
2	Buffered (start after finish of previous motion)	
3	Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
4	Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
5	Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
6	Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	
RampIn	RampIn factor (0 = RampIn mode not used)	Double (F64)

Outputs

yMaster1	First master axis reference	Reference
yMaster2	Second master axis reference	Reference
ySlave	Slave axis reference	Reference
InSync	Slave axis reached the cam profile	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
SyncDistance	Position deviation of the slave axis from synchronized position	Double (F64)


Example

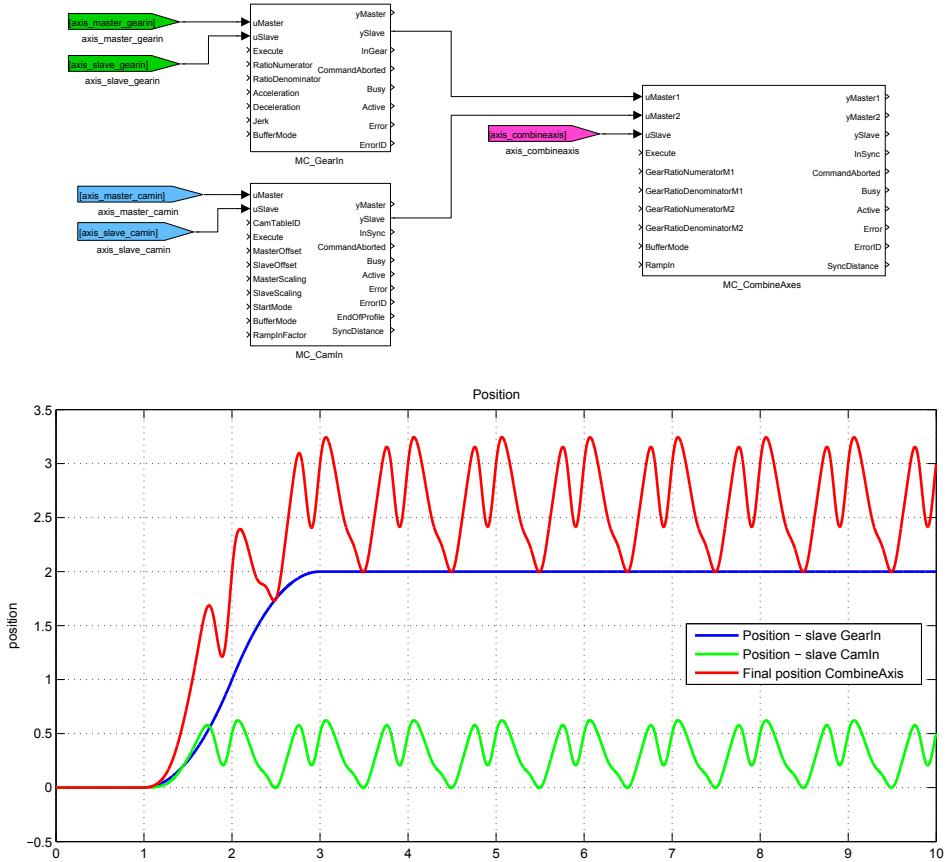

MC_GearIn, MCP_GearIn – Engange the master/slave velocity ratio

Block Symbols

Licence: MOTION CONTROL

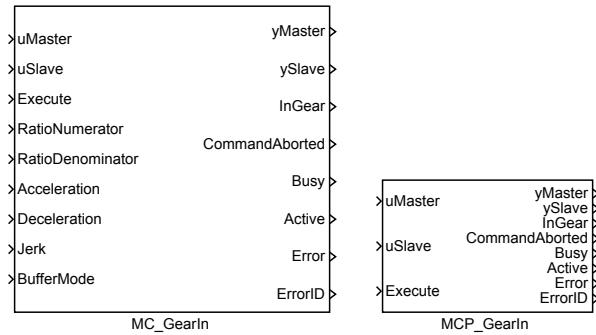

Function Description

The MC_GearIn and MCP_GearIn blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_GearIn block commands the slave axis motion in such a way that a preset ratio between master and slave velocities is maintained. Considering the velocity of master axis $VelM$ and velocity of slave axis $VelS$, following relation holds (without phasing): $VelS = VelM * RatioNumerator / RatioDenominator$. Position and acceleration is commanded to be consistent with velocity; position/distance ratio is also locked. This mode of synchronized motion is called electronic gear.

The gear mode is switched off by executing other motion block on slave axis with mode **aborting** or by executing a MC_GearIn block.

Similarly to the MC_CamIn block, ramp-in mode is activated if initial velocity of slave axis is different from master axis and gearing ratio. Parameters **Acceleration**, **Deceleration**, **Jerk** are used during ramp-in mode.

Inputs


		Reference
uMaster	Master axis reference	
uSlave	Slave axis reference	
Execute	The block is activated on rising edge	Bool
RatioNumerator	Gear ratio Numerator	Long (I32)
RatioDenominator	Gear ratio Denominator	Long (I32)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)

Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
BufferMode	Buffering mode	Long (I32)
1	Aborting (start immediately)	
2	Buffered (start after finish of previous motion)	
3	Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
4	Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
5	Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
6	Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	

Outputs

yMaster	Master axis reference	Reference
ySlave	Slave axis reference	Reference
InGear	Slave axis reached gearing ratio	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

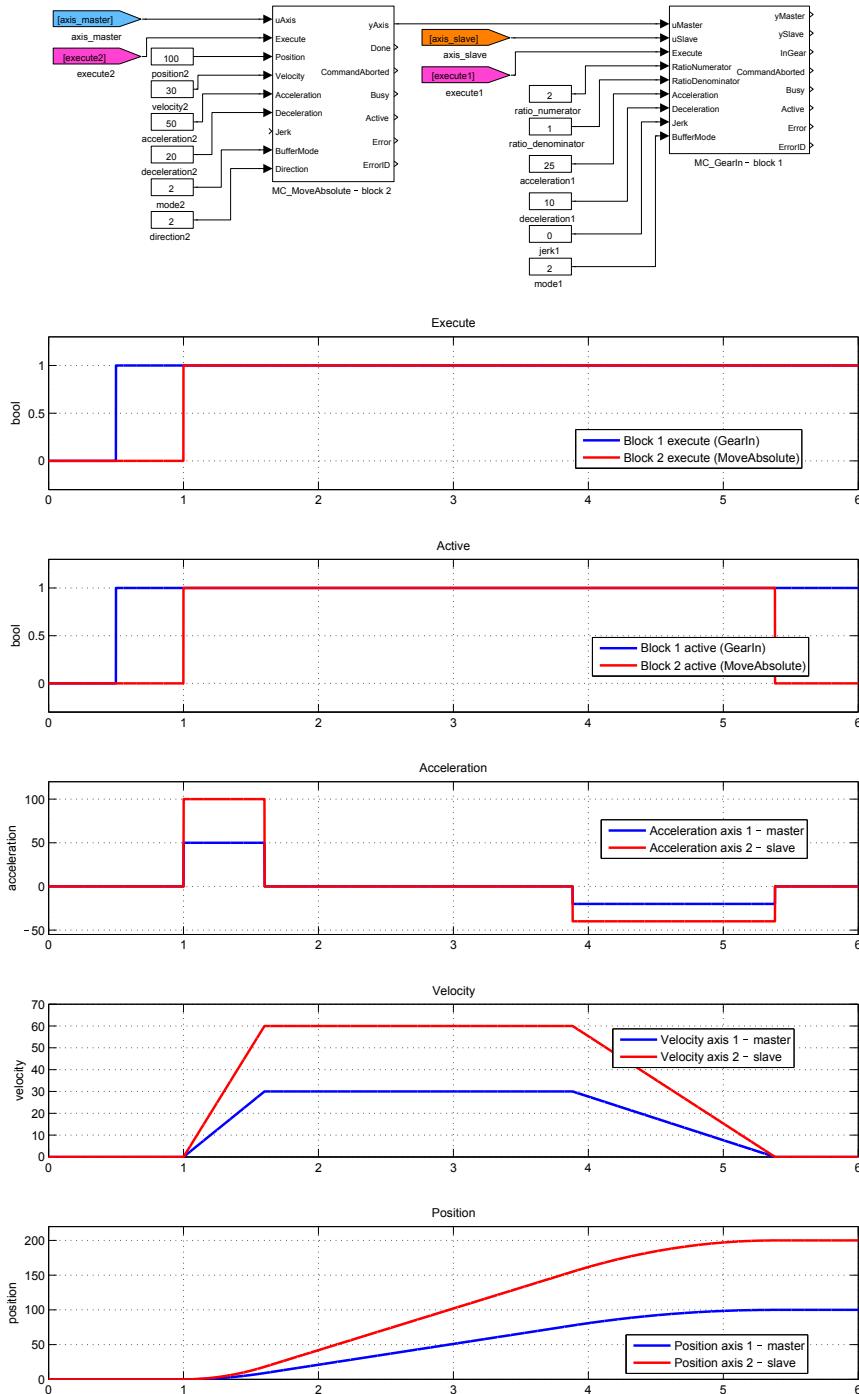

MC_GearInPos, MCP_GearInPos – Engage the master/slave velocity ratio in defined position

Block Symbols

Licence: MOTION CONTROL

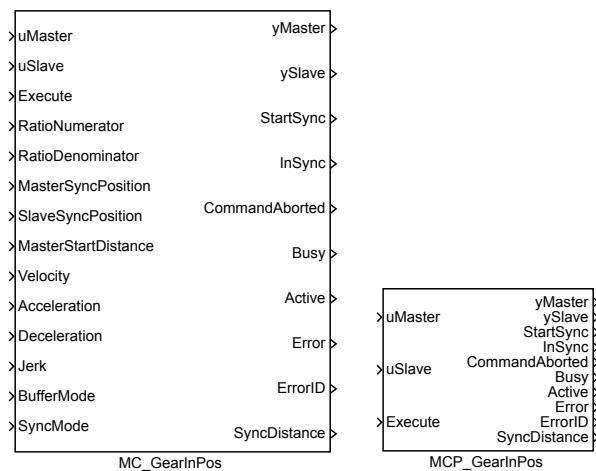

Function Description

The MC_GearInPos and MCP_GearInPos blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The functional block MC_GearInPos engages a synchronized motion of master and slave axes in such a way that the ratio of velocities of both axes is maintained at a constant value. Compared to MC_GearIn, also the master to slave *position ratio* is determined in a given reference point, i.e. following relation holds:

$$\frac{\text{SlavePosition} - \text{SlaveSyncPosition}}{\text{MasterPosition} - \text{MasterSyncPosition}} = \frac{\text{RatioNumerator}}{\text{RatioDenominator}}.$$

In case that the slave position does not fulfill this condition of synchronicity at the moment of block activation (i.e. in an instant of positive edge of Execute input and after execution of previous commands in buffered mode), synchronization procedure is started and indicated by output StartSync. During this procedure, proper slave trajectory which results in smooth synchronization of both axes is generated with respect to actual master motion and slave limits for Velocity, Acceleration, Deceleration and Jerk (these limits are not applied from the moment of successful synchronization). Parameter setting MasterStartDistance=0 leads to immediate start of synchronization procedure

at the moment of block activation (by the Execute input). Otherwise, the synchronization starts as soon as the master position enters the interval `MasterSyncPosition ± MasterStartDistance`.

Notes:

1. The synchronization procedure uses two algorithms: I. The algorithm implemented in `MC_MoveAbsolute` is recomputed in every time instant in such a way, that the end velocity is set to actual velocity of master axis. II. The position, velocity and acceleration is generated in the same manner as in the synchronized motion and a proper 5th order interpolation polynomial is added to achieve smooth transition to the synchronized state. The length of interpolation trajectory is computed in such a way that maximum velocity, acceleration and jerk do not violate the specified limits (for the interpolation polynomial). The first algorithm cannot be used for nonzero acceleration of the master axis whereas the second does not guarantee the compliance of maximum limits for the overall slave trajectory. Both algorithms are combined in a proper way to achieve the synchronized motion of both axes.

2. The block parameters (execution of synchronization and velocity/acceleration limits) have to be chosen so that the slave position is close to `SlaveSyncPosition` approximately at the moment when the master position enters the range for synchronization given by `MasterSyncPosition` and `MasterStartDistance`. Violation of this rule can lead to unpredictable behaviour of the slave axis during the synchronization or to an overrun of the specified limits for slave axis. However, the motion of both axes is usually well defined and predictable in standard applications and correct synchronization can be performed easily by proper configuration of motion commands and functional block parameters.

Inputs


<code>uMaster</code>	Master axis reference	<code>Reference</code>
<code>uSlave</code>	Slave axis reference	<code>Reference</code>
<code>Execute</code>	The block is activated on rising edge	<code>Bool</code>
<code>RatioNumerator</code>	Gear ratio Numerator	<code>Long (I32)</code>
<code>RatioDenominator</code>	Gear ratio Denominator	<code>Long (I32)</code>
<code>MasterSyncPosition</code>	Master position for synchronization	<code>Double (F64)</code>
<code>SlaveSyncPosition</code>	Slave position for synchronization	<code>Double (F64)</code>
<code>MasterStartDistance</code>	Master distance for starting gear in procedure	<code>Double (F64)</code>
<code>Velocity</code>	Maximal allowed velocity [unit/s]	<code>Double (F64)</code>
<code>Acceleration</code>	Maximal allowed acceleration [unit/s ²]	<code>Double (F64)</code>
<code>Deceleration</code>	Maximal allowed deceleration [unit/s ²]	<code>Double (F64)</code>
<code>Jerk</code>	Maximal allowed jerk [unit/s ³]	<code>Double (F64)</code>


BufferMode	Buffering mode	Long (I32)
1	Aborting (start immediately)	
2	Buffered (start after finish of previous motion)	
3	Blending low (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
4	Blending high (start after finishing the previous motion, previous motion finishes with the lowest velocity of both commands)	
5	Blending previous (start after finishing the previous motion, previous motion finishes with its final velocity)	
6	Blending next (start after finishing the previous motion, previous motion finishes with the starting velocity of the next block)	
SyncMode	Synchronization mode (cyclic axes only)	Long (I32)
1	CatchUp	
2	Shortest	
3	SlowDown	

Outputs

yMaster	Master axis reference	Reference
ySlave	Slave axis reference	Reference
StartSync	Commanded gearing starts	Bool
InSync	Slave axis reached the cam profile	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
SyncDistance	Position deviation of the slave axis from synchronized position	Double (F64)

Example

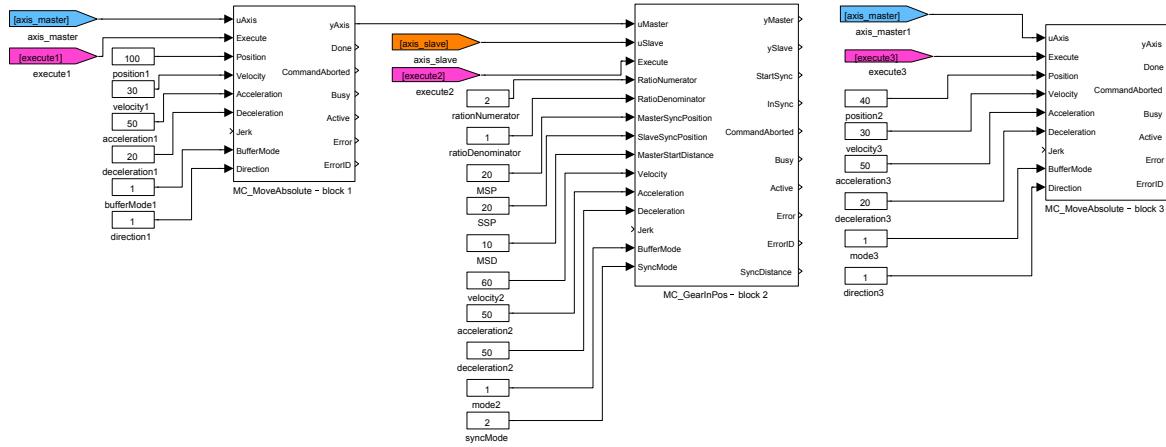


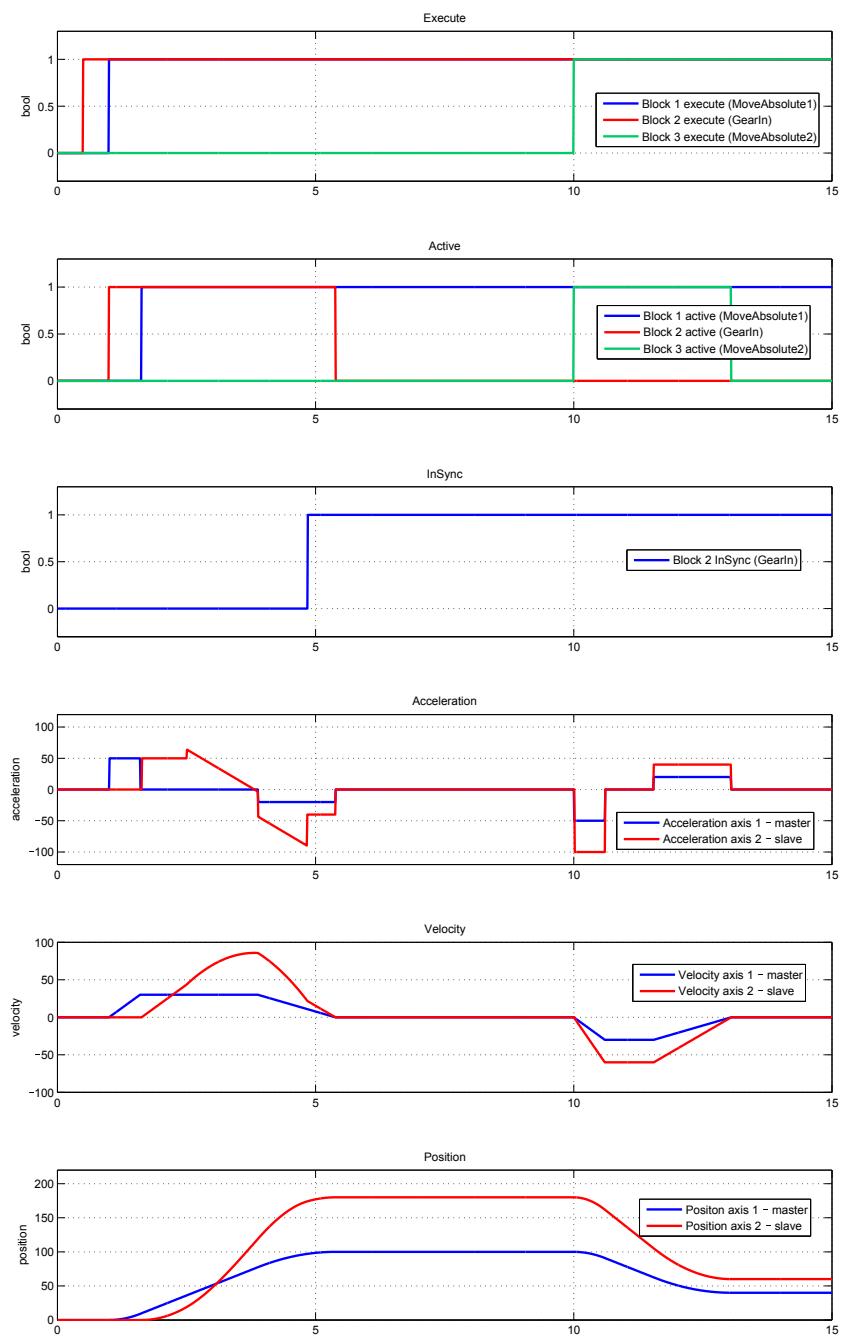

MC_GearOut – Disengage the master/slave velocity ratio

Block Symbol

Licence: MOTION CONTROL



Function Description

The MC_GearOut block switches off the gearing mode on the slave axis. If gearing mode is not active (no MC_GearIn block commands slave axis at this moment), block does nothing (no error is activated).


Inputs

uSlave	Slave axis reference	Reference
Execute	The block is activated on rising edge	Bool

Outputs

ySlave	Slave axis reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error


Example

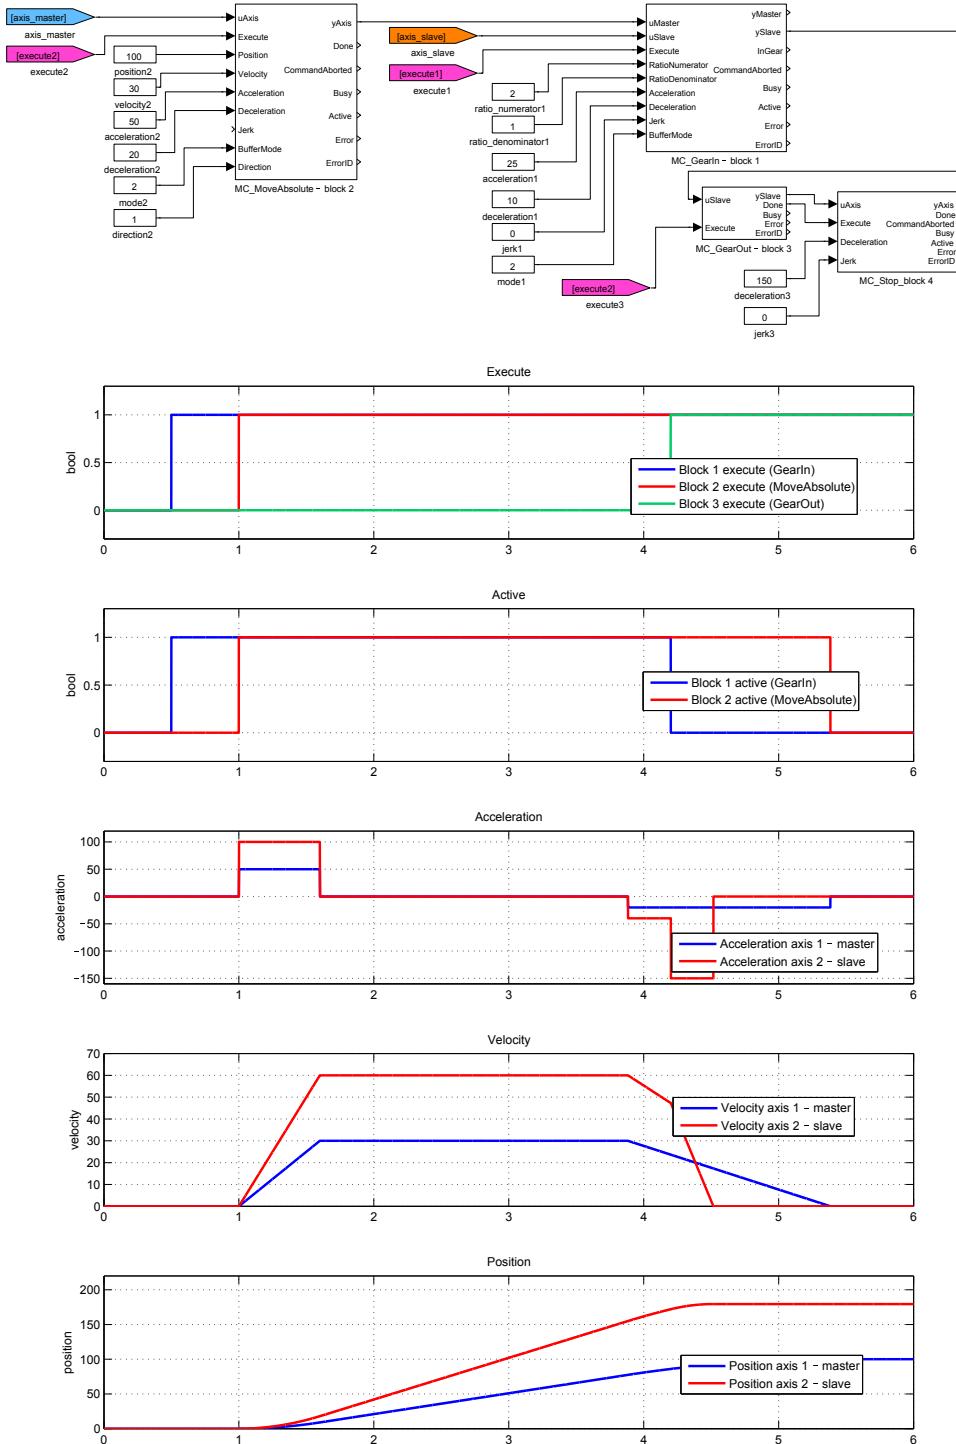

MC_PhasingAbsolute, MCP_PhasingAbsolute – Phase shift in synchronized motion (absolute coordinates)

Block Symbols

Licence: MOTION CONTROL

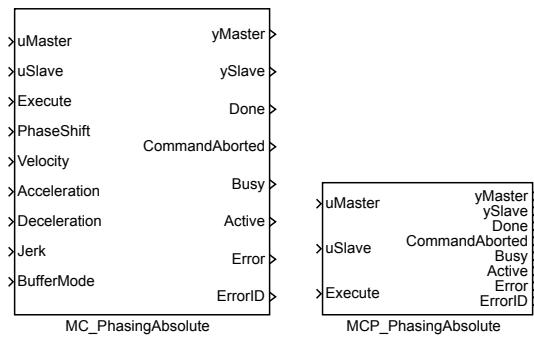

Function Description

The MC_PhasingAbsolute and MCP_PhasingAbsolute blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_PhasingAbsolute block introduces an additional phase shift in master-slave relation defined by an electronic cam ([MC_CamIn](#)) or electronic gear ([MC_GearIn](#)). The functionality of this command is very similar to [MC_MoveSuperimposed](#) (additive motion from 0 to **PhaseShift** position with respect to maximum velocity acceleration and jerk). The only difference is that the additive position/velocity/acceleration is added to master axis reference position in the functional dependence defined by a cam or gear ratio for the computation of slave motion instead of its direct summation with master axis movement. The absolute value of final phase shift is specified by **PhaseShift** parameter.

Note: The motion command is analogous to rotation of a mechanical cam by angle **PhaseShift**

Inputs



		Reference
uMaster	Master axis reference	
uSlave	Slave axis reference	
Execute	The block is activated on rising edge	Bool
PhaseShift	Requested phase shift (distance on master axis) for cam	Double (F64)
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)

Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
BufferMode	Buffering mode	Long (I32)
	1 Aborting	
	2 Buffered	

Outputs

yMaster	Master axis reference	Reference
ySlave	Slave axis reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
	i REXYGEN general error	


Example

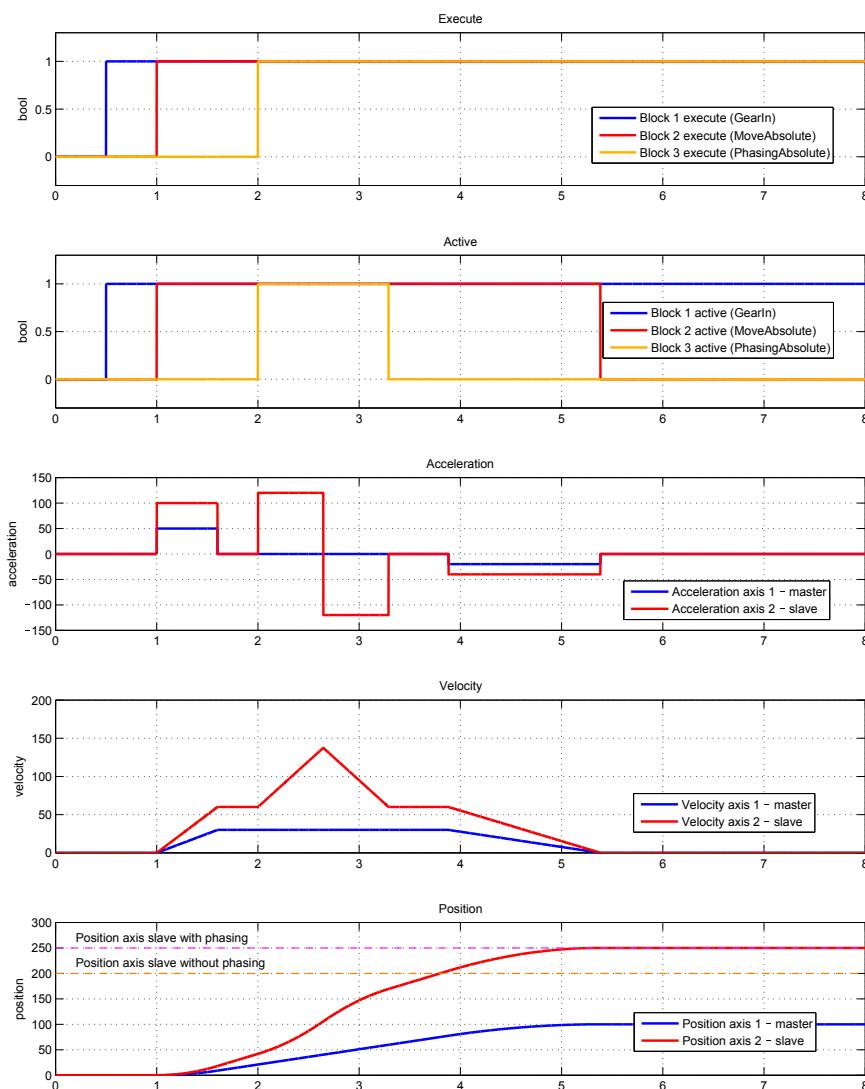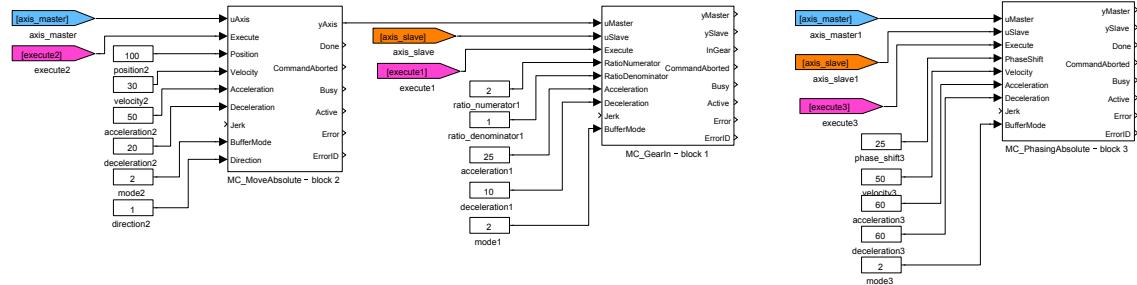

MC_PhasingRelative, MCP_PhasingRelative – Phase shift in synchronized motion (relative coordinates)

Block Symbols

Licence: MOTION CONTROL

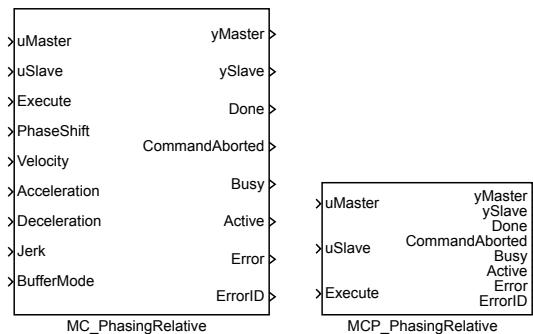

Function Description

The MC_PhasingRelative and MCP_PhasingRelative blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The MC_PhasingRelative introduces an additional phase shift in master-slave relation defined by an electronic cam ([MC_CamIn](#)) or electronic gear ([MC_GearIn](#)). The functionality of this command is very similar to [MC_MoveSuperimposed](#) (additive motion from 0 to PhaseShift position with respect to maximum velocity acceleration and jerk). The only difference is that the additive position/velocity/acceleration is added to master axis reference position in the functional dependence defined by a cam or gear ratio for the computation of slave motion instead of its direct summation with master axis movement. The relative value of final phase shift with respect to previous value is specified by PhaseShift parameter. Note: The motion command is analogous to rotation of a mechanical cam by angle PhaseShift

Inputs

		Reference
uMaster	Master axis reference	Reference
uSlave	Slave axis reference	Reference
Execute	The block is activated on rising edge	Bool
PhaseShift	Requested phase shift (distance on master axis) for cam	Double (F64)
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)

Jerk	Maximal allowed jerk [unit /s ³]	Double (F64)
BufferMode	Buffering mode	Long (I32)
	1 Aborting	
	2 Buffered	

Outputs

yMaster	Master axis reference	Reference
ySlave	Slave axis reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
	i REXYGEN general error	


Chapter 20


MC_COORD – Motion control - coordinated movement blocks

Contents

RM_AxesGroup – Axes group for coordinated motion control	590
RM_Feed – * MC Feeder	593
RM_Gcode – * CNC motion control	594
MC_AddAxisToGroup – Adds one axis to a group	596
MC_UngroupAllAxes – Removes all axes from the group	597
MC_GroupEnable – Changes the state of a group to GroupEnable	598
MC_GroupDisable – Changes the state of a group to GroupDisabled	599
MC_SetCartesianTransform – Sets Cartesian transformation	600
MC_ReadCartesianTransform – Reads the parameter of the cartesian transformation	602
MC_GroupSetPosition, MCP_GroupSetPosition – Sets the position of all axes in a group	603
MC_GroupReadActualPosition – Read actual position in the selected coordinate system	605
MC_GroupReadActualVelocity – Read actual velocity in the selected coordinate system	606
MC_GroupReadActualAcceleration – Read actual acceleration in the selected coordinate system	607
MC_GroupStop – Stopping a group movement	608
MC_GroupHalt – Stopping a group movement (interruptible)	611
MC_GroupInterrupt, MCP_GroupInterrupt – Read a group interrupt	616
MC_GroupContinue – Continuation of interrupted movement	617
MC_GroupReadStatus – Read a group status	618
MC_GroupReadError – Read a group error	619
MC_GroupReset – Reset axes errors	620

MC_MoveLinearAbsolute – Linear move to position (absolute coordinates)	621
MC_MoveLinearRelative – Linear move to position (relative to execution point)	625
MC_MoveCircularAbsolute – Circular move to position (absolute coordinates)	629
MC_MoveCircularRelative – Circular move to position (relative to execution point)	633
MC_MoveDirectAbsolute – Direct move to position (absolute coordinates)	637
MC_MoveDirectRelative – Direct move to position (relative to execution point)	640
MC_MovePath – General spatial trajectory generation	643
MC_GroupSetOverride – Set group override factors	645

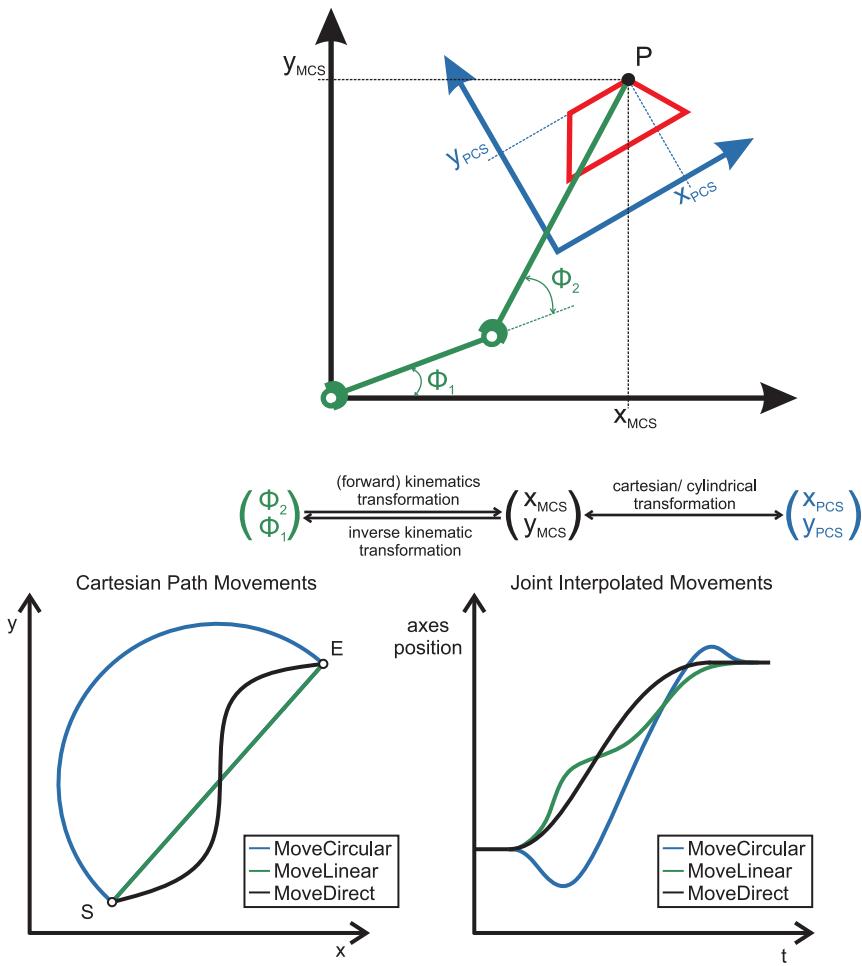

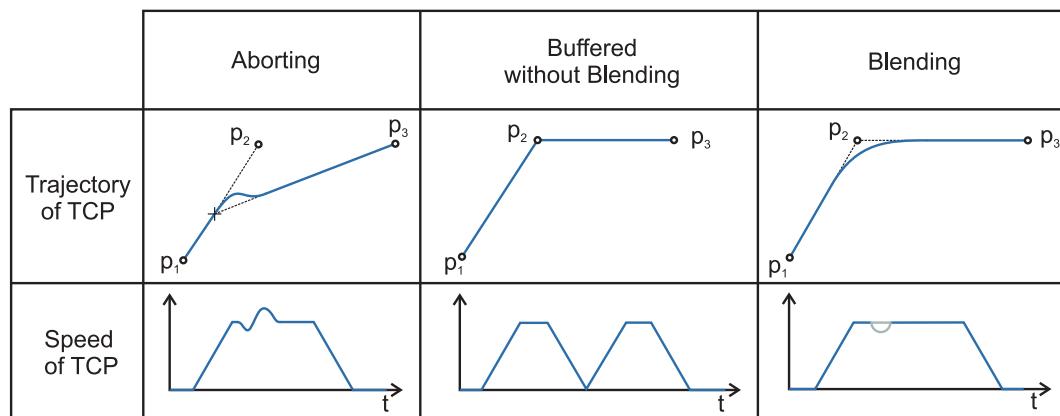

RM_AxesGroup – Axes group for coordinated motion control

Block Symbol

Licence: **COORDINATED MOTION**



Function Description

Note 1: Applicable for all non-administrative (moving) function blocks.

Note 2: In the states GroupErrorStop or GroupStopping, all Function Blocks can be called, although they will not be executed, except MC_GroupReset for GroupErrorStop and any occurring Error – they will generate the transition to GroupStandby or GroupErrorStop respectively

Note 3: MC_GroupStop.DONE AND NOT MC_GroupStop.EXECUTE

Note 4: Transition is applicable if last axis is removed from the group

Note 5: Transition is applicable while group is not empty.

Note 6: MC_GroupDisable and MC_UngroupAllAxes can be issued in all states and will change the state to GroupDisabled.



Parameters

McsCount	Number of axis in MCS	$\downarrow 1 \uparrow 6 \odot 6$	Long (I32)
AcsCount	Number of axis in ACS	$\downarrow 1 \uparrow 16 \odot 6$	Long (I32)
PosCount	Number of position axis	$\downarrow 1 \uparrow 6 \odot 3$	Long (I32)
Velocity	Maximal allowed velocity [unit/s]		Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]		Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]		Double (F64)


Outputs

refGroup	Axes group reference	Reference
refPos	Position, velocity and acceleration vector	Reference
iState	Group status 0 Disabled 1 Standby 2 Homing 6 Moving 7 Stopping 8 Error stop	Long (I32)
ErrorID	Result of the last operation i REXYGEN general error	Error

The State Diagram of AxesGroup

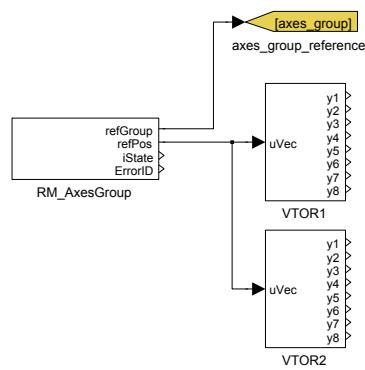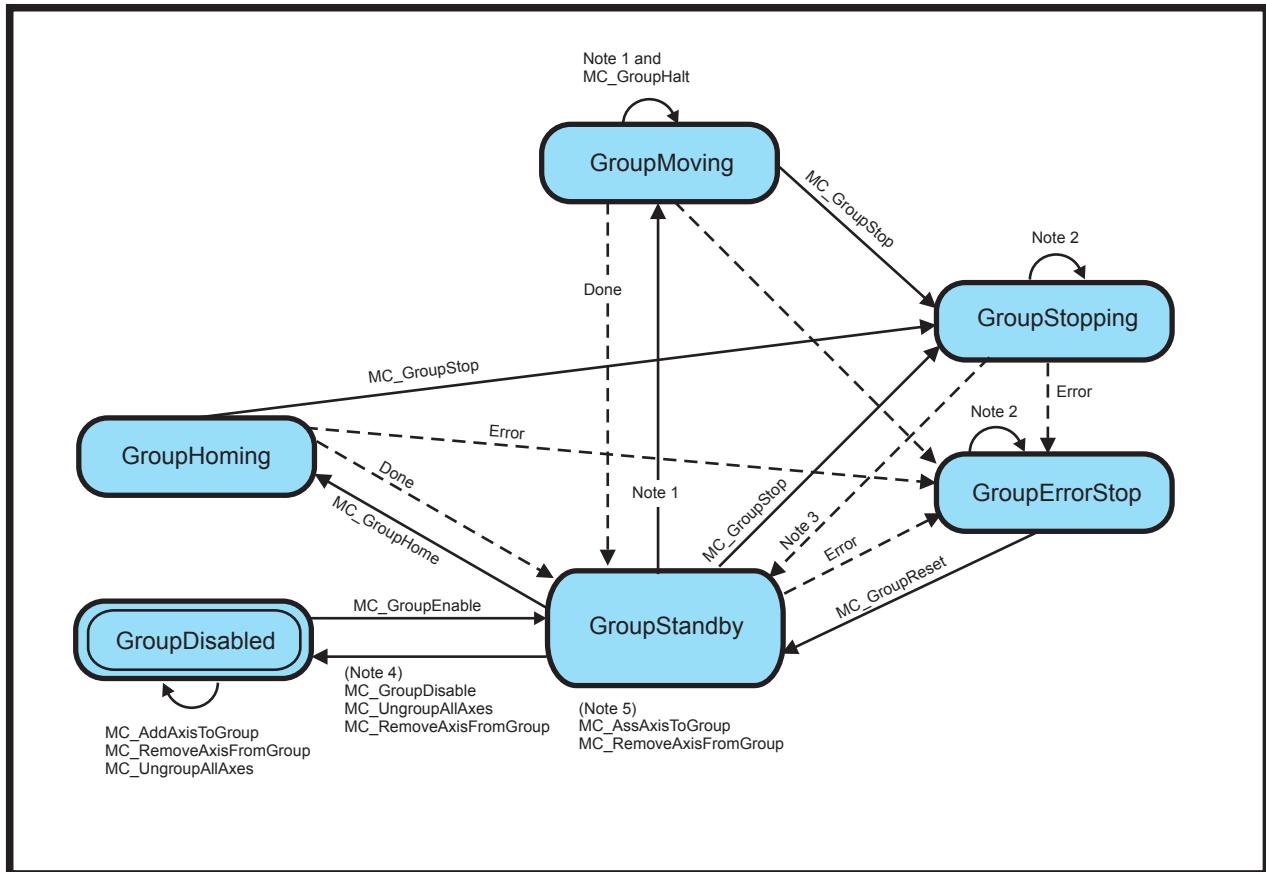


592 CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

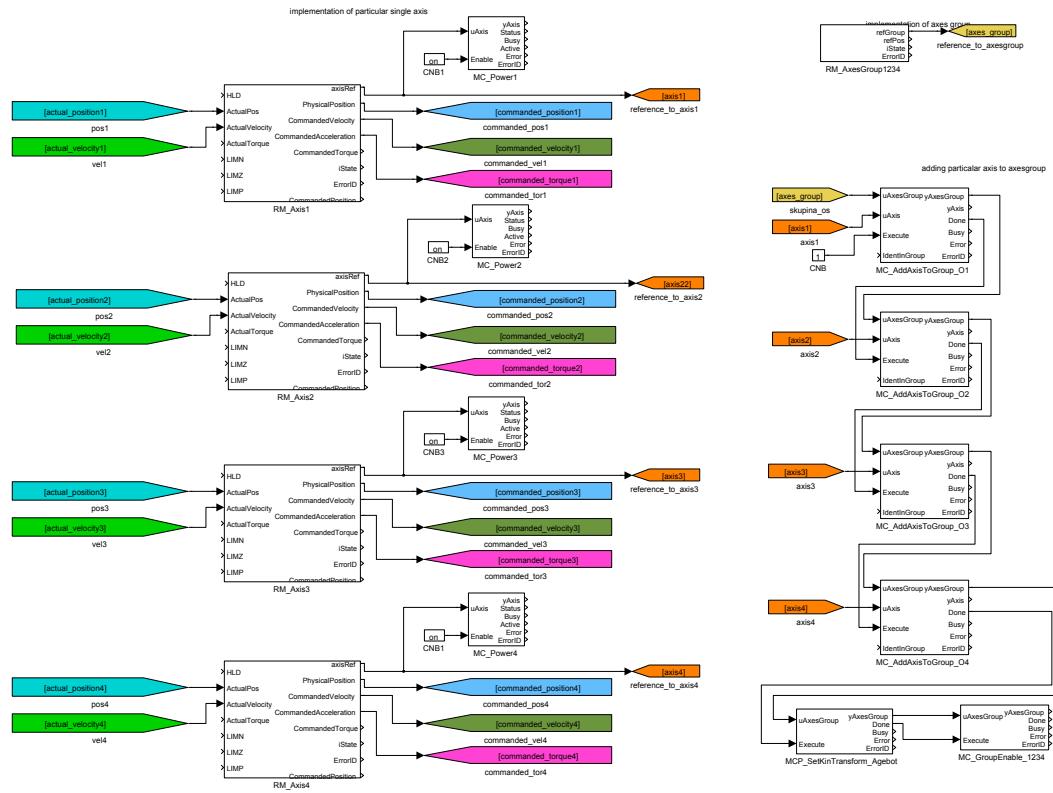

RM_Feed - * MC Feeder

Block Symbol

Licence: COORDINATED MOTION

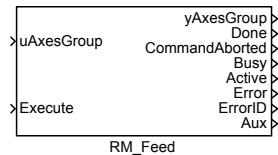

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

<code>uAxesGroup</code>	Axes group reference	Reference
<code>Execute</code>	The block is activated on rising edge	Bool

Parameters

<code>Filename</code>	0	String
<code>VelFactor</code>	0	$\downarrow 0.01 \uparrow 100.0 \odot 1.0$ Double (F64)
<code>Relative</code>	0	Bool
<code>CoordSystem</code>	0	$\downarrow 1 \uparrow 3 \odot 2$ Long (I32)
<code>BufferMode</code>	0	$\downarrow 1 \uparrow 6 \odot 1$ Long (I32)
<code>TransitionMode</code>	0	$\downarrow 0 \uparrow 15 \odot 1$ Long (I32)
<code>TransitionParameter</code>	0	Double (F64)


Outputs

<code>yAxesGroup</code>	Axes group reference	Reference
<code>Done</code>	Algorithm finished	Bool
<code>CommandAborted</code>	Algorithm was aborted	Bool
<code>Busy</code>	Algorithm not finished yet	Bool
<code>Active</code>	The block is controlling the axis	Bool
<code>Error</code>	Error occurred	Bool
<code>ErrorID</code>	Result of the last operation	Error
<code>Aux</code>	0	Double (F64)

RM_Gcode – * CNC motion control

Block Symbol

Licence: COORDINATED MOTION

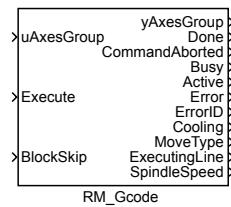

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

<code>uAxesGroup</code>	Axes group reference	Reference
<code>Execute</code>	The block is activated on rising edge	Bool
<code>BlockSkip</code>	MILAN	Bool

Parameters

<code>BaseDir</code>	Directory of the G-code files	String
<code>MainFile</code>	Source file number	Long (I32)
<code>CoordSystem</code>	0	↓1 ↑3 ⊕3 Long (I32)
<code>BufferMode</code>	Buffering mode	⊕1 Long (I32)
	1 Aborting	
	2 Buffered	
	3 Blending low	
	4 Blending high	
	5 Blending previous	
	6 Blending next	
<code>TransitionMode</code>	Transition mode in blending mode	⊕1 Long (I32)
	1 TMNone	
	2 TMStartVelocity	
	3 TMConstantVelocity	
	4 TMCornerDistance	
	5 TMMaxCornerDeviation	
	11 Smooth	
<code>TransitionParameter</code>	Parametr for transition (depends on transition mode)	Double (F64)

workOffsets	Sets with initial coordinate ⊕[0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0]	Double (F64)
toolOffsets	Sets of tool offset ⊕[0 0 0]	Double (F64)
cutterOffsets	Tool radii ⊕[0 0 0]	Double (F64)


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
Cooling	Cooling	Bool
MoveType	Command execution	Long (I32)
ExecutingLine	Current line of G-code	Long (I32)
SpindleSpeed	Spindle speed	Long (I32)

MC_AddAxisToGroup – Adds one axis to a group

Block Symbol

Licence: COORDINATED MOTION

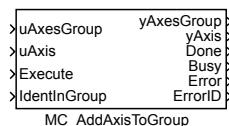

Function Description

The function block MC_AddAxisToGroup adds one **uAxis** to the group in a structure **uAxesGroup**. Axes Group is implemented by the function block **RM_AxesGroup**. The input **uAxis** must be defined by the function block **RM_Axis** from the MC_SINGLE library.

Note 1: Every **IdentInGroup** is unique and can be used only for one time otherwise the error is set.

Inputs

uAxesGroup	Axes group reference	Reference
uAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Execute	The block is activated on rising edge	Bool
IdentInGroup	The order of axes in the group (0 = first unassigned)	Long (I32)

Outputs

yAxesGroup	Axes group reference	Reference
yAxis	Axis reference (only RM_Axis.axisRef-uAxis or yAxis-uAxis connections are allowed)	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_UngroupAllAxes – Removes all axes from the group

Block Symbol

Licence: COORDINATED MOTION



Function Description

The function block MC_UngroupAllAxes removes all axes from the group **uAxesGroup**. After finalization the state is changed to "GroupDisabled".

Note 1: If the function block is execute in the group state "GroupDisabled", "GroupStandBy" or "GroupErrorStop" the error is set and the block is not execute.

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupEnable – Changes the state of a group to GroupEnable

Block Symbol

Licence: COORDINATED MOTION



Function Description

The function block MC_GroupEnable changes the state for the group uAxesGroup from "GroupDisabled" to "GroupStandby".

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupDisable – Changes the state of a group to GroupDisabled

Block Symbol

Licence: COORDINATED MOTION



Function Description

The function block MC_GroupDisable changes the state for the group uAxesGroup to "GroupDisabled". If the axes are not standing still while issuing this command the state of the group is changed to "Stopping". It is mean stopping with the maximal allowed deceleration. When stopping is done the state of the group is changed to "GroupDisabled".

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorCode	Result of the last operation i REXYGEN general error	Error

MC_SetCartesianTransform – Sets Cartesian transformation

Block Symbol

Licence: **COORDINATED MOTION**

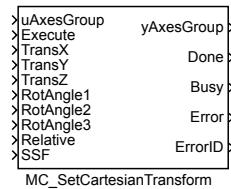

Function Description




The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

		Reference
uAxesGroup	Axes group reference	
Execute	The block is activated on rising edge	Bool
TransX	X-component of translation vector	Double (F64)
TransY	Y-component of translation vector	Double (F64)
TransZ	Z-component of translation vector	Double (F64)
RotAngle1	Rotation angle component	Double (F64)
RotAngle2	Rotation angle component	Double (F64)
RotAngle3	Rotation angle component	Double (F64)
Relative	Mode of position inputs	Bool

Outputs


		Reference
yAxesGroup	Axes group reference	
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

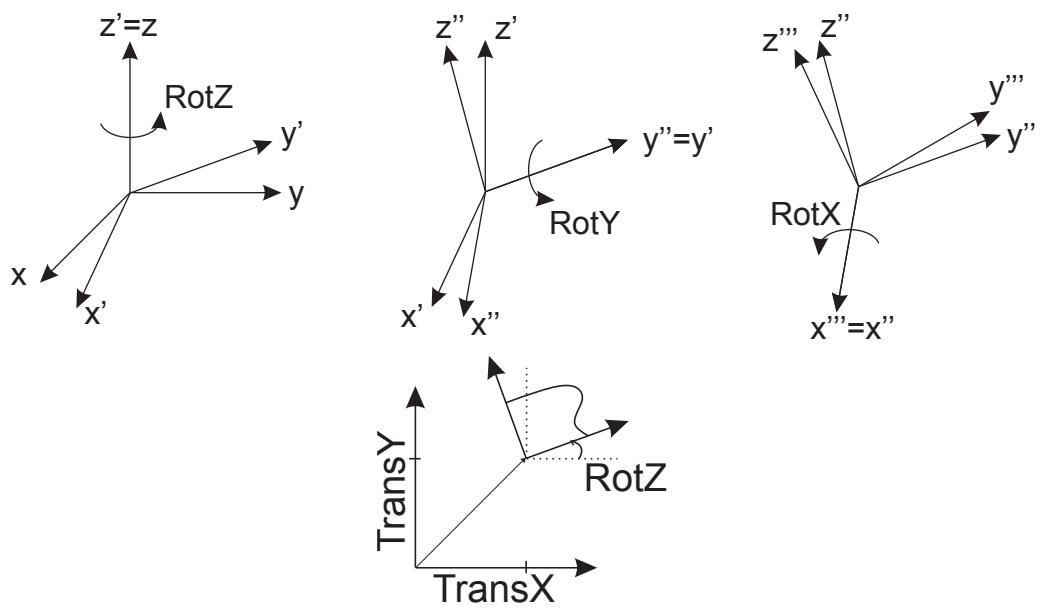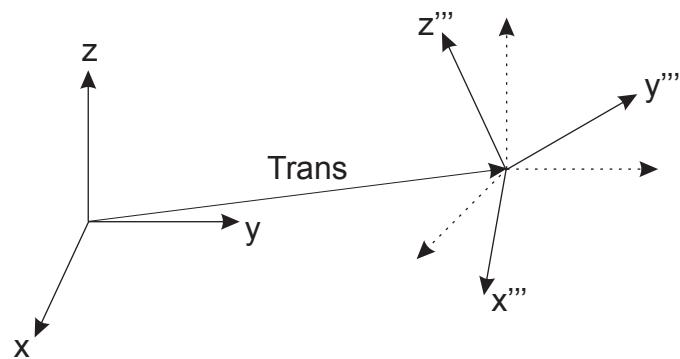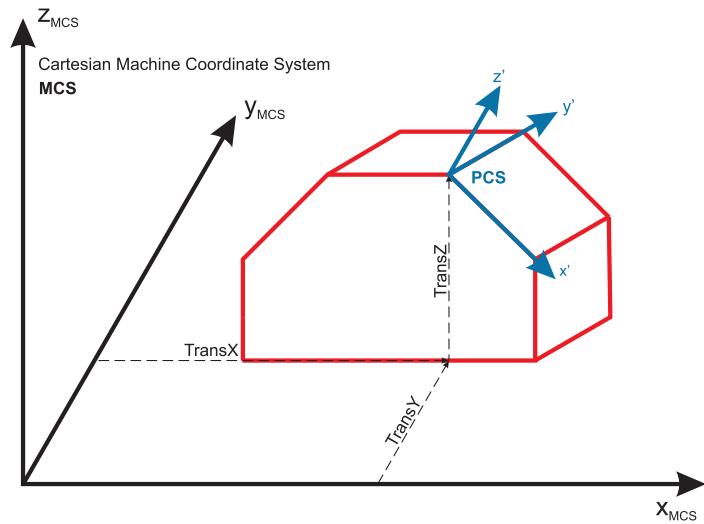

MC_ReadCartesianTransform – Reads the parameter of the cartesian transformation

Block Symbol

Licence: COORDINATED MOTION

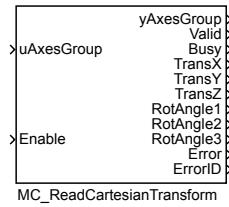

Function Description

The function block MC_ReadCartesianTransform reads the parameter of the cartesian transformation that is active between the MCS and PCS. The parameters are valid only if the output **Valid** is true which is achieved by setting the input **Enable** on true. If more than one transformation is active, the resulting cartesian transformation is given.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
TransX	X-component of translation vector	Double (F64)
TransY	Y-component of translation vector	Double (F64)
TransZ	Z-component of translation vector	Double (F64)
RotAngle1	Rotation angle component	Double (F64)
RotAngle2	Rotation angle component	Double (F64)
RotAngle3	Rotation angle component	Double (F64)
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupSetPosition, MCP_GroupSetPosition – Sets the position of all axes in a group

Block Symbols

Licence: COORDINATED MOTION

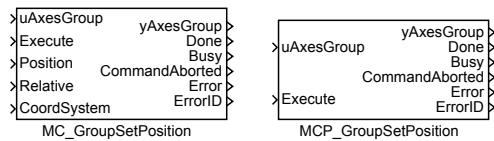

Function Description

The MC_GroupSetPosition and MCP_GroupSetPosition blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_ version of the block.

The function block MC_GroupSetPosition sets the position of all axes in the group uAxesGroup without moving the axes. The new coordinates are described by the input Position. With the coordinate system input CoordSystem the according coordinate system is selected. The function block MC_GroupSetPosition shifts position of the addressed coordinate system and affect the higher level coordinate systems (so if ACS selected, MCS and PCS are affected).

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Position	Array of coordinates (positions and orientations)	Reference
Relative	Mode of position inputs off ... absolute on relative	Bool
CoordSystem	Reference to the coordinate system used 1 ACS 2 MCS 3 PCS	Long (I32)

Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
CommandAborted	Algorithm was aborted	Bool
Error	Error occurred	Bool


604 CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

ErrorID	Result of the last operation	Error
i	REXYGEN general error	

MC_GroupReadActualPosition – Read actual position in the selected coordinate system

Block Symbol

Licence: COORDINATED MOTION

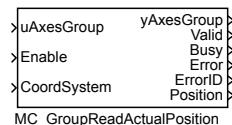

Function Description

The function block MC_GroupReadActualPosition returns the actual position in the selected coordinate system of an axes group. The position is valid only if the output **Valid** is true which is achieved by setting the input **Enable** on true.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	


Outputs

yAxesGroup	Axes group reference	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
i	REXYGEN general error	
Position	xxx	Reference

MC_GroupReadActualVelocity – Read actual velocity in the selected coordinate system

Block Symbol

Licence: COORDINATED MOTION

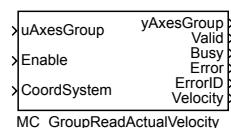

Function Description

The function block MC_GroupReadActualVelocity returns the actual velocity in the selected coordinate system of an axes group. The position is valid only if the output Valid is true which is achieved by setting the input Enable on true.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	


Outputs

yAxesGroup	Axes group reference	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
Velocity	xxx	Reference

MC_GroupReadActualAcceleration – Read actual acceleration in the selected coordinate system

Block Symbol

Licence: COORDINATED MOTION

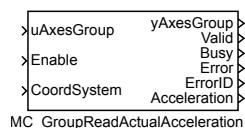

Function Description

The function block MC_GroupReadActualAcceleration returns the actual velocity in the selected coordinate system of an axes group. The position is valid only if the output **Valid** is true which is achieved by setting the input **Enable** on true.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	


Outputs

yAxesGroup	Axes group reference	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
i	REXYGEN general error	
Acceleration	xxx	Reference

MC_GroupStop – Stopping a group movement

Block Symbol

Licence: **COORDINATED MOTION**

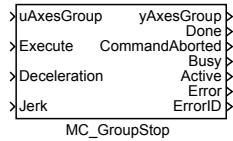

Function Description


The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs


uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)

Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

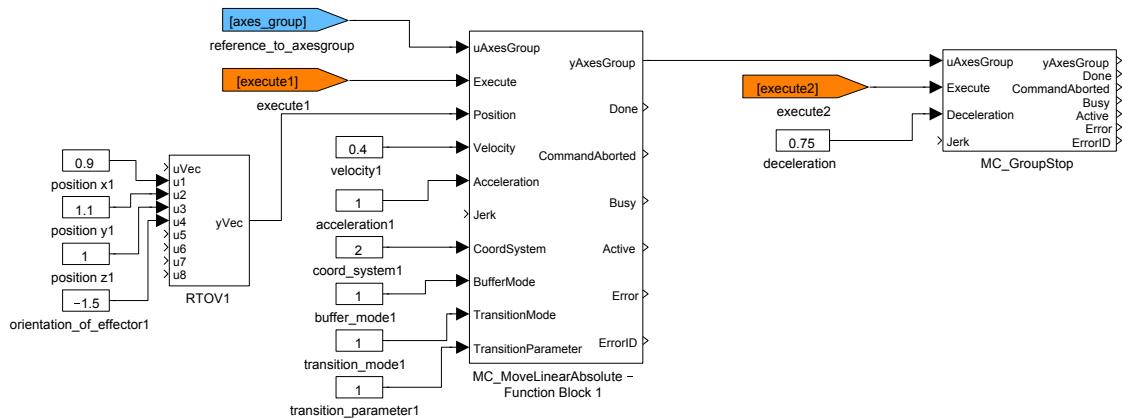


610 CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

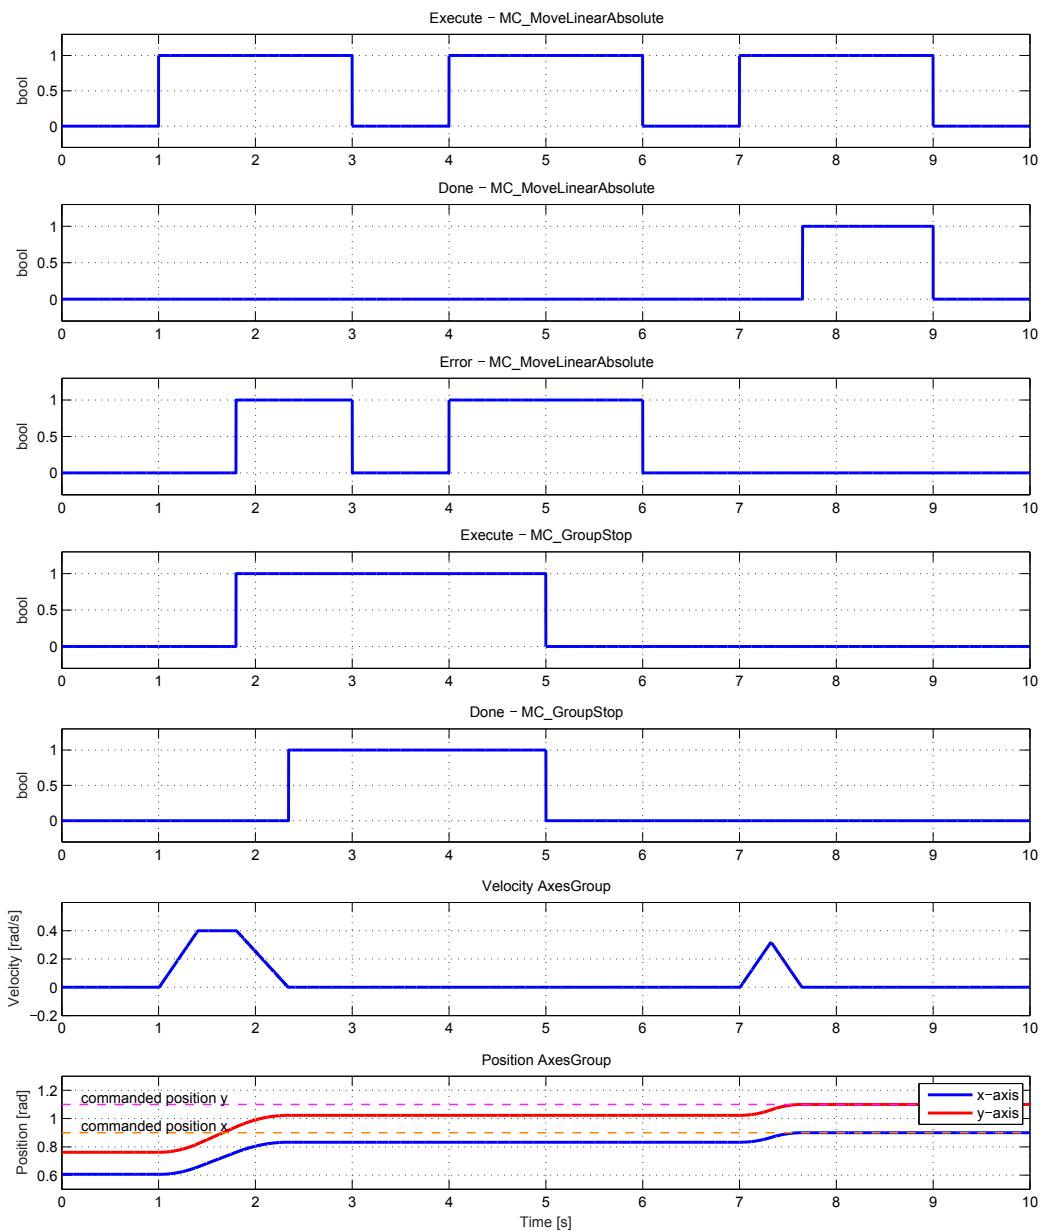

MC_GroupHalt – Stopping a group movement (interruptible)

Block Symbol

Licence: COORDINATED MOTION

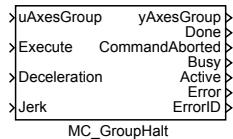

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.


Inputs


uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)

Outputs


yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

612 CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

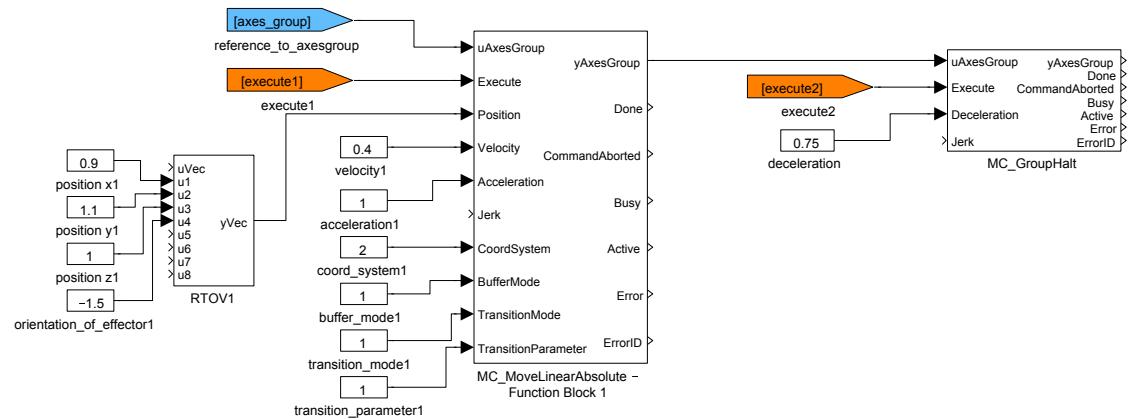

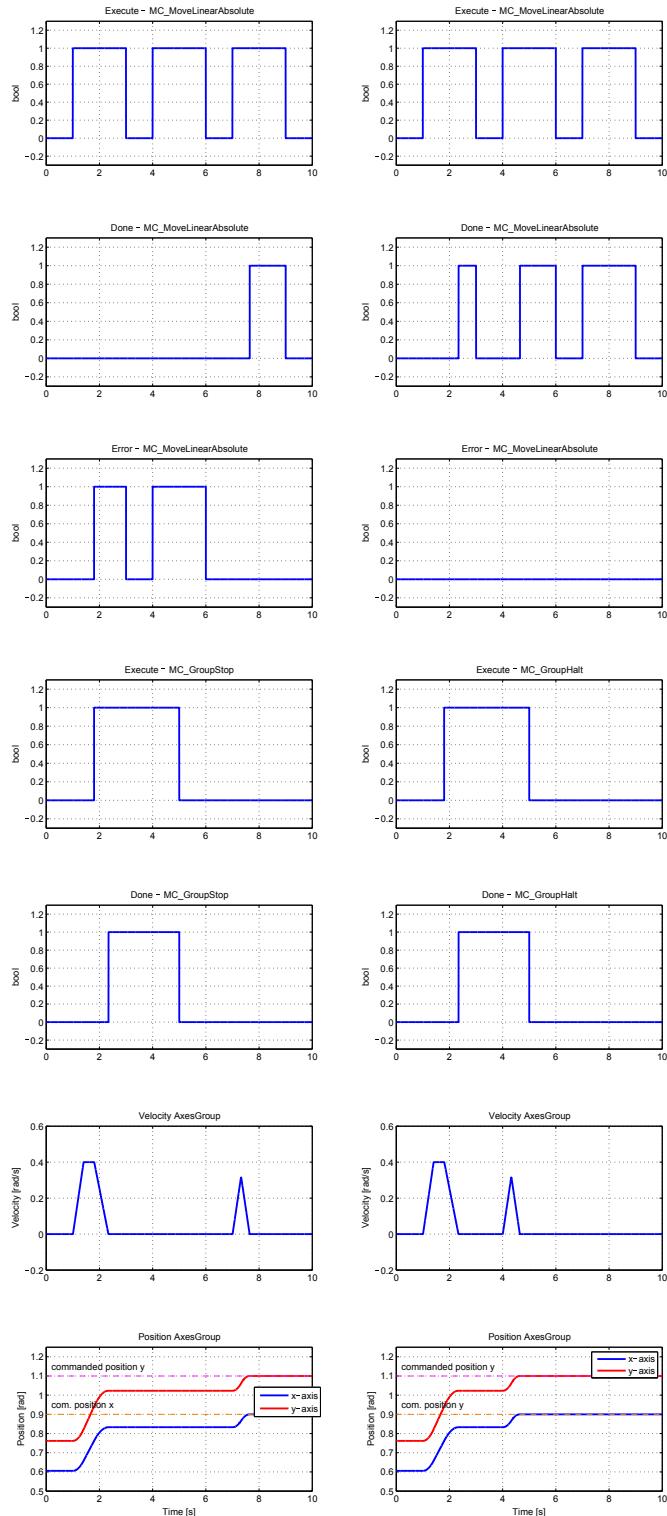

614CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

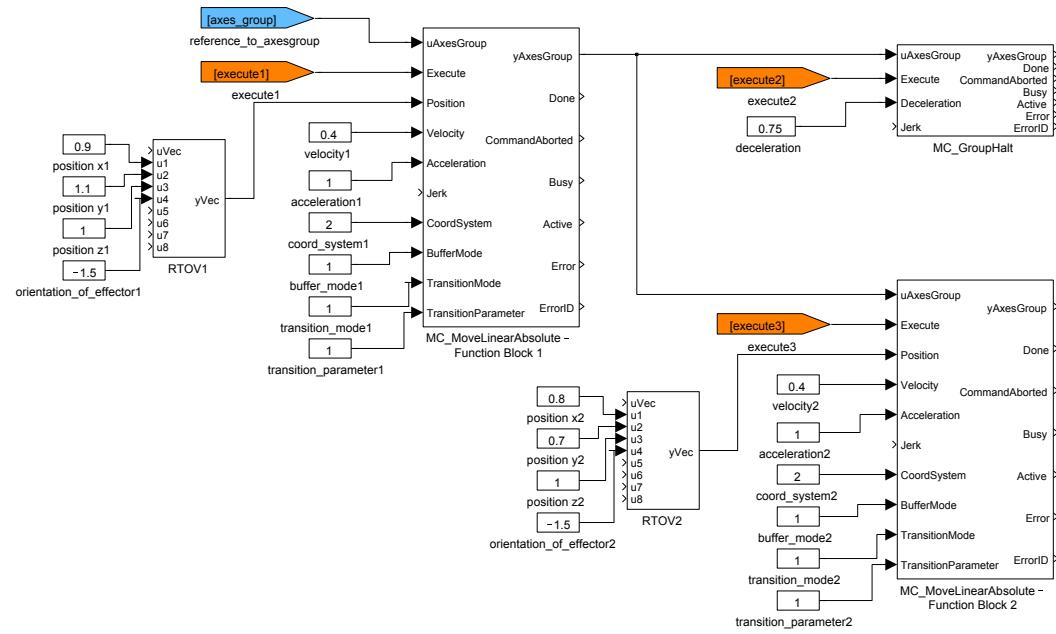


orientation_of_effector1

transition_parameter1

orientation_of_effector2


transition_parameter2

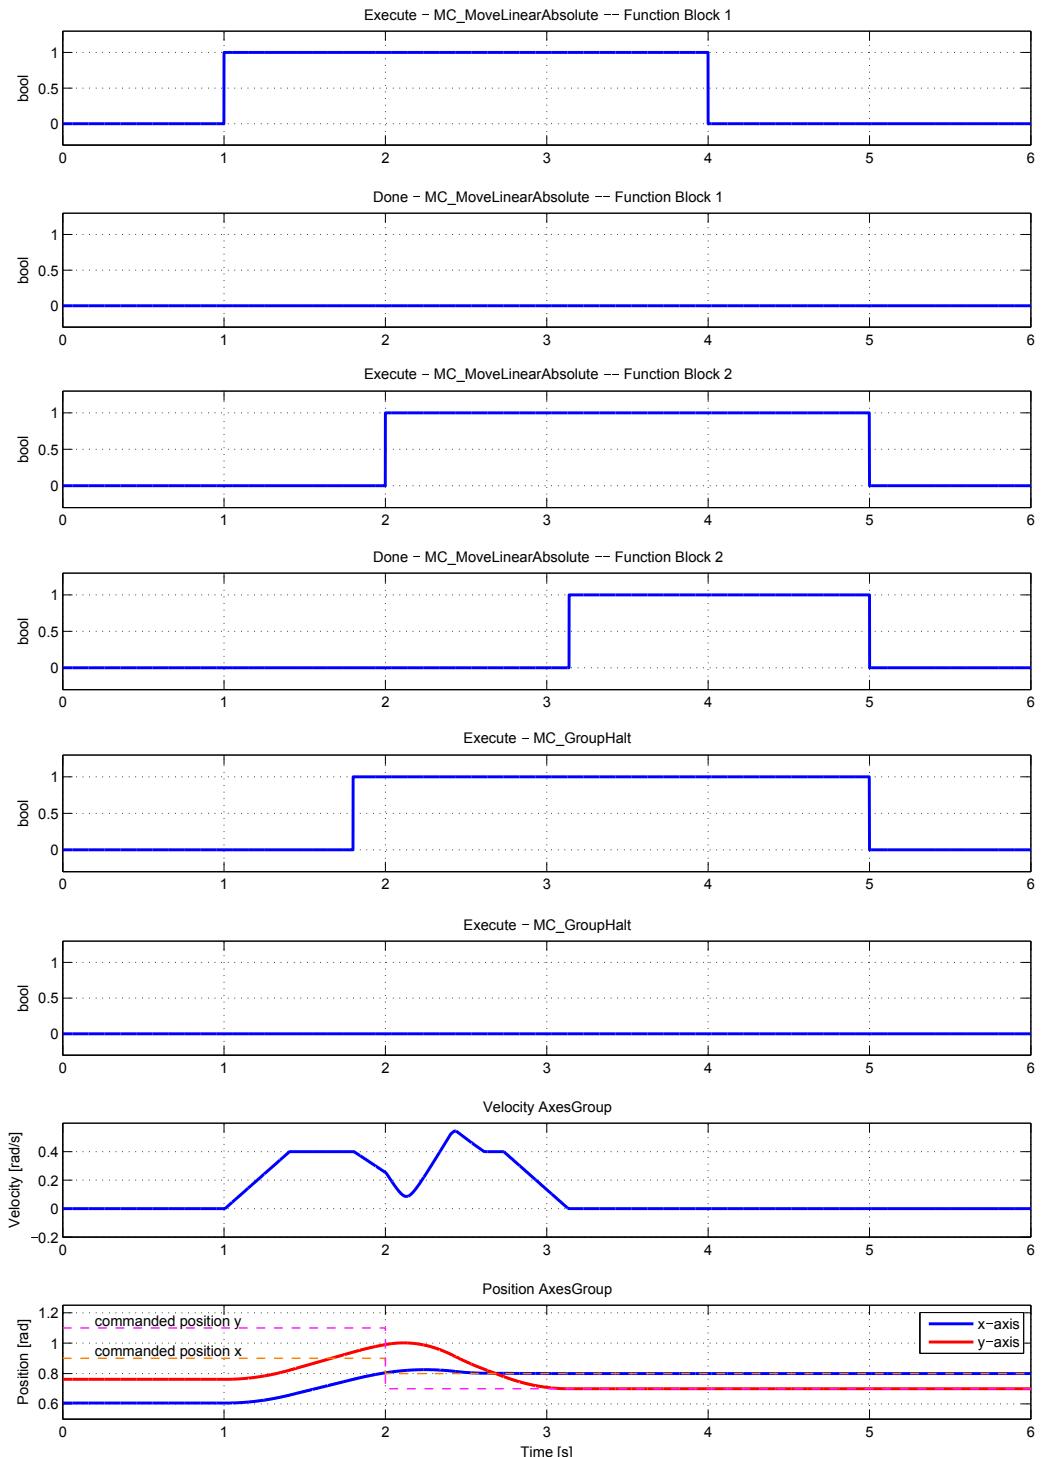

MC_GroupInterrupt, MCP_GroupInterrupt – Read a group interrupt

Block Symbols

Licence: **COORDINATED MOTION**

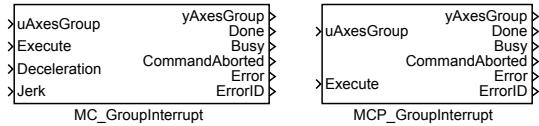

Function Description

The MC_GroupInterrupt and MCP_GroupInterrupt blocks offer the same functionality, the only difference is that some of the inputs are available as parameters in the MCP_version of the block.

The function block MC_GroupInterrupt interrupts the on-going motion and stops the group from moving, however does not abort the interrupted motion (meaning that at the interrupted FB the output CommandAborted will not be Set, Busy is still high and Active is reset). It stores all relevant track or path information internally at the moment it becomes active. The uAxesGroup stays in the original state even if the velocity zero is reached and the Done output is set.

Note 1: This function block is complementary to the function block [MC_GroupContinue](#) which execution the uAxesGroup state is reset to the original state (before MC_GroupInterrupt execution)

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Deceleration	Maximal allowed deceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
CommandAborted	Algorithm was aborted	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupContinue – Continuation of interrupted movement

Block Symbol

Licence: COORDINATED MOTION

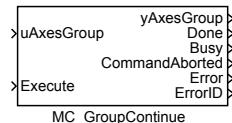

Function Description

The function block **MC_GroupContinue** transfers the program back to the situation at issuing **MC_GroupInterrupt**. It uses internally the data set as stored at issuing **MC_GroupInterrupt**, and at the end (output **Done** set) transfer the control on the group back to the original FB doing the movements on the axes group, meaning also that at the originally interrupted FB the output **Busy** is still high and the output **Active** is set again.

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
CommandAborted	Algorithm was aborted	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupReadStatus – Read a group status

Block Symbol

Licence: COORDINATED MOTION

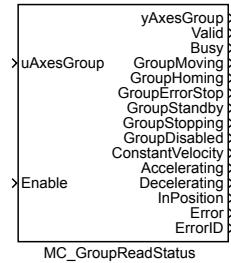

Function Description

The function block MC_GroupReadStatus returns the status of the uAxesGroup. The status is valid only if the output Valid is true which is achieved by setting the input Enable on true.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
GroupMoving	State GroupMoving	Bool
GroupHoming	State GroupHoming	Bool
GroupErrorStop	State ErrorStop	Bool
GroupStandby	State Standby	Bool
GroupStopping	State Stopping	Bool
GroupDisabled	State Disabled	Bool
ConstantVelocity	Constant velocity motion	Bool
Accelerating	Accelerating	Bool
Decelerating	Decelerating	Bool
InPosition	Symptom achieve the desired position	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupReadError – Read a group error

Block Symbol

Licence: COORDINATED MOTION

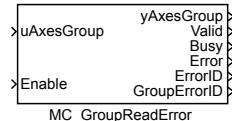

Function Description

The function block **MC_GroupReadError** describes general error on the **uAxesGroup** which is not relating to the function blocks. If the output **GroupErrorID** is equal to 0 there is no error on the axes group. The actual error code **ErrorID** is valid only if the output **Valid** is true which is achieved by setting the input **Enable** on true.

Note 1: This function block is implemented because of compatibility with the PLCopen norm. The same error value is on the output **ErrorID** of the function block **RM_AxesGroup**.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Valid	Output value is valid	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error
GroupErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupReset – Reset axes errors

Block Symbol

Licence: **COORDINATED MOTION**



Function Description

The function block **MC_GroupReset** makes the transition from the state "GroupErrorStop" to "GroupStandBy" by resetting all internal group-related errors. This function block also resets all axes in this group like the function block **MC_Reset** from the MC_SINGLE library.

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_MoveLinearAbsolute – Linear move to position (absolute coordinates)

Block Symbol

Licence: COORDINATED MOTION

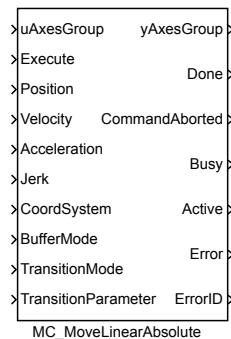

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Position	Array of coordinates (positions and orientations)	Reference
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
CoordSystem	Reference to the coordinate system used	Long (I32)
	1 ACS	
	2 MCS	
	3 PCS	
BufferMode	Buffering mode	Long (I32)
	1 Aborting	
	2 Buffered	
	3 Blending low	
	4 Blending high	
	5 Blending previous	
	6 Blending next	


TransitionMode Transition mode in blending mode Long (I32)

- 1 TMNone
- 2 TMStartVelocity
- 3 TMConstantVelocity
- 4 TMCornerDistance
- 5 TMMaxCornerDeviation
- 11 Smooth


TransitionParameter Parametr for transition (depends on transition mode) Double (F64)


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
	i REXYGEN general error	

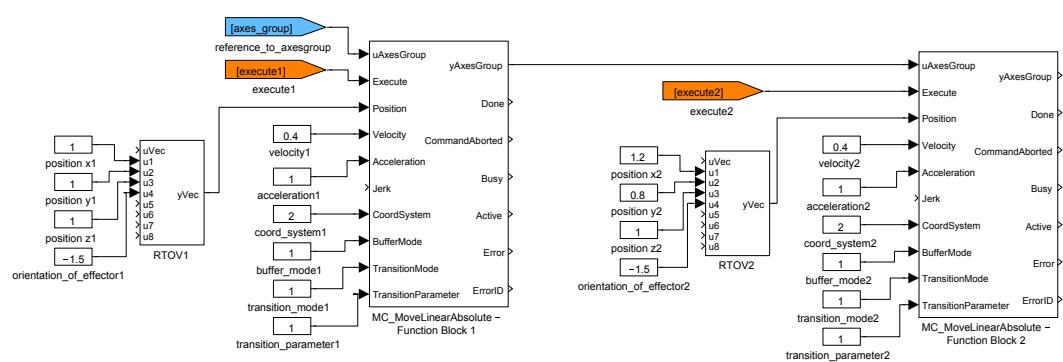

Sequence of two complete motions (Done>Execute)

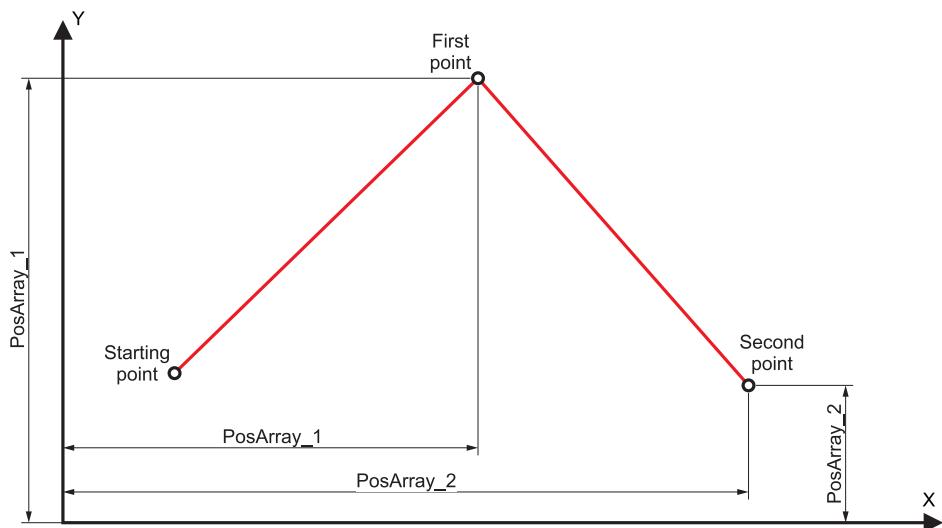


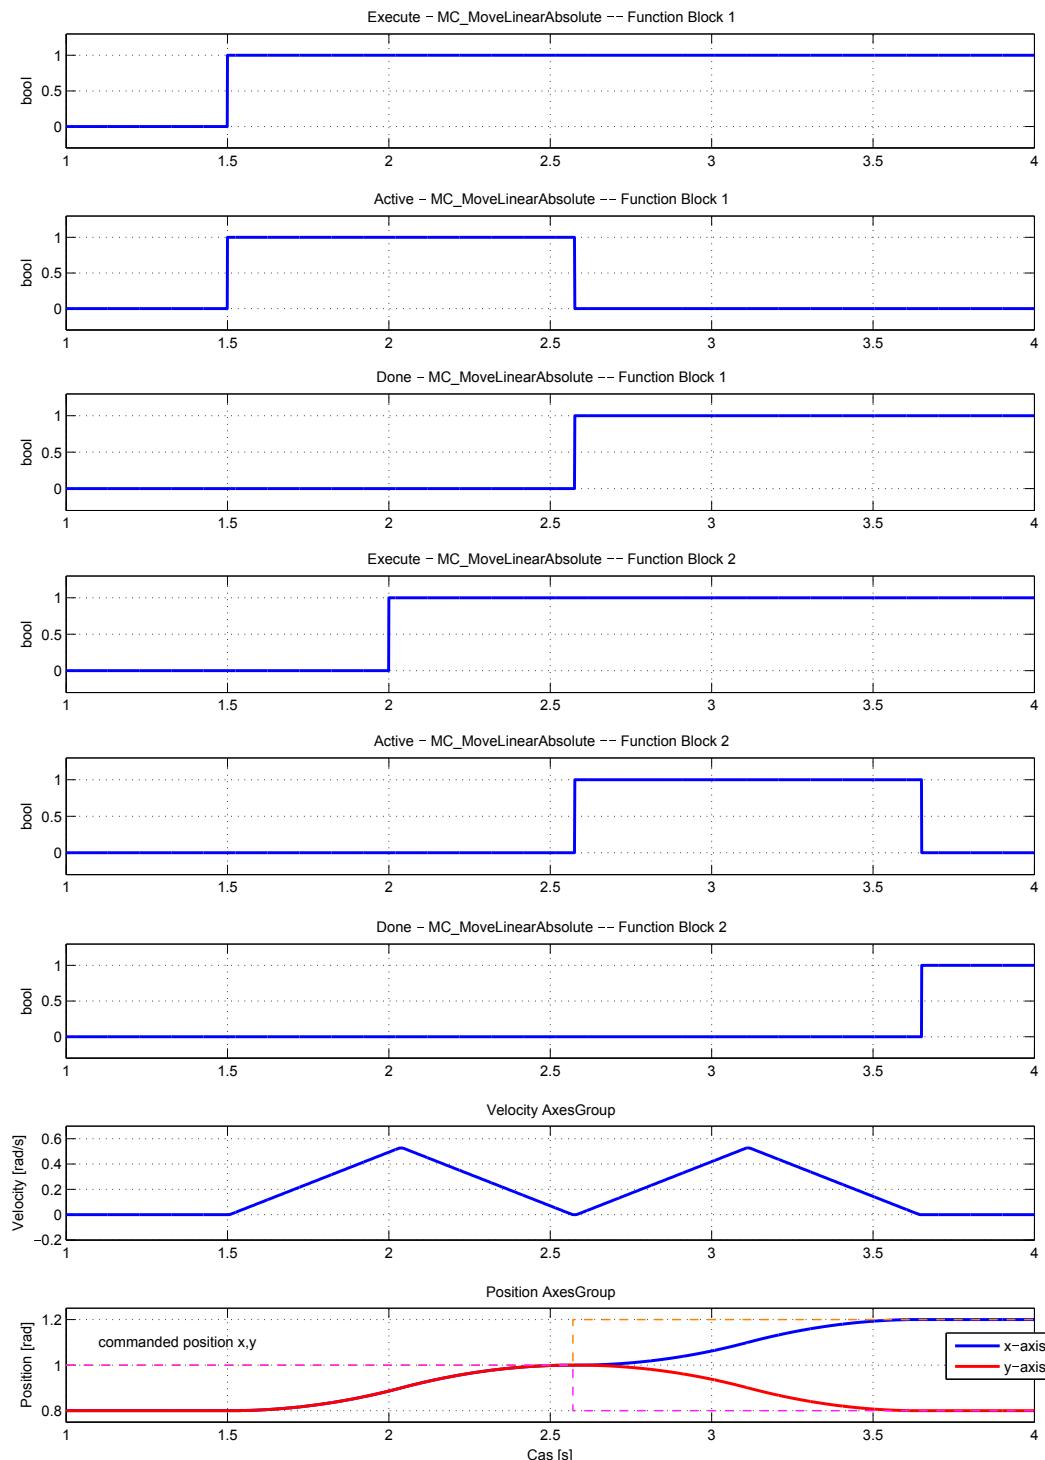

MC_MoveLinearRelative – Linear move to position (relative to execution point)

Block Symbol

Licence: COORDINATED MOTION

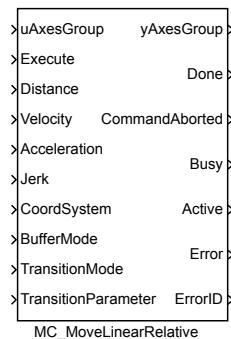

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

		Reference
uAxesGroup	Axes group reference	
Execute	The block is activated on rising edge	Bool
Distance	Array of coordinates (relative distances and orientations)	Reference
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
CoordSystem	Reference to the coordinate system used	Long (I32)
	1 ACS	
	2 MCS	
	3 PCS	
BufferMode	Buffering mode	Long (I32)
	1 Aborting	
	2 Buffered	
	3 Blending low	
	4 Blending high	
	5 Blending previous	
	6 Blending next	


TransitionMode Transition mode in blending mode Long (I32)

- 1 TMNone
- 2 TMStartVelocity
- 3 TMConstantVelocity
- 4 TMCornerDistance
- 5 TMMaxCornerDeviation
- 11 Smooth


TransitionParameter Parametr for transition (depends on transition mode) Double (F64)


Outputs

		Reference
yAxesGroup	Axes group reference	
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
i	REXYGEN general error	

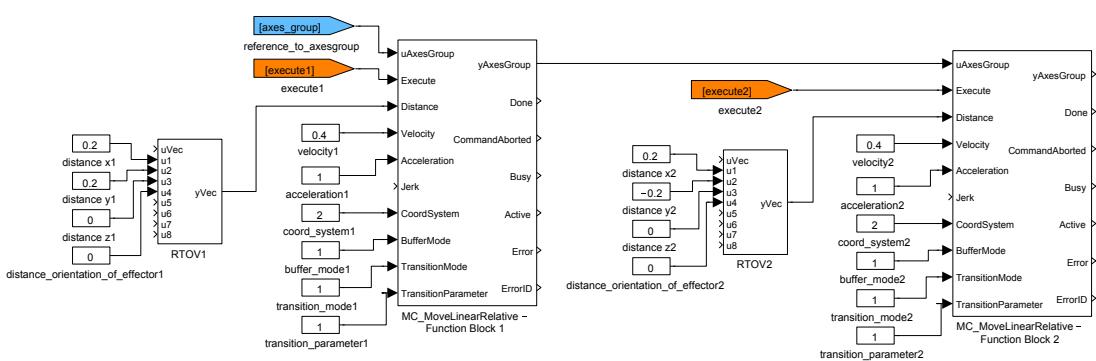

Sequence of two complete motions (Done>Execute)

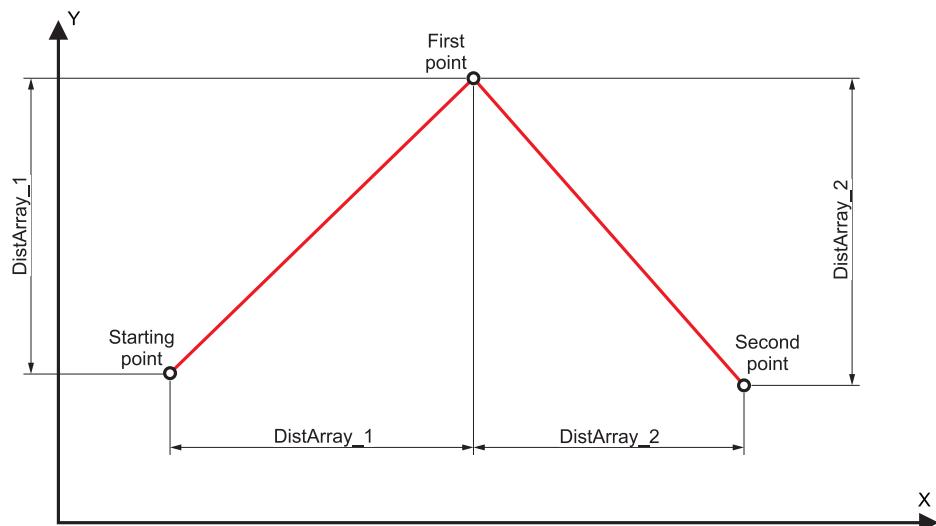


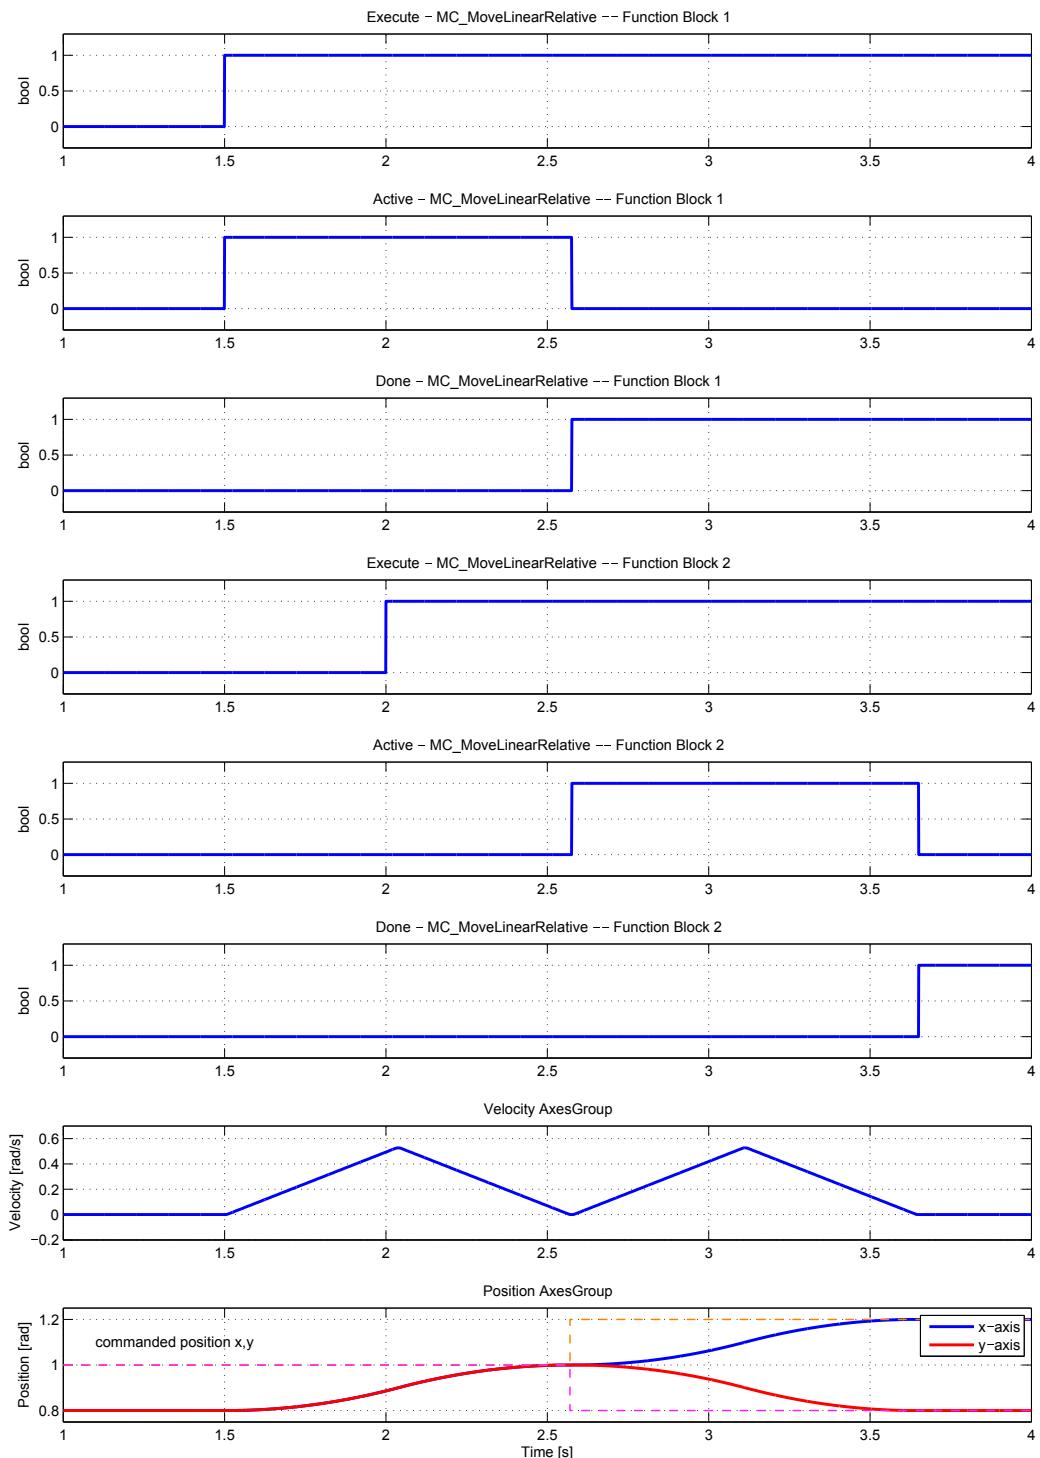

MC_MoveCircularAbsolute – Circular move to position (absolute coordinates)


Block Symbol

Licence: COORDINATED MOTION

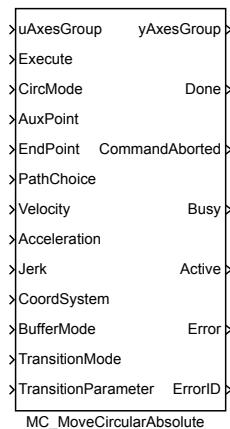

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

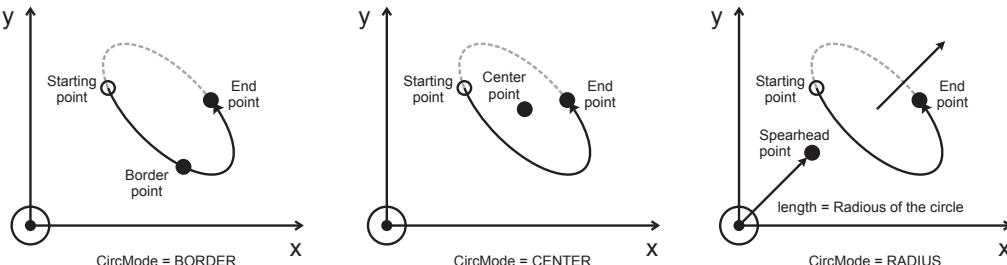

Inputs


uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
CircMode	Specifies the meaning of the input signals AuxPoint and CircDirection	Long (I32)
	1 BORDER	
	2 CENTER	
	3 RADIUS	
AuxPoint	Next coordinates to define circle (depend on CircMode)	Reference
EndPoint	Target axes coordinates position	Reference

630 CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS


PathChoice	Choice of path	Long (I32)
1	Clockwise	
2	CounterClockwise	
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	
BufferMode	Buffering mode	Long (I32)
1	Aborting	
2	Buffered	
3	Blending low	
4	Blending high	
5	Blending previous	
6	Blending next	
TransitionMode	Transition mode in blending mode	Long (I32)
1	TMNone	
2	TMSstartVelocity	
3	TMConstantVelocity	
4	TMCcornerDistance	
5	TMMaxCornerDeviation	
11	Smooth	
TransitionParameter	Parametr for transition (depends on transition mode)	Double (F64)

Outputs


yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i	Error
	REXYGEN general error	

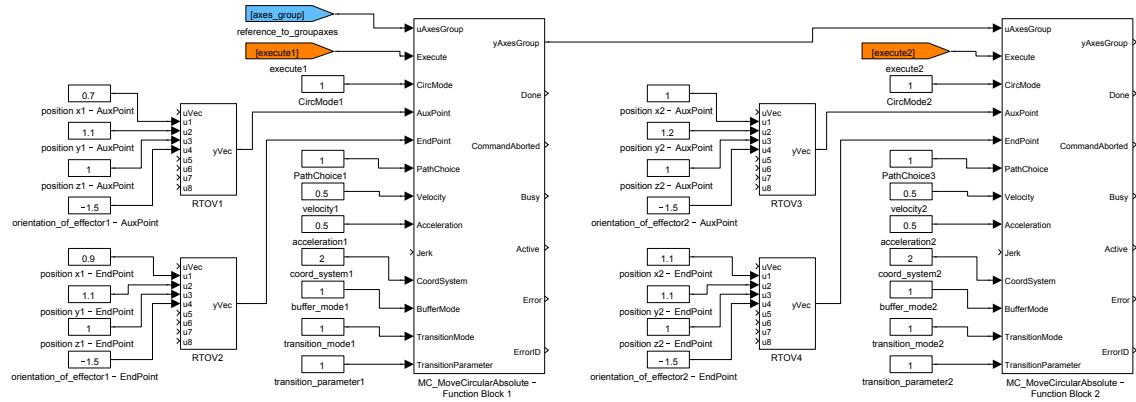

MC_MoveCircularAbsolute - Example

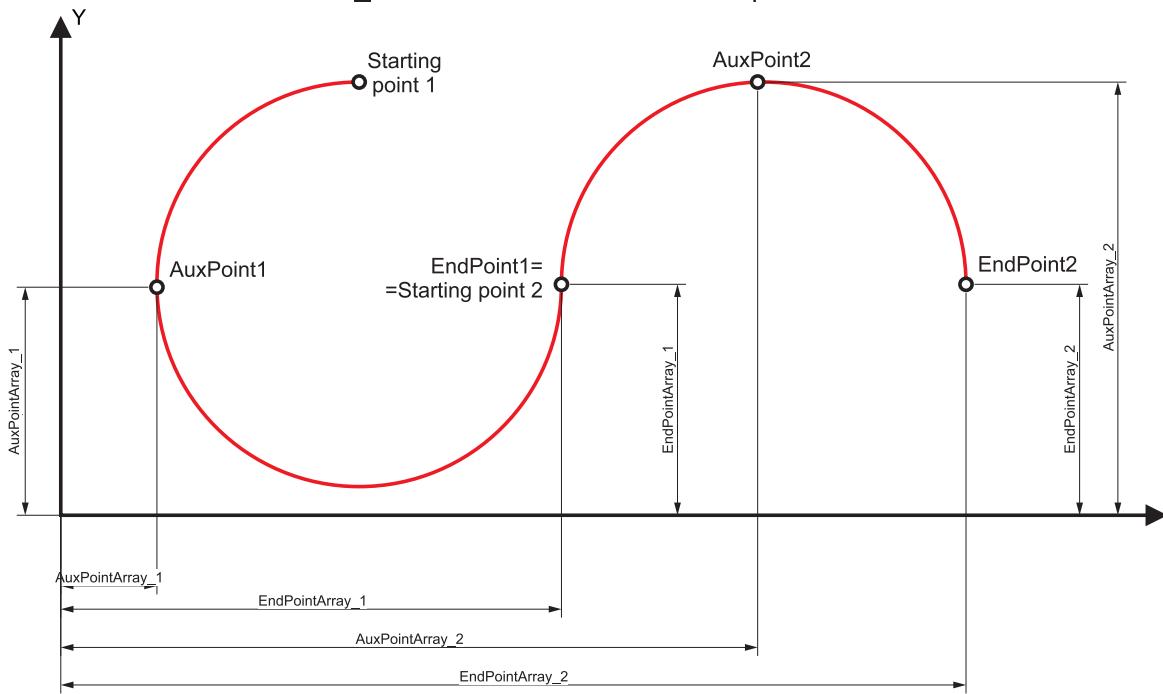


632CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

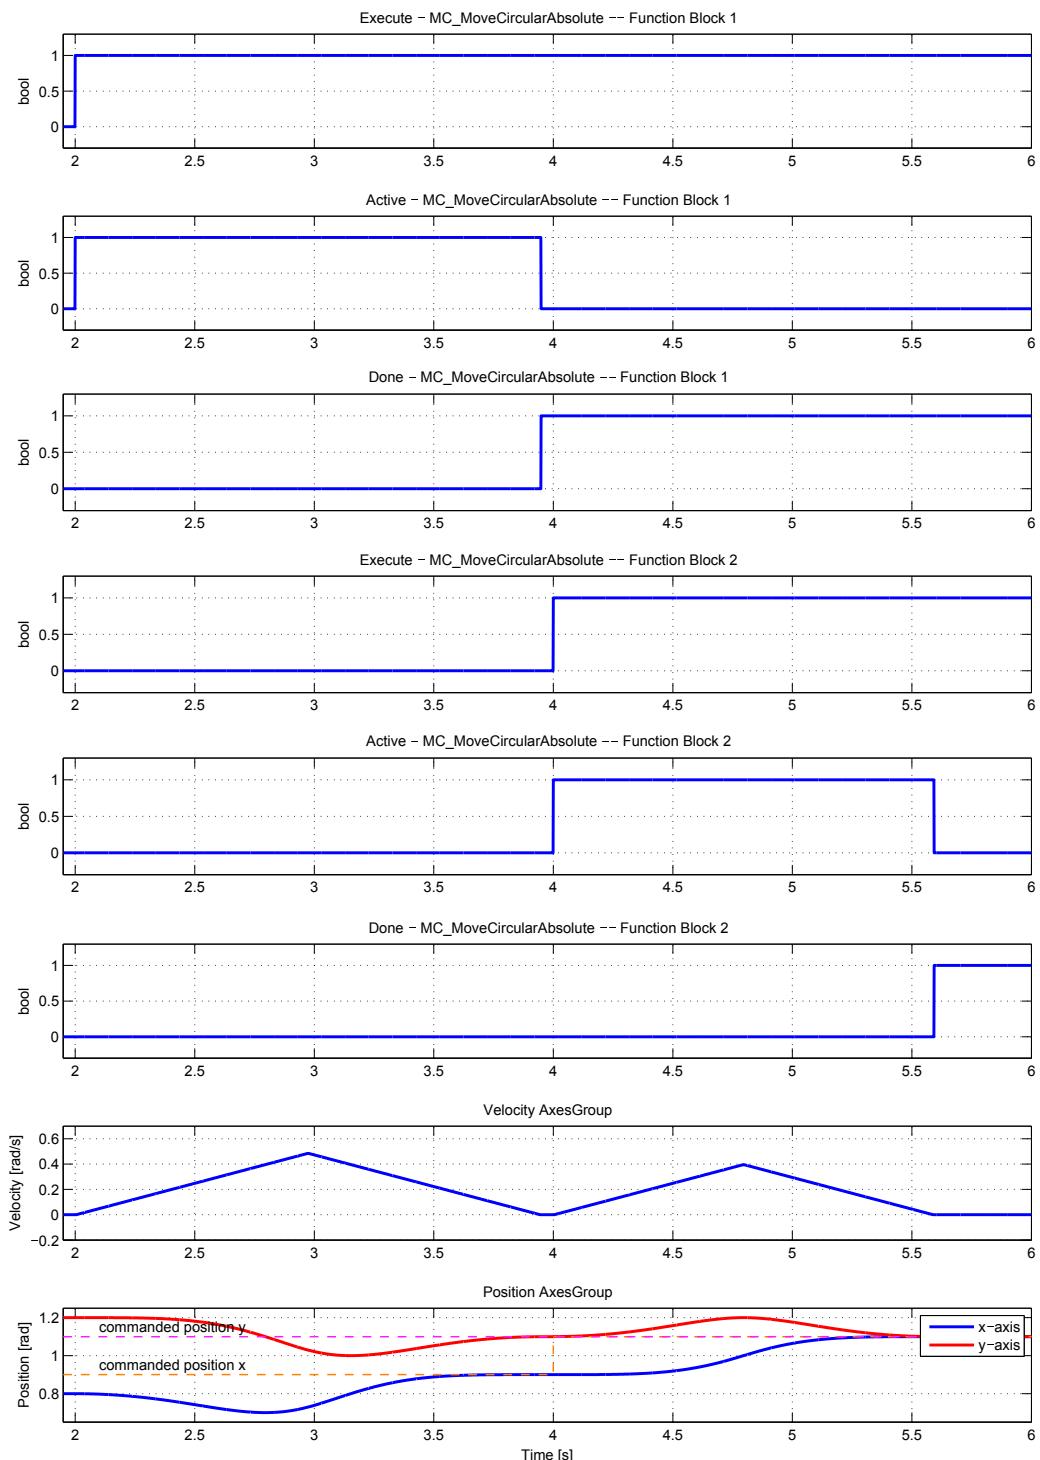

MC_MoveCircularRelative – Circular move to position (relative to execution point)


Block Symbol

Licence: COORDINATED MOTION

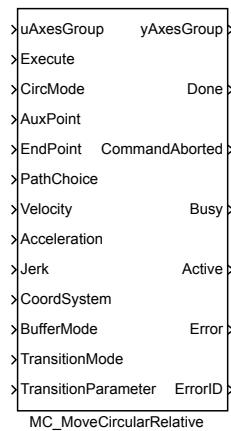

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

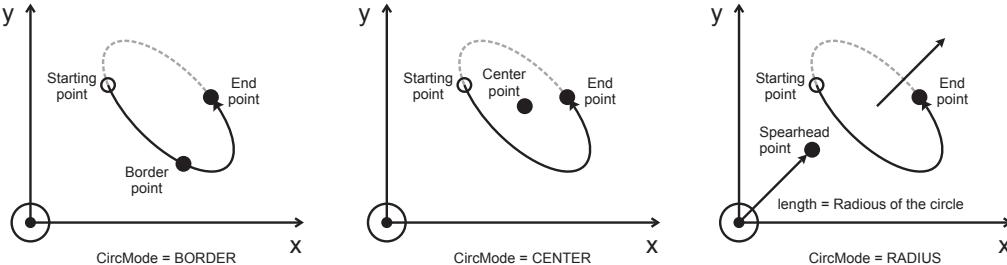

Inputs


uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
CircMode	Specifies the meaning of the input signals AuxPoint and CircDirection	Long (I32)
	1 BORDER	
	2 CENTER	
	3 RADIUS	
AuxPoint	Next coordinates to define circle (depend on CircMode)	Reference
EndPoint	Target axes coordinates position	Reference

634CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS


PathChoice	Choice of path	Long (I32)
1	Clockwise	
2	CounterClockwise	
Velocity	Maximal allowed velocity [unit/s]	Double (F64)
Acceleration	Maximal allowed acceleration [unit/s ²]	Double (F64)
Jerk	Maximal allowed jerk [unit/s ³]	Double (F64)
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	
BufferMode	Buffering mode	Long (I32)
1	Aborting	
2	Buffered	
3	Blending low	
4	Blending high	
5	Blending previous	
6	Blending next	
TransitionMode	Transition mode in blending mode	Long (I32)
1	TMNone	
2	TMSstartVelocity	
3	TMConstantVelocity	
4	TMCcornerDistance	
5	TMMaxCornerDeviation	
11	Smooth	
TransitionParameter	Parametr for transition (depends on transition mode)	Double (F64)


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i	Error
	REXYGEN general error	

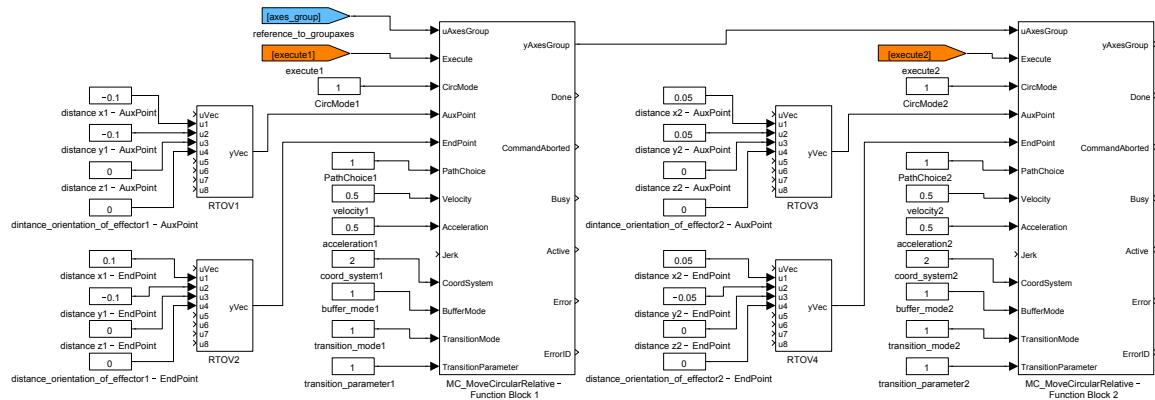

MC_MoveCircularRelative - Example

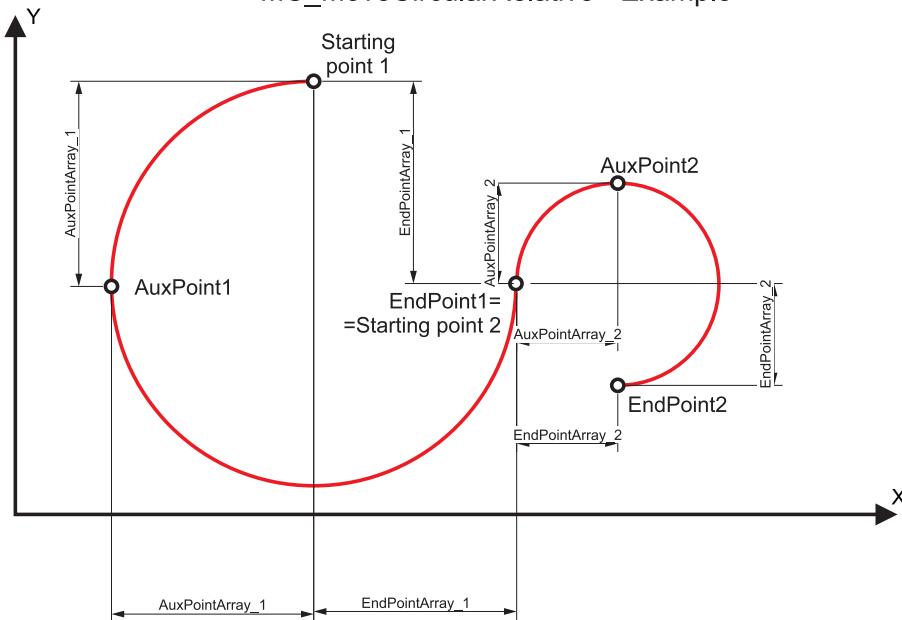


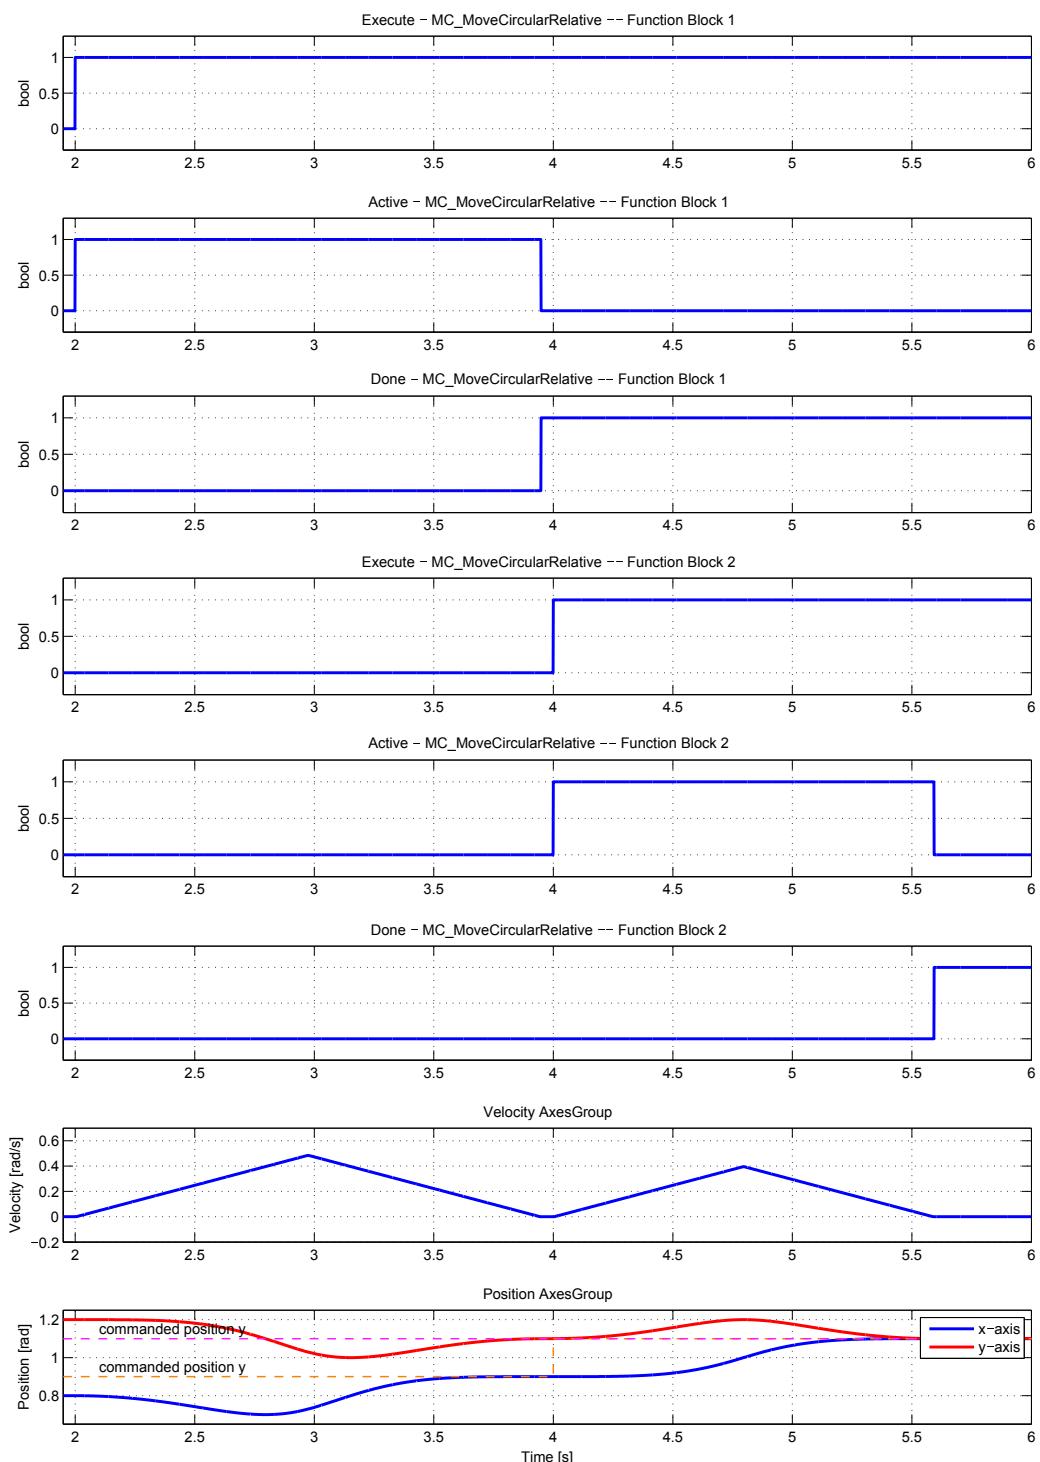

MC_MoveDirectAbsolute – Direct move to position (absolute coordinates)

Block Symbol

Licence: COORDINATED MOTION

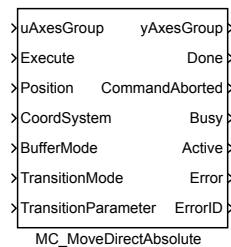

Function Description



The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.


Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Position	Array of coordinates (positions and orientations)	Reference
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	
BufferMode	Buffering mode	Long (I32)
1	Aborting	
2	Buffered	
3	Blending low	
4	Blending high	
5	Blending previous	
6	Blending next	
TransitionMode	Transition mode in blending mode	Long (I32)
1	TMNone	
2	TMStartVelocity	
3	TMConstantVelocity	
4	TMCornerDistance	
5	TMMaxCornerDeviation	
11	Smooth	
TransitionParameter	Parametr for transition (depends on transition mode)	Double (F64)

Outputs

<code>yAxesGroup</code>	Axes group reference	<code>Reference</code>
<code>Done</code>	Algorithm finished	<code>Bool</code>
<code>CommandAborted</code>	Algorithm was aborted	<code>Bool</code>
<code>Busy</code>	Algorithm not finished yet	<code>Bool</code>
<code>Active</code>	The block is controlling the axis	<code>Bool</code>
<code>Error</code>	Error occurred	<code>Bool</code>
<code>ErrorID</code>	Result of the last operation i REXYGEN general error	<code>Error</code>

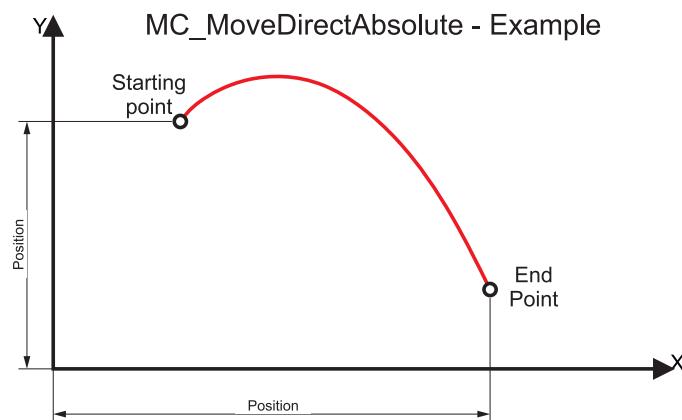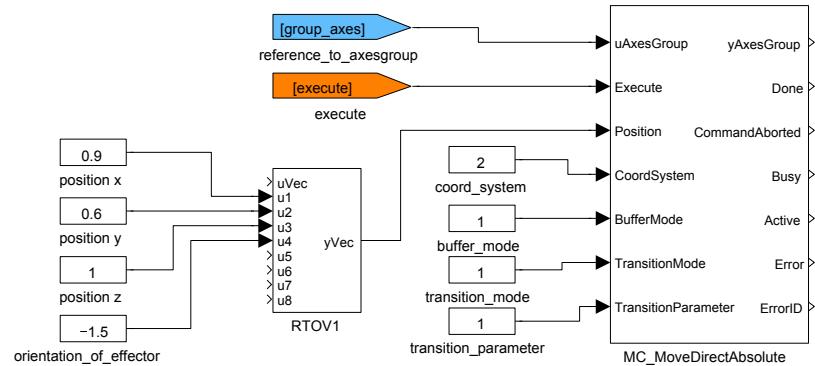


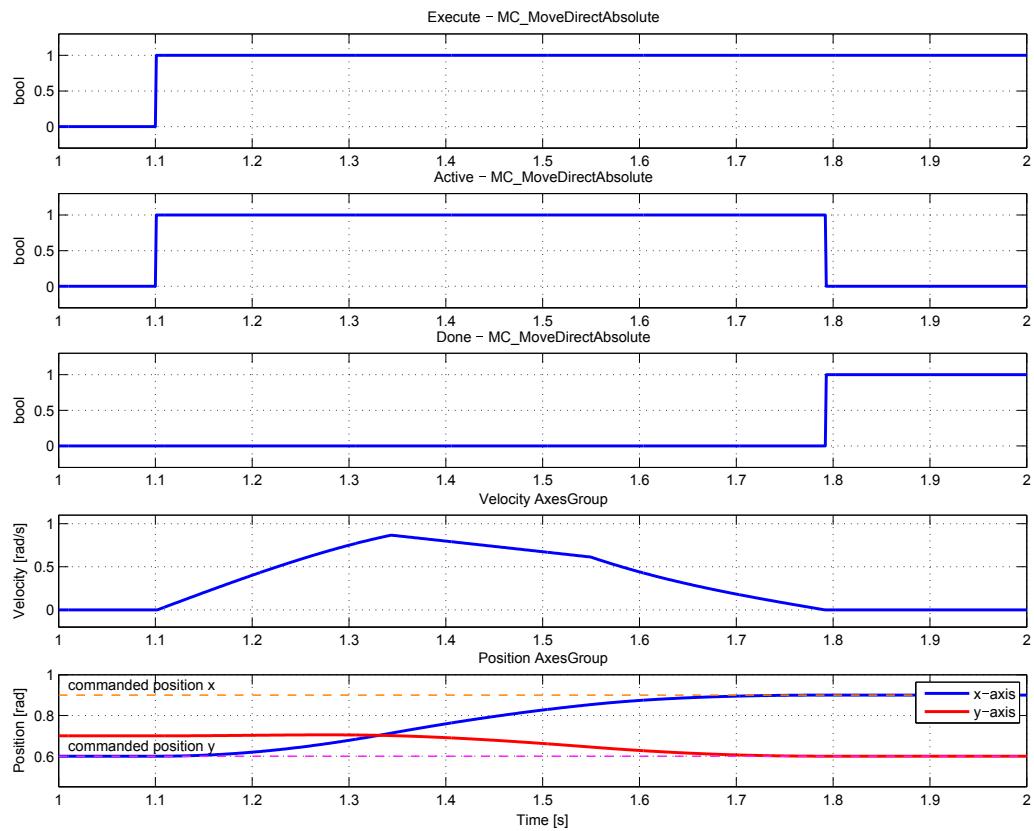

MC_MoveDirectRelative – Direct move to position (relative to execution point)

Block Symbol

Licence: **COORDINATED MOTION**

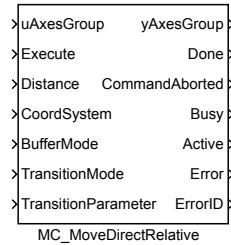

Function Description



The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.


Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
Distance	Array of coordinates (relative distances and orientations)	Reference
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	
BufferMode	Buffering mode	Long (I32)
1	Aborting	
2	Buffered	
3	Blending low	
4	Blending high	
5	Blending previous	
6	Blending next	
TransitionMode	Transition mode in blending mode	Long (I32)
1	TMNone	
2	TMSStartVelocity	
3	TMConstantVelocity	
4	TMCornerDistance	
5	TMMaxCornerDeviation	
11	Smooth	
TransitionParameter	Parametr for transition (depends on transition mode)	Double (F64)

Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation	Error
i	REXYGEN general error	

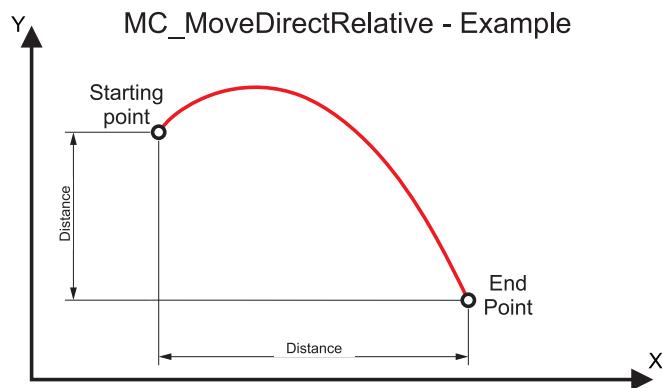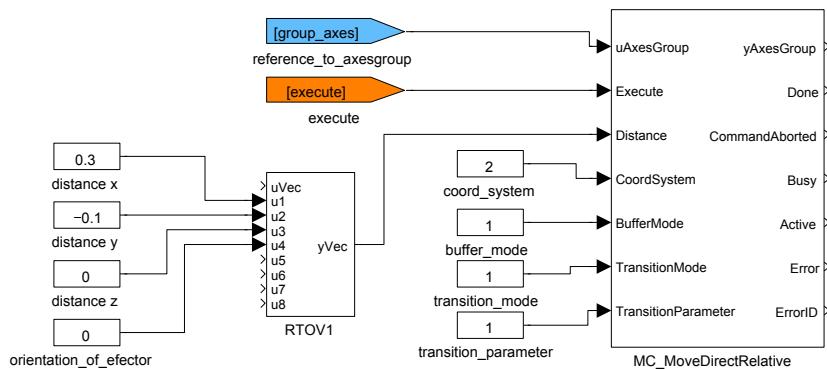


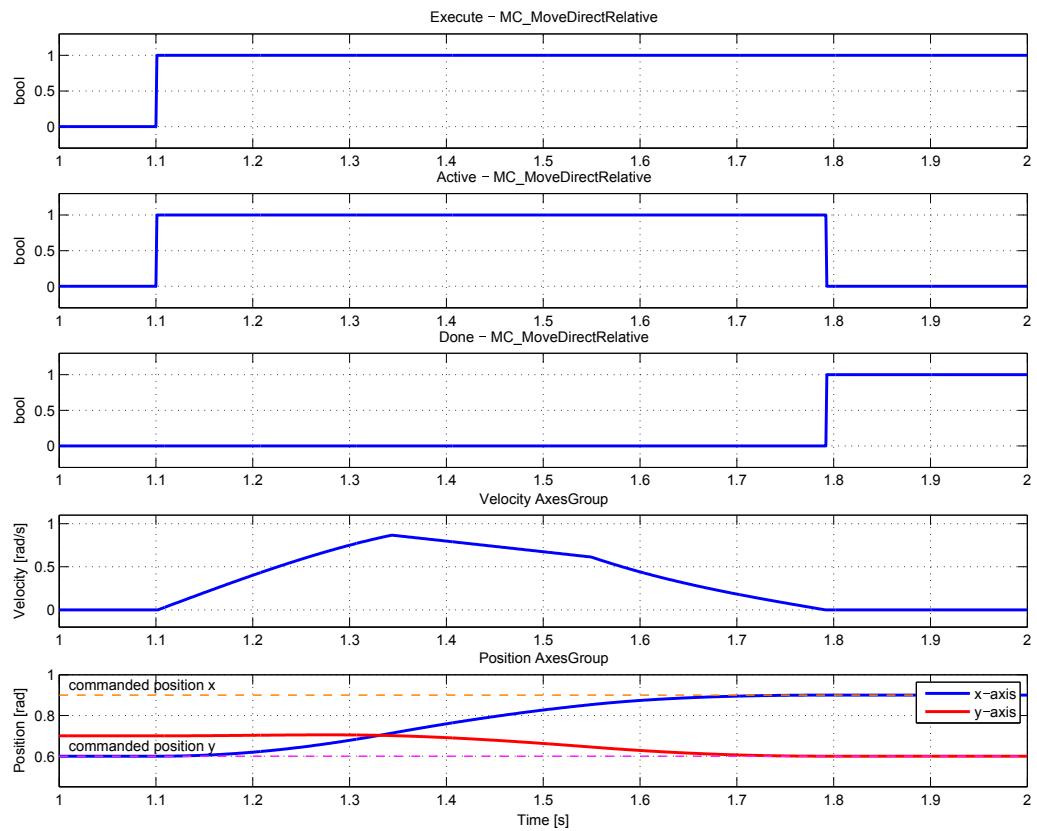

MC_MovePath – General spatial trajectory generation

Block Symbol

Licence: COORDINATED MOTION

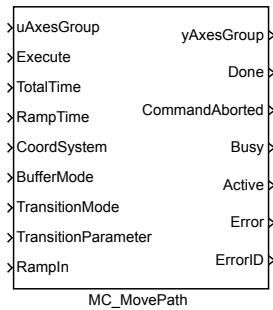

Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

uAxesGroup	Axes group reference	Reference
Execute	The block is activated on rising edge	Bool
TotalTime	Time [s] for whole move	Double (F64)
RampTime	Time [s] for acceleration/deceleration	Double (F64)
CoordSystem	Reference to the coordinate system used	Long (I32)
1	ACS	
2	MCS	
3	PCS	
BufferMode	Buffering mode	Long (I32)
1	Aborting	
2	Buffered	
3	Blending low	
4	Blending high	
5	Blending previous	
6	Blending next	
TransitionMode	Transition mode in blending mode	Long (I32)
1	TMNone	
2	TMStartVelocity	
3	TMConstantVelocity	
4	TMCornerDistance	
5	TMMaxCornerDeviation	
11	Smooth	

644CHAPTER 20. MC_COORD – MOTION CONTROL - COORDINATED MOVEMENT BLOCKS

TransitionParameter Parametr for transition (depends on transition mode) **Double** (F64)

RampIn RampIn factor (0 = RampIn mode not used) **Double** (F64)

Parameters

pc	Control-points matrix ⊗[0.0 1.0 2.0; 0.0 1.0 1.0; 0.0 1.0 0.0]	Double (F64)
pk	Knot-points vector ⊗[0.0 0.0 0.0 0.0 0.5 1.0 1.0]	Double (F64)
pw	Weighting vector ⊗[1.0 1.0 1.0]	Double (F64)
pv	Polynomials for feedrate definition ⊗[0.0 0.05 0.95; 0.0 0.1 0.1; 0.0 0.0 0.0; 0.1 0.0 -0.1; -0.05 0.0 0.05; 0.0 0.0]	Double (F64)
pt	Knot-points (time [s]) for feedrate ⊗[0.0 1.0 10.0 11.0]	Double (F64)
user	Only for special edit ⊗[0.0 1.0 2.0 3.0]	Double (F64)


Outputs

yAxesGroup	Axes group reference	Reference
Done	Algorithm finished	Bool
CommandAborted	Algorithm was aborted	Bool
Busy	Algorithm not finished yet	Bool
Active	The block is controlling the axis	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

MC_GroupSetOverride – Set group override factors

Block Symbol

Licence: COORDINATED MOTION



Function Description

The function block description is not yet available. Below you can find partial description of the inputs, outputs and parameters of the block. Complete documentation will be available in future revisions.

Inputs

uAxesGroup	Axes group reference	Reference
Enable	Block function is enabled	Bool
VelFactor	Velocity multiplication factor	Double (F64)
AccFactor	Acceleration/deceleration multiplication factor	Double (F64)
JerkFactor	Jerk multiplication factor	Double (F64)

Parameter

diff	Deadband (difference for recalculation)	0.05	Double (F64)
-------------	---	-------------	---------------------

Outputs

yAxesGroup	Axes group reference	Reference
Enabled	Signal that the override faktor are set successfully	Bool
Busy	Algorithm not finished yet	Bool
Error	Error occurred	Bool
ErrorID	Result of the last operation i REXYGEN general error	Error

Chapter 21

CanDrv – Communication via CAN bus


Contents

CanItem – Secondary received CAN message	648
CanRecv – Receive CAN message	649
CanSend – Send CAN message	651

CanItem – Secondary received CAN message

Block Symbol

Licence: [CANDRV](#)

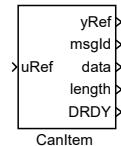

Function Description

The block is used with the [CanRecv](#) block. The `uRef` input of the `CanItem` block must be connected to the `itemRef` output of some [CanRecv](#) block or to the `yRef` output of another `CanItem` block.

This block shows the previous message that has passed the filter in the [CanRecv](#) block.

If more than one `CanItem` block is connected (directly or indirectly through the `yRef` output of the `CanItem` block already connected to the [CanRecv](#) block) then the first executed `CanItem` block shows the first message before the last received message (which is shown by the [CanRecv](#) block), the second executed `CanItem` block shows the second message before the last received message (which is shown by the [CanRecv](#) block) etc. It is strongly recommended to connect the `CanItem` blocks in a daisy chain. Unexpected ordering of messages may occur if the blocks are connected in a tree-like structure.

If no message has been received since start of the CAN driver, the data outputs have fallback values `msgId = -1` and `length = -1`.

The `DRDY` output is set to `DRDY= on` if the message has been received during the last period, i.e. after previous execution of the `CanItem` block. At the same moment, the outputs `msgId`, `data` and `length` are updated. If there is no new data, `DRDY` output is set to `DRDY= off` and the data values are kept on the other outputs (`msgId`, `data` and `length`).

Input

uRef	Secondary received packet reference	Reference
------	-------------------------------------	-----------


Outputs

yRef	Secondary received packet reference	Reference
msgId	CAN message ID (COB-ID)	Long (I32)
data	Message data (8 bytes maximum, LSB first) ↓-9.22337E+18 ↑9.22337E+18	Large (I64)
length	Message length (number of bytes of data) ↓0 ↑8	Long (I32)
DRDY	Received message in the last period flag	Bool

CanRecv – Receive CAN message

Block Symbol

Licence: [CANDRV](#)



Function Description

The **CanRecv** block receives message via CAN bus. The message is defined by the **msgId**, **data** and **length** inputs and the **RTR** and **EXT** parameters.

Number of messages received in the current task period (i.e. since the previous execution) is indicated by the **nDRDY** output.

The data from the last received message is available at the **msgId**, **data** and **length** outputs. Previous messages (with respect to the **nmax** parameter) are available using the **CanItem** block(s) linked to the **itemRef** output.

The block must be linked with the **CanDrv** driver. The driver must be configured to use the simple CAN mode (i.e. the parameter **NodeMode** = 256).

The block's name must be in the form <DRV>_<blkname> (see e.g. **OUTQUAD** or **OUTOCT** blocks for details about referencing data from I/O drivers). The <blkname> part of the name has no special meaning in this case and it is recommended to keep the original **CanRecv**.

The block supports short (11-bit) and long (29-bit) message IDs (see the **EXT** parameter) and RequestToReceive messages (see the **RTR** parameter). FD mode which allows up to 64 data bytes in a single message is not supported.

Outputs

itemRef	Secondary received packet reference	Reference
msgId	CAN message ID (COB-ID)	Long (I32)
data	Message data (8 bytes maximum, LSB first) ↓-9.22337E+18 ↑9.22337E+18	Large (I64)
length	Message length (number of bytes of data)	↓0 ↑8 Long (I32)
nDRDY	Number of received messages in the last period	↑255 Word (U16)
iErr	Error code	Error
age	Elapsed time since the last received message [s]	↓0.0 Double (F64)


Parameters

<code>filterId</code>	MessageId of packets to receive by this block	$\downarrow 0 \uparrow 536870911$	Long (I32)
<code>filterIdMask</code>	Mask for the <code>filterId</code> parameter (marks valid bits)	$\downarrow 0 \uparrow 536870911$	Long (I32)
<code>filterLength</code>	Data length of packets to receive by this block (-1 allows all lengths)	$\downarrow -1 \uparrow 8$	Long (I32)
<code>RTR</code>	Request To Receive flag	\odot on	Bool
<code>EXT</code>	Extended message ID (29bits)	\odot on	Bool
<code>timeout</code>	Error is indicated if no packet is received within the timeout interval [s]	$\downarrow 0.0$	Double (F64)
<code>nmax</code>	Maximum number of received messages in one period	$\downarrow 1 \uparrow 255$	Long (I32)

CanSend – Send CAN message

Block Symbol

Licence: [CANDRV](#)



Function Description

The **CanSend** block sends message via CAN bus. The message content is defined by the **msgId**, **data** and **length** inputs and the **RTR** and **EXT** parameters. Message is sent only if the input **RUN** is set to **RUN = on**.

The block must be linked with the **CanDrv** driver. The driver must be configured to use the simple CAN mode (i.e. the parameter **NodeMode = 256**).

The block's name must be in the form **<DRV>_<blkname>** (see e.g. [OUTQUAD](#) or [OUTOCT](#) blocks for details about referencing data from I/O drivers). The **<blkname>** part of the name has no special meaning in this case and it is recommended to keep the original **CanSend**.

The block supports short (11-bit) and long (29-bit) message IDs (see the **EXT** parameter) and **RequestToReceive** messages (see the **RTR** parameter). FD mode which allows up to 64 data bytes in a single message is not supported.

Inputs

msgId	CAN message ID (COB-ID)	$\downarrow 0 \uparrow 536870911$	Long (I32)
length	Message length (number of bytes of data)	$\downarrow 0 \uparrow 8$	Long (I32)
data	Message data (8 bytes maximum, LSB first)	$\downarrow -9.22337E+18 \uparrow 9.22337E+18$	Large (I64)
RUN	Sending message is enabled		Bool

Output

iErr	Error code	Error
-------------	------------	-------

Parameters

RTR	Request To Receive flag	<input checked="" type="radio"/> on	Bool
EXT	Extended message ID (29bits)	<input checked="" type="radio"/> on	Bool

Chapter 22

OpcUaDrv – Communication using OPC UA


Contents

OpcUaReadValue – Read value from OPC UA Server	654
OpcUaServerValue – Expose value as an OPC UA Node	656
OpcUaWriteValue – Write value to OPC UA Server	658

OpcUaReadValue – Read value from OPC UA Server

Block Symbol

Licence: ADVANCED

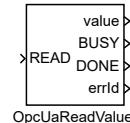

Function Description

This function block depends on the OpcUa driver. Please read the `OpcUaDrv` manual [12] before use.

The `OpcUaReadValue` block reads value of an OPC UA Node through a connection established by the OPC UA client driver.

The first two parameters are `NodeId` and `NodeId_type`. The `NodeId_type` specifies what type of information it is expected to be entered as the `NodeId` parameter. If the value is `string`, `numeric`, `guid` than the `NodeId` parameter should contain the id of the actual OPC UA Node on the server prefixed with the index of the namespace declared in the configuration of the driver separated by a colon (e.g. `1:myNode`).

If the value of the `NodeId_type` parameter is set to `path` than the `NodeId` parameter should contain the path to the desired Node in the server structure. Every segment of the path is composed from the attribute `BrowserName` of the node and the `BrowserName` is similarly with regular `NodeId` types prefixed with the index of the namespace declared in the configuration of the driver separated by a colon (e.g. `/1:myDevice/1:myNode`). The path is relative to the `Objects` folder in the OPC UA server structure.

The parameter `type` specifies the expected Node's value data type. The block converts the Node's value to the specified type and sets the `value` output signal in case of success or it sets the `errId` to the resulting error code.

Input

<code>READ</code>	Enable execution	Bool
-------------------	------------------	------

Parameters

<code>NodeId</code>	OPC UA Node Id	<code>String</code>
<code>NodeId_type</code>	Type of Node ID	<code>⊕1 Long (I32)</code>
1	<code>string</code>	
2	<code>numeric</code>	
3	<code>guid</code>	
4	<code>path</code>	

type	Expected type of incoming data	⊕1 Long (I32)
	1 string	
	2 double	
	3 long	
	4 bool	


Outputs

value	Output signal	Unknown
BUSY	Busy flag	Bool
DONE	Indicator of finished transaction	Bool
errId	Error code	Error

OpcUaServerValue – Expose value as an OPC UA Node

Block Symbol

Licence: ADVANCED



Function Description

This function block depends on the OpcUa driver. Please read the `OpcUaDrv` manual [12] before use.

The `OpcUaServerValue` block exposes an OPC UA Node through OPC UA server driver.

The first two parameters are `NodeId` and `NodeId_type`. The `NodeId_type` specifies how the value entered as the `NodeId` parameter should be treated. The parameter `NodeId` specifies the *NodeId* that the OPC UA Node represented by the block should be exposed with.

The input `DISABLE` controls whether the OPC UA Node is exposed on the server or not. When the `SET` input is set to `on` the value on the input `uValue` port is set to the OPC UA Node's value. If the parameter `READONLY` is set to `off` the Node's value can also be changed from outside of the algorithm through the OPC UA communication protocol.

The output signal `yValue` is set to the Node's value on every tick. The parameter `type` specifies the Node's value data type, the data type of the `uValue` input and `yValue` output.

Inputs

<code>uValue</code>	Input signal	<code>Unknown</code>
<code>SET</code>	Set the input value to OPC UA Node value	<code>Bool</code>
<code>DISABLE</code>	Disable OPC UA Node	<code>Bool</code>

Parameters

<code>NodeId</code>	OPC UA Node Id	<code>String</code>
<code>NodeId_type</code>	OPC UA Node Id type	<code>String</code>
	1 string	
	2 numeric	
	3 guid	

type	Value data type	⊕1 Long (I32)
1	string	
2	double	
3	long	
4	bool	
BrowseName	OPC UA Node Browse name	String
Description	OPC UA Node description	String
DisplayName	OPC UA Node display name	String
READONLY	Set OPC Node value as read only	⊕on Bool


Outputs

yValue	Output signal	Unknown
CHANGED	Value of the node changed though the OPC UA protocol	Bool
errId	Error code	Error

OpcUaWriteValue – Write value to OPC UA Server

Block Symbol

Licence: ADVANCED

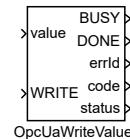

Function Description

This function block depends on the OpcUa driver. Please read the `OpcUaDrv` manual [12] before use.

The `OpcUaWriteValue` block writes value to the OPC UA Node through a connection established by the OPC UA client driver.

The first two parameters are `NodeId` and `NodeId_type`. The `NodeId_type` specifies what type of information it is expected to be entered as the `NodeId` parameter. If the value is `string`, `numeric`, `guid` than the `NodeId` parameter should contain the id of the actual OPC UA Node on the server prefixed with the index of the namespace declared in the configuration of the driver separated by a colon (e.g. `1:myNode`).

If the value of the `NodeId_type` parameter is set to `path` than the `NodeId` parameter should contain the path to the desired Node in the server structure. Every segment of the path is composed from the attribute `BrowserName` of the node and the `BrowserName` is similarly with regular `NodeId` types prefixed with the index of the namespace declared in the configuration of the driver separated by a colon (e.g. `/1:myDevice/1:myNode`). The path is relative to the *Objects* folder in the OPC UA server structure.

The parameter `type` specifies the expected Node's value data type. The input signal `value` is converted to the specified type and is than written to the Node's value attribute.

When the process of writing the value is finished the result code defined by OPC UA is set to the `code` output and it's textual representation is set to the `status` output.

Inputs

<code>value</code>	Input signal	Unknown
<code>WRITE</code>	Enable execution	Bool

Parameters

<code>NodeId</code>	OPC UA Node Id	String
---------------------	----------------	--------

<code>NodeId_type</code>	Type of Node ID	<code>⊕1 Long (I32)</code>
	1 string	
	2 numeric	
	3 guid	
	4 path	
<code>type</code>	Value data type	<code>⊕1 Long (I32)</code>
	1 string	
	2 double	
	3 long	
	4 bool	

Outputs

<code>BUSY</code>	Busy flag	<code>Bool</code>
<code>DONE</code>	Indicator of finished transaction	<code>Bool</code>
<code>errId</code>	Error code	<code>Error</code>
<code>code</code>	OPC UA result status code	<code>DWord (U32)</code>
<code>status</code>	OPC UA result status string	<code>String</code>

Appendix A

Licensing options

From the licensing point of view, there are several versions of the RexCore runtime module to provide maximum flexibility for individual projects. The table below compares the individual variants.

The function blocks are divided into several licensing groups. The **STANDARD** function blocks are always available, the other groups require activation by a corresponding licence.

	RexCore DEMO	RexCore Starter	RexCore Plus	RexCore Professional	RexCore Ultimate
<i>Function blocks</i>					
STANDARD	●	●	●	●	●
ADVANCED	●	—	●	●	●
REXLANG	●	—	●	●	●
MOTION CONTROL	●	—	○	○	●
COORDINATED MOTION	●	—	○	○	●
AUTOTUNING	—	—	○	○	●
MATRIX	●	—	○	○	●
<i>I/O drivers</i>					
Basic I/O drivers	●	●	●	●	●
Additional I/O drivers	●	○	○	●	●

(● . . . included, ○ . . . optional, — . . . not available)

See Appendix B for details about licensing of individual function blocks.

Appendix B

Licensing of individual function blocks

To maximize flexibility for individual projects, function blocks of the REXYGEN system are divided into several licensing groups. The table below shows the groups the function blocks belong to. See Appendix A for detailed information about the individual licensing options.

Function block name	Licensing group	
	STANDARD	Other
ABS_	•	
ABSROT		ADVANCED
ACD	•	
ADD	•	
ADDHEXD	•	
ADDOCT	•	
ADDQUAD	•	
AFLUSH	•	
ALB	•	
ALBI	•	
ALN	•	
ALNI	•	
AND_	•	
ANDHEXD	•	
ANDOCT	•	
ANDQUAD	•	
ANLS	•	
ARC	•	
ARLY	•	
ARS	•	

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
ASW		ADVANCED
ATMT	•	
AVG	•	
AVS		ADVANCED
BDHEXD	•	
BDOCT	•	
BINS	•	
BIS	•	
BISR	•	
BITOP	•	
BMHEXD	•	
BMOCT	•	
BPF	•	
CanItem		CANDRV
CanRecv		CANDRV
CanSend		CANDRV
CDELSSM		ADVANCED
CMP	•	
CNA	•	
CNB	•	
CNDR	•	
CNE	•	
CNI	•	
CNR	•	
CNS	•	
CONCAT	•	
COND		
COUNT	•	
CSSM		ADVANCED
DATE_	•	
DATETIME	•	
DDELSSM		ADVANCED
DEL	•	
DELM	•	
DER	•	
DFIR		ADVANCED
DIF_	•	
Display	•	
DIV	•	

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
DSSM		ADVANCED
EAS	●	
EATMT		ADVANCED
EDGE_	●	
EKF		MODEL
EMD	●	
EPC		ADVANCED
EQ	●	
EVAR	●	
EXEC	●	
FIND	●	
FLCU		ADVANCED
FNX	●	
FNXY	●	
FOPDT	●	
FRID		ADVANCED
From	●	
GAIN	●	
GETPA	●	
GETPB	●	
GETPI	●	
GETPR	●	
GETPS	●	
Goto	●	
GotoTagVisibility	●	
GRADS		ADVANCED
HMI	●	
HTTP		ADVANCED
HTTP2		ADVANCED
I3PM		ADVANCED
IADD	●	
IDIV	●	
IMOD	●	
IMUL	●	
INFO	●	
INHEXD	●	
INOCT	●	
Inport	●	
INQUAD	●	

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
INSTD	•	
INTE	•	
INTSM	•	
IODRV	•	
IOTASK	•	
ISSW	•	
ISUB	•	
ITOI	•	
ITOS	•	
KDER		ADVANCED
LC	•	
LEN	•	
LIN	•	
LLC	•	
LPBRK	•	
LPF	•	
MC_AccelerationProfile		MOTION CONTROL
MC_AddAxisToGroup		COORDINATED MOTION
MC_CamIn		MOTION CONTROL
MC_CamOut		MOTION CONTROL
MC_CombineAxes		MOTION CONTROL
MC_GearIn		MOTION CONTROL
MC_GearInPos		MOTION CONTROL
MC_GearOut		MOTION CONTROL
MC_GroupContinue		COORDINATED MOTION
MC_GroupDisable		COORDINATED MOTION
MC_GroupEnable		COORDINATED MOTION
MC_GroupHalt		COORDINATED MOTION
MC_GroupInterrupt		COORDINATED MOTION
MC_GroupReadActualAcceleration		COORDINATED MOTION
MC_GroupReadActualPosition		COORDINATED MOTION
MC_GroupReadActualVelocity		COORDINATED MOTION
MC_GroupReadError		COORDINATED MOTION
MC_GroupReadStatus		COORDINATED MOTION
MC_GroupReset		COORDINATED MOTION
MC_GroupSetOverride		COORDINATED MOTION
MC_GroupSetPosition		COORDINATED MOTION
MC_GroupStop		COORDINATED MOTION
MC_Halt		MOTION CONTROL

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
MC_HaltSuperimposed		MOTION CONTROL
MC_Home		MOTION CONTROL
MC_MoveAbsolute		MOTION CONTROL
MC_MoveAdditive		MOTION CONTROL
MC_MoveCircularAbsolute		COORDINATED MOTION
MC_MoveCircularRelative		COORDINATED MOTION
MC_MoveContinuousAbsolute		MOTION CONTROL
MC_MoveContinuousRelative		MOTION CONTROL
MC_MoveDirectAbsolute		COORDINATED MOTION
MC_MoveDirectRelative		COORDINATED MOTION
MC_MoveLinearAbsolute		COORDINATED MOTION
MC_MoveLinearRelative		COORDINATED MOTION
MC_MovePath		COORDINATED MOTION
MC_MovePath_PH		COORDINATED MOTION
MC_MoveRelative		MOTION CONTROL
MC_MoveSuperimposed		MOTION CONTROL
MC_MoveVelocity		MOTION CONTROL
MC_PhasingAbsolute		MOTION CONTROL
MC_PhasingRelative		MOTION CONTROL
MC_PositionProfile		MOTION CONTROL
MC_Power		MOTION CONTROL
MC_ReadActualPosition		MOTION CONTROL
MC_ReadAxisError		MOTION CONTROL
MC_ReadBoolParameter		MOTION CONTROL
MC_ReadCartesianTransform		COORDINATED MOTION
MC_ReadParameter		MOTION CONTROL
MC_ReadStatus		MOTION CONTROL
MC_Reset		MOTION CONTROL
MC_SetCartesianTransform		COORDINATED MOTION
MC_SetOverride		MOTION CONTROL
MC_Stop		MOTION CONTROL
MC_TorqueControl		MOTION CONTROL
MC_UngroupAllAxes		COORDINATED MOTION
MC_VelocityProfile		MOTION CONTROL
MC_WriteBoolParameter		MOTION CONTROL
MC_WriteParameter		MOTION CONTROL
MCP_AccelerationProfile		MOTION CONTROL
MCP_CamIn		MOTION CONTROL
MCP_CamTableSelect		MOTION CONTROL

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
MCP_CombineAxes		MOTION CONTROL
MCP_GearIn		MOTION CONTROL
MCP_GearInPos		MOTION CONTROL
MCP_GroupHalt		COORDINATED MOTION
MCP_GroupInterrupt		COORDINATED MOTION
MCP_GroupSetOverride		COORDINATED MOTION
MCP_GroupSetPosition		COORDINATED MOTION
MCP_GroupStop		COORDINATED MOTION
MCP_Halt		MOTION CONTROL
MCP_HaltSuperimposed		MOTION CONTROL
MCP_Home		MOTION CONTROL
MCP_MoveAbsolute		MOTION CONTROL
MCP_MoveAdditive		MOTION CONTROL
MCP_MoveCircularAbsolute		COORDINATED MOTION
MCP_MoveCircularRelative		COORDINATED MOTION
MCP_MoveContinuousAbsolute		MOTION CONTROL
MCP_MoveContinuousRelative		MOTION CONTROL
MCP_MoveDirectAbsolute		COORDINATED MOTION
MCP_MoveDirectRelative		COORDINATED MOTION
MCP_MoveLinearAbsolute		COORDINATED MOTION
MCP_MoveLinearRelative		COORDINATED MOTION
MCP_MovePath		COORDINATED MOTION
MCP_MovePath_PH		COORDINATED MOTION
MCP_MoveRelative		MOTION CONTROL
MCP_MoveSuperimposed		MOTION CONTROL
MCP_MoveVelocity		MOTION CONTROL
MCP_PhasingAbsolute		MOTION CONTROL
MCP_PhasingRelative		MOTION CONTROL
MCP_PositionProfile		MOTION CONTROL
MCP_SetCartesianTransform		COORDINATED MOTION
MCP_SetKinTransform_Arm		COORDINATED MOTION
MCP_SetOverride		MOTION CONTROL
MCP_Stop		MOTION CONTROL
MCP_TorqueControl		MOTION CONTROL
MCP_VelocityProfile		MOTION CONTROL
MCU	•	
MDL	•	
MDLI	•	
MID	•	

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
MINMAX	●	
MODULE	●	
MP	●	
MqttPublish		MQTTDRV
MqttSubscribe		MQTTDRV
MUL	●	
MVD	●	
NOT_	●	
NSCL	●	
NSSM		MODEL
OpcUaReadValue		ADVANCED
OpcUaServerValue		ADVANCED
OpcUaWriteValue		ADVANCED
OR_	●	
ORHEXD	●	
OROCT	●	
ORQUAD	●	
OSCALL	●	
OUTHEXD	●	
OUTOCT	●	
Outport	●	
OUTQUAD	●	
OUTRHEXD		ADVANCED
OUTROCT		ADVANCED
OUTRQUAD		ADVANCED
OUTRSTD		ADVANCED
OUTSTD	●	
PARA	●	
PARB	●	
PARE	●	
PARI	●	
PARR	●	
PARS	●	
PGAVR		
PGBAT		
PGBUS		
PGCB		
PGENG		
PGGEN		

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
PGGS		
PGINV		
PGLOAD		
PGMAINS		
PGSENS		
PGSG		
PGSIM		
PGSOLAR		
PGWIND		
PIDAT		AUTOTUNING
PIDE		ADVANCED
PIDGS		ADVANCED
PIDMA		AUTOTUNING
PIDU	•	
PIDUI		ADVANCED
PJROCT	•	
PJSEXOCT	•	
PJSEXOCT	•	
PJSOCT	•	
POL	•	
POUT	•	
PRBS	•	
PRGM	•	
PROJECT	•	
PSMPC		ADVANCED
PWM	•	
PYTHON		REXLANG
QFC		ADVANCED
QFD		ADVANCED
QP_OASES		ADVANCED
QTASK	•	
RDC		ADVANCED
REC	•	
REGEXP		ADVANCED
REL	•	
REPLACE	•	
REXLANG		REXLANG
RLIM	•	
RLY	•	

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
RM_AxesGroup		COORDINATED MOTION
RM_Axis		MOTION CONTROL
RM_AxisOut		MOTION CONTROL
RM_AxisSpline		MOTION CONTROL
RM_DirectTorque		MOTION CONTROL
RM_DirectVelocity		MOTION CONTROL
RM_DriveMode		MOTION CONTROL
RM_Feed		COORDINATED MOTION
RM_Gcode		COORDINATED MOTION
RM_GroupTrack		COORDINATED MOTION
RM_HomeOffset		MOTION CONTROL
RM_Track		MOTION CONTROL
RS	•	
RTOI	•	
RTOS	•	
RTOV	•	
S_AND		
S_BC		
S_CMP		
S_CTS		
S_LB		
S_NOT		
S_OR		
S_PULS		
S_PV		
S_RS		
S_SEL		
S_SELVAL		
S_SR		
S_SUMC		
S_TDE		
S_TDR		
S_TLATCH		
S_VALB		
S_VALC		
S10F2		ADVANCED
SAI		ADVANCED
SAT	•	
SC2FA		AUTOTUNING

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
SCU	•	
SCUV	•	
SEL	•	
SELHEXD	•	
SELOCT	•	
SELQUAD	•	
SELSOCT	•	
SELU	•	
SETPA	•	
SETPB	•	
SETPI	•	
SETPR	•	
SETPS	•	
SG	•	
SGI	•	
SGSLP		ADVANCED
SHIFTOCT	•	
SHLD	•	
SILO	•	
SILOS	•	
SINT	•	
SLEEP	•	
SMHCC		ADVANCED
SMHCCA		AUTOTUNING
SMTP		ADVANCED
SOPDT	•	
SPIKE		ADVANCED
SQR	•	
SQRT_	•	
SR	•	
SRTF		ADVANCED
SSW	•	
STEAM	•	
STOR	•	
SUB	•	
SubSystem	•	
SWR	•	
SWU	•	
SWVMR	•	

The list continues on the next page...

Function block name	Licensing group	
	STANDARD	Other
TASK	•	
TIME	•	
TIMER_	•	
TIODRV	•	
TRND	•	
TRNDV	•	
TSE	•	
UTOI	•	
VDEL	•	
VIN		ADVANCED
VOUT		ADVANCED
VTOR	•	
WASM		REXLANG
WSCH	•	
WWW	•	
ZV4IS		ADVANCED

Appendix C

Error codes of the REXYGEN system

Success codes

0	Success
-1	False
-2	First value is greater
-3	Second value is greater
-4	Parameter changed
-5	Success, no server transaction done
-6	Value too big
-7	Value too small
-8	Operation in progress
-9	REXYGEN I/O driver warning
-10	No more archive items
-11	Object is array
-12	Closed
-13	End of file
-14	Parameter may be incorrect

General failure codes

-100	Not enough memory
-101	Assertion failure
-102	Timeout
-103	General input variable error
-104	Invalid configuration version
-105	Not implemented
-106	Invalid parameter
-107	COM/OLE error
-108	REXYGEN Module error - some driver or block is not installed or licensed

- 109 REXYGEN I/O driver error
- 110 Task creation error
- 111 Operating system call error
- 112 Invalid operating system version
- 113 Access denied by operating system
- 114 Block period has not been set
- 115 Initialization failed
- 116 REXYGEN configuration is being changed
- 117 Invalid target device
- 118 Access denied by REXYGEN security mechanism
- 119 Block or object is not installed or licensed
- 120 Checksum mismatch
- 121 Object already exists
- 122 Object doesn't exist
- 123 System user doesn't belong to any REXYGEN group
- 124 Password mismatch
- 125 Bad user name or password
- 126 Target device is not compatible
- 127 Resource is locked by another module and can not be used
- 128 String is not valid in UTF8 codepage
- 129 Start of executive not allowed
- 130 Some resource reach limit
- 133 Block execution halted due to runtime error

Class registration, symbol and validation error codes

- 200 Class not registered
- 201 Class already registered
- 202 Not enough space for registry
- 203 Registry index out of range
- 204 Invalid context
- 205 Invalid identifier
- 206 Invalid input flag
- 207 Invalid input mask
- 208 Invalid object type
- 209 Invalid variable type
- 210 Invalid object workspace
- 211 Symbol not found
- 212 Symbol is ambiguous
- 213 Range check error
- 214 Not enough search space
- 215 Write to read-only variable denied
- 216 Data not ready
- 217 Value out of range
- 218 Input connection error

-219 Loop of type UNKNOWN detected
 -220 REXLANG compilation error

Stream and file system codes

-300 Stream overflow
 -301 Stream underflow
 -302 Stream send error
 -303 Stream receive error
 -304 Stream download error
 -305 Stream upload error
 -306 File creation error
 -307 File open error
 -308 File close error
 -309 File read error
 -310 File write error
 -311 Invalid format
 -312 Unable to compress files
 -313 Unable to extract files

Communication errors

-400 Network communication failure
 -401 Communication already initialized
 -402 Communication finished successfully
 -403 Communicaton closed unexpectedly
 -404 Unknown command
 -405 Unexpected command
 -406 Communicaton closed unexpectedly, probably 'Too many clients'
 -407 Communication timeout
 -408 Target device not found
 -409 Link failed
 -410 REXYGEN configuration has been changed
 -411 REXYGEN executive is being terminated
 -412 REXYGEN executive was terminated
 -413 Connection refused
 -414 Target device is unreachable
 -415 Unable to resolve target in DNS
 -416 Error reading from socket
 -417 Error writing to socket
 -418 Invalid operation on socket
 -419 Reserved for socket 1
 -420 Reserved for socket 2
 -421 Reserved for socket 3
 -422 Reserved for socket 4
 -423 Reserved for socket 5

- 424 Unable to create SSL context
- 425 Unable to load certificate
- 426 SSL handshake error
- 427 Certificate verification error
- 428 Reserved for SSL 2
- 429 Reserved for SSL 3
- 430 Reserved for SSL 4
- 431 Reserved for SSL 5
- 432 Relay rejected
- 433 STARTTLS rejected
- 434 Authentication method rejected
- 435 Authentication failed
- 436 Send operation failed
- 437 Receive operation failed
- 438 Communication command failed
- 439 Receiving buffer too small
- 440 Sending buffer too small
- 441 Invalid header
- 442 HTTP server responded with error
- 443 HTTP server responded with redirect
- 444 Operation would block
- 445 Invalid operation
- 446 Communication closed
- 447 Connection cancelled

Numerical error codes

- 500 General numeric error
- 501 Division by zero
- 502 Numeric stack overflow
- 503 Invalid numeric instruction
- 504 Invalid numeric address
- 505 Invalid numeric type
- 506 Not initialized numeric value
- 507 Numeric argument overflow/underflow
- 508 Numeric range check error
- 509 Invalid subvector/submatrix range
- 510 Numeric value too close to zero

Archive system codes

- 600 Archive seek underflow
- 601 Archive semaphore fatal error
- 602 Archive cleared
- 603 Archive reconstructed from saved vars
- 604 Archive reconstructed from normal vars

- 605 Archive check summ error
- 606 Archive integrity error
- 607 Archive sizes changed
- 608 Maximum size of disk archive file exceeded

Motion control codes

- 700 MC - Invalid parameter
- 701 MC - Out of range
- 702 MC - Position not reachable
- 703 MC - Invalid axis state
- 704 MC - Torque limit exceeded
- 705 MC - Time limit exceeded
- 706 MC - Distance limit exceeded
- 707 MC - Step change in position or velocity
- 708 MC - Base axis error or invalid state
- 709 MC - Stopped by HALT input
- 710 MC - Stopped by POSITION limit
- 711 MC - Stopped by VELOCITY limit
- 712 MC - Stopped by ACCELERATION limit
- 713 MC - Stopped by LIMITSWITCH
- 714 MC - Stopped by position LAG
- 715 MC - Axis disabled during motion
- 716 MC - Transition failed
- 717 MC - Not used
- 718 MC - Not used
- 719 MC - Not used
- 720 MC - General failure
- 721 MC - Not implemented
- 722 MC - Command is aborted
- 723 MC - Conflict in block and axis periods
- 724 MC - Busy, waiting for activation

Licensing codes

- 800 Unable to identify Ethernet interface
- 801 Unable to identify CPU
- 802 Unable to identify HDD
- 803 Invalid device code
- 804 Invalid licensing key
- 805 Not licensed

Webserver-related errors

- 900 Web request too large
- 901 Web reply too large
- 902 Invalid format

-903 Invalid parameter

RexVision-related errors

-1000 ... Result is not evaluated

-1001 ... The searched object/pattern can not be found

-1002 ... The search criterion returned more corresponding objects

FMI standard related errors

-1100 ... FMI Context allocation failure

-1101 ... Invalid FMU version

-1102 ... FMI XML parsing error

-1103 ... FMI Model Exchange kind required

-1104 ... FMI Co-Simulation kind required

-1105 ... Could not create FMU loading mechanism

-1106 ... Instantiation of FMU failed

-1107 ... Termination of FMU failed

-1108 ... FMU reset failed

-1109 ... FMU Experiment setup failed

-1110 ... Entering FMU initialization mode failed

-1111 ... Exiting FMU initialization mode failed

-1112 ... Error getting FMU variable list

-1113 ... Error getting FMU real variable

-1114 ... Error setting FMU real variable

-1115 ... Error getting FMU integer variable

-1116 ... Error setting FMU integer variable

-1117 ... Error getting FMU boolean variable

-1118 ... Error setting FMU boolean variable

-1119 ... Doing a FMU simulation step failed

-1120 ... FMU has too many inputs

-1121 ... FMU has too many outputs

-1122 ... FMU has too many parameters

Bibliography

- [1] OPC Foundation. *Data Access Custom Interface Specification Version 3.00*. OPC Foundation, P.O. Box 140524, Austin, Texas, USA, 2003.
- [2] REX Controls s.r.o.. *REXYGEN Studio – User manual*, 2020. →.
- [3] Schlegel Miloš. Fuzzy controller: a tutorial. *www.rexcontrols.com*.
- [4] Miloš Schlegel, Pavel Balda, and Milan Štětina. Robust PID autotuner: method of moments. *Automatizace*, 46(4):242–246, 2003.
- [5] M. Schlegel and P. Balda. Diskretizace spojitého lineárního systému (in Czech). *Automatizace*, 11, 1987.
- [6] BLAS 3.8.0. – netlib.org. Basic Linear Algebra Subprograms Version 3.8.0, 2017.
- [7] LAPACK 3.8.0 – netlib.org. Linear Algebra PACKage Version 3.8.0, 2018.
- [8] Cleve Moler and Charles Van Loan. Nineteen dubious ways to compute the exponential of a matrix, twenty-five years later. *SIAM Review*, 45(1):3–49, 2003.
- [9] Python Software Foundation. Python documentation, 2019.
- [10] REX Controls s.r.o.. *MQTTDrv driver of REXYGEN – user guide*, 2020. →.
- [11] OASIS. MQTT Version 3.1.1, 2014.
- [12] REX Controls s.r.o.. *OpcUaDrv driver of REXYGEN – user guide*, 2020. →.

Index

- REXYGEN Compiler
 - compiler, 30
- REXYGEN Compiler compiler, 22
- TODO
 - SRTF DLOG, 37
- ABS_, 67, 663
- absolute
 - position sensor, 103
- absolute value, 67
- ABSROT, 103, 663
- ACD, 278, 663
- ADD, 68, 69, 663
- ADDHEXD, 69, 663
- addition, 68
 - extended, 76
 - integer, 85
- ADDOCT, 68, 69, 100, 663
- ADDQUAD, 69, 663
- AFLUSH, 284, 663
- alarm
 - Boolean value, 271
 - numerical value, 273
- ALB, 271, 663
- ALBI, 271, 663
- algebraic loop, 30
- ALN, 273, 663
- ALNI, 273, 663
- analog input
 - safety, 131
- AND_, 234, 235, 663
- ANDHEXD, 235, 663
- ANDOCT, 234, 235, 663
- ANDQUAD, 235, 663
- ANLS, 152, 663
- application
- of the REXYGEN System, 22
- ARC, 20, 23, 272, 274, 279, 282, 284, 285, 663
- architecture
 - open, 31
- archiv, 270
- archive, 20
 - backed-up memory, 270
 - configuration, 20
 - disk, 270
 - RAM memory, 270
- archiving
 - delta criterion, 278
- ARLY, 165, 663
- ARS, 276, 663
- ASW, 105, 664
- ATMT, 14, 236, 244, 306, 316, 320, 664
- automaton
 - finite-state, 236, 244
- average
 - moving, 107
- AVG, 107, 664
- AVS, 14, 108, 664
- band
 - frequency transmission, 109
- band-pass filter, 109
- bandwidth, 122
- BDHEXD, 239, 244, 664
- BDOCT, 239, 244, 664
- Bessel filter, 122
- binary number
 - transformation, 252
- binary sequence
 - generator, 154, 156
- BINS, 154, 156, 664

- BIS, 154, 156, 158, 664
- BISR, 664
- BITOP, 240, 664
- block
 - description, 15
 - description format, 15
 - execution, 36
 - inputs, 15
 - mathematic, 13
 - matrix, 14
 - modeling, 14
 - outputs, 15
 - parameters, 15
 - symbol, 15
 - vector, 14
- blocks
 - analog signal processing, 14
 - data archiving, 14
 - generators, 14
 - input-output, 13
 - logic control, 14
 - parameter-related, 14
 - regulation, 14
 - special, 15
- BMHEXD, 241, 244, 664
- BMOCT, 241, 244, 664
- Boolean complementation, 253
- BPF, 109, 664
- Butterworth filter, 122
- CanItem, 648, 649, 664
- CanRecv, 648, 649, 664
- CanSend, 651, 664
- CDELSSM, 328, 664
- circuit
 - flip-flop Reset-Set, 256
 - flip-flop Set-Reset, 257
- CMP, 110, 664
- CNA, 352, 664
- CNB, 70, 664
- CNDR, 111, 664
- CNE, 71, 664
- CNI, 72, 664
- CNR, 73, 664
- CNS, 288, 664
- coefficient
 - relative damping, 109, 122
- comparator, 110
- compatibility
 - REXYGEN and Simulink, 30
- compensator
 - lead, 172
 - lead-lag, 173
 - nonlinearity, 111
 - simple nonlinearity, 124
- compiler
 - REXYGEN Compiler, 22, 30
- compression, 278
- CONCAT, 289, 664
- COND, 664
- conditioner
 - nonlinear, 111
- configuration
 - REXYGEN System, 22
 - archives, 22
 - computation task, 22
 - input-output drivers, 22
 - modules, 22
- constant
 - Boolean, 70
 - integer, 72
 - logic, 70
 - real, 73
- control
 - motion, 14, 15
 - sequential, 236, 244
- control unit
 - manual, 174
- controller
 - fuzzy logic, 166
 - PID, 189
 - PID with gain scheduling, 181
 - PID with input-defined parameters, 192
 - PID with relay autotuner, 176
 - PID with static error, 179
 - step, 213, 216
 - with frequency autotuner, 206
- conversion

- real to integer, 97
- COUNT, 17, 242, 664
- counter
 - controlled, 242
- CSSM, 331, 664
- data
 - remote connection, 451
- data storing, 280, 283
- data types, 16
- DATE_, 262, 263, 664
- DATETIME, 262, 263, 265, 664
- DDELSSM, 333, 664
- dead time, 340, 347
- DEL, 113, 664
- delay
 - transport, 114
 - variable, 145
 - with initialization, 113
- DELM, 114, 664
- delta criterion, 278
- demultiplexer
 - bitwise, 239
- denominator, 77
- DER, 115, 664
- derivation, 115, 120
- detection
 - edge, 247
- deviation
 - standard, 117
- DFIR, 664
- DIF_, 74, 664
- difference, 74
- Display, 46, 664
- DIV, 75, 664
- division
 - extended, 77
 - integer, 90, 91
 - remainder, 91
 - two signals, 75
- driver
 - REXYGEN System, 27
 - .rio file extension, 27
 - configuration data, 27
- input-output, 13
- input/output, 27
- input/output with tasks, 42
- user manual, 29
- drivers
 - REXYGEN system, 13
- DSSM, 335, 665
- EAS, 76, 665
- EATMT, 244, 665
- edge detection, 247
- EDGE_, 137, 247, 665
- EKF, 337, 345, 665
- element
 - three state, 232
- EMD, 77, 665
- EPC, 32, 442, 665
- EQ, 248, 665
- error
 - fatal, 34
- EVAR, 117, 665
- EXEC, 20, 22, 27–29, 31, 34, 35, 40–43, 665
- executive
 - configuration, 13, 19
 - real-time, 22
 - RexCore program, 13
- external program, 442
- feedback loop, 30
- filter
 - band-pass, 109
 - Bessel, 122
 - Butterworth, 122
 - low-pass, 122
 - moving average, 107
 - nonlinear, 141
 - spike, 141
- filtering, 115, 120
 - digital, 34
- FIND, 290, 665
- finite-state machine, 236, 244
- first order system, 347
- FLCU, 14, 166, 665
- flip-flop circuit

Reset-Set, 256
 Set-Reset, 257
FNX, 78, 665
FNXY, 80, 665
FOPDT, 347
FOPDT, 340, 665
 frequency transmission band, 109
FRID, 168, 665
From, 47, 50, 51, 665
 function
 operating system, 32
 single variable, 78
 two variables, 80
 fuzzy logic, 166
GAIN, 82, 665
 gain, 82
 generator
 binary sequence, 154, 156
 piecewise linear function, 152
 signal, 161
 time function, 195
GETPA, 304, 665
GETPB, 306, 665
GETPI, 306, 464, 465, 665
GETPR, 306, 320, 665
GETPS, 308, 665
Goto, 47–49, 51, 665
GotoTagVisibility, 50, 51, 665
GRADS, 83, 665
HMI, 24, 665
HTTP, 445, 665
HTTP2, 447, 665
 hysteresis, 110
I3PM, 170, 665
IADD, 85, 665
 identification
 three parameter model, 170
IDIV, 90, 665
IMOD, 91, 665
IMUL, 88, 665
INFO, 26, 665
INHEXD, 56, 665
INOCT, 56, 665
Inport, 52, 54, 665
INQUAD, 56, 665
INSTD, 47, 56, 57, 666
INTE, 118, 140, 666
 integer
 division, 90
 integer number
 transformation, 252
 integer signal
 switching, 250
 integrator
 controlled, 118
 simple, 140
 interpolation
 linear, 92
INTSM, 249, 251, 666
IODRV, 23, 27, 47, 49, 666
IOTASK, 29, 37, 42, 304, 306, 314, 316, 328, 331, 666
ISSW, 250, 666
ISUB, 87, 666
ITOI, 252, 666
ITOS, 291, 666
KDER, 120, 666
LC, 172, 666
 least squares method, 115
LEN, 292, 666
LIN, 92, 666
 linear
 interpolation, 92
 linear function
 generator, 152
LLC, 173, 347, 666
 logical sum, 254
 loop
 algebraic, 30
 feedback, 30
 low-pass filter, 122
LPBRK, 30, 105, 666
LPF, 122, 666
LSM, 115

maximum, 123
MB_DASUM, 353
MB_DAXPY, 354
MB_DCOPY, 356
MB_DDOT, 358
MB_DGEMM, 360
MB_DGEMV, 362
MB_DGER, 364
MB_DNRM2, 366, 404
MB_DRDT, 367
MB_DSCAL, 369
MB_DSWAP, 370
MB_DTRMM, 372
MB_DTRMV, 374
MB_DTRSV, 377
MC_AccelerationProfile, 497, 529, 530, 549, 550, 666
MC_AddAxisToGroup, 596, 666
MC_CamIn, 560, 567, 571, 581, 584, 666
MC_CamOut, 560, 564, 666
MC_CombineAxes, 568, 666
MC_GearIn, 571, 574, 579, 581, 584, 666
MC_GearInPos, 574, 666
MC_GearOut, 579, 666
MC_GroupContinue, 616, 617, 666
MC_GroupDisable, 599, 666
MC_GroupEnable, 598, 666
MC_GroupHalt, 611, 666
MC_GroupInterrupt, 616, 617, 666
MC_GroupReadActualAcceleration, 607, 666
MC_GroupReadActualPosition, 605, 666
MC_GroupReadActualVelocity, 606, 666
MC_GroupReadError, 619, 666
MC_GroupReadStatus, 618, 666
MC_GroupReset, 620, 666
MC_GroupSetOverride, 645, 666
MC_GroupSetPosition, 603, 666
MC_GroupStop, 608, 666
MC_Halt, 501, 666
MC_HaltSuperimposed, 502, 667
MC_Home, 503, 534, 667
MC_MoveAbsolute, 505, 518, 542, 557, 575, 667
MC_MoveAdditive, 505, 509, 667
MC_MoveCircularAbsolute, 629, 667
MC_MoveCircularRelative, 633, 667
MC_MoveContinuousAbsolute, 518, 667
MC_MoveContinuousRelative, 521, 667
MC_MoveDirectAbsolute, 637, 667
MC_MoveDirectRelative, 640, 667
MC_MoveLinearAbsolute, 621, 667
MC_MoveLinearRelative, 625, 667
MC_MovePath, 643, 667
MC_MovePath_PH, 667
MC_MoveRelative, 505, 512, 515, 521, 667
MC_MoveSuperimposed, 505, 515, 581, 584, 667
MC_MoveVelocity, 491, 525, 557, 667
MC_PhasingAbsolute, 581, 667
MC_PhasingRelative, 584, 667
MC_PositionProfile, 497, 498, 529, 549, 550, 557, 566, 667
MC_Power, 533, 667
MC_ReadActualPosition, 534, 667
MC_ReadAxisError, 535, 667
MC_ReadBoolParameter, 536, 667
MC_ReadCartesianTransform, 602, 667
MC_ReadParameter, 537, 667
MC_ReadStatus, 539, 667
MC_Reset, 541, 620, 667
MC_SetCartesianTransform, 600, 667
MC_SetOverride, 542, 667
MC_SetPosition, 503
MC_Stop, 501, 544, 667
MC_TorqueControl, 546, 667
MC_UngroupAllAxes, 597, 667
MC_VelocityProfile, 497, 498, 529, 530, 549, 667
MC_WriteBoolParameter, 553, 667
MC_WriteParameter, 554, 667
MCP_AccelerationProfile, 497, 667
MCP_CamIn, 560, 667
MCP_CamTableSelect, 560, 561, 566, 667
MCP_CombineAxes, 568, 668
MCP_GearIn, 571, 668
MCP_GearInPos, 574, 668
MCP_GroupHalt, 668
MCP_GroupInterrupt, 616, 668

MCP_GroupSetOverride, 668
MCP_GroupSetPosition, 603, 668
MCP_GroupStop, 668
MCP_Halt, 501, 668
MCP_HaltSuperimposed, 502, 668
MCP_Home, 503, 668
MCP_MoveAbsolute, 505, 668
MCP_MoveAdditive, 509, 668
MCP_MoveCircularAbsolute, 668
MCP_MoveCircularRelative, 668
MCP_MoveContinuousAbsolute, 518, 668
MCP_MoveContinuousRelative, 521, 668
MCP_MoveDirectAbsolute, 668
MCP_MoveDirectRelative, 668
MCP_MoveLinearAbsolute, 668
MCP_MoveLinearRelative, 668
MCP_MovePath, 668
MCP_MovePath_PH, 668
MCP_MoveRelative, 512, 668
MCP_MoveSuperimposed, 515, 668
MCP_MoveVelocity, 525, 668
MCP_PhasingAbsolute, 581, 668
MCP_PhasingRelative, 584, 668
MCP_PositionProfile, 529, 668
MCP_SetCartesianTransform, 668
MCP_SetKinTransform_Arm, 668
MCP_SetOverride, 542, 668
MCP_Stop, 544, 668
MCP_TorqueControl, 546, 668
MCP_VelocityProfile, 549, 668
MCU, 174, 231, 668
MDL, 341, 342, 668
MDLI, 342, 668
mean value, 117
MID, 293, 668
minimum, 123
MINMAX, 123, 669
ML_DGEBAK, 380
ML_DGEBAL, 382
ML_DGEBRD, 384
ML_DGECON, 386
ML_DGEES, 388
ML_DGEEV, 390
ML_DGEHRD, 392
ML_DGELQF, 394
ML_DGELSD, 396
ML_DGEQRF, 398
ML_DGESDD, 400
ML_DLACPY, 402
ML_DLANGE, 366, 404
ML_DLASET, 406
ML_DTRSYL, 408
model
 first order, 340
 FOPDT, 347
 process, 341, 342
 second order, 347
state space
 continuous, 331
 continuous with time delay, 328
 discrete, 335
 discrete with time delay, 333
modulation
 pulse width, 201
MODULE, 23, 27, 31, 669
module, 31
 extending the REXYGEN System, 31
 extension, 27
motion control, 14, 15, 108
moving average, 107
MP, 158, 669
MPC, 197
MqttPublish, 484, 669
MqttSubscribe, 486, 669
MUL, 93, 669
multiplexer
 bitwise, 241
multiplication
 by a constant, 82
 extended, 77
 two signals, 93
MVD, 343, 669
MX_AT, 410
MX_ATSET, 411
MX_CNADD, 412
MX_CNMUL, 413
MX_CTODPA, 414
MX_DIM, 416

MX_DIMSET, 417
MX_DSAGET, 419
MX_DSAREF, 421
MX_DSASET, 423
MX_DTRNSP, 425
MX_DTRNSQ, 427
MX_FILL, 428
MX_MAT, 429
MX_RAND, 430
MX_REFCOPY, 432
MX_SLFS, 433
MX_VEC, 435
MX_WRITE, 436

negation, 253
nonlinear transformation
 simple, 124
NOT_, 253, 669
NSCL, 124, 669
NSSM, 337, 344, 669

OPC server, 455
OpcUaReadValue, 654, 669
OpcUaServerValue, 656, 669
OpcUaWriteValue, 658, 669
operating system, 32
operation
 binary, 96
 bitwise, 240
operator
 relational, 96
optimization
 gradient based, 83
OR_, 254, 255, 669
order
 driver execution, 27
 driver initialization, 27
 module initialization, 31
 of task execution, 40
 of task initialization, 40
ORHEXD, 255, 669
OROCT, 254, 255, 669
ORQUAD, 255, 669
OSCALL, 32, 444, 669

OUTHEXD, 57, 59, 669
OUTOCT, 57, 59, 649, 651, 669
Outport, 52, 55, 669
output
 pulse, 194
 three state, 232
output saturation, 204
OUTQUAD, 57, 59, 649, 651, 669
OUTRHEXD, 59, 669
OUTROCT, 59, 669
OUTRQUAD, 59, 669
OUTRSTD, 60, 669
OUTSTD, 49, 56, 57, 60, 669
overhead
 control system core, 22

PARA, 309, 669
parameter
 tick, 22
 input-defined, 311
 remote, 304, 306, 314, 316
 remote acquirement, 304, 306
PARB, 311, 669
PARE, 310, 669
PARI, 311, 669
PARR, 139, 311, 669
PARS, 313, 669
path
 full, 36
period
 of quick task execution, 34
 of task execution, 40
PGAVR, 669
PGBAT, 669
PGBUS, 669
PGCB, 669
PGENG, 669
PGGEN, 669
PGGS, 670
PGINV, 670
PGLOAD, 670
PGMAINS, 670
PGSENS, 670
PGSG, 670

- PGSIM, 670
- PGSOLAR, 670
- PGWIND, 670
- PID
 - autotuning, 183
 - controller, 189
 - with gain scheduling, 181
 - with input-defined parameters, 192
 - with moment autotuner, 183
 - with relay autotuner, 176
 - with static error, 179
- PIDAT, 14, 176, 670
- PIDE, 179, 670
- PIDGS, 14, 181, 670
- PIDMA, 14, 183, 454, 670
- PIDU, 176, 179, 181, 183, 189, 192, 231, 454, 492, 670
- PIDUI, 192, 670
- PJROCT, 294, 670
- PJSEXOCT, 670
- PJSOCT, 295, 670
- POL, 94, 670
- polynomial
 - evaluation, 94
- position sensor
 - absolute, 103
- POUT, 194, 670
- PRBS, 159, 670
- prediction, 115
- predictive control, 197
- PRGM, 195, 670
- priority
 - dependancy on the operating system, 22
 - logic, 22
 - logical, 27, 34
 - of tasks, 40
- process
 - model, 341
 - model with variable parameters, 342
- product
 - Boolean, 234, 235
 - logical, 234, 235
- program
 - REXYGEN Studio, 27
 - REXYGEN Diagnostics, 20, 27
 - REXYGEN Diagnostics, Enable check-box, 36
 - REXYGEN Diagnostics, Halt/Run button, 36
 - REXYGEN Diagnostics, Reset button, 36
 - external, 442
 - programmable block, 456
 - programmable block in Python, 476
 - programme
 - weekly, 266
 - programmer, 195
 - PROJECT, 33, 670
 - project
 - main file, 22, 27
 - protocol
 - UDP/IP, 451
 - PSMPC, 14, 197, 670
 - puls, 194
 - pulse
 - manually generated, 158
 - pulse counting
 - bidirectional, 242
 - pulse output, 194
 - pulse width modulation, 201
 - PWM, 182, 188, 191, 193, 201, 220, 224, 225, 670
 - PYTHON, 476, 670
 - QFC, 61, 62, 463, 670
 - QFD, 59–62, 463, 670
 - QP_OASES, 670
 - QTASK, 22, 23, 29, 34, 37, 40, 328, 331, 447, 449, 670
 - quotient, 75
 - integer, 90
 - rate limiter, 127
 - rate monotonic scheduling, 23
 - RDC, 15, 451, 670
 - RDFT, 125
 - real-time

executive, 19, 22
REC, 95, 670
reciprocal value, 95
REGEXP, 296, 670
REL, 96, 670
relative damping coefficient, 109, 122
relay
 advance, 165
 with hysteresis, 203
remote
 data connection, 451
 parameter, 304, 306
REPLACE, 299, 670
REXLANG, 15, 456, 670
RLIM, 127, 670
RLY, 165, 203, 670
RM_AxesGroup, 590, 596, 619, 671
RM_Axis, 439, 491, 492, 503, 533–537, 544, 555, 556, 596, 671
RM_AxisOut, 555, 556, 671
RM_AxisSpline, 556, 671
RM_DirectTorque, 671
RM_DirectVelocity, 671
RM_DriveMode, 671
RM_Feed, 593, 671
RM_Gcode, 594, 671
RM_GroupTrack, 671
RM_HomeOffset, 671
RM_Track, 557, 671
root
 square, 99
RS, 256, 671
RTOI, 97, 671
RTOS, 300, 671
RTOV, 438, 442, 443, 671

S1OF2, 128, 671
S_AND, 671
S_BC, 671
S_CMP, 671
S_CTS, 671
S_LB, 671
S_NOT, 671
S_OR, 671

S_PULS, 671
S_PV, 671
S_RS, 671
S_SEL, 671
S_SELVAL, 671
S_SR, 671
S_SUMC, 671
S_TDE, 671
S_TDR, 671
S_TLATCH, 671
S_VALB, 671
S_VALC, 671
safety analog input, 131
safety selector, 128
SAI, 128, 130, 131, 671
sample and hold, 139
SAT, 204, 671
SC2FA, 206, 671
schedule
 weekly, 266
SCU, 182, 188, 191, 193, 213, 672
SCUV, 182, 188, 189, 191, 193, 216, 672
SEL, 134, 672
selector
 active controller, 219
 analog signal, 128, 134, 135
 safety, 128
 with ramp, 144
SELHEXD, 135, 672
SELOCT, 135, 672
SELQUAD, 134, 135, 672
SELSOCT, 301, 672
SELU, 219, 439, 672
sensor
 absolute position, 103
sequence
 pseudo-random binary, 159
sequential control, 236, 244
SETPA, 314, 672
SETPB, 316, 672
SETPI, 316, 465, 672
setpoint, 195
SETPR, 316, 320, 672
SETPS, 318, 672

SG, 161, 454, 672
SGI, 161, 672
SGSLP, 319, 323, 672
SHIFTOCT, 137, 672
SHLD, 139, 311, 672
 signal generator, 161
SIL0, 321, 323, 672
SILOS, 325, 672
 simulation
 parameters, 35
 real-time, 35
 Simulink, 35
SINT, 118, 140, 672
SLEEP, 35, 672
SMHCC, 220, 672
SMHCCA, 224, 672
SMTP, 449, 672
SOPDT, 347, 672
SPIKE, 131–133, 141, 672
SQR, 98, 672
SQRT_, 99, 672
 square root, 99
 square value, 98
SR, 257, 672
SRTF, 36, 672
SSW, 143, 439, 454, 672
 stack
 size, 27
 standard deviation, 117
 starting unit, 108
 state machine, 236, 244
 state space model, 331, 335
 with time delay, 328, 333
STEAM, 672
 step controller
 with position feedback, 213
 with velocity output, 216
STOR, 302, 672
SUB, 69, 100, 672
SubSystem, 48, 50, 54, 56, 57, 672
 subsystem
 archiving, 269
 execution, 36
 subtraction
 extended, 76
 two signals, 100
 sum, 68
 Boolean, 255
 logical, 254, 255
 switch, 134, 135
 integer signals, 250
 simple, 143
 unit, 231
 with automatic selection of input, 105
SWR, 144, 439, 672
SWU, 219, 231, 672
SWVMR, 439, 672
SYSEVENT, 38
SYSLOG, 39
 system
 first order, 340
 second order, 347
TASK, 22, 23, 29, 34, 37, 40, 328, 331, 673
 task
 driver-triggered, 29
 execution, 36
 execution period, 40
 priority, 40
 quick, 34
 quick, execution period, 34
 standard, 40
TIME, 263, 265, 673
 time delay, 114, 340, 347
 variable, 145
 timer
 system, 29
 weekly, 266
TIMER_, 258, 673
TIODRV, 23, 29, 42, 673
 trajectory
 time-optimal, 108
 transformation
 binary number, 252
 integer number, 252
 transport delay, 114
 trend
 recording, 280, 283

TRND, 17, 280, 283, 454, 673
TRNDV, 283, 673
TSE, 213, 216, 232, 673
type
 input, 16
 output, 16
 parameter, 16
types
 of variables, 16

user programmable block, 456
user programmable block in Python, 476
UTOI, 673

value
 default, 16
 maximal, 16
 mean, 117
 minimal, 16
 reciprocal, 95
 substitute, 75, 77, 78, 80, 90, 91, 95, 99
valve
 motor driven, 343
 servo, 343
variance, 117
VDEL, 145, 673
VIN, 59, 60, 62, 63, 463, 673
VOUT, 61, 64, 463, 673
VTOR, 125, 440, 443, 673

WASM, 673
weekly
 schedule, 266
WSCH, 266, 673
WWW, 44, 673

ZV4IS, 146, 673

